


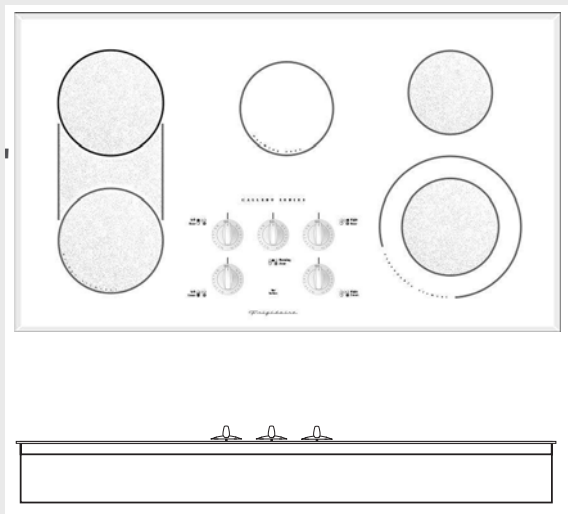

Frigidaire

Factory Parts Catalog

Product No.	GLEC36S8EBA	GLEC36S8EQA	GLEC36S8ESA
	3805642355461	3805644355441	3805643355411
Series	36" elec	36" elec	36" elec
Color	black	bisque	white
Market	North America	North America	North America
Wiring Diagram	318046807	318046807	318046807
Owner's Guide	318200612	318200612	318200612
Installation Instructions	316201426	318201426	318201426

 **Electrolux**

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995449757
05/09/30
(EN/SERVICE/ECL)
377

ELECTRIC COOK-TOP RANGE

Model No.
GLEC36S8E

Copyright © 2005 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

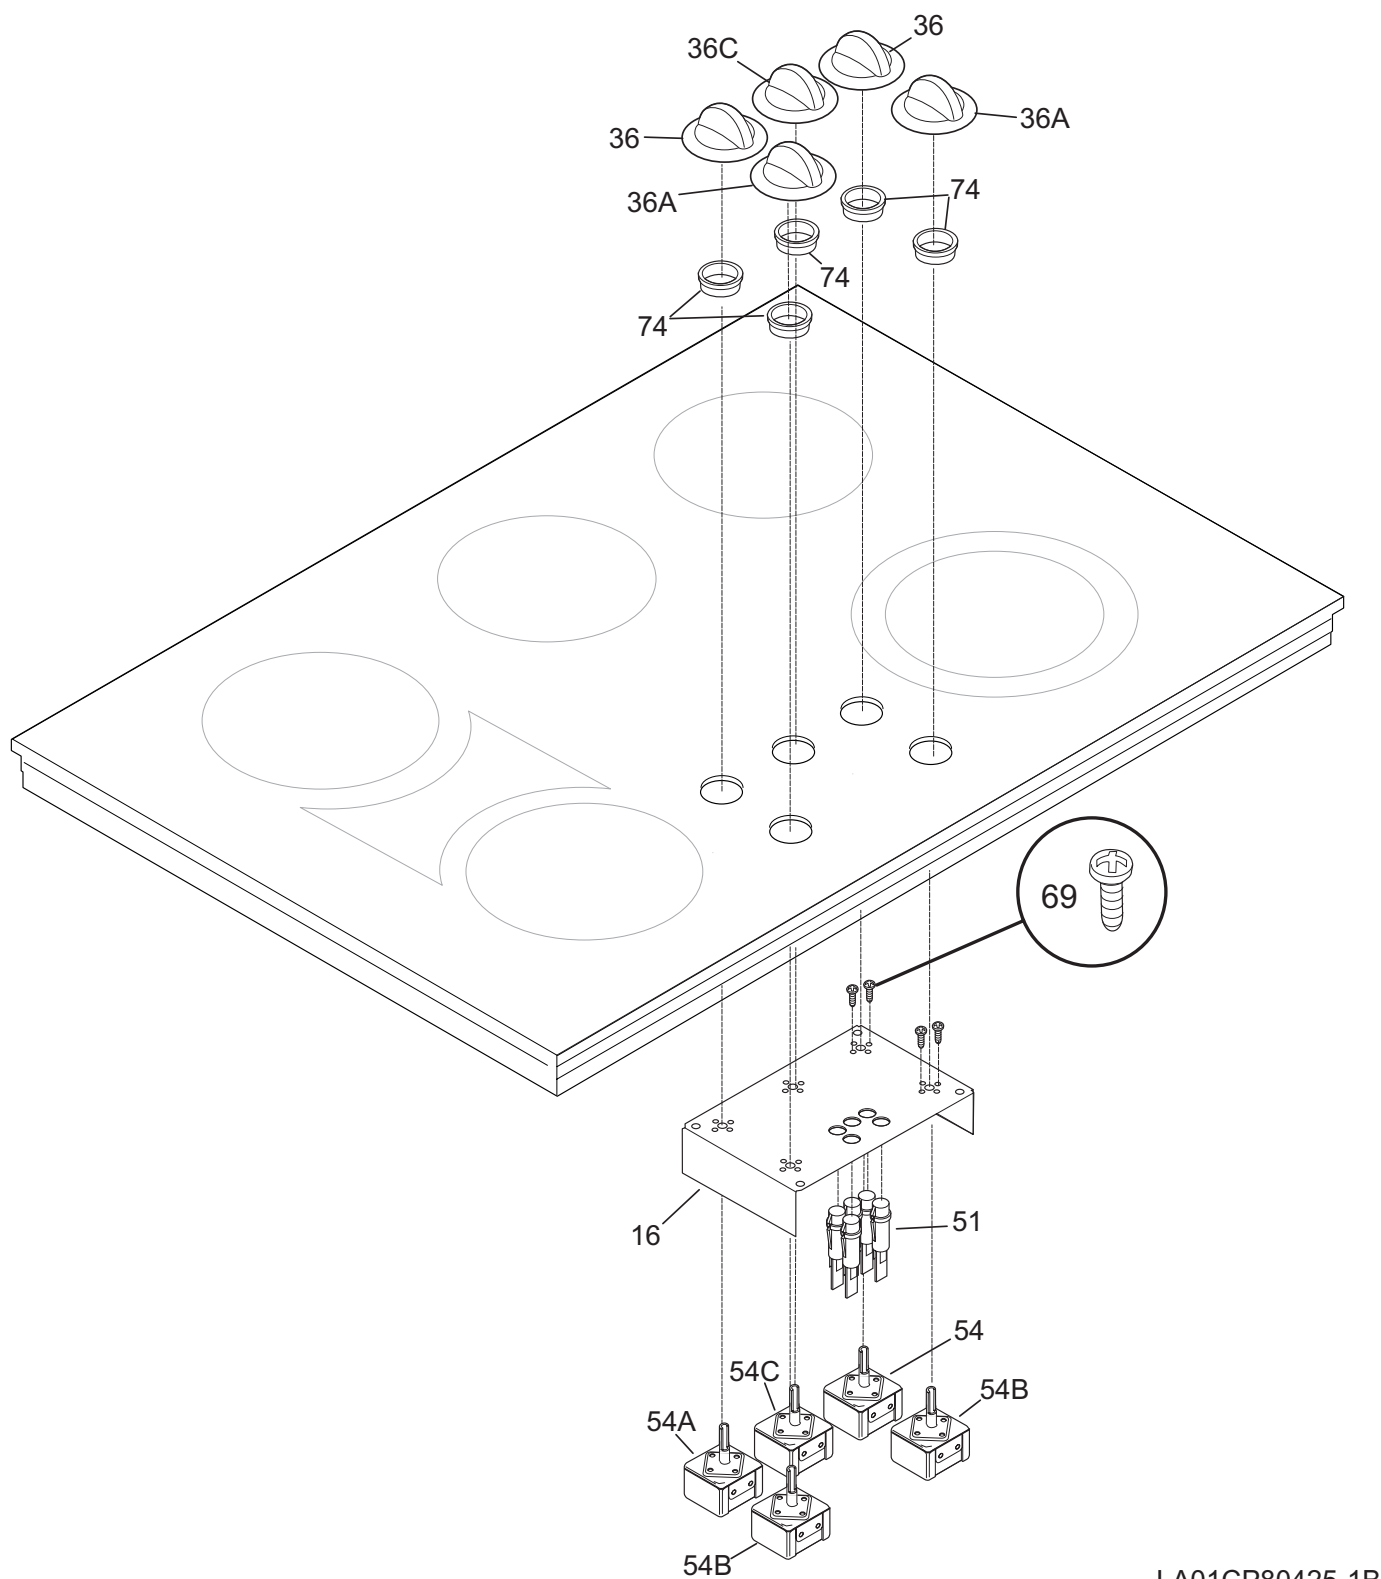


LA01CP80425-1B

CONTROL PANEL

Model Index: A GLEC36S8E (GLEC36S8ESA)
 B GLEC36S8E (GLEC36S8EBA)
 C GLEC36S8E (GLEC36S8EQA)

POS. NO	PART NO.		DESCRIPTION
16	318096320	A B C	Box, instrument mtg
36	318196633	A - -	Knob, control, white
36	318196634	- B -	Knob, control, black
36	318196635	- - C	Knob, control, bisque
36A	318196630	A - -	Knob, dual control, white
36A	318196631	- B -	Knob, dual control, black
36A	318196632	- - C	Knob, dual control, bisque
36C	318196636	A - -	Knob, warmer, white
36C	318196637	- B -	Knob, warmer, black
36C	318196638	- - C	Knob, warmer, bisque
51 #	318044820	A - C	Light, indicator, red
51 #	318044822	- B -	Light, indicator, clear
54 #	318220071	A B C	Switch, surface unit, small
54A#	318220073	A B C	Switch, surface unit, large
54B#	318191000	A B C	Switch, infinite, dual
54C#	318078801	A B C	Switch, element, 6", warmer
69	5303323134	A B C	Screw, 8-32 x 0.188
74	318148900	A B C	Bushing, switch
*	5303300265	A B C	Screw, 8-18 X 1/2, (2)
*	5303323140	A B C	Screw, ground, 10-32 x 0.375

MAIN TOP/SURFACE UNITS

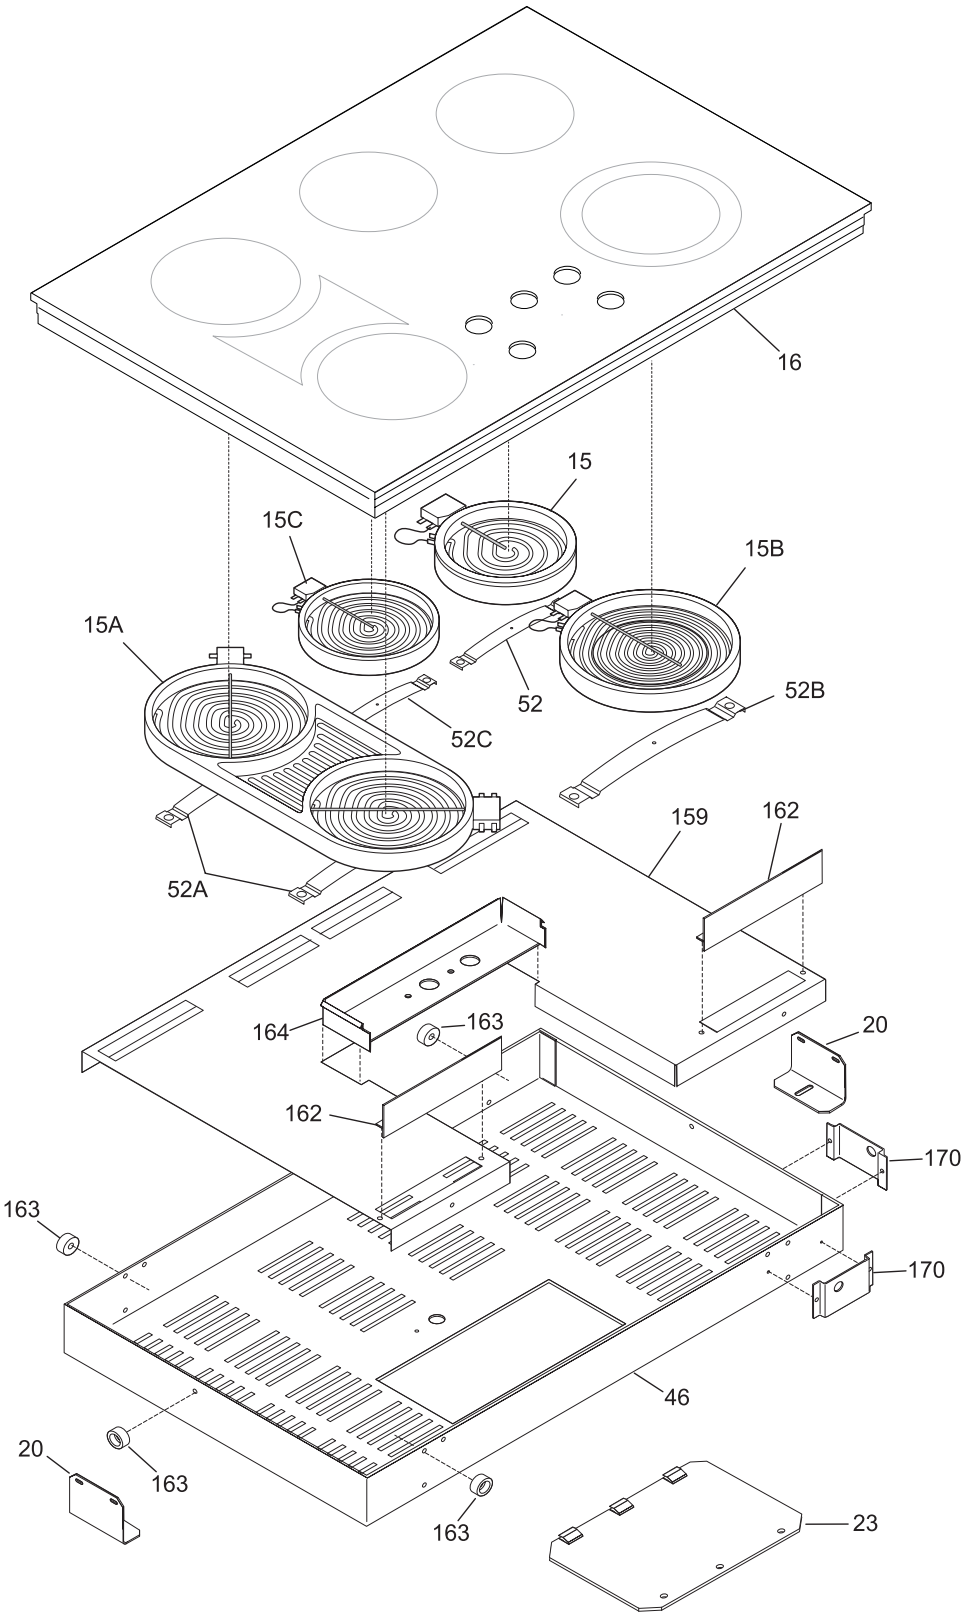


LA01CT80425-1A

MAIN TOP/SURFACE UNITS

Model Index: A GLEC36S8E (GLEC36S8ESA)
 B GLEC36S8E (GLEC36S8EBA)
 C GLEC36S8E (GLEC36S8EQA)


POS. NO	PART NO.		DESCRIPTION
15 #	318198817	A B C	Element, surface, 6", 1200 W, (2)
15A#	318258201	A B C	Element, bridge, 1800/2600
15B#	318198925	A B C	Element, surface, 6/9, 1200/2500W, dual radiant
15C#	318198825	A B C	Element, surface, warmer, 100 W
16	318282514	A - -	Main Top Assy, glass/steel, white
16	318282516	- B -	Main Top Assy, glass/steel, black
16	318282515	- - C	Main Top Assy, glass/steel, bisque
20	318121902	A B C	Bracket, retainer
23	5303297401	A B C	Panel, service
46	318077227	A B C	Burner Box
52	318122006	A B C	Spring, element mtg, small
52A	318122008	A B C	Spring, element mtg
52B	318122010	A B C	Spring, element mtg, 1000W/2500W
52C	318122004	A B C	Spring, element mtg, 700W & 2100W
159	318125122	A B C	Deflector
162	318125211	A B C	Deflector
163	318014110	A B C	Spacer, (6)
164	318125302	A B C	Plate, connection
170	318124910	A B C	Screen, thermal, (4)
* #	318078531	A B C	Box & wires assy
*	08016432	A B C	Screw, truss head, 8-18 x 0.375
*	5303300265	A B C	Screw, 8-18 X 1/2, (2)
*	5303323129	A B C	Screw, 8 X 0.750
*	5303323140	A B C	Screw, ground, 10-32 x 0.375

WIRING DIAGRAM

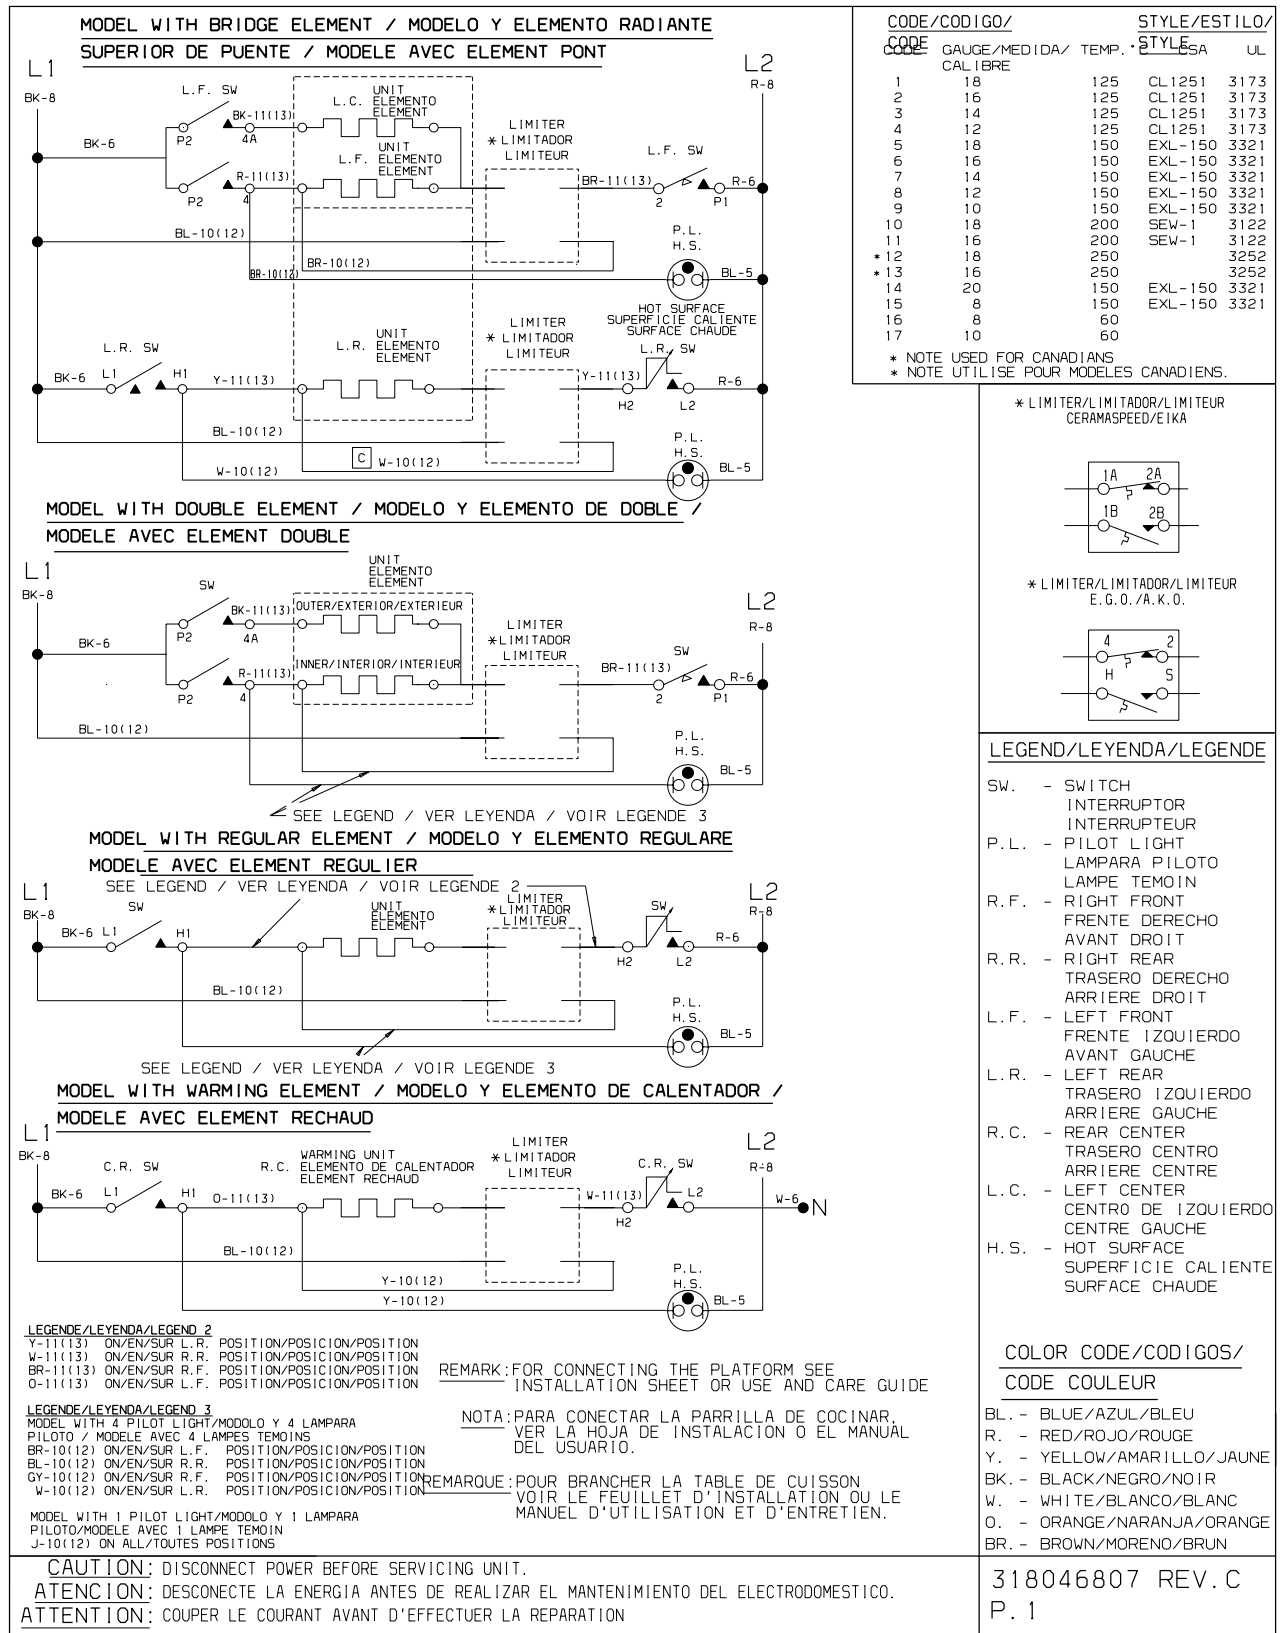


WIRING DIAGRAM


MODEL WITH REGULAR ELEMENT AND SELECTOR / MODELO Y ELEMENTO Y SELECTOR / MODELE AVEC ELEMENT REGULIER ET SELECTEUR

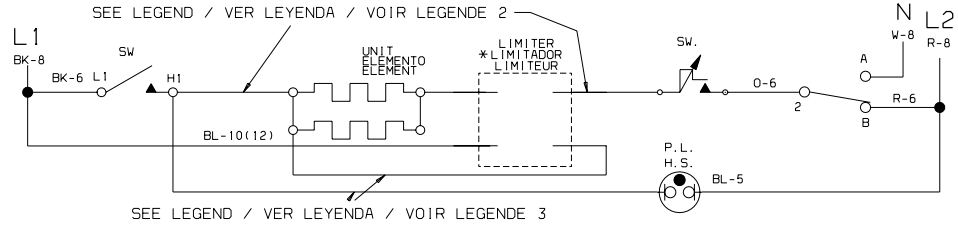


MODEL WITH WARMER ZONE / MODELO CON ZONA DE CALENTADOR / MODELE AVEC ZONE RECHAUD

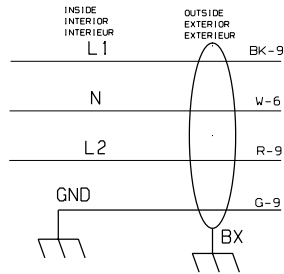


MODEL WITH 4 REGULAR UNITS / MODELO Y CUATRO ELEMENTOS REGULARES / MODELE AVEC ELEMENT REGULIER

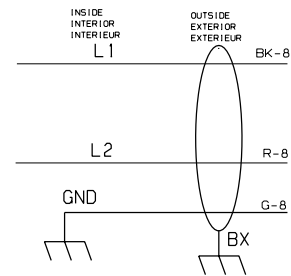

MODEL WITH OTHERS / OTROS MODELOS / AUTRE MODELES

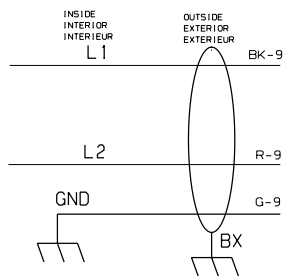

MODEL WITH SIMMER SELECT / LOS MODELOS CON SELECTOR DE HIRVE A FUEGO LENTO / MODELE AVEC SELECTEUR MIJOTANT

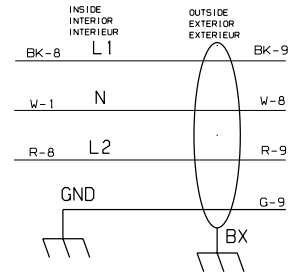

CAUTION: DISCONNECT POWER BEFORE SERVICING UNIT.
 ATENCION: DESCONECTE LA ENERGIA ANTES DE REALIZAR EL MANTENIMIENTO DEL ELECTRODOMESTICO.
 ATTENTION: COUPER LE COURANT AVANT D'EFFECTUER LA REPARATION

318046807 REV.C
 P. 2