 


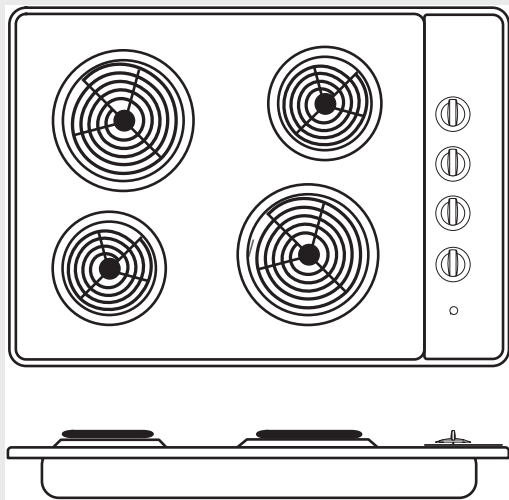

Frigidaire

Factory Parts Catalog

Product No.	FEC30C4ABD	FEC30C4ACD	FEC30C4AQD	FEC30C4ASD
	3805421161064	38054211610C4	3805421161044	3805421161014
Series	30" elec	30" elec	30" elec	30" elec
Color	black	stainless	bisque	white
Market	North America	North America	North America	North America
Wiring Diagram	318046901	318046901	318046901	318046901
Owner's Guide	318200612	318200612	318200612	318200612
Installation Instructions	318201410	318201410	318201410	318201410

 **Electrolux**

ELECTROLUX HOME PRODUCTS, INC.
P.O. Box 212378, Augusta, GA 30917

 
Publication No.
5995403044
04/02/02
(EN/SERVICE/ECL)
377

ELECTRIC COOK-TOP RANGE

Model No.
FEC30C4A

Copyright © 2004 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

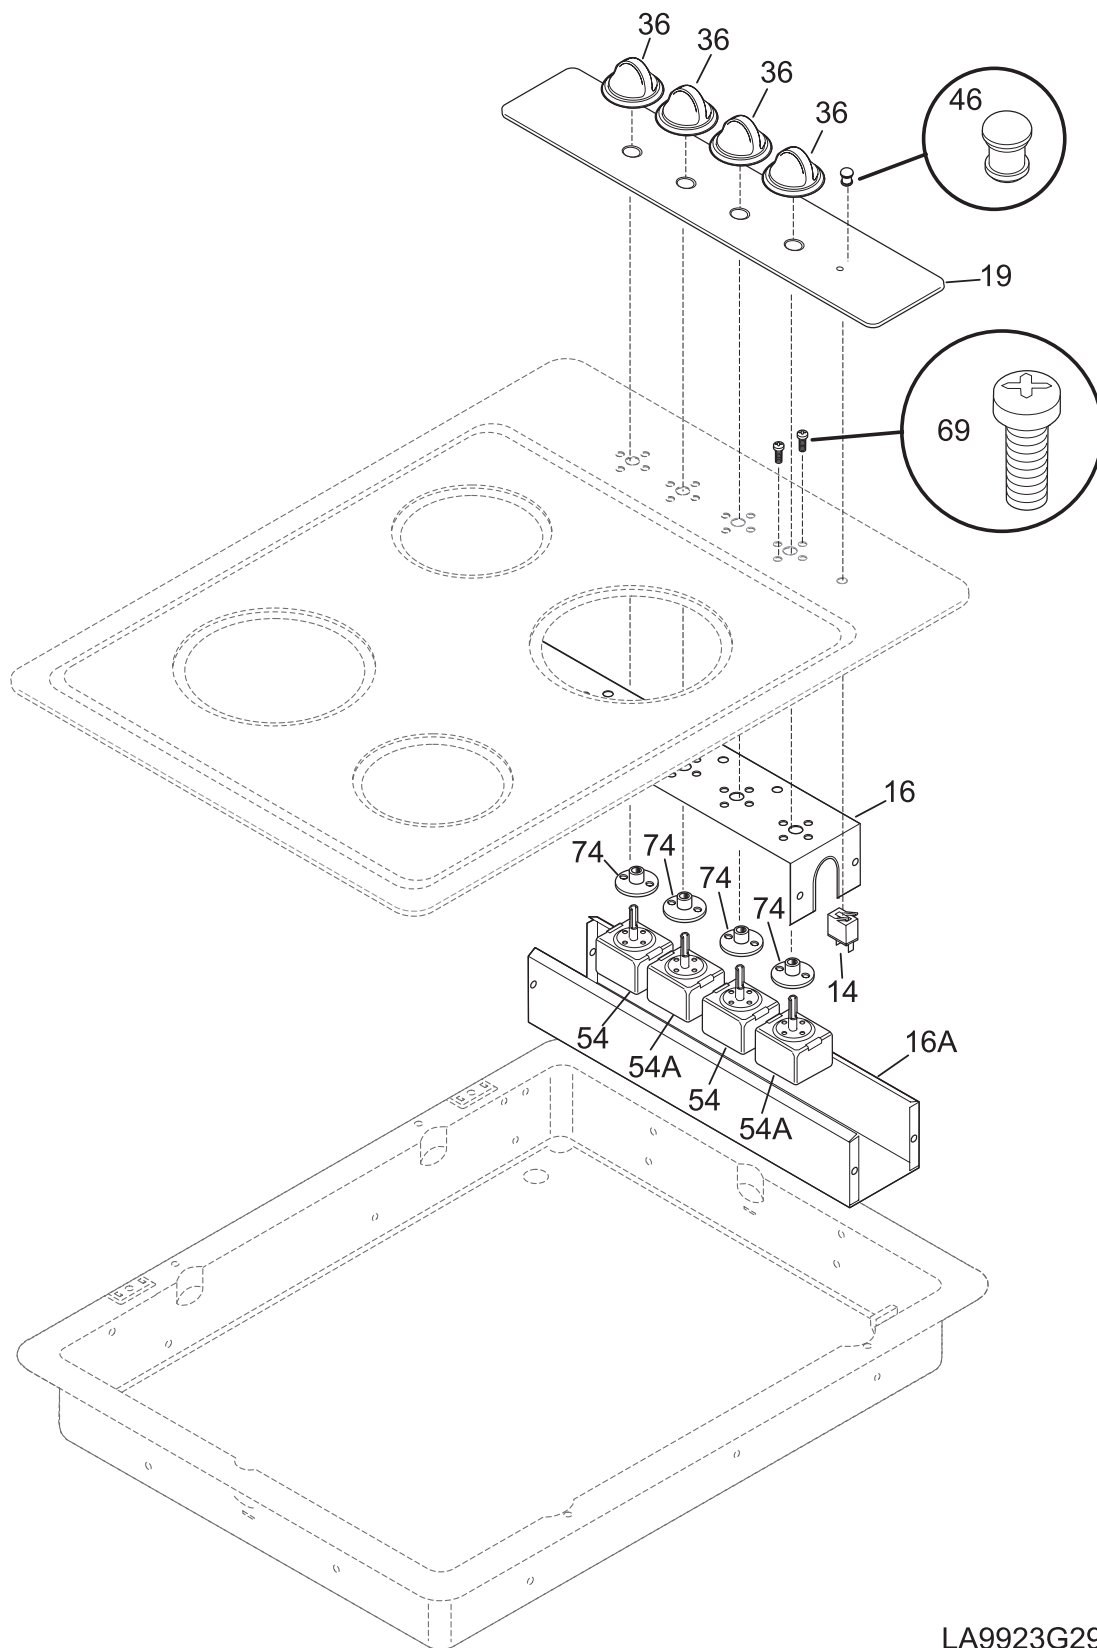


LA9923G29A

CONTROL PANEL

Model Index: A FEC30C4A (FEC30C4ASD)
 B FEC30C4A (FEC30C4ABD)
 C FEC30C4A (FEC30C4ACD)
 D FEC30C4A (FEC30C4AQD)

POS. NO	PART NO.		DESCRIPTION
14 #	3200297	A B C D	Light/Lamp, indicator
16	5303301457	A B C D	Plate, instrument mtg
16A	5303301458	A B C D	Cover, instrument mtg.
19	318242300	A - - -	Panel, control, white
19	318242302	- B C -	Panel, control, black
19	318242301	- - - D	Panel, control, bisque
36	318196633	A - - -	Knob, control, white
36	318196634	- B C -	Knob, control, black
36	318196635	- - - D	Knob, control, bisque
46	5303299764	A B C D	Lens, indicator light
54 #	318220014	A B C D	Switch, surface unit, small
54A#	318220015	A B C D	Switch, surface unit, large
69	5303305528	A B C D	Screw, 8-32 x 1/4
74	318146010	A B C D	Bushing, switch
*	5304410665	A B C D	Screw, 10-32 x 5/8

 MAIN TOP/SURFACE UNITS

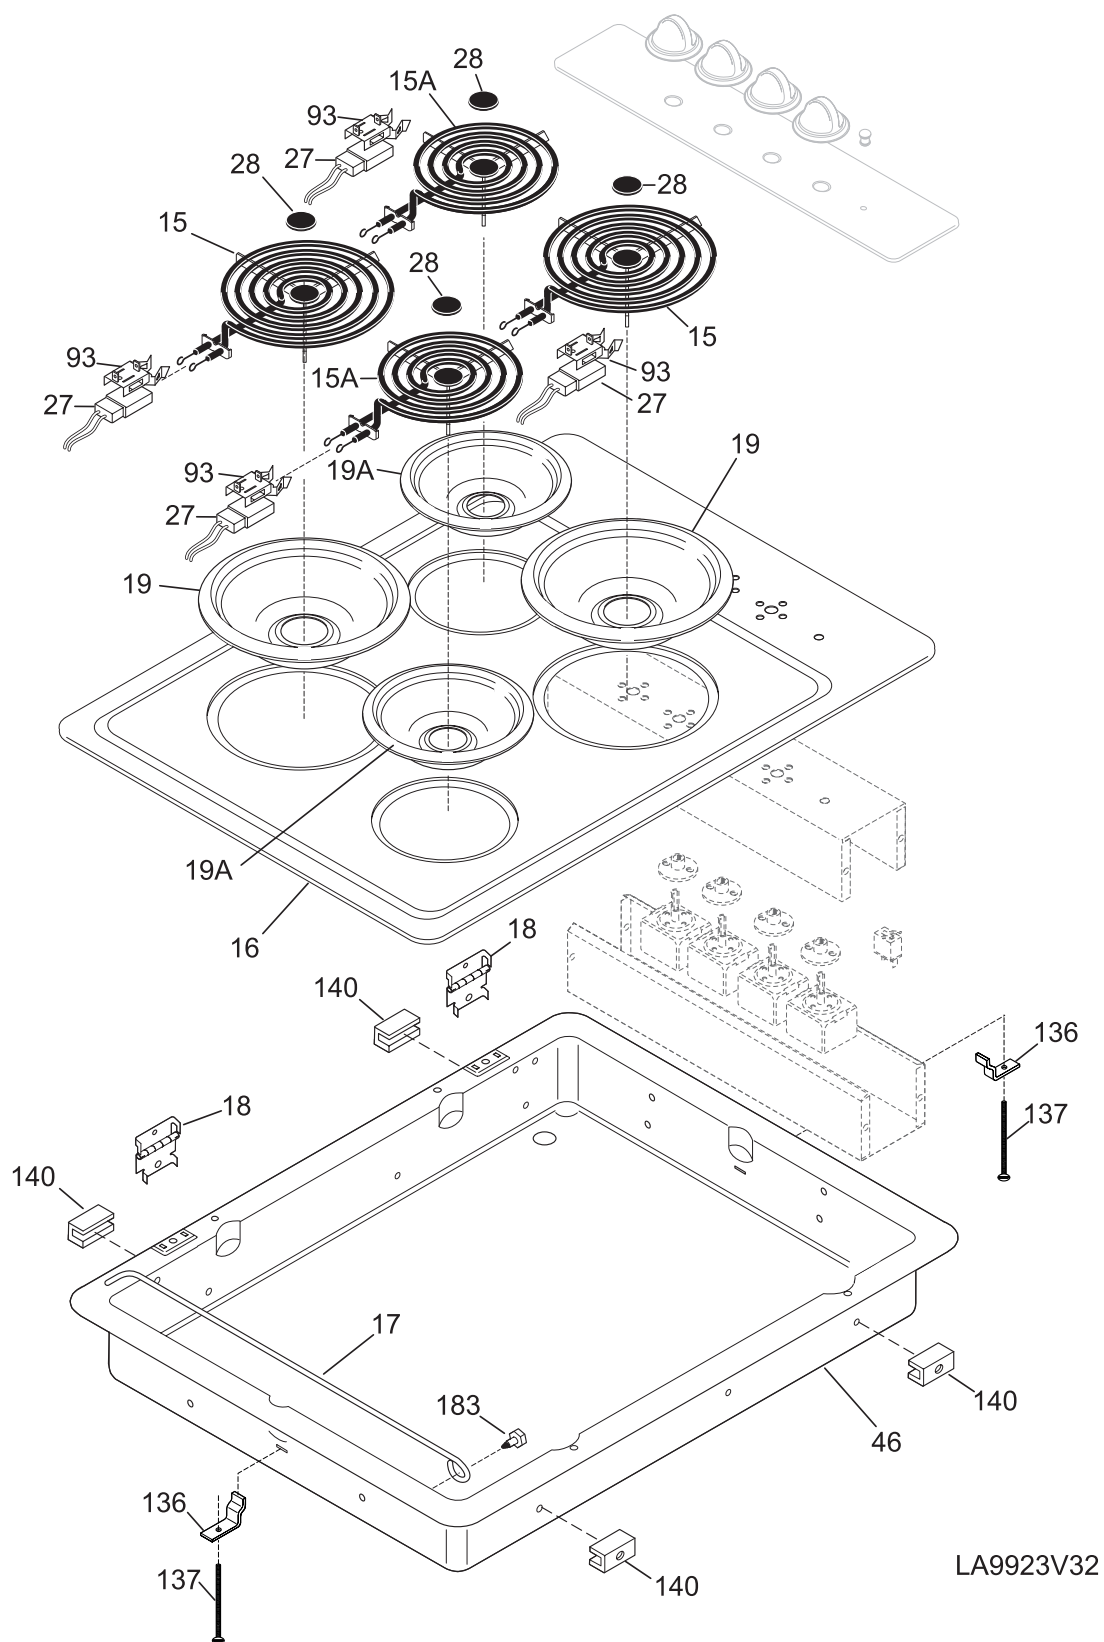

MAIN TOP/SURFACE UNITS

Model Index: A FEC30C4A (FEC30C4ASD)
B FEC30C4A (FEC30C4ABD)
C FEC30C4A (FEC30C4ACD)
D FEC30C4A (FEC30C4AQD)

POS. NO	PART NO.		DESCRIPTION
15 #	5308011964	A B C D	Element, surface, large/8 inch, (2), medallion incl
15A#	5304437241	A B C D	Element, surface, small/6 inch, 1250W, medallion incl
16	318159021	A - - -	Main Top, white
16	5303324148	- B - -	Main Top, black
16	318159023	- - C -	Main Top, stainless
16	318159025	- - - D	Main Top, bisque
17	3016817	A B C D	Rod, maintop support
18	318074310	A B C D	Hinge, maintop, (2)
19 #	318067056	A B C D	Pan, surface element, large, chrome
19A#	318067046	A B C D	Pan, surface element, small, chrome
27 #	318223407	A B C D	Terminal Block, surface element, 21", white leads
27 #	318223409	A B C D	Terminal Block, surface element, 24", yellow leads
27 #	318223423	A B C D	Terminal Block, surface element, 36", brown leads
27 #	318223424	A B C D	Terminal Block, surface element, 36", orange leads
28	5303301461	A B C D	Medallion, surface element
46	318077401	A B C D	Burner Box
93	318122500	A B C D	Support, terminal block, (4)
136	5303935029	A B C D	Support
137	5303323138	A B C D	Screw, 10-24x1/2
140	318216000	A B C D	Spacer, installation
183	5304410665	A B C D	Screw, 10-32 x 5/8
* #	318078525	A B C D	Box & wires assy
*	5303308449	A B C D	Fastener, wire tie
*	5303300195	A B C D	Screw, 10-32 x 0.375, terminal block, (2)
*	5303311532	A B C D	Screw, 6-32 x 1/4", back

WIRING DIAGRAM

