


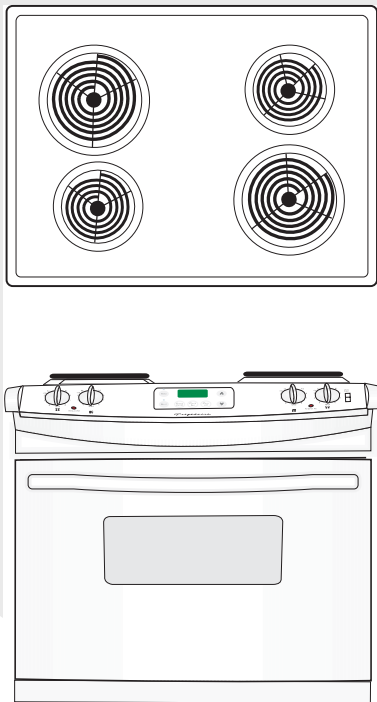

Frigidaire

Factory Parts Catalog

Product No.	FED300ESB
	37854315A5012
Series	30" drop-in
Color	white
Market	North America
Wiring Diagram	318271902
Owner's Guide	318203810
Installation Instructions	318201613
Timer Guide	318200140



Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995457917
06/01/09
(EN/SERVICE/ECL)
377

30-INCH DROP-IN ELECTRIC RANGE

Model No.
FED300E

Copyright © 2006 Electrolux Home Products, Inc.
All rights reserved.

BACKGUARD

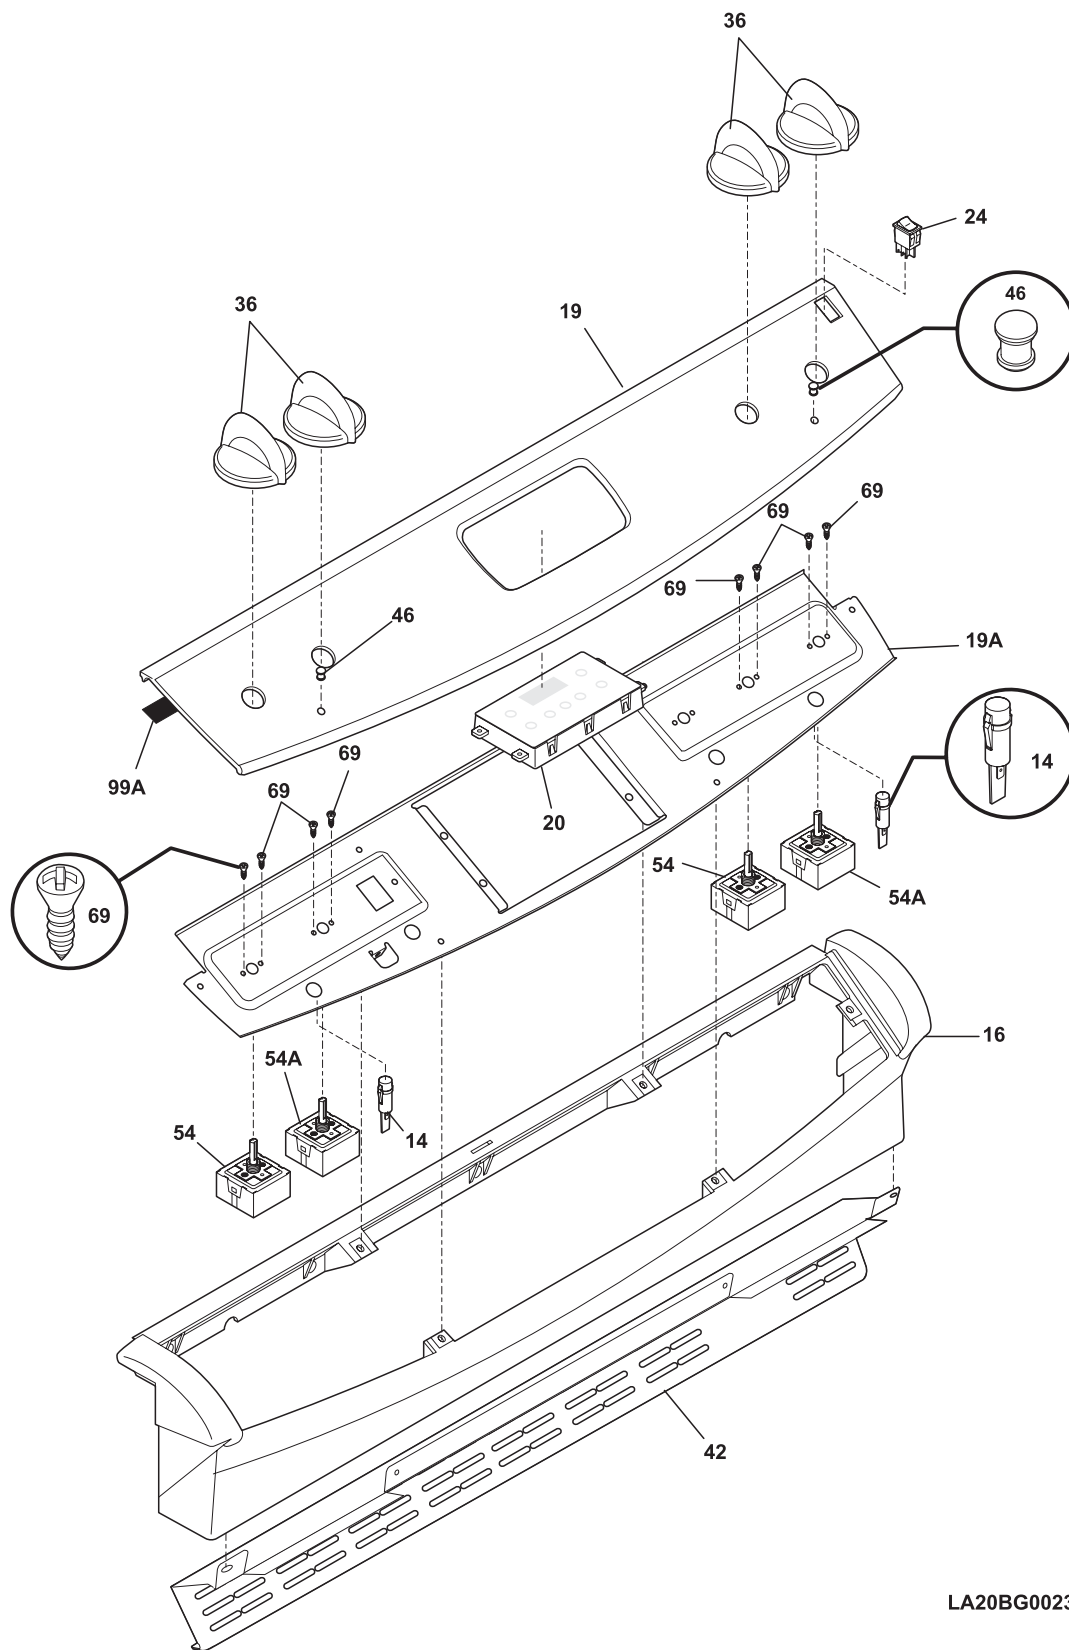


LA20BG0023

BACKGUARD

POS. NO	PART NO.	DESCRIPTION
14 #	318293900	Light, indicator, 125v, (2)
16	318299100	Console, assy., white
16*	5304447071	Clip, console, (2)
19	318235134	Panel, control, white
19A	318224400	Panel, control mtg.
20 #	318185328	Clock/Timer, EOC, white, ES100
20*	318213800	Overlay, clock, white, ES100
20*	5304453707	Screw, control mtg.
24 #	316005607	Switch, rocker, white
35	318183101	Support, glass, white, (4)
36	316223028	Knob, control, white
42	318298011	Trim, vent, black, upper
46	318228300	Lens, indicator light
54 #	318220080	Switch, surface unit, single
54A#	318220081	Switch, surface unit, large
69	5303323134	Screw, 8-32 x 0.188
99A	318223900	Gasket, dark grey
*	318301100	Wiring Harness, backguard
* #	318224815	Harness, wiring, infinite switch
* #	318224817	Harness, wiring, timer
*	08016432	Screw, truss head, 8-18 x 0.375
*	5303300265	Screw, 8-18 X 1/2, (2)

BODY

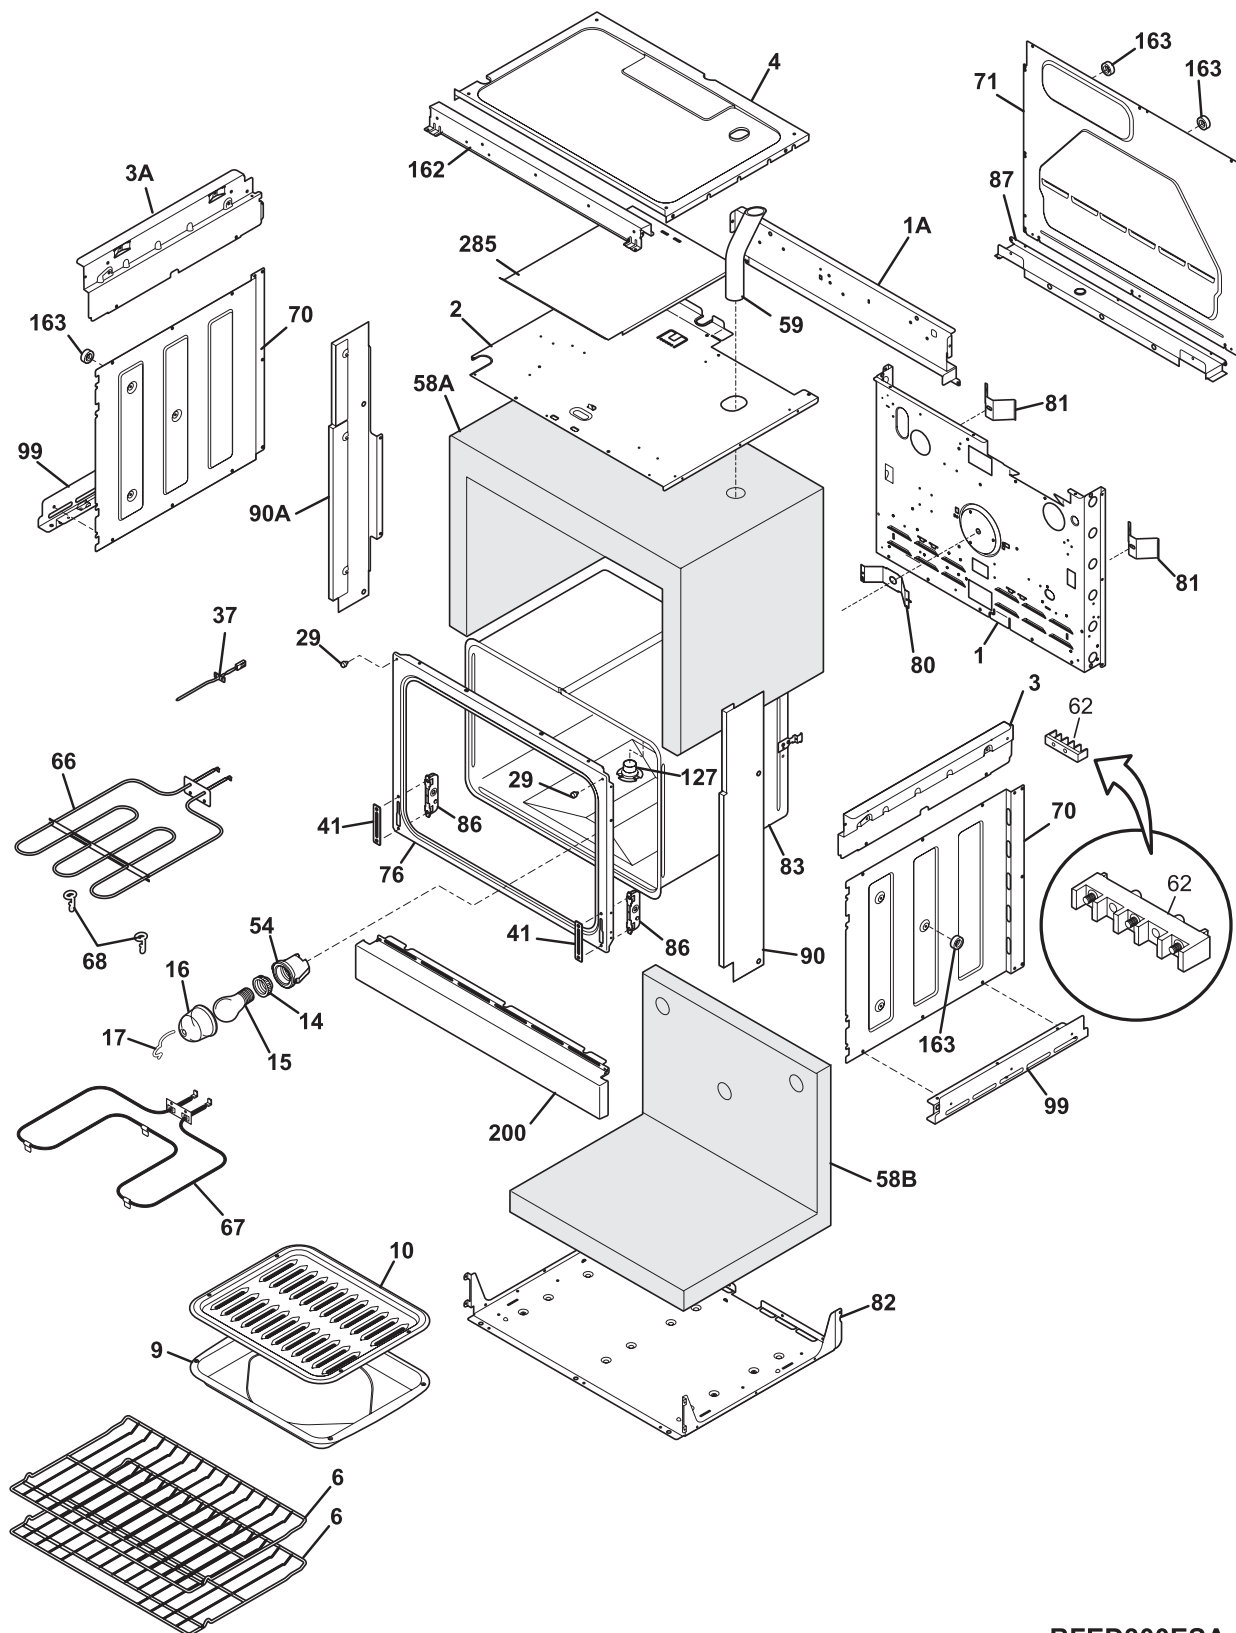


BFED300ESA

BODY

POS. NO	PART NO.	DESCRIPTION
1	318259202	Back, main
1A	318225110	Panel, main back, upper
2	318258902	Shield, insulation, upper
3	318225210	Panel, bodyside, upper RH
3A	318225211	Panel, bodyside, upper LH
4	318073906	Panel, subtop
6	318262502	Rack, oven
9	5303317977	Pan, broiler
10	5303317976	Insert, broiler pan
14	318224000	Receptacle, oven light
15	5303013071	Bulb/Lamp, light
16	3201911	Cover, oven light, glass
17	5304400195	Retainer, light cover
29	318147411	Bumper, (2)
37 #	316217002	Probe, oven temp
41	5303310526	Cover, hinge cutout
54	318222400	Housing, oven light
58A	318285074	Insulation, oven wrapper
58B	318285075	Insulation, oven back
59	318072572	Tube, vent, oven
62	5303935061	Terminal Block Kit
62*	5303323139	Screw, 10-24 x 0.906
62*	5303323144	Nut, 10-32
66 #	318255600	Element, broil, 2750W
67 #	318255002	Element, bake, 3000W
68	5304403015	Support, hanger, (2), broil element
70	318259100	Shield, insulation, sides, (2)
71	318260007	Panel, rear box
76	318056216	Front, oven
80	5303320846	Plate, oven mtg
81	318192400	Spring, oven
82	318258707	Shield, insulation, lower
83	318261403	Liner, oven assy
86	5303310524	Receptacle, hinge
87	318260600	Bracket, cable mtg.
90	318296922	Panel, filler, white, RH
90A	318296923	Panel, filler, white, LH
99	318256200	Bracket, side, bottom, (2)
127	318317000	Adapter, vent tube
162	318225810	Box, extension
163	318014110	Spacer, (6)
200	318330001	Trim, door opening, white, bottom
285	318236201	Shield, hidden wires
* #	318078526	Box & wires assy
* #	318224920	Harness, wiring, main
*	5303325856	Kit, anti-tip
*	3051050	Screw, shoulder
*	5303211311	Screw, 8 x 0.500
*	5303307980	Screw, 8-32 x 0.437, (4)
*	5303323129	Screw, 8 X 0.750
*	5304415832	Screw, 8-18 x 0.406
*	5304436875	Screw, 8-18 X 1/2, black


MAIN TOP

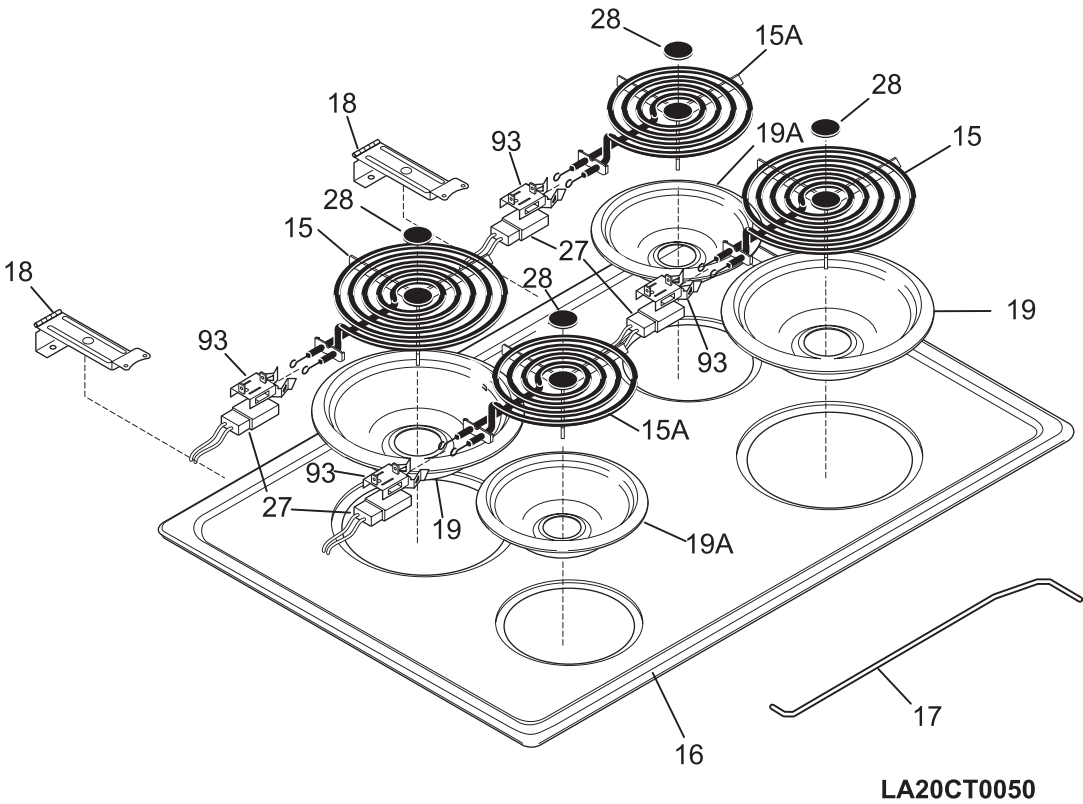

MAIN TOP

POS. NO	PART NO.	DESCRIPTION
15 #	5303012223	Element, surface, 8", large
15A#	08067762	Element, surface, 6", small
16	318225602	Main Top, white
17	3051554	Rod, support, main top panel
18	318227710	Hinge, maintop, (2)
19 #	318067056	Pan, surface element, large, chrome
19A#	318067046	Pan, surface element, small, chrome
27 #	5303912666	Terminal Block Kit, surface element
28	3017801	Medallion, stainless steel, surf elem
28	5303017715	Medallion, 1 1/2"dia, black, surface element
93	318122500	Support, terminal block, (4)
* #	318301000	Wiring Harness, surface units
*	5303211311	Screw, 8 x 0.500
*	5303300265	Screw, 8-18 X 1/2, (2)

DOOR

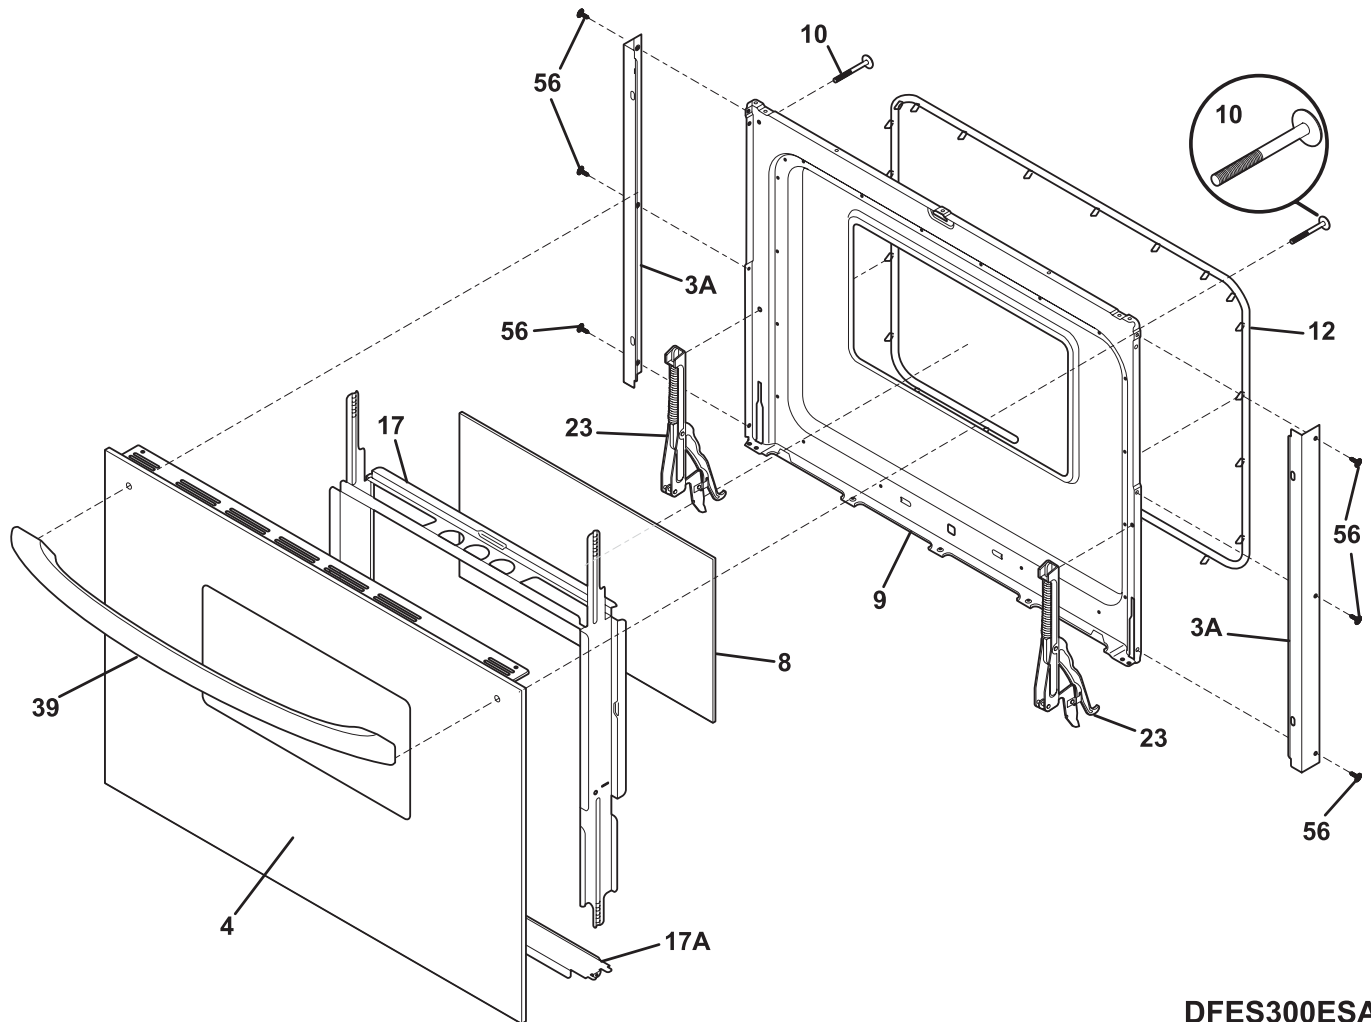

DFES300ESA

DOOR

POS. NO	PART NO.	DESCRIPTION
3A	318298101	Trim, door, black, side, (2)
4	318297001	Panel, door, white
5	318311800	Glass, door, inner
8	316427700	Glass, oven door, inner
9	318259624	Liner, oven door
10	5304453223	Screw, handle mtg, 10-14 x 1.82, (2)
12	318053325	Seal, door, lower oven
17	318300501	Bracket, glass
17A	318300600	Bracket, glass, lower
18	318323001	Gasket, inner door
23	5303320452	Hinge, oven door
39	316270201	Handle, door, white
56	5304436875	Screw, 8-18 X 1/2, black
*	316221001	Label, anti-tip
*	3051050	Screw, shoulder
*	08016432	Screw, truss head, 8-18 x 0.375
*	5303211311	Screw, 8 x 0.500
*	5303307980	Screw, 8-32 x 0.437, (4)
*	5304415832	Screw, 8-18 x 0.406

WIRING DIAGRAM

