


## QUICK REFERENCE GUIDE

### QuietMaster® Programmable Room Air Conditioner

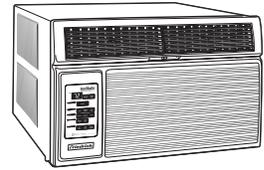

**TOUCH**

#### ① TO START UNIT

Touch the **ON/OFF** button. The unit will automatically be in regular COOLING mode with the temperature set at 75°F (24°C) and the fan speed at F1 (SLEEP).

NOTE: Should the **FILTER ALERT** light flash when you first turn the unit on, touch the **FILTER ALERT** button to turn off the flashing light.




#### ② TO ADJUST TEMPERATURE

**COOLER** – Touch **COOLER** and hold until the display shows the desired room temperature.

**WARMER** – Touch **WARMER** and hold until the display shows the desired room temperature.

**FAHRENHEIT / CELSIUS** – Touch **°F / °C** to show the temperature in Celsius, touch again to show Fahrenheit.

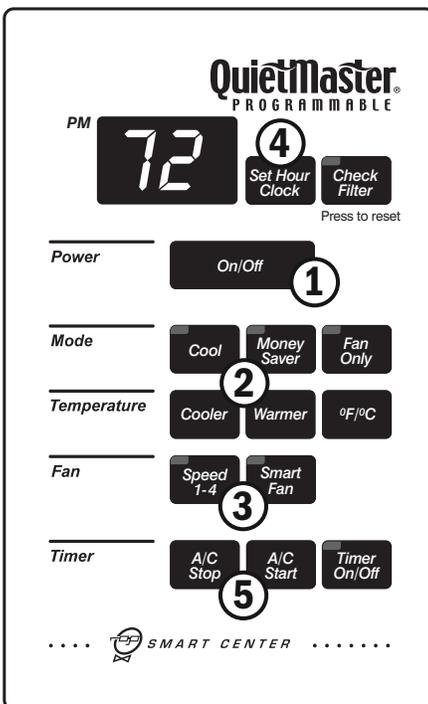

#### ③ TO ADJUST THE FAN SPEED

Touch **SPEED 1-4** until the display shows the desired fan speed. **F1** is the lowest setting (SLEEP SETTING), **F2** is LOW, **F3** is MEDIUM, **F4** is HIGH. Touch **SMART FAN** (light on) and the fan speed will adjust automatically to maintain the desired comfort level.

Touch **SPEED 1-4** for manual control of fan speeds



#### ④ TO SET THE CLOCK TIME

Touch **SET HOUR CLOCK** and hold until the hour closest to the actual time appears in the display. Make sure you set A.M. and P.M. properly.

Minutes will NOT show on the display.



#### ⑤ TO SET THE TIMER

**STOP TIME** – Touch **A/C STOP** and hold until the hour you want the unit to shut off appears in the display.

**START TIME** – Touch **A/C START** and hold until the hour you want the unit to come on appears in the display.

Touch **TIMER ON** (light on) to activate the timer function. Touch **TIMER OFF** (light off) to cancel the timer function. Once the on and off times have been selected, they will remain in memory. However, if the power is interrupted, set the **CLOCK TIME** again.

