 




Frigidaire

Factory Parts Catalog

Product No.	FEC30S6DQA
	3805424354041
Series	30" elec
Color	stainless
Market	North America
Wiring Diagram	318046805
Owner's Guide	318200612
Installation Instructions	318201410

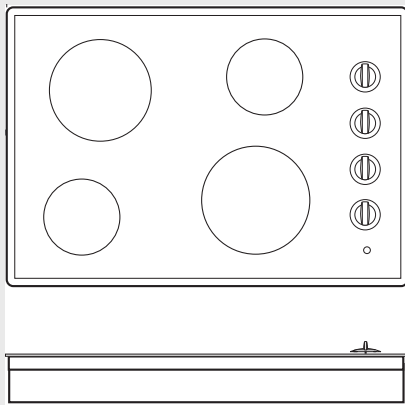

ELECTROLUX HOME PRODUCTS, INC.
P.O. Box 212378, Augusta, GA 30917

 
Publication No.
5995422796
04/11/23
(EN/SERVICE/ECL)
377

ELECTRIC COOK-TOP RANGE

Model No.
FEC30S6D

Copyright © 2004 Electrolux Home Products, Inc.
All rights reserved.

 
CONTROL PANEL

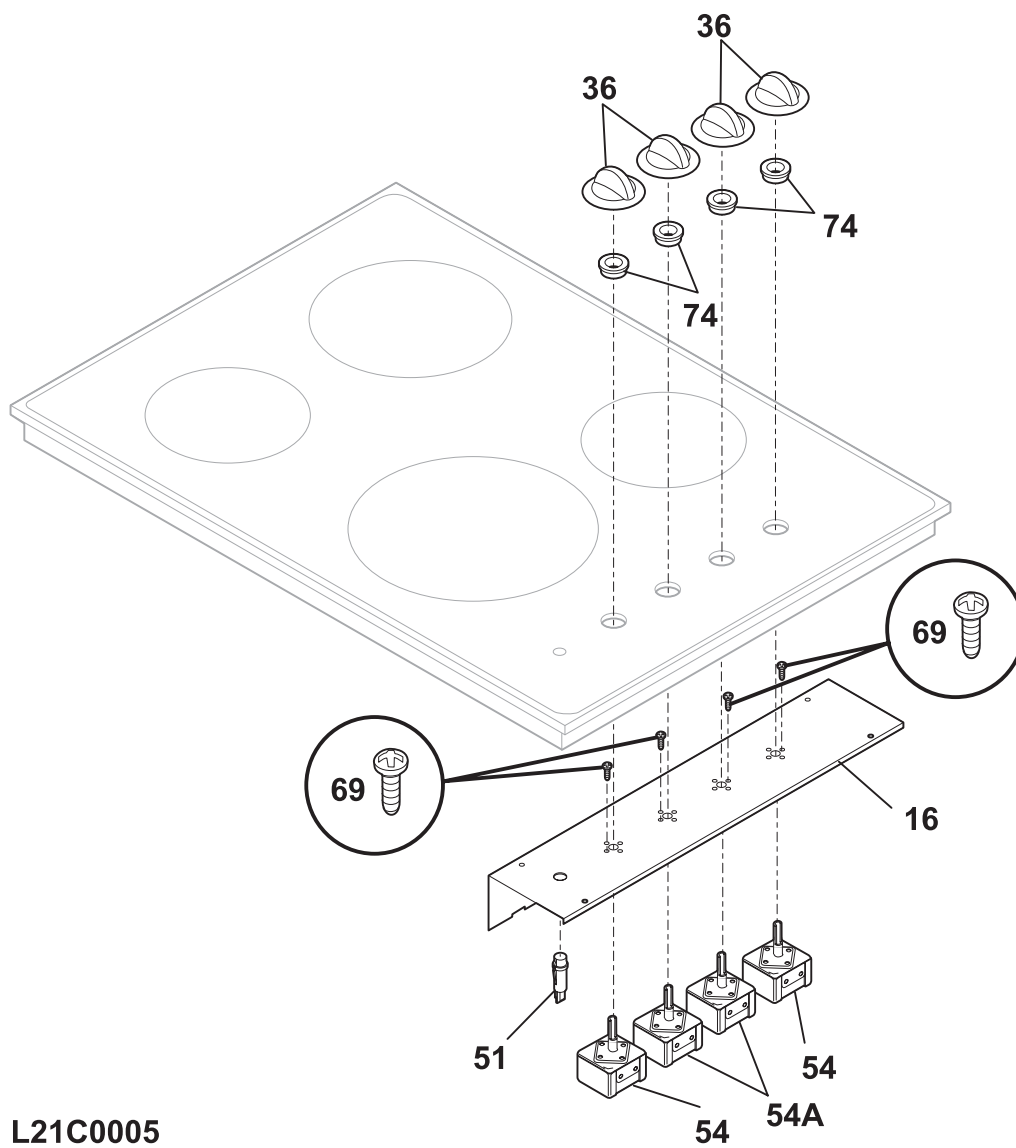

L21C0005

CONTROL PANEL

POS. NO	PART NO.	DESCRIPTION
16	318096327	Box, instrument mtg
36	318196635	Knob, control, bisque
51 #	318044820	Light, indicator, red
54 #	318220071	Switch, surface unit, small
54A#	318220072	Switch, surface unit, large
69	5303323134	Screw, 8-32 x 0.188
74	318148900	Bushing, switch
*	5303300265	Screw, 8-18 x 0.500, chrome, (3)
*	5303323140	Screw, ground, 10-32 x 0.375

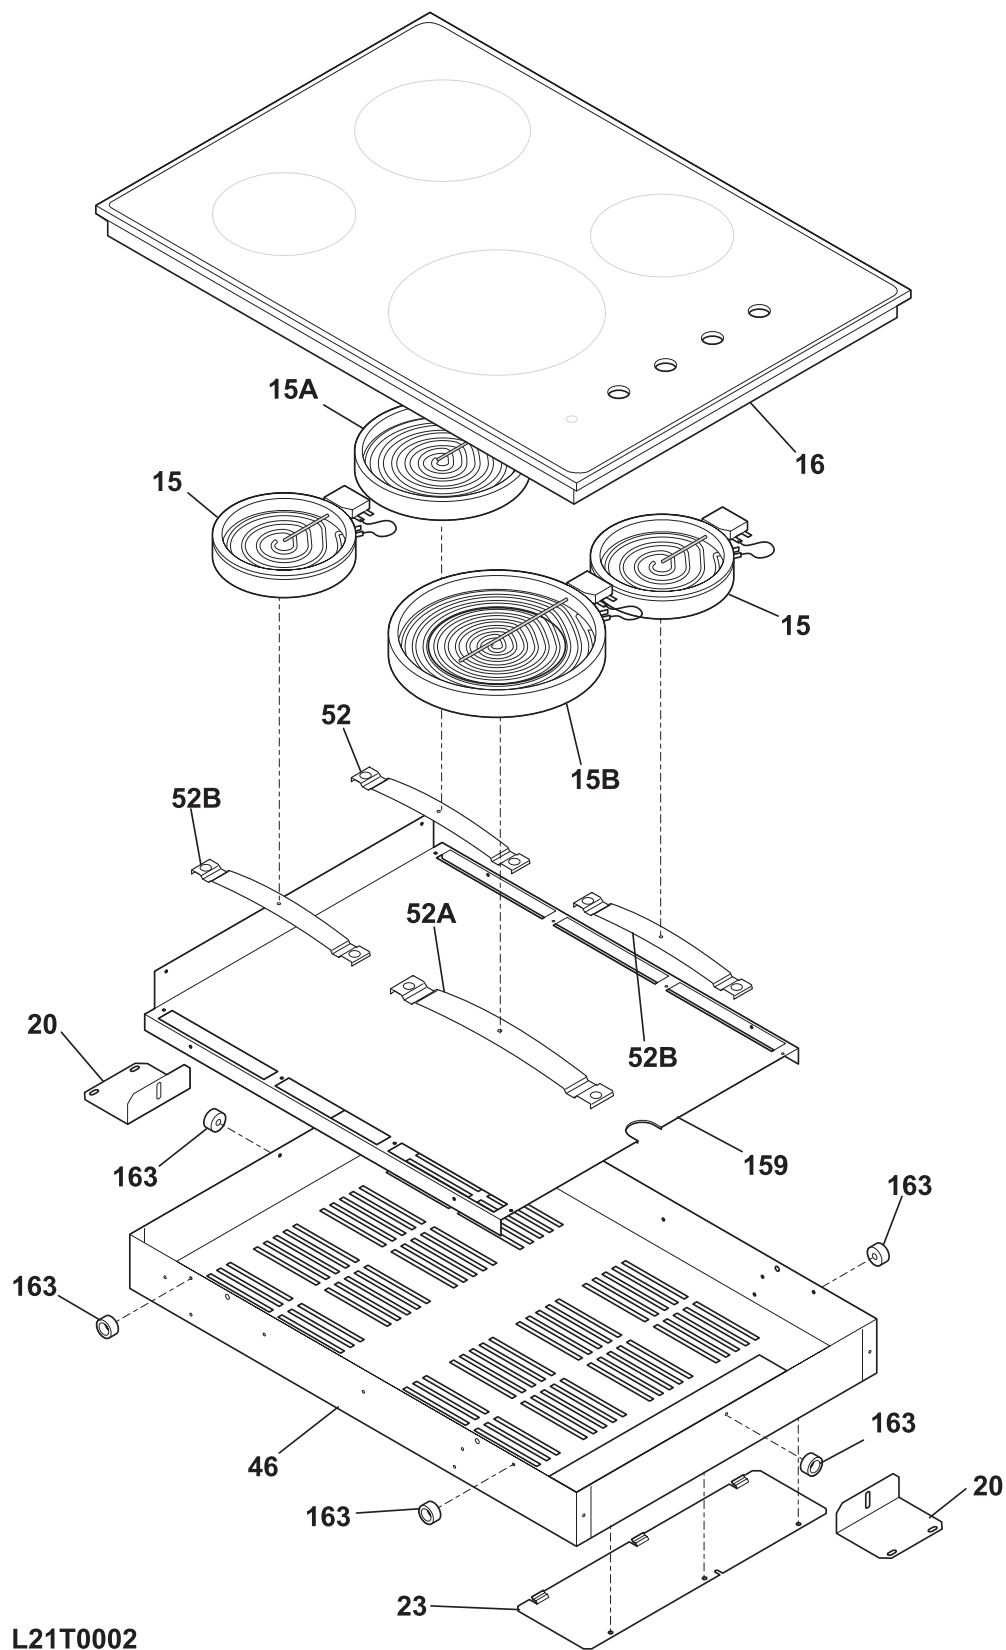MAIN TOP/SURFACE UNITS

MAIN TOP/SURFACE UNITS

POS. NO	PART NO.	DESCRIPTION
15 #	318198817	Element, surface, small/6", 1200 W
15A#	318198812	Element, surface, 8", 2200 W
15B#	316224200	Element, surface, 9", 2500W, radiant
16	318079399	Main Top Assy, glass/steel, bisque/black
20	318121902	Bracket, retainer
23	318194703	Panel, service, black
46	318077232	Burner Box
52	318122007	Spring, element mtg, large
52A	318122010	Spring, element mtg, 1000W/2500W
52B	318122006	Spring, element mtg, small
159	318125113	Deflector
163	318014110	Spacer
* #	318078525	Box & wires assy
*	08016432	Screw, truss head, 8-18 x 0.375
*	5303323129	Screw, 8 X 0.750

WIRING DIAGRAM

