

# ELECTRONIC OVEN CONTROL

Read the instructions carefully before using the oven. For satisfactory use of your oven, become familiar with the various functions of the oven as described below. **Note:** The graphics on your oven control may not look exactly like those shown. This doesn't change the way it operates.



## Control Pad Functions (Upper oven shown only)

**Conv Bake Pad-** Used to select the convection bake feature.

**Preheat Pad-** Used to select the preheat mode.

**Bake Time Pad-** Used to enter the length of the baking time.

**Speed Clean Pad-** Use to select the Speed Clean feature.

**Oven Light-** Used to turn the oven light on and off.

**Clear/Off-** Used to cancel any function previously entered except the time of day and minute timer. Push **Clear/Off** pad to stop cooking.

**Timer ON/OFF Pad-** Used to set or cancel the minute timer. The minute timer does not start or stop cooking.

**Clock Pad -** Use to set the time of day.

**Bake Pad-** Used to enter the normal baking mode temperature.

**Conv Convert Pad-** Use to select the Convection Convert feature.

**Broil Pad-** Use to select variable Broil feature.

**Conv Roast Pad-** Use to select the Convection Roast feature.

**Clean Pad-** Used to select the self-cleaning mode.

**Maxx Clean Pad-** Use to select the Maxx Clean feature.

**Keep Warm Pad-** Use to select the Keep Warm feature.

**Start Time Pad-** Used to set the desired start time (Delayed Start) for baking or cleaning. Can be used with any **BAKING** or **CLEANING** cycle.

**0 Thru 9 number pads-** Used to enter temperature and times.

**Start-** Used to start all oven functions. Not used with Oven Light.

**NOTE:** All instructions are given for the **UPPER oven**. If **LOWER oven** is used the indicator lights will appear in the right portion of the display.

All oven functions have a minimum and maximum time or temperature values that may be entered into the control. These values are shown below. If you have trouble setting a mode, be sure you are not entering a value greater than or lower than the values shown in this chart. An ENTRY ERROR tone (3 short beeps) will sound if the value does not meet these limits.

MODE	MINIMUM VALUE	MAXIMUM VALUE
PREHEAT TEMP	170°F / 77°C	550°F / 288°C
BAKE TEMP	170°F / 77°C	550°F / 288°C
BROIL TEMP	400°F / 205°C	550°F / 288°C
MINUTE TIMER	12 HR	0:01 MIN
	24 HR	0:01 MIN
CLOCK TIME	12 HR	1:00 HR / MIN
	24 HR	0:00 HR / MIN
BAKE TIME	12 HR	0:01 MIN
	24 HR	0:01 MIN
CONVECTION BAKE	170°F/77°C	550°F/288°C
CONVECTION ROAST	170°F/77°C	550°F/288°C

### Versión en español

Si desea obtener una copia en español de este Manual del Usuario, sírvase escribir a la dirección que se incluye a continuación. Solicite la P/ N 318200135E.

Spanish Owner's Guides  
Frigidaire Company  
P. O. Box 9061  
Dublin, Ohio 43017-0961

# Setting the Clock

The **Clock** pad is used to set the clock. The clock may be set for 12 or 24 hour time of day operation. The clock has been preset at the factory for the 12 hour operation. When the wall oven is first plugged in, or when the power supply to the appliance has been interrupted, the timer in the display will flash along with "PF" (power failure, See Fig. 1).



Fig. 1

When PF appears in the display and 12:00 is flashing, press **Clear/Off**. A beep will sound and PF will disappear.

## INSTRUCTIONS

### To set the clock (example below for 1:30)

1. Press **Clock**. "CLO" and the current time of day will appear in the display (Fig. 2).
2. Press **1** **3** **0** pads to set the time of day to 1:30 (Fig. 3). Press **START**. The time of day will appear in the display (Fig. 4).

## PRESS



## DISPLAY



Fig. 2

 


Fig. 3



Fig. 4

### Changing between 12 or 24 hour time of day display

1. Press and hold **Clock** for 7 seconds. "CLO" and the current time of day will appear in the display (Fig. 3). A beep will sound and "12h" (Fig. 5) or "24h" (Fig. 6) will appear in the display.
2. Press **Clean** to switch between the 12 and 24 hour time of day display. The display will show either "12h" (Fig. 5) or "24h" (Fig. 6).
3. Press **START** to accept the change or press **Clear/Off** to reject the change.
4. Reset the correct time as described in **To set the Clock** above. Please note that if the 24 hour time of day mode was chosen, the clock will now display time from 0:00 through 23:59 hours.

**Clock** for 7 seconds



Fig. 5



Fig. 6

# Setting Continuous Bake or 12 Hour Energy Saving

The **TIMER ON/OFF**  and **CLEAN**  pads control the Continuous Bake or 12 Hour Energy Saving features. The oven control has a factory preset built-in 12 Hour Energy Saving feature that will shut off the oven if the oven control is left on for more than 11 hours and 59 minutes. The oven can be programmed to override this feature for Continuous Baking.

## INSTRUCTIONS

## PRESS

## DISPLAY

### To set the control for Continuous Bake or 12 Hour Energy Saving features

1. Press and hold  for 10 seconds (Fig. 1). After 10 seconds "12h" or "- -h" will appear in the display and the control will beep once.
2. Press  to switch between the 12 Hour Energy Saving and continuous bake features. Note: "12h" (Fig. 2) in the display indicates the control is set for the 12 Hour Energy Saving mode and "- -h" indicates the control is set for the Continuous Bake feature (Fig. 3).
3. Press  to accept the change (Fig. 4; display will return to time of day) or press  to reject the change.

 for 10 seconds







 


Fig. 1



Fig. 2



Fig. 3



Fig. 4

## Setting Timer

The **TIMER ON/OFF**  pad controls the Timer feature. The Timer serves as an extra timer in the kitchen that will beep when the set time has run out. It does not start or stop cooking. The Timer feature can be used during any of the other oven control functions, except during a self clean operation. Refer to "Minimum and Maximum Control Pad Settings" for time amount settings.

## INSTRUCTIONS

## PRESS

## DISPLAY

### To set the Timer (example for 5 minutes)

1. Press . "--:--" will appear and "TIMER" will flash in the display (Fig. 5).
2. Press the number pads to set the desired time in the display (example ). Press . The time will begin to countdown with "5:00" and "TIMER" will stay in the display (Fig. 6). Note: If  is not pressed the timer will return to the time of day after 25 seconds.
3. When the set time has run out, "End" and "TIMER" will show in the display (Fig. 7). The clock will sound with 3 beeps every 7 seconds until  is pressed.









Fig. 5



Fig. 6



Fig. 7

### To cancel the Kitchen Timer before the set

**time has run out:** Press . The display will return to the time of day.

## Consumer Defined Controls

Note: The Consumer Defined Control features are adjustments to the control that will not affect cooking results. These include the Oven Lockout, Silent Control Operation and Temperature Display features.

### Setting Oven Lockout Feature

The  pad controls the Oven Lockout feature. The Oven Lockout feature automatically locks the oven doors and prevents the oven from being turned on. It does not disable the clock, Kitchen Timer or the interior oven lights. The ovens can be locked individually.

#### INSTRUCTIONS

#### To activate the Oven Lockout feature

1. Press and hold  for 3 seconds.
2. After 3 seconds a beep will sound, "DOOR", "LOCKED" will flash and "Loc", the oven icon, "UPPER" and  will appear in the display (Fig. 1). Once the oven door is locked the "DOOR" and "LOCKED" indicator will stop flashing and remain in the display.

#### PRESS

 for 3 seconds

#### DISPLAY



Fig. 1

#### To reactivate normal oven operation:

1. Press and hold  for 3 seconds. A beep will sound. The oven icon, "UPPER" "LOC" and  will disappear from the display. "DOOR" and "LOCKED" will flash in the display until the oven door has completely unlocked.

 for 3 seconds

2. The wall oven is again fully operational.

Note: Because you can set the oven lockout individually, the lower oven can be used when the upper oven lockout feature is on.

### Setting Silent Control Operation

The **STARTTIME**  and **CLEAN**  pads control the Silent Control operation feature. The Silent Control operation feature allows the oven control to be operated without sounds or beeps whenever necessary. If desired the control can be programmed for silent operation and later returned to operating with all the normal sounds and beeps.

#### INSTRUCTIONS

#### To change control from normal sound operation to silent control operation

1. Press and hold  for 6 seconds. A beep will sound, "--:--" will appear, "UPPER" and "DELAY" will flash in the display (Fig. 2). After 6 seconds, a beep will sound and "SP" will appear in the display (Fig. 3).
2. Press  to switch between normal sound operation and silent operation mode. If "SP" appears (Fig. 3), the control will operate with normal sounds and beeps. If "--" appears (Fig. 4), the control is in the silent operation mode.

#### PRESS





3. Press  to accept the change or press  to reject the change.

 or 

#### DISPLAY



Fig. 2



Fig. 3



Fig. 4

## Consumer Defined Controls (continued)

### Setting Temperature Display — Fahrenheit or Celsius:

The **BROIL**  and **CLEAN**  pads control the Fahrenheit or Celsius temperature display modes. The oven control can be programmed to display temperatures in Fahrenheit or Celsius. The oven has been preset at the factory to display in Fahrenheit. Note: both ovens will be changed at the same time.

#### INSTRUCTIONS

#### To change display from Fahrenheit to Celsius or Celsius to Fahrenheit

1. Press  and hold for 6 seconds. A beep will sound, "---" will appear **"UPPER"** and **"BROIL"** will flash in the display (Fig. 1). After 6 seconds a beep will be heard and **"F"** (Fig. 2) or **"C"** (Fig. 3) will appear in the display.

If **"F"** appears, the display is set to show temperatures in Fahrenheit (Fig. 2). If **"C"** appears, the display is set to show temperatures in Celsius (Fig. 3).

2. Press  to switch between Fahrenheit or Celsius display modes. The display will show either **"F"** (Fig. 2) or **"C"** (Fig. 3).
3. Press  to accept the change or press  to reject the change.

#### PRESS

 for 7 seconds



 or 

#### DISPLAY



Fig. 1



Fig. 2



Fig. 3

# Setting Oven Controls

## Setting Preheat

The **PREHEAT**  pad controls the Preheat feature. The Preheat feature will bring the oven up to temperature and then indicate when to place the food in the oven. Use this feature when recipes call for preheating. Preheating is not necessary when roasting or cooking casseroles. The oven can be programmed to preheat at any temperature between 170°F to 550°F (77°C to 288°C).

### INSTRUCTIONS

#### To set the Preheat temperature for 350°F

1. Arrange the interior oven racks.
2. Press . " - - - " will appear, "UPPER" and "BAKE" will flash in the display (Fig. 1).
3. Press   . "350°" will appear in the display (Fig. 2).
4. Press . "UPPER" and "BAKE" stop flashing and remain in the display. "PRE" will appear in the display. The oven icon appears in the display showing the bake and broil elements cycling. Also convection fan and convection element will turn on to help the oven reaching the desired temperature faster (Figs 3 & 4).

Note: After the oven has reached the desired temperature (this example, 350°F) a beep will be heard indicating this is time to **PLACE FOOD IN THE OVEN**, the convection fan and convection element will turn off and the display will show "350°" (Fig. 5). The oven will continue to operate in a Bake mode.

Press  when baking is completed or to cancel the preheat feature.

#### To change Preheat temperature while oven is preheating (example: changing from 350°F to 425°F)

If it is necessary to change the preheat temperature while the oven is preheating to the original temperature:

1. While preheating, press . " - - - " will appear, "UPPER" and "BAKE" will flash, the oven icon will remain in the display (Fig. 6).
2. Enter the new preheat temperature. Press  ,  ,  . "425°" will appear in the display (Fig. 7).
3. Press . "UPPER" and "BAKE" stop flashing and remain in the display. "PRE" will appear in the display until the desired temperature (here, 425°F) is reached (Fig. 8). At that time the display will show "425°". A long beep will sound once the oven temperature reaches 425°F.
4. When baking is completed press .

### PRESS



### DISPLAY



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6



Fig. 7



Fig. 8

# Setting Oven Controls (continued)

## Setting Bake

The **BAKE** (Bake) pad controls normal baking. If preheating is necessary, refer to the Preheat Feature for instructions. The oven can be programmed to bake at any temperature from 170° F to 550° F (77°C to 288°C).

### INSTRUCTIONS

#### To set the Bake Temperature to 350°F

1. Arrange interior oven racks and place food in oven.
2. Press (Bake), "---" will appear, "UPPER" and "BAKE" will flash in the display (Fig. 1).
3. Press (3), (5), (0). "350°" will appear, "UPPER" and "BAKE" continue flashing in the display (Fig. 2).
4. Press (START). "UPPER" and "BAKE" stop flashing and the oven icon appears in the display showing the bake (Fig. 3) and broil elements cycling. Also convection fan and convection element will turn on to help the oven reaching the desired temperature faster. A beep will sound once the oven temperature reaches 350° F, the convection fan and convection element will turn off (Fig. 4).

Pressing (Clear/Off) will cancel the Bake feature at any time.

#### To change the Bake Temperature (example: changing from 350°F to 425°F)

1. After the oven has already been set to bake at 350°F and the oven temperature needs to be changed to 425°F, press (Bake) (Fig. 5). "--- °" will appear, "UPPER" and "BAKE" start flashing in the display.
2. Press (4) (2) (5). "425°" will appear in the display (Fig. 6).
3. Press (START). "UPPER" and "BAKE" will stop flashing and remain in the display. A beep will sound once the oven temperature reaches "425°".

Note: If the oven was recently heated from prior cooking and has remained heated, the bake element symbol may not show in the display immediately.

### PRESS



### DISPLAY



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6

# Setting Oven Controls (continued)

## Setting Convection Bake

The **CONVECTION BAKE**  pad controls the Convection Bake feature.

Use the Convection Bake feature when cooking speed is desired. The oven can be programmed for Convection baking at any temperature between 170° F (77° C) to 550° F (288° C).

Convection baking uses a fan to circulate the oven's heat evenly and continuously within the oven. This improved heat distribution allows for fast, even cooking and browning results. It also gives better baking results when using 2 or 3 racks at the same time. Breads and pastries brown more evenly. Convection Bake cooks most foods faster and more evenly than conventional baking.

### General Convection Bake Instructions

1. When using Convection Bake, decrease your normal cooking times as shown aside. Adjust the cook time for desired doneness as needed. Time reductions will vary depending on the amount and type of food to be cooked. Cookies and biscuits should be baked on pans with no sides or very low sides to allow heated air to circulate around the food. Food baked on pans with a dark finish will cook faster.
2. Preheating is not necessary when cooking casseroles with Convection Bake.
3. When using Convection Bake with a single rack, place oven rack in position 2 or 3. If cooking on multiple racks, place the oven racks in positions 2 and 4.

#### Benefits of Convection Bake:

- Some foods cook up to 30% faster, saving time and energy.
- Multiple rack baking.
- No special pans or bakeware needed.

#### Foods for CONVECTION BAKE pad \*Decrease normal cook time by:

Frozen foods, pies, .....	15-25 %
pastries and pizza	
Refrigerator cookies .....	15-35 %
Refrigerator biscuits .....	15-30 %
Rolls & Breads .....	20-25%
Fresh Pies/Pastries .....	10-20 %

Begin with the maximum reduction in cook times and adjust as needed.

\*Recommended reduction in cook times based on brands of food items tested. Cook times may vary with your specific brand of food item.

### INSTRUCTIONS

#### To set the oven for Convection Bake and temperature to 350°F

1. Arrange interior oven racks and place food in oven.
2. Press . " - - - " will appear, "UPPER", "BAKE" and "CONV" will flash in the display (Fig. 1).
3. Press   . "UPPER", "BAKE" and "CONV" will continue to flash and "350°" will appear in the display (Fig. 2).
4. Press . "UPPER", "BAKE" and "CONV" stop flashing and remain in the display. The oven icon will appear and the rotating fan will start running in the display. The bake (Fig. 3), broil (Fig. 4) and convection (Fig. 5) elements icon will show intermittently in the display indicating which element is on to help the oven reaching the desired temperature. A beep will sound once the oven temperature reaches 325°F (adjusted temperature).

Note: The convection fan will start AS SOON AS the oven is set for Convection Bake.

Press  to cancel Convection Bake at any time.

**Note:** As soon as the  pad is pressed the set temperature will be decreased by 25°F (14°C).

### PRESS



### DISPLAY

 


Fig. 1

 


Fig. 2



Fig. 3



Fig. 4

 


Fig. 5

# Setting Oven Controls (continued)

## Setting Convection Roast

The **CONV ROAST**  pad is designed to give optimum cooking performance for this feature. The Convection Roast pad combines a cook cycle with the convection fan and element to roast meats and poultry. Preheating is not necessary for meats and poultry. Heated air circulates around the food from all sides, sealing in juices and flavors. Foods are crispy brown on the outside while staying moist on the inside.

### INSTRUCTIONS

#### To set the Convection Roast feature (example: Meats to cook at 350°F)

1. Arrange interior oven racks and place food in oven.
2. Press . "---" will appear and "UPPER", "ROAST" and "CONV" will flash in the display (Fig. 1).
3. Press   . "UPPER", "ROAST" and "CONV" will continue to flash and "350°" will appear in the display (Fig. 2).
4. Press . "UPPER", "ROAST" and "CONV" will stop

flashing and the oven icon will appear and the rotating fan will start running in the display. The bake (Fig. 3) and broil (Fig. 4) and convection (Fig. 5) element icons will show intermittently in the display indicating which element is on. A beep will sound when the desired temperature is reached.

Press  to cancel Convection Roast at any time.

### PRESS



### DISPLAY



Fig. 1



Fig. 2



Fig. 3



Fig. 4

 


Fig. 5

## Setting Convection Convert feature

The **CONV CONVERT**  pad is used to automatically convert a standard **baking**

recipe for convection baking. When set properly, this feature is designed to display the actual converted (reduced) temperature in display. Convection Convert may **ONLY** be used with a **Bake, Timed Bake** or a **Delay Start** (Delayed Timed Bake) setting. When used with a Timed Bake or a Delayed Timed Bake setting, the Convection Convert feature will display a "CF" for check food when the bake time is 75% complete. At this time the oven control will sound one long beep at regular intervals until baking has finished. When the bake time has completely finished the control will display "End" and will

sound 3 long beeps every 30 seconds until the  pad is pressed.

#### Using Convection Convert (Bake) feature to automatically adjust oven temperature (example: setting oven for 350°F):

1. Arrange interior oven racks and place food in oven. If a Timed Bake or a Delayed Start (Delayed Timed Bake) is desired, enter the times now.
2. Press . "--- °" will appear, "UPPER" and "BAKE" will flash in the display (Fig. 6).
3. Press   . "UPPER" and "BAKE" will continue to flash and "350°" will appear in the display (Fig. 7).
4. Press . "UPPER", "BAKE" will stop flashing and

remain on, "CONV" and the oven temperature **adjustment** will appear in the display (for this example it is 325°F). A beep will sound once the **adjusted** oven temperature is reached (Fig. 8).

Note: The oven icon will show a rotating fan within the square with the bake (Fig. 8), broil (Fig. 9) and convection (Fig. 10) elements cycling in the display.

Press  to cancel Convection feature at any time.



Fig. 6

 


Fig. 7



Fig. 8



Fig. 9



Fig. 10

**Note:** The minimum amount of cook time using the Convection Convert feature with a **Timed Bake** or a **Delay Start** (Delayed Timed Bake) is 20 minutes.

## Setting Oven Controls (continued)

### Setting Timed Bake, Timed Convection Bake or Timed Convection Roast

The **BAKE**  or **CONVECTION BAKE**  or **CONVECTION ROAST**  and **BAKE TIME**  pads control the Timed Bake feature. The automatic timer of the Timed Bake feature will turn the oven OFF after cooking for the desired amount of time you selected.

#### INSTRUCTIONS

#### PRESS

#### DISPLAY

To program the oven to begin baking immediately and to shut off automatically (example: **BAKE** at 350°F for 30 minutes):

1. Be sure the clock is set for the correct time of day.
2. Arrange interior oven rack(s) and place the food in the oven.

3. Press , "**UPPER**", "**BAKE**" will flash and "---" will appear in the display (Fig. 1).



4. Press   . "**UPPER**", "**BAKE**" will continue to flash and "350°" will appear in the display (Fig. 2).



5. Press . "350°", "**UPPER**" and "**BAKE**" stop flashing and remain on in the display (Fig. 3).



6. Press . "**UPPER**" and "**TIMED**" start flashing and "--:--" will appear in the display (Fig. 4).



7. Enter the desired baking time by pressing  . "--:30" will appear in the display (Fig. 5). **Note:** Baking time can be set for any amount of time between 1 minute to 11 hours and 59 minutes.



8. Press . The display returns to the time of day (Fig. 6).

 


Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5



Fig. 6

Note: After the Timed Bake feature has been activated, press  to display the bake time remaining in the Timed Bake mode. Once Timed Bake has started baking, a beep will sound when the oven temperature reaches the set temperature.

Press  when baking has finished or at any time to cancel the Timed Bake feature.

#### When the timed bake finishes:

1. "**End**" and the time of day will show in display. The oven will shut off automatically (Fig. 7).
2. The control will beep 3 times. The control will continue to beep 3 times every 30 seconds until  is pressed.



Fig. 7

**CAUTION** Use caution with the **TIMED BAKE** or **DELAYED TIME BAKE** features. Use the automatic timer when cooking cured or frozen meats and most fruits and vegetables. Foods that can easily spoil such as milk, eggs, fish, meat or poultry, should be chilled in the refrigerator first. Even when chilled, they should not stand in the oven for more than 1 hour before cooking begins, and should be removed promptly when cooking is completed. Eating spoiled food can result in sickness from food poisoning.

# Setting Oven Controls (continued)

## Setting Delayed Timed Bake, Delayed Timed Convection Bake or Convection Roast

The **BAKE**  or **CONVECTION BAKE** , or **CONVECTION ROAST** , **BAKE TIME**  and **START TIME**

 pads control the Delayed Time Bake feature. The automatic timer of the Delayed Time Bake will turn the oven **on and off** at the time you select in advance. **Note:** If your clock is set for normal 12 hour display mode the Delayed Timed Bake or Delayed Timed Convection Bake cycle can never be set to start more than 12 hours in advance.

### INSTRUCTIONS

### PRESS

### DISPLAY

**To program the oven for a delayed BAKE start time and to shut off automatically (example: baking at 350°F, starting at 5:30 and baking for 30 minutes)**

1. Be sure that the clock is set with the correct time of day.
2. Arrange interior oven rack(s) and place the food in the oven.
3. Press . "UPPER", "BAKE" will flash and "---" will appear in the display (Fig. 1).
4. Press   . "UPPER", "BAKE" will continue to flash and "350°" will appear in the display (Fig. 2).
5. Press . "350°", "UPPER" and "BAKE" will stop flashing and remain in the display (Fig. 3).
6. Press . "UPPER" and "TIMED" will start flashing and "--:--" will appear in the display (Fig. 4).
7. Enter the desired baking time using the number pads by pressing  . "--:30" will appear in the display (Fig. 5). Note: Baking time can be set for any amount of time from 1 minute to 11 hours and 59 minutes.
8. Press . The display will return to the time of day (Fig. 6).
9. Press . "UPPER", "DELAY" start flashing and "--:--" will appear in the display (Fig. 7).
10. Enter the desired start time using the number pads    (Fig. 8).
11. Press . The current time of day will appear in the display (Fig. 8).
11. When the desired start time is reached, the oven icon will appear in the display and the oven will start to bake at the previously selected temperature.

Press  when baking has completed or at any time to cancel the Delayed Time Bake feature.

### When the set bake time runs out:

1. "End" will appear in the display and the oven will shut off automatically (Fig. 10).
2. The control will beep 3 times. The control will continue to beep 3 times every 30 seconds until  is pressed.

 


Fig. 1



Fig. 2



Fig. 3

 


Fig. 4



Fig. 5



Fig. 6



Fig. 7

 


Fig. 8

 


Fig. 9



Fig. 10

# Setting Oven Controls (continued)

## Setting the Keep Warm Feature

The **Keep Warm**  pad turns ON the Keep Warm feature and will maintain an oven temperature of 170°F (77°C). The Keep Warm feature will keep oven baked foods warm for serving up to 3 hours after cooking has finished. After 3 hours the Keep Warm feature will shut the oven OFF. The Keep Warm feature may be used without any other cooking operations or can be used after cooking has finished using BAKE, CONVECTION BAKE or CONVECTION ROAST.

The Keep Warm feature may be used with TIMED BAKE if you wish to have the Keep Warm feature turn ON automatically when cooking has finished. The Timed Bake features require you to set start time and the amount of cooking time. With this information the control can calculate the time when cooking will complete and can then start the Keep Warm feature automatically.

### INSTRUCTIONS

### PRESS

### DISPLAY

#### To set Keep Warm

1. Arrange interior oven racks and place food in oven.
2. Press . "UPPER", "WARM" will flash and "HLd" will appear in the display (Fig. 1).  
Note: If no pad is touched within 25 seconds the request to turn ON Keep Warm feature will be cancelled.
3. Press . "UPPER", "WARM" will stop flashing, "HLd" will remain on and the oven icon will appear in the display (Fig. 2).
4. To turn the Keep Warm OFF at any time press .  
**Note:** The Keep Warm feature will automatically turn OFF after 3 hours.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5

#### To set Keep Warm to turn ON automatically

1. Arrange interior oven racks and place food in oven. Set the oven properly for **Timed Bake or Delayed Timed Bake**.
2. Press . "UPPER" and "WARM" will flash and "HLd" will appear in the display (Fig. 3).  
Note: If no pad is touched within 25 seconds the request to turn ON the Keep Warm feature and all functions previously programmed will be cleared.
3. Press . "UPPER" and "WARM" will stop flashing and remain in the display. Also temperature programmed will appear in the display (Fig. 4).
4. When the Time Bake has finished, the keep warm mode will turn ON automatically. "350°", "BAKE" and "TIMED" will disappear. "HLd" will appear. "UPPER" and the oven icon will remain in the display (Fig. 5).  
**Note:** The Keep Warm feature will automatically turn OFF after 3 hours.



Pressing  at any time will stop all oven baking operations.



# Setting Oven Controls (continued)

## Setting Broil

The **Broil** pad controls the Broil feature. When broiling, heat radiates downward from the oven broiler for even coverage.

The Broil feature temperature may be set between 400°F and 550°F. The broil pan and broil pan insert used together allow dripping grease to drain and be kept away from the high heat of the oven broiler. **DO NOT** use the broil pan without the insert (See Figure 5). **DO NOT cover the broil pan insert with foil.** The exposed grease could catch fire.

**⚠ WARNING** Should an oven fire occur, leave the oven door closed and turn off the oven. If the fire continues, throw baking soda on the fire or use a fire extinguisher. **DO NOT** put water or flour on the fire. Flour may be explosive and water can cause a grease fire to spread and cause personal injury.

### INSTRUCTIONS

#### To set the oven to broil at 550°F:

- Place the broiler pan insert on the broiler pan. Then place the food on the broiler pan insert. **DO NOT** use the broiler pan without the insert. **DO NOT** cover the broiler insert with foil. The exposed grease could ignite.
- Arrange the interior oven rack and place the broiler pan on the rack. Be sure to center the broiler pan directly under the broiler element. **Make sure the oven door is in the broil stop position** (Fig. 4).
- Press **Broil**. "---" will appear and "UPPER" and "BROIL" will flash in the display (Fig. 1).
- Press **5**, **5**, **0**. "550°" will appear in the display (Fig. 2)
- Press **START**. "UPPER" and "BROIL" will stop flashing and the oven icon will appear in the display. The oven will begin to broil. "550°" will stay in the display (Fig. 3).
- Broil on one side until food is browned; turn and cook on the second side. Season and serve. **Note:** Always pull the rack out to the stop position before turning or removing food.
- To cancel broiling press **Clear/Off**.

### PRESS



### DISPLAY

 


Fig. 1

 


Fig. 2


 


Fig. 3

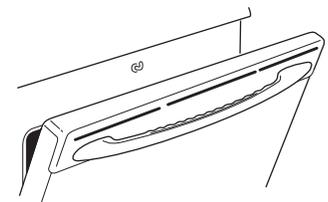

Broil Stop Position  
Fig. 4

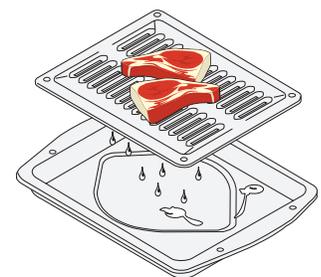


Fig. 5

### Broiling Times

Use the following table for approximate broiling times. Increase or decrease broiling times, or move the broiling pan to a different rack position to suit for doneness. If the food you are broiling is not listed in the table, follow the instructions provided in your cookbook and watch the item closely.

#### Electric Range Broiling Table Recommendations

Food Item	Rack Position	Temp Setting	Cook Time		Doneness
			1st side	2nd side	
Steak 1" thick	2nd	550° F	6:00	4:00	Rare
	2nd	550° F	7:00	5:00	Medium
Pork Chops 3/4" thick	2nd	550° F	8:00	6:00	Well
Chicken - Bone In	3rd	450° F	20:00	10:00	Well
Chicken - Boneless	2nd	450° F	8:00	6:00	Well
Fish	2nd	500° F	13:00	n/a	Well
Shrimp	3rd	550° F	5:00	n/a	Well
Hamburger 1" thick	2nd	550° F	9:00	7:00	Medium
	3rd	550° F	10:00	8:00	Well

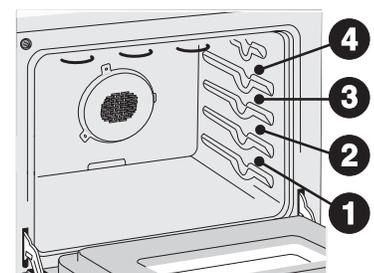


Fig. 6

## Setting Oven Controls (continued)

### To Set the Sabbath Feature (for use on the Jewish Sabbath & Holidays)

The **BAKE TIME**  and **START TIME**  pads are used to set the Sabbath feature. The Sabbath feature may only be used with the  pad. The oven temperature may be set higher or lower after setting the Sabbath feature (the oven temperature adjustment feature should be used only during Jewish Holidays), however the display will not visibly show or provide any audible tones indicating whether the change occurred correctly. Once the oven is properly set using Bake with the Sabbath feature active, the oven will remain continuously ON until cancelled. This will override the factory preset 12-Hour Energy Saving feature.

If the oven light will be needed during the Sabbath, press  before activating the Sabbath feature. Once the oven light is turned ON and the Sabbath feature is active, the oven light will remain ON until the Sabbath feature is turned OFF. If the oven light needs to be OFF, be sure to turn the oven light OFF before activating the Sabbath feature.

**IMPORTANT NOTES:** It is not advised to attempt to activate any other program feature other than **BAKE** while the Sabbath feature is active. ONLY the following key pads will function after setting the Sabbath feature; , , ,

 & . **ALL OTHER KEYPADS** will not function once the Sabbath feature is properly activated.

#### INSTRUCTIONS

#### PRESS

#### DISPLAY

#### To Program the Oven to Begin Baking Immediately & activate the Sabbath feature (example: baking at 350°F)

1. Be sure that the clock is set with the correct time of day.
2. Place the food in the oven.
3. Press . "----" will appear, "UPPER" and "BAKE" will flash in the display (Fig. 1).
4. Press the , , . "350°" will appear, "UPPER" and "BAKE" will flash in the display (Fig. 2).
5. Press . "UPPER" and "BAKE" stop flashing and the icon will appear in the display (Fig. 3).
6. If you desire to set the oven control for a **Timed Bake** or **Delayed Start Bake** do so at this time. If not, skip this step and continue to step 7. Refer to the **Timed Bake** (complete steps 6-8) / **Delayed Start Bake** (complete steps 6-9) section for complete instructions. Remember the oven will shut down after using **Timed Bake** or **Delay Start Bake** and therefore may only be used once during the Sabbath/Jewish Holidays. The maximum **Delayed Start Bake** time is 11 hours & 59 minutes.



, , 





Fig. 1



Fig. 2

 


Fig. 3


## Setting Oven Controls (continued)
 
### To Set the Sabbath Feature (for use on the Jewish Sabbath & Holidays)

#### INSTRUCTIONS

- The oven will turn ON and begin heating.
- Press and hold both the  and  pads for at least 3 seconds. **SAb** will appear in the display (Fig. 1). Once SAb appears in the display the oven control will no longer beep when a keypad is pressed or display any further changes. The oven is properly set for the Sabbath feature.  
**Note:** You may change the oven temperature once baking has started by pressing , the numeric key pads for the temperature you want (example for 425°C press , , ) and then pressing  TWICE (for Jewish Holidays only). Remember that **the oven control will no longer beep when a keypad is pressed or display any further changes** once the oven is set for the Sabbath feature.
- The oven may be turned OFF at any time by first pressing  pad (this will turn the oven OFF only). To turn OFF the Sabbath feature press and hold both the  and  pads for at least 3 seconds. This also turns off the oven. **SAb** will disappear from the display.

#### PRESS



#### DISPLAY



Fig. 1

Should you experience a power failure or interruption, the oven will shut off. When power is returned the oven will not turn back on automatically. The oven will remember that it is set for the Sabbath and the food may be safely removed from the oven while still in the Sabbath feature, however the oven cannot be turned back on until after the Sabbath. After the Sabbath observance turn OFF the Sabbath feature. Press and hold both the  and  pads for at least 3 seconds. **SAb** will disappear from the display and the oven may be used with all normal functions. For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit the web at <http://www.star-k.org>.

# Oven Cleaning

## Self-Clean Cycle Time Length

The **SPEED CLEAN** (Speed clean), **CLEAN** (Clean) and **MAXX CLEAN** (Maxx clean) pads control the Self-Cleaning feature. If you are planning to use the oven directly after a self-clean cycle remember to allow time for the oven to cool down and the oven door to unlock. This normally takes about one hour. So a 3 hour self-clean cycle will actually take about 4 hours to complete.

\*It is recommend to use a (Speed clean) cycle (2 hour) for **light soils**, a (Clean) cycle (3 hour) for **average soils**, and a (Maxx clean) cycle (4 hour) for **heavy soils** (to assure satisfactory results).

**CAUTION** To avoid possible burns use care when opening the oven door after the Self-Cleaning cycle. Stand to the side of the oven when opening the door to allow hot air or steam to escape.

**CAUTION DO NOT** force the oven door open. This can damage the automatic door locking system. Use caution and avoid possible burns when opening the door after the Self-Cleaning cycle has completed. The oven may still be VERY HOT.

### INSTRUCTIONS

### PRESS

### DISPLAY

#### To set the controls for a 3 hour Self-Cleaning cycle to start immediately and shut off automatically

1. Be sure the clock is set with the correct time of day and the oven door is closed.
2. Press (Clean). "3:00", "CLn" will appear, "UPPER" and "CLEAN" will flash in the display (Fig. 1). The control will automatically clean for a 3 hour period (default self-cleaning cycle time). Note: If a 2 or 4 hour clean time is desired, press (Speed clean) for 2 hour or press (Maxx clean) for a 4 hour clean time. Set the cleaning time based on the amount of soil: light, medium or heavy (\* See above).
3. Press (START). "DOOR" and "LOCKED" will flash; "UPPER" and "CLn" will appear in the display and the clock will return to the time of day (Fig. 2).
4. As soon as the control is set, the motor driven oven door lock will begin to close automatically. Once the door has been locked the "UPPER", "DOOR" and "LOCKED" indicator light will stop flashing and remain on. Also, the oven icon will appear in the display (Fig. 3). Allow about 15 seconds for the oven door to lock.

 


Figure 1



Figure 2

 


Figure 3

# Oven Cleaning (continued)

## INSTRUCTIONS

## PRESS

## DISPLAY

**Note: If the optional delay Self-Clean is desired, finish steps 5-8. If Self-Clean is started immediately skip the remaining steps and continue with "When the Self-Clean cycle is completed".**

5. Press . "UPPER" and "DELAY" will start flashing and "--:--" will appear in the display (Fig. 1).
6. Enter the desired start time using the number pads    (Fig. 2).
7. Press . The display will return to the time of day (Fig. 3).
8. The control will start the self-cleaning at the set start time, for the period of time previously selected (Fig. 4).



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5

## **When the Self-Clean Cycle is Completed**

1. Three long beeps will be heard and "CLn" will disappear from the display. "UPPER", "DOOR" and "LOCKED" will remain in the display until the door is unlocked. The cooling fan will continue to run until the oven has cooled down (Fig. 5).
2. Once the oven has cooled down for 1 HOUR, and "UPPER", "DOOR" and "LOCKED" are no longer displayed, the oven door can then be opened.

## **Stopping or Interrupting a Self-Cleaning Cycle**

If it becomes necessary to stop or interrupt a self-cleaning cycle due to excessive smoke or fire in the oven:

1. Press .
2. Once the oven has cooled down for approximately 1 HOUR and "UPPER", "DOOR" and "LOCKED" are no longer displayed, the oven door can then be opened.



## **Important Notes** when using the Self-Clean Feature:

1. A Self Clean cycle cannot be started if **Oven Lockout** feature is active.
2. When Self-Clean cycle is active on one oven, the other one cannot be used or set for a Self-Clean cycle or any cooking cycle.
3. If your clock is set for normal 12 hour display mode the delay Self-Clean can never be set to start more than 12 hours in advance. To set for a delayed Self-Cleaning cycle 12-24 hours in advance see instructions to set control for the 24 hour time of day display mode.

# Adjusting Oven Temperature

The temperature in the oven has been preset at the factory. When first using the oven, be sure to follow recipe times and temperatures. If you think the oven is too hot or too cool, the temperature in the oven can be adjusted. Before adjusting, test a recipe by using a temperature setting that is higher or lower than the recommended temperature. The baking results should help you to decide how much of an adjustment is needed.

**Note:** The oven temperature adjustments made with this feature will not change the Self-Clean cycle temperature or the Broil temperature .

## INSTRUCTIONS

## PRESS

## DISPLAY

### To adjust the oven temperature:

1. Press and hold **Bake** for 6 seconds. The preset adjustment number will appear and "UPPER" will flash in the display (Fig. 1).
2. To increase the temperature use the number pads to enter the desired change. (Example 30°F) **3** **0** (Fig. 2). The temperature may be increased as much as 35°F (19°C). To decrease the temperature use the number pads to enter the desired change. (Example -30°F) **3** **0** and then press **Clean** (Fig. 3). The temperature may be decreased as much as 35°F (19°C).
3. Press **START** to accept the temperature change and the display will return to the time of day. Press **Clear /off** to reject the change if necessary.



Fig. 1



Fig. 2



Fig. 3



**NOTE:** Each oven may be adjusted individually.

---

## Notes

---

## Notes