

Setting the Clock



Digital Display

The time-of-day must be set before any other program can be used. When your oven is first connected to the power in your home, the timer display will show 12:00.


To program the time-of-day:

- Press either the "UPPER OVEN" or "LOWER OVEN" button. The word "CLOCK/SET" will be lit on the display.
- Press the "CLOCK/SET" button again. The word "CLOCK" will be on the display.
- Type in the correct time on the electronic number keypad.
- Press the "CLOCK/SET" button again. The clock is now set.

Alternate method:

- Press either the "UPPER OVEN" or "LOWER OVEN" button. The word "CLOCK" will be on the display.
- Use the up and down arrows to change the current time.
- Press the "CLOCK/SET" button. The word "CLOCK" will be on the display.

Oven Control Panel

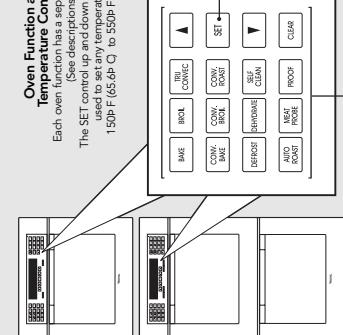

Oven Function and Temperature Controls

Each oven has a single setting dial. The SET control is first used to set any temperature from 150°F (65.0°C) to 550°F (287.8°C).

Electronic Timing Center

The Electronic Timing Center is used to program and control all timing functions. IMPORTANT: The time-of-day must be set before any other program can be used.

Electronic Keypad Entry

Both ovens have the electronic keypad entry. The alphanumeric keys can be used to program and control all oven functions.

Oven Selector Controls

The Oven Selector Controls are used to turn the upper or lower oven on and off.

Temperature Control

Both ovens have the temperature control. To use this feature, select the upper or lower oven, and then set the desired temperature. The control can be set at any temperature from 150°F (65.0°C) to 550°F (287.8°C).

Oven Function Selector Control

Both ovens offer 11 settings to choose from which you can choose the one that best meets your cooking needs.

Bake

When using this function, full-power heat is radiated from the bottom of the oven cavity while supplemental heat is radiated from the broil element. This function is recommended for single-rack baking. Use this setting for baking, roasting, and casseroles.

Broil

This function is a dry-heat cooking method, using direct or radiant heat on three different settings: low, medium and high. The distance between the foods and the broil elements determines broiling speed. This function is recommended for small, individual cuts, such as steaks, chops, and patties.

TruConvect™

With this function, only the rear element operates at full power. There is no direct heat from the bottom or top elements, and the oven circulates air for even heating.

Convection Roast

Controls the interior lights in the upper and lower ovens.

Open Lock

Childproofing feature preventing the controls from being activated when the oven is not in use.

Recipes*

Accesses recipes, programs, and saves cooking cycles from favorite recipes.

Oven Light Controls

Controls the interior lights in the upper and lower ovens.

Self Clean

Childproofing feature preventing the controls from being activated when the oven is not in use.

Proof*

Creates an optimal environment for the rising of yeast in many kinds of dough.

Press and Hold

Accesses custom features such as display brightness, Sabbath mode, and tones.

Press and Release

Note: Premiere model features and control panel are shown.


Defrost

*Note: Premiere model features and control panel are shown.

Auto Roast**

Automatic searing the outside of roasts; simplifies roasting.

Oven Settings

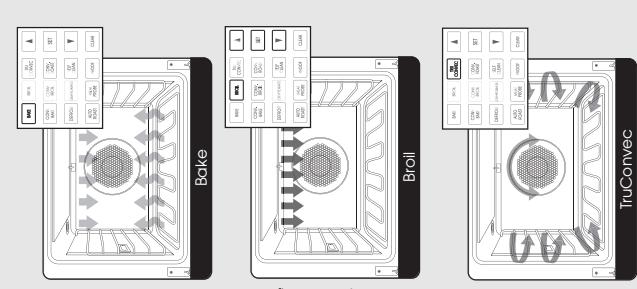

Bake: Both ovens have the temperature control. To use this feature, select the upper or lower oven, and then set the desired temperature. The control can be set at any temperature from 150°F (65.0°C) to 550°F (287.8°C).

Broil: Both ovens offer 11 settings to choose from which you can choose the one that best meets your cooking needs.

TruConvect™: With this function, only the rear element operates at full power. There is no direct heat from the bottom or top elements, and the oven circulates air for even heating.

Convection Roast: Controls the interior lights in the upper and lower ovens.

Open Lock: Childproofing feature preventing the controls from being activated when the oven is not in use.

Recipes*: Accesses recipes, programs, and saves cooking cycles from favorite recipes.

Oven Light Controls: Controls the interior lights in the upper and lower ovens.

Self Clean: Childproofing feature preventing the controls from being activated when the oven is not in use.

Proof*: Creates an optimal environment for the rising of yeast in many kinds of dough.

Press and Hold: Accesses custom features such as display brightness, Sabbath mode, and tones.

Press and Release: Accesses custom features such as display brightness, Sabbath mode, and tones.

Defrost: Natural defrosting of the food using fan without heat.

Auto Roast**: Automatic searing the outside of roasts; simplifies roasting.

Oven Settings

Use this setting for foods that require gentle cooking, such as pastries, soufflés, yeast breads, quick breads, and cakes. This setting produces breads, cookies, and other baked goods with an even texture and golden crust. No special bakeware is required. Use this function for single-rack baking, multiple-rack baking, roasting, and preparation of complete meals. This setting is also recommended when preparing large quantities of baked goods at one time.

Convection Bake

With this function, the bottom element operates at full power, and the top broil element operates at supplemental power. The motorized fan in the rear of the oven circulates heated air, providing a more even heat distribution. This even circulation of air equals the temperature throughout the oven cavity and eliminates the hot and cold spots found in conventional ovens.

A major benefit of convection baking is the ability to prepare food in larger quantities using multiple racks. When roasting using this setting, cold air is quickly replaced by warm air. Over a period of time, the water is removed from the outside of the meat, and caramelization and browning are enhanced. The oven circulates heated air around the meat, resulting in a more even and moist roast. The broil system is especially efficient when used for roasting, such as for steaks, fish, or meat. The broil system is especially economical when roasting frozen food. Use this setting for baking and roasting.

Convection Broil

Using this function, the top element operates at full power. This function is exactly the same as regular broiling with the additional benefit of air circulation by the motorized fan in the rear of the oven. Smoke is reduced since the airflow also reduces peak temperatures on the broiler. Use this setting for broiling thick cuts of meat.

Convection Roast

With this function, the convection element runs in conjunction with the inner and outer coil elements. The reversible convection fans at a high rate of speed cause the air to be sealed in the oven to create a large, dry environment. This saves time, such as roasting. When compared with single fan convection roast modes, use this setting for whole turkeys, whole chickens, and roasts.

Defrost

With the temperature control off, a motorized fan in the rear of the oven circulates air. This fan accelerates natural defrosting of the food without heat.


NOTE: To avoid sickness and food waste, do not allow defrosted food to remain in the oven for more than two hours.

Dehydrate

With this function, a motorized fan in the rear of the oven circulates warm air. Over a period of time, the water is removed from the food by evaporation. Removal of water inhibits growth of microorganisms and reduces the activity of enzymes. It is important to remember that dehydration does not improve quality; only fresh, top-quality foods should be dehydrated in your oven.

Sel-Clean

The self-cleaning cycle is designed to eliminate the need for scrubbing and cleaning food baked onto the oven interior. During this cycle, the oven uses high temperatures to burn off soils and deposits. An integral smoke eliminator reduces odors associated with the soil burn-off. A powder ash residue is left at the bottom of the oven after completion of the self-clean cycle. When the oven has cooled, remove any ash from oven surfaces with a damp sponge or cloth.

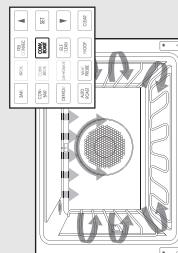

convection roast

Auto Roast**

This function further simplifies roasting by automatically searing the exterior of the meat, then reducing the pre-set temperature by 10% for a short time to seal the juice of the meat. The temperature then reverts to the pre-set temperature in the standard convection roast mode.

Meat Probe*

The probe temperature function is used to automatically turn the oven off when the internal temperature of meat being cooked is matched.

Proof*

This function uses a low temperature to create an optimal environment for the yeast to rise in many types of dough. The probe temperature function is used to automatically turn the oven off when the internal temperature of meat being cooked is matched.

Interior Oven Light Controls

The upper and lower ovens have interior oven lights controlled by the right touch pad. Push the light button to turn the interior oven lights on and off.

NOTE: This child protection function prevents the oven controls from being activated when the oven is not in use.



Oven Lock

This child protection function prevents the oven controls from being activated when the oven is not in use.

Settings

Use this function to access, program, and customize special features of your oven. Special features include beeps, timeouts, display brightness, and the Sabbath mode.

*Note: The AUTO ROAST, PROBE, RECIPES, and ROAST features are included on the Premiere models.

F50012

M003098

USA

111 Franklin Avenue • Elgin, IL 60131-1200

©2004 Viking Range Corporation

111 Franklin Avenue • Elgin, IL 60131-1200

www.vikingrange.com

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000


1-800-322-3000

1-800-322-3000

1-800-322-3000

1-800-322-3000

Viking Quick Reference Guide

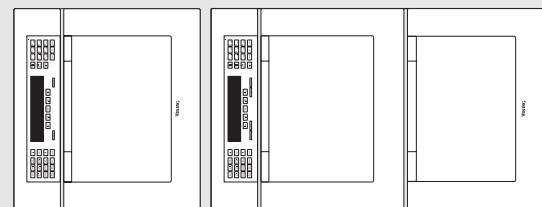

Designer Series
Built-In Electric Touch Control
Single and Double Ovens