Viking Installation Guide




Viking Range Corporation

111 Front Street

Greenwood, Mississippi 38930 USA

(662) 455-1200

For product information,
call 1-888-VIKING1 (845-4641)
or visit the Viking Web site at
vikingrange.com

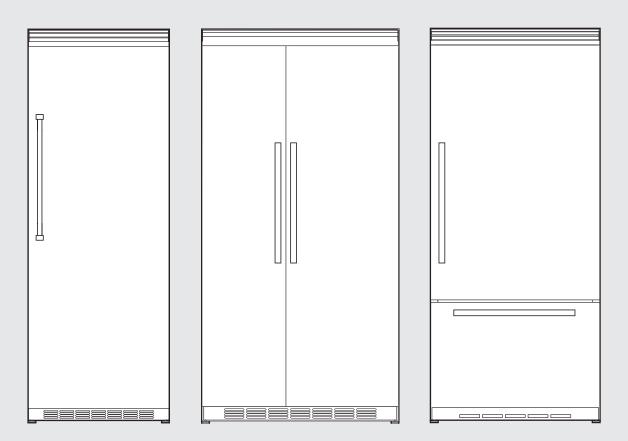

Custom Front Models
All Refrigerator/Freezer/Side-by-Side/Bottom Mount

F20418 (PS021407J)

Table of Contents

Warnings and Important Information	1
Bottom Mount	
Dimensions (36")	2
Specifications (36") Cutout Dimensions (36")	3
Anti-Tip Dimensions (36")	
Anti-Tip Dimensions (36")	
Overlay Dimensions (36")	0
Custom Grille Dimensions (36")Custom Grille Dimensions (Dual 36")	7
Custom Grille Dimensions (Dual 36")	8
Side-By-Side	
Dimensions (42")	9
Dimensions (48")	11
Cutout Dimensions (42")	12
Anti-Tip Dimensions (42")	13
Anti-Tip Dimensions (42)	
Cutout Dimensions (48")	14 15
Anti-Tip Dimensions (48")	
Overlay Dimensions (42")	16
Overlay Dimensions (48")	17
Custom Grille Dimensions (42")	18
Custom Grille Dimensions (48")	19
All Refrigerator/Freezer	
D:	20
Specifications (30" and 36")	
Cutout Dimensions (30")	22
Cutout Dimensions (30")	
Anti-Tip Dimensions (30")	
Cutout Dimensions (36")	24
Anti-Tip Dimensions (36")	
Dimensions (Dual 30")	26
Dimensions (Dual 30" and 36")	
Dimensions (Dual 36" and 36")	28
Specifications (Dual)	29
Cutout Dimensions (Dual 30")	30
Anti-Tip Dimensions (Dual 30")	31
Cutout Dimensions (Dual 30" and 36")	32
Anti-Tip Dimensions (Dual 30" and 36")	33
Cutout Dimensions (Dual 36")	34
Anti-Tip Dimensions (Dual 36")	٦r
Overlay Dimensions (30" and 36")	
Custom Grille Dimensions (30")	
Custom Grille Dimensions (30") Custom Grille Dimensions (36")	
	20
Custom Grille Dimensions (Dual 30")	
Custom Grille Dimensions (Dual 30" and 36")	40
Custom Grille Dimensions (Dual 36")	41
Cabinet Information	42
Custom Panel General Information	43
Ice and Water Dispenser Bezel Removal	44
Custom Door Panel Installation–Refrigerator	45
Custom Door Panel Installation–Freezer	46
Ice and Water Dispenser Bezel Installation	13
Custom Panel Hinge Cutout_	48
Custom Grille Installation	48 49
Castorii Office installation	
General Information	50
Unpacking & Moving	51
Installation	52
Hinge Adjustment	53
NICKDIALE INSTALLATION	54
Door Stop Adjustment	55
vvater filter installation	56
Water Filter System Specifications	57
Final Installation	58
Final InstallationPerformance Checklist	59
Control Panels	60
Service & Registration	61
	01

IMPORTANT-Please Read and Follow

- Make sure that incoming voltage is the same as unit rating. An electric rating plate specifying voltage, frequency, wattage, amperage, and phase is attached to the
- To reduce the risk of fire, electrical shock, or injury to persons, installation work and electrical wiring must be done by qualified people in accordance with all applicable codes and standards, including fire-rated construction.
- The installer should leave these instructions with the consumer who should retain them for local inspector's use and for future reference.

It is your responsibility to:

- Comply with installation specifications and dimensions.
- Properly install unit.
- Remove any moldings or decorative panels that prevent the unit from being serviced.
- Make sure that you have these materials (not provided with your unit), which are necessary for proper installation:
 - •1/4" (6 mm) copper tubing with shutoff valve
 - •6- #8 x 3" (7.6 cm) wood screws (longer screws may be required)
 - •1- Saddle valve (do not use self-piercing feature of the valve)
- Assure that floor will support unit, door panels and contents (approximately 1200 pounds [540 kg]).
- Provide a properly grounded electrical outlet.
- Assure that location will permit appliance doors to open a minimum of 90°.

WARNING **ELECTRICAL SHOCK HAZARD**

Disconnect power or turn power disconnect switch to OFF position before removing top grille. Failure to do so can result in death or electric shock.

to protect floor surface.

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. This symbol alerts to hazards that can result in injury or death to you and others.

All safety messages will be preceded by the safety alert symbol and the word"DANGER" or "WARNING." These words mean:



DANGER

Failure to follow these instructions can result in serious injury or death.



Failure to follow these instructions can result in serious injury or death.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

WARNING

TIP OVER HAZARD


Appliance is top heavy and tips easily when not completely installed.

Keep doors closed until appliance is completely installed and secured per installation instructions.

Use two or more people to move and install appliance. Failure to do so can result in death or serious injury.

Most of the unit's weight is at the top. Extra care is needed when moving the unit to prevent tipping. Use cardboard shipping material or plywood under unit until it is installed in the operating position

Dimensions (Bottom Mount)

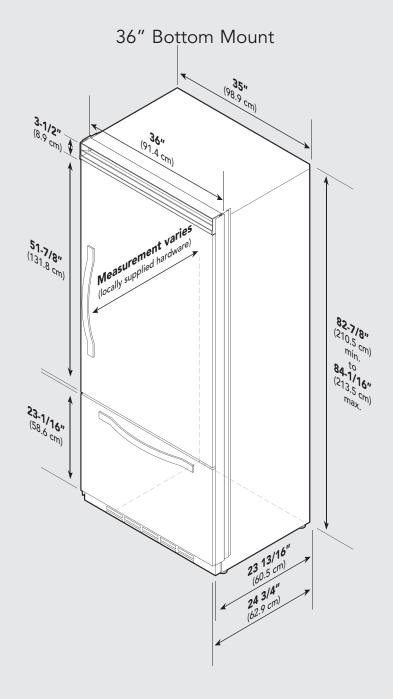

2


Specifications (Bottom Mount)

	36" Bottom Mount				
Description	DFBB363				
Overall width	36" (91.5 cm)				
Overall height (from bottom)	82-3/4" (210.2 cm) min. to 84-1/16" (213.5 cm) max.				
Overall depth (from rear)	To front edge of side trim: 23-13/16" (60.5 cm)				
	To front of top grille: 24-3/4" (62.9 cm)				
	To front edge of door trim: 24" (61.0 cm)				
Cutout width	36" (91.5 cm)				
Cutout height	82-7/8" (210.5 cm) min. to 84-1/16" (213.5 cm) max.				
Cutout depth	24" (61.0 cm) min.*				
Electrical requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with				
	grounded 3-prong plug attached to product				
Maximum amp usage	9.9 amps				
Inlet water	1/4" copper tubing inlet waterline; minimum 20 psi;				
requirements	maximum 120 psi				
Overall interior dimensions					
Refrigerator	15.2 cu. ft. (431 liters)				
Freezer	5.1 cu. ft. (145 liters)				
Total capacity	20.3 cu. ft. (576 liters)				
Maximum panel weight	Fresh food 45 lbs. (20.4 kg) Freezer 20 lbs. (9.0 kg)				
Approximate shipping weight	500 lbs. (227.3 kg)				


^{*}Full overlay models fit flush in 25" (63.5 cm) deep cabinet openings. They can be installed in standard 24" (61.0 cm) deep openings. The door faces and top grille will protrude 3/4" (1.9 cm) into the room.

Cutout Dimensions (Bottom Mount)

Anti-Tip Dimensions (Bottom Mount)

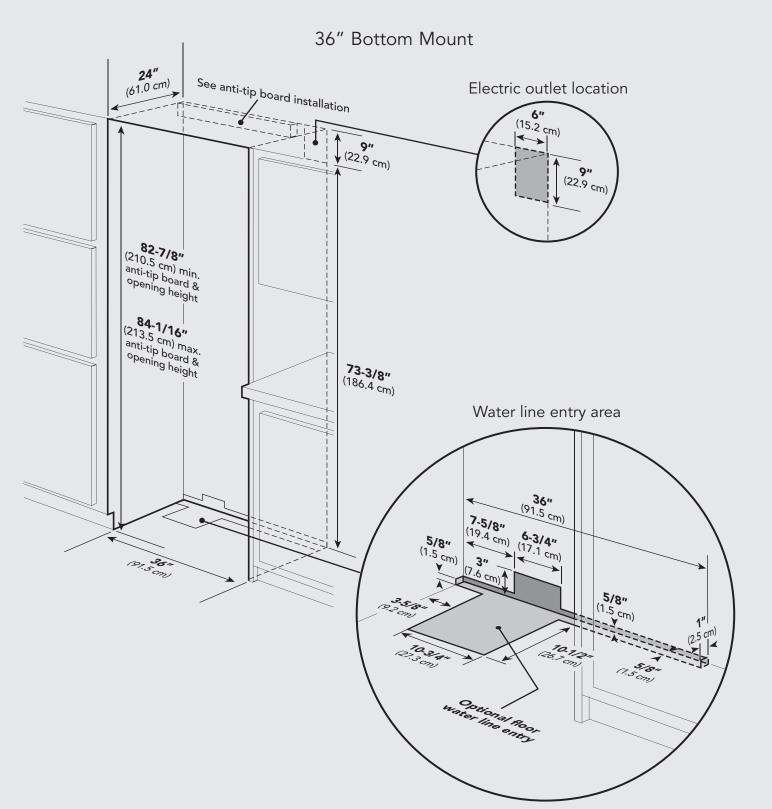


36" Bottom Mount

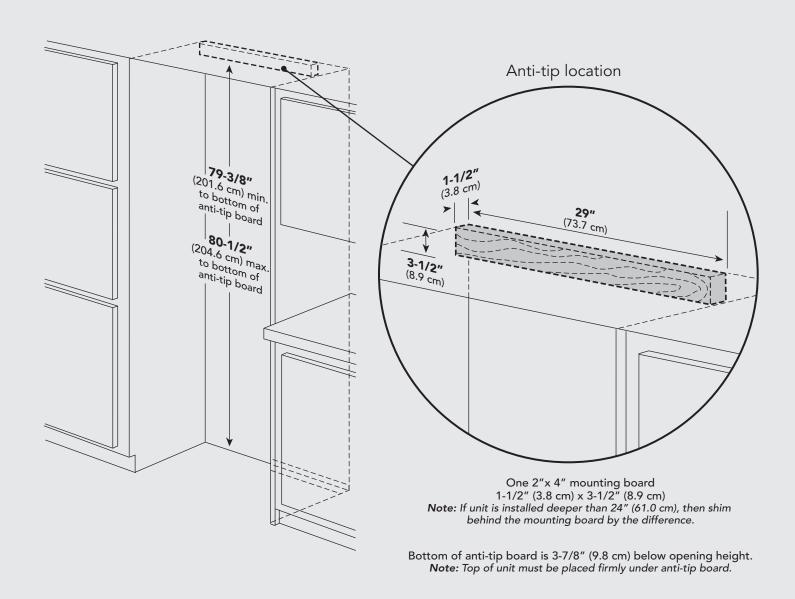


Overlay Dimensions (Bottom Mount)

36" Custom Panels

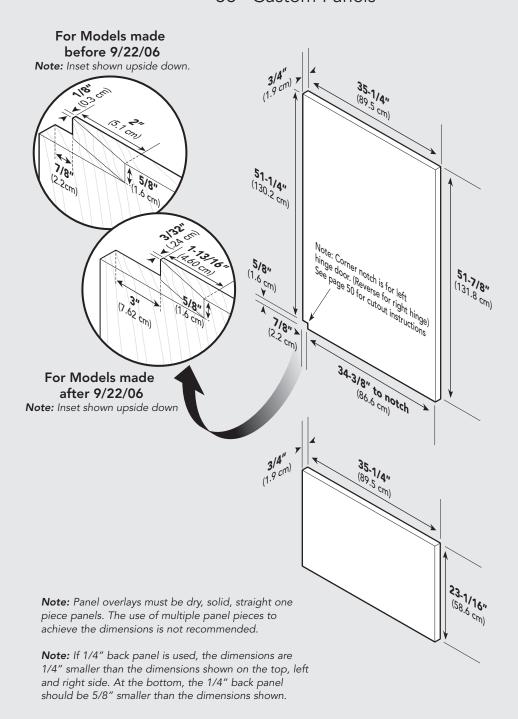

Custom Grille Dimensions (Bottom Mount)

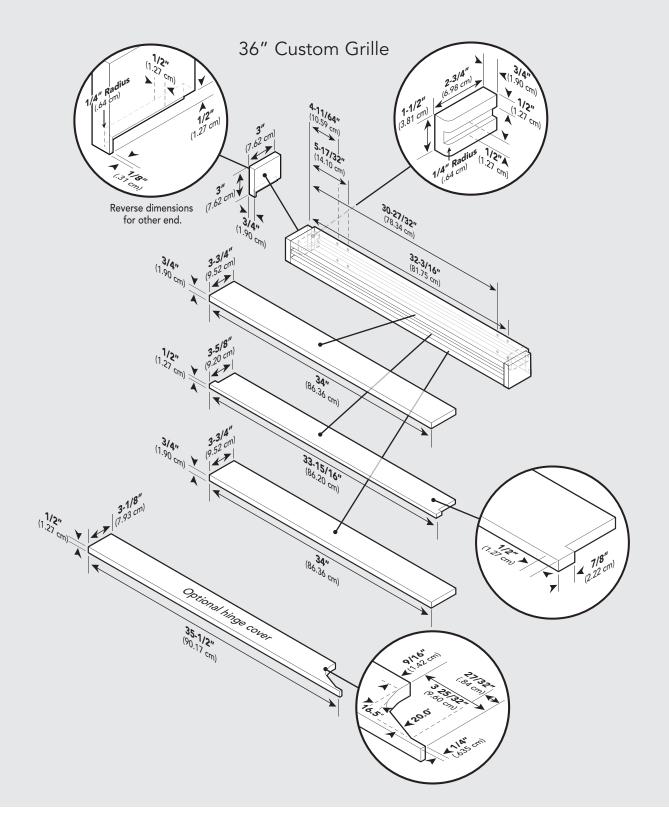


Custom Grille Dimensions (Bottom Mount)

Dual 36" Custom Grille


3/4" ➤ | < 1/8" (1.90 cm) ↑ (.32 cm) 13/32" (1.03 cm) A R 3/32" 3/4" 🗀 ▼ 3/8" Note: This part should be located at the center of the grille. If desired, two per grille can be used by dividing the length of the grille into thirds.

8

Dimensions (Side-By-Side)

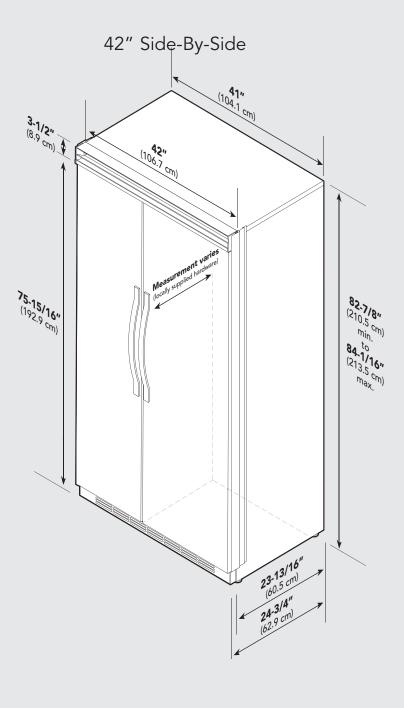

Dimensions (Side-By-Side)

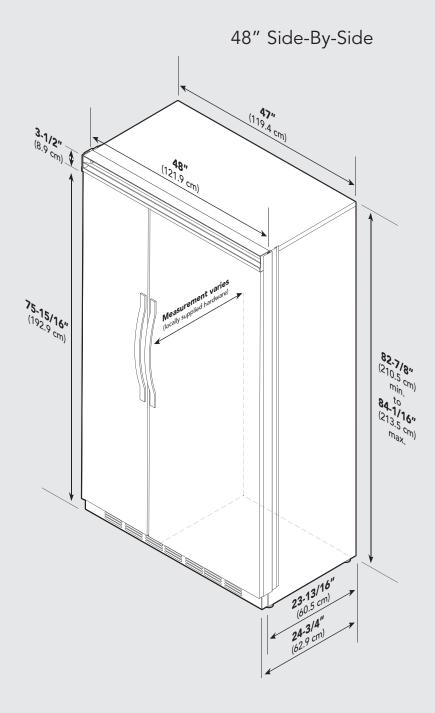

10

Specifications (Side-By-Side)


	42" Side-By-Side						
Description	DFSB423 DFSB423D						
Overall width	42" (10	6.7 cm)					
Overall height (from bottom)	82-3/4" (210.2 cm) min. to	84-1/16" (213.5 cm) max.					
Overall depth (from rear)	To front edge of side trim:	23-13/16" (60.5 cm)					
	To front of top grille:	24-3/4" (62.9 cm)					
	To front edge of door trim:	24" (61.0 cm)*					
Cutout width	42" (10	6.7 cm)					
Cutout height	82-7/8" (210.5 cm) min. to 84-1/16" (213.5 cm) max.						
Cutout depth	24" (61.0 cm) min.*						
Electrical requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with						
	grounded 3-prong plu	ig attached to product					
Maximum amp usage	9.9 a	amps					
Inlet water	1/4" copper tubing inlet waterline;	1/4" copper tubing inlet waterline;					
requirements	minimum 20 psi; maximum 120 psi	minimum 35 psi; maximum 120 psi					
Overall interior dimensions							
Refrigerator	15.0 cu. ft. (425 liters)	14.5 cu. ft. (411 liters)					
Freezer	9.0 cu. ft. (255 liters)	8.6 cu. ft. (244 liters)					
Total capacity	24.0 cu. ft. (680 liters)	23.1 cu. ft. (654 liters)					
Maximum panel weight	Fresh food 40 lbs. (18.1 kg)	Freezer 35 lbs. (15.9 kg)					
Approximate shipping weight	525 lbs. (236.2 kg)						


	48" Side-By-Side				
Description	DFSB483	DFSB483D			
Overall width	48" (12	1.9 cm)			
Overall height (from bottom)	82-3/4" (210.2 cm) min. to	84-1/16" (213.5 cm) max.			
Overall depth (from rear)	To front edge of side trim:	23-13/16" (60.5 cm)			
	To front of top grille:	24-3/4" (62.9 cm)			
	To front edge of door trim:	24" (61.0 cm)*			
Cutout width	48" (12	1.9 cm)			
Cutout height	82-7/8" (210.5 cm) min. to. 84-1/16" (213.5 cm) max				
Cutout depth	24" (61.0 cm) min.*				
Electrical requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with				
	grounded 3-prong plu	ig attached to product			
Maximum amp usage	9.9 a	amps			
Inlet water	1/4" copper tubing inlet waterline;	1/4" copper tubing inlet waterline;			
requirements	minimum 20 psi; maximum 120 psi	minimum 35 psi; maximum 120 psi			
Overall interior dimensions					
Refrigerator	18.5 cu. ft. (524 liters)	17.9 cu. ft. (507 liters)			
Freezer	8.9 cu. ft. (252 liters)	8.5 cu. ft. (241 liters)			
Total capacity	27.4 cu. ft. (776 liters)	26.4 cu. ft. (748 liters)			
Maximum panel weight	Fresh food 50 lbs. (22.7 kg)	Freezer 35 lbs. (15.9 kg)			
Approximate shipping weight	650 lbs. (292.5 kg)				


^{*}Full overlay models fit flush in 25" (63.5 cm) deep cabinet openings. They can be installed in standard 24" (61.0 cm) deep openings. The door faces and top grille will protrude 3/4" (1.9 cm) into the room.

Cutout Dimensions (Side-By-Side)

 Anti-Tip Dimensions (Side-By-Side)




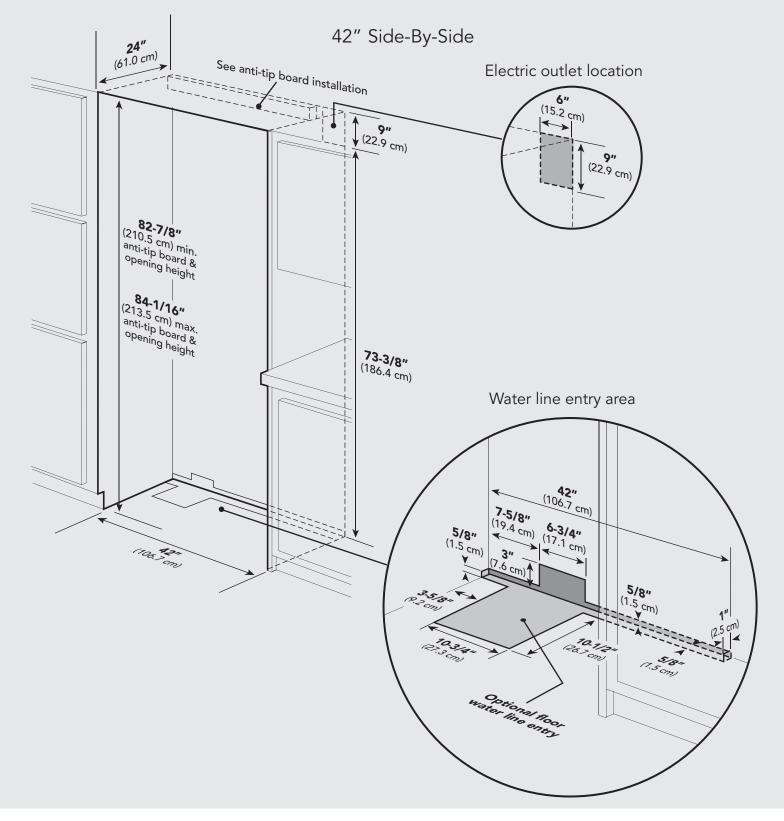

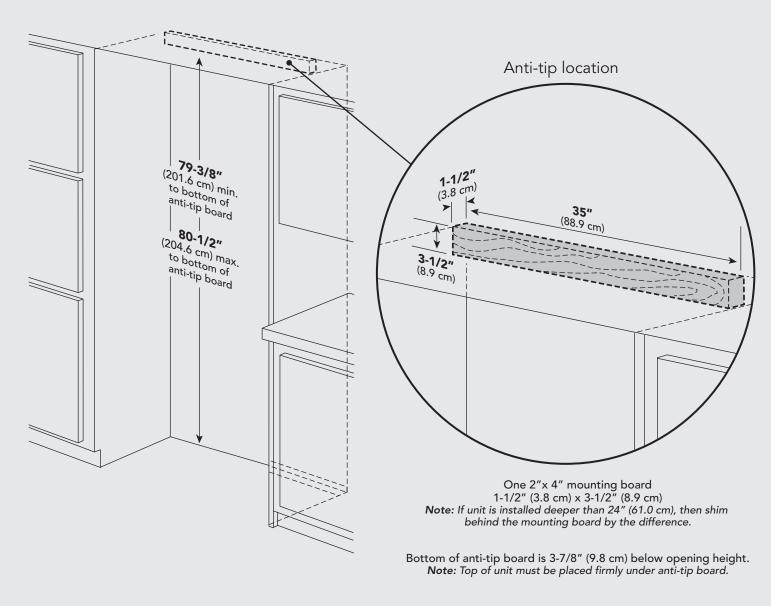

Cutout Dimensions (Side-By-Side)

Anti-Tip Dimensions (Side-By-Side)

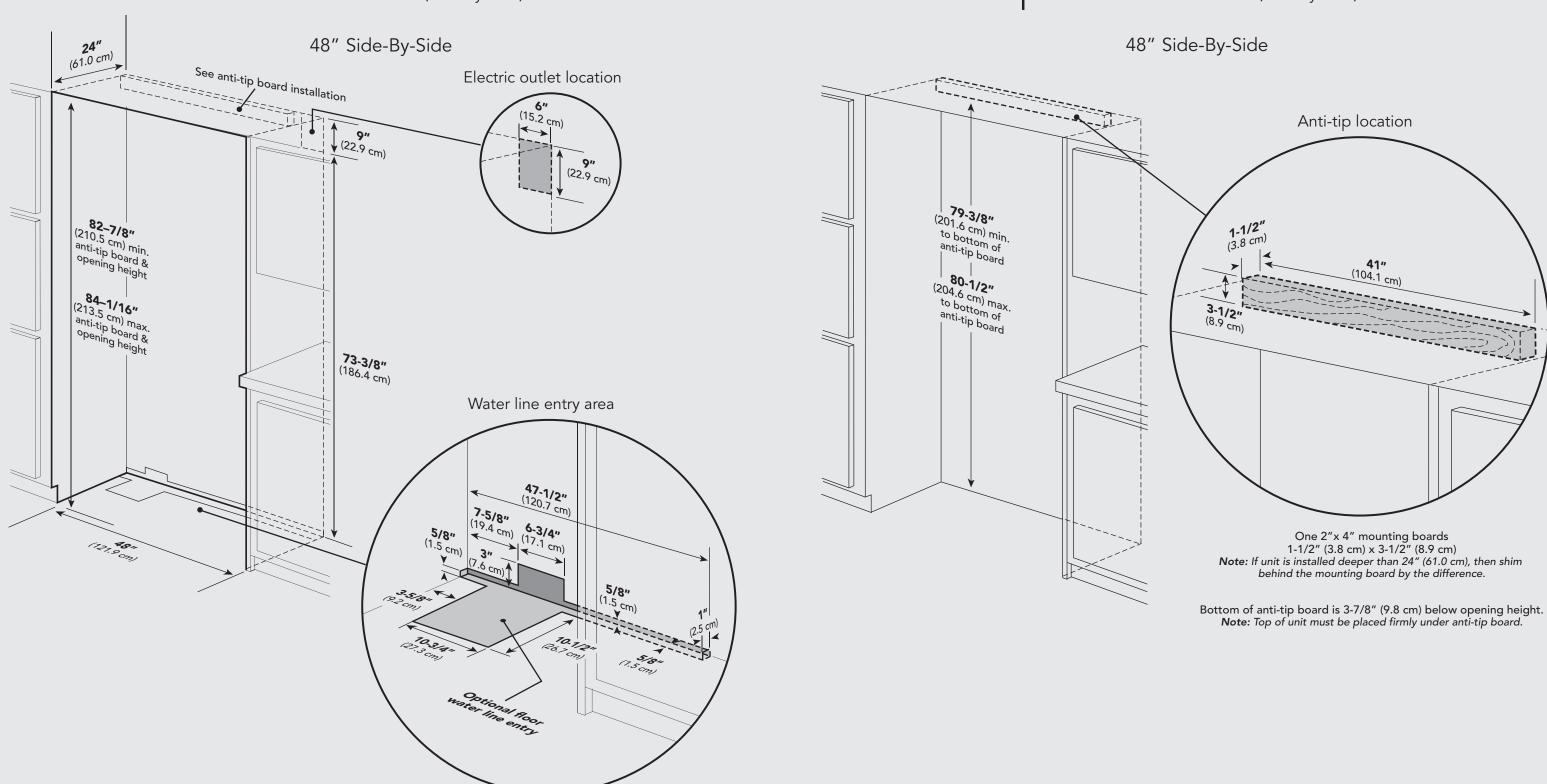

Overlay Dimensions (Side-By-Side)


42" Custom Panels 42" Custom Panels with Dispenser 1 | 12.3/8" | 1 **Note:** Panel overlays must be dry, solid, straight

16

one piece panels. The use of multiple panel pieces to achieve the dimensions is not recommended.

Note: If 1/4" back panel is used, the dimensions are 1/4" smaller than the dimensions shown.

Overlay Dimensions (Side-By-Side)

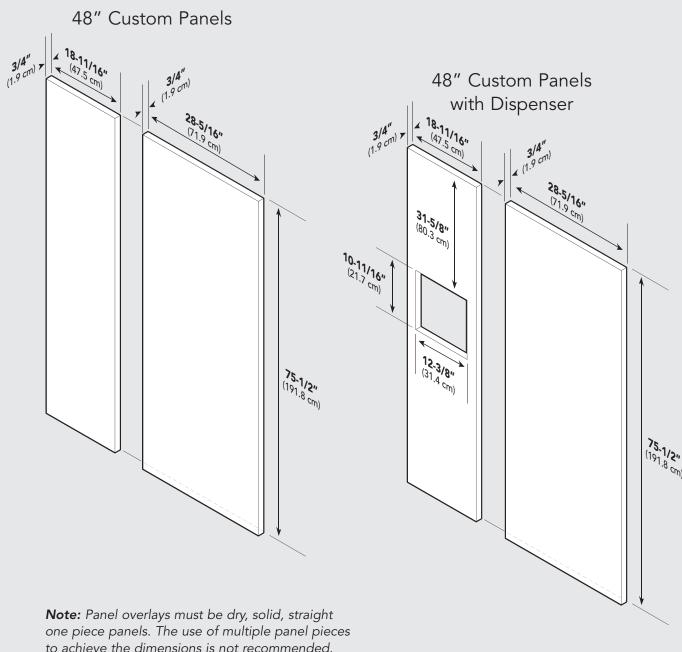


17


to achieve the dimensions is not recommended.

Note: If 1/4" back panel is used, the dimensions are 1/4" smaller than the dimensions shown.

Custom Grille Dimensions (Side-By-Side)

Custom Grille Dimensions (Side-By-Side)

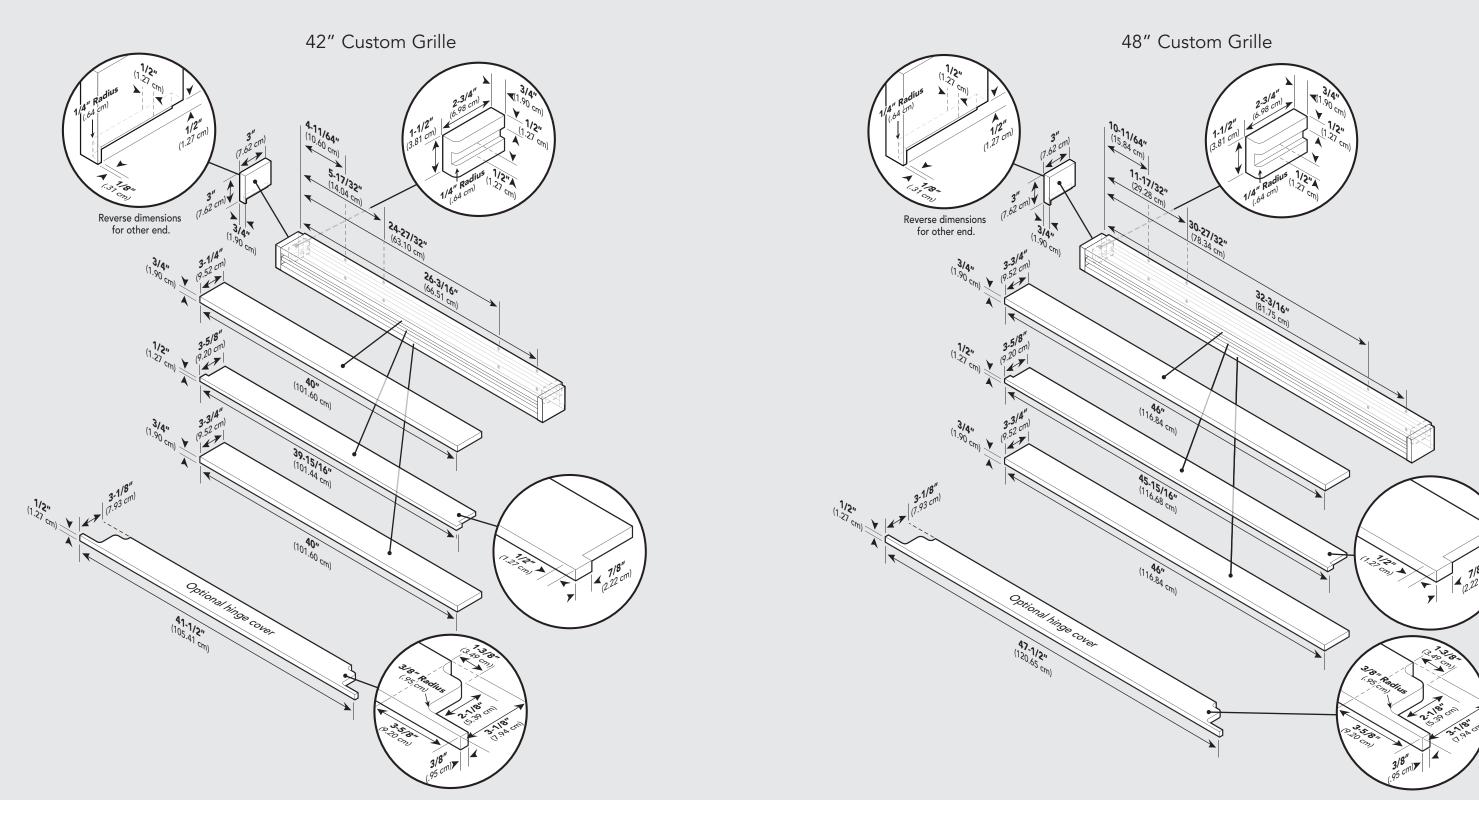

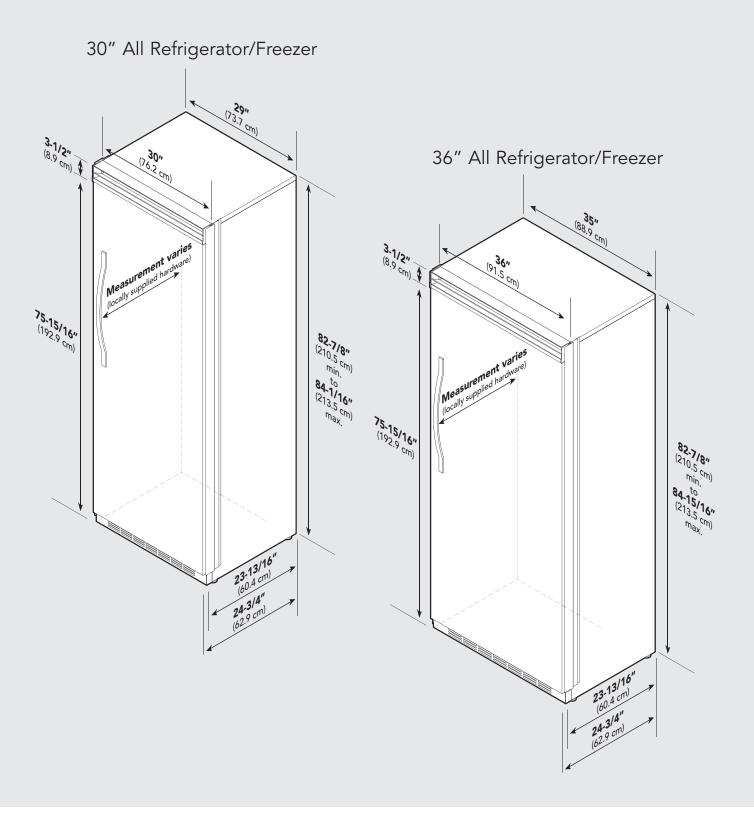

20

Specifications (All Refrigerator/Freezer)


00"						
30"	All Refrigerator/Fr	eezer				
Description	DFFB304 DFRB304					
Overall width	30" (76	6.2 cm)				
Overall height (from bottom)	82-3/4" (210.2 cm) min. to	84-1/16" (213.5 cm) max.				
Overall depth (from rear)	To front edge of side trim:	23-13/16" (60.5 cm)				
	To front of top grille:	24-3/4" (62.9 cm)				
	To front edge of door trim: 24" (61.0 cm)					
Cutout width	30" (76	6.2 cm)				
Cutout height	82-7/8" (210.5 cm) min. to 84-1/16" (213.5 cm) max.					
Cutout depth	24" (61.0 cm) min.*					
Electrical requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with					
	grounded 3-prong plu	ig attached to product				
Maximum amp usage	9.9 a	amps				
Inlet water	1/4" copper tubing inlet					
requirements	waterline; minimum 20 psi;	N/A				
	maximum 120 psi					
Overall interior dimensions						
total capacity	15.9 cu. ft. (450 liters)	18.2 cu. ft. (516 liters)				
Maximum panel weight	50 lbs. (22.7 kg)					
Approximate shipping weight	425 lbs. (193.2 kg)					


36"	All Refrigerator/Fr	eezer				
Description	DFFB364 DFRB364					
Overall width	36" (91					
Overall height (from bottom)	82-3/4" (210.2 cm) min. to	84-1/16" (213.5 cm) max.				
Overall depth (from rear)	To front edge of side trim:	23-13/16" (60.5 cm)				
	To front of top grille:	24-3/4" (62.9 cm)				
	To front edge of door trim:	24" (61.0 cm)				
Cutout width	36" (9	1.5 cm)				
Cutout height	82-7/8" (210.5 cm) min. to 84-1/16" (213.5 cm) max.					
Cutout depth	24" (61.0 cm) min.*					
Electrical requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with					
	grounded 3-prong plu	ig attached to product				
Maximum amp usage	9.9 a	amps				
Inlet water	1/4" copper tubing inlet					
requirements	waterline; minimum 20 psi;	N/A				
	maximum 120 psi					
Overall interior dimensions						
total capacity	19.1 cu. ft. (541 liters)	22.8 cu. ft. (646 liters)				
Maximum panel weight	60 lbs. (27.2 kg)					
Approximate shipping weight	500 lbs. (227.3 kg)					

^{*}Full overlay models fit flush in 25" (63.5 cm) deep cabinet openings. They can be installed in standard 24" (61.0 cm) deep openings. The door faces and top grille will protrude 3/4" (1.9 cm) into the room.

Anti-Tip Dimensions (All Refrigerator/Freezer)

30" All Refrigerator/Freezer

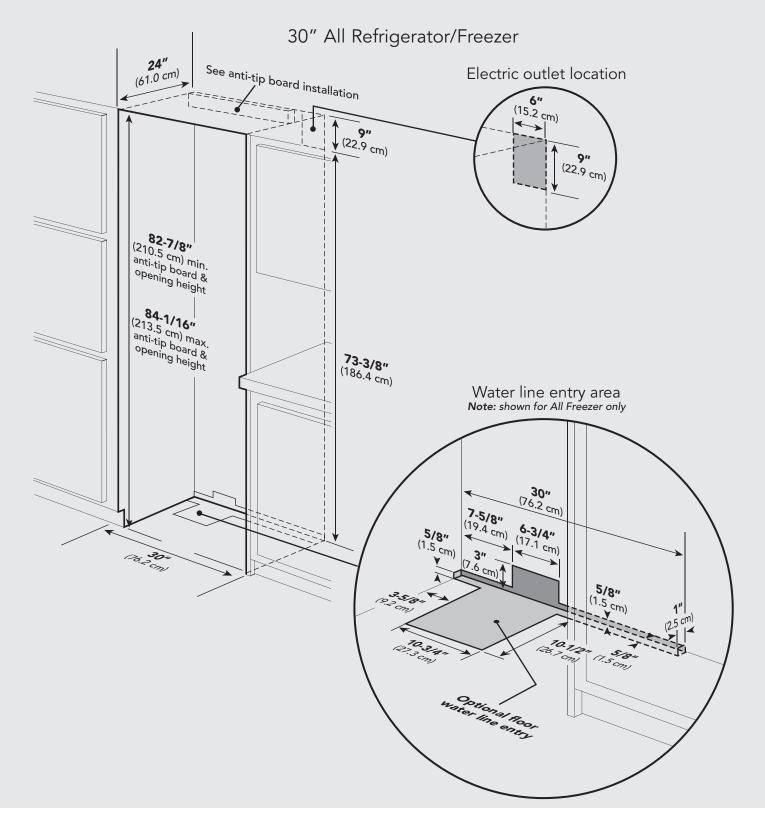


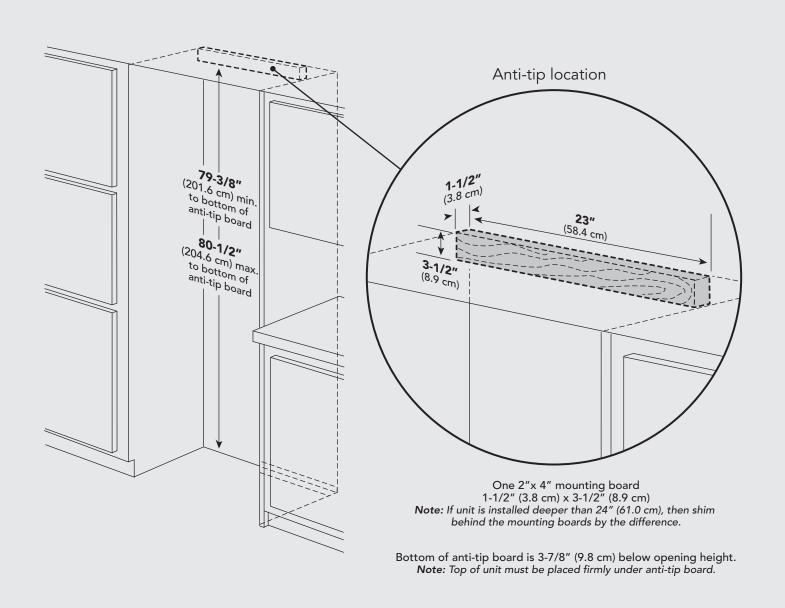


Anti-Tip Dimensions (All Refrigerator/Freezer)

36" All Refrigerator/Freezer **24"** (61.0 cm) See anti-tip board installation Electric outlet location 6" (15.2 cm) 9" (22.9 cm) 9" (22.9 cm) **82-7/8"** (210.5 cm) min. anti-tip board & opening height 84-1/16" 213.5 cm) max. anti-tip board & opening height **73-3/8"** (186.4 cm) Water line entry area Note: shown for All Freezer only

36" All Refrigerator/Freezer

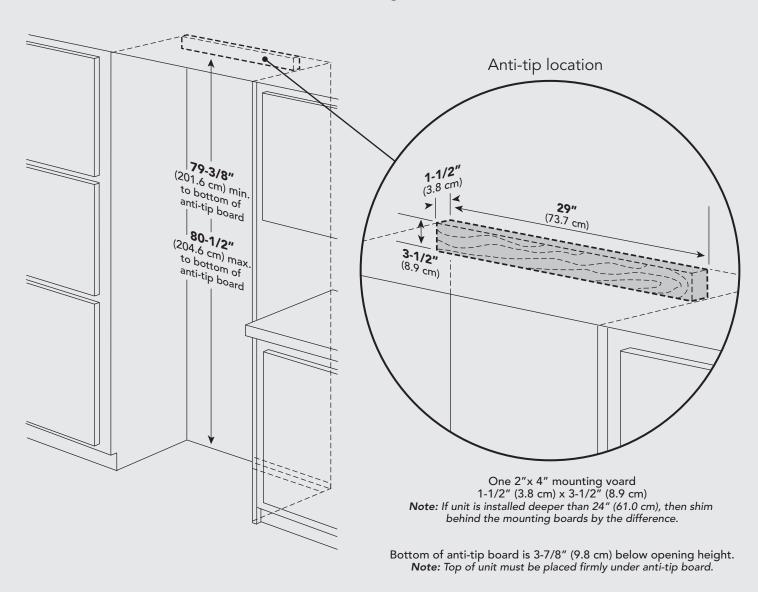


Dimensions (All Refrigerator/Freezer)

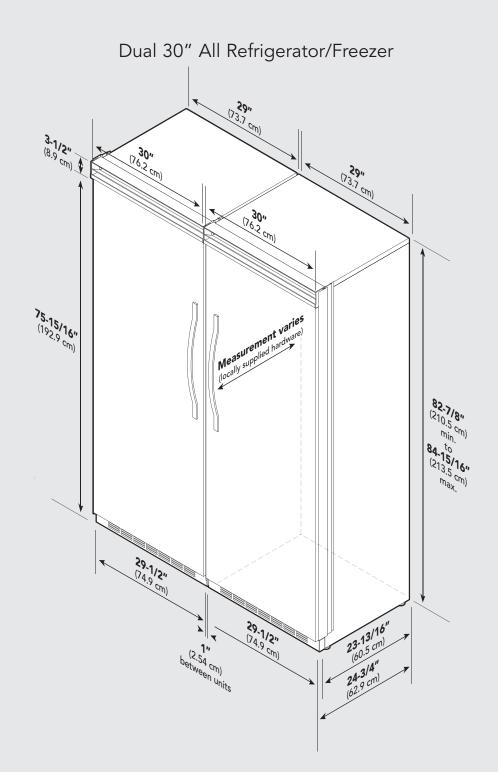


26



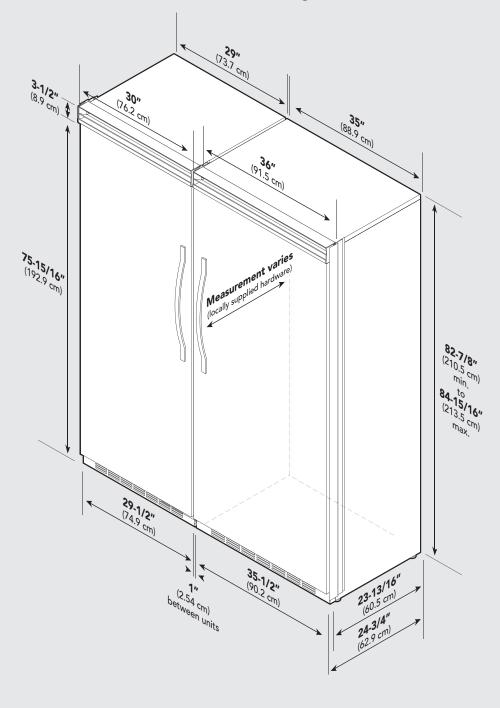

Dual 36" All Refrigerator/Freezer

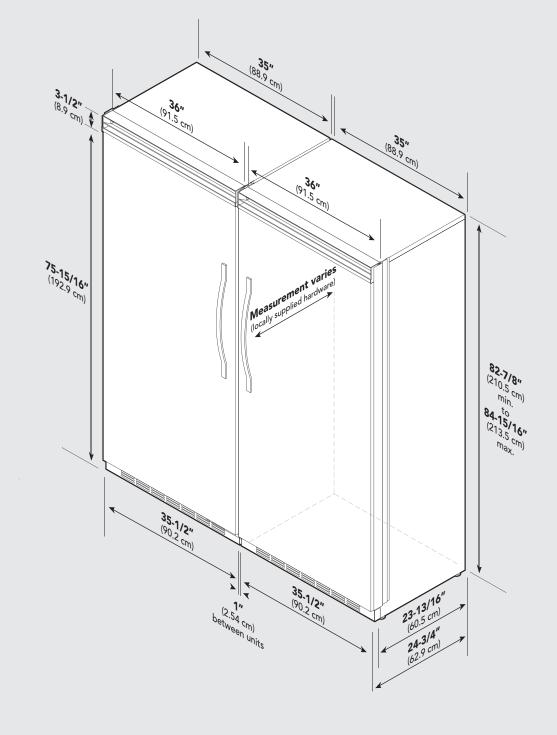


28

Specifications (All Refrigerator/Freezer)


Du	ual All Refrigerator/Freezer				
Description	(2) 30" Units (1) 36" & (1) 30" Unit (2) 36" Units				
Overall width	60" (152.4 cm) 66" (167.6 cm) 72" (182.9 cm)				
Overall height (from bottom)	82-3/4" (210.2 cm) min. to 84-1/16" (213.5 cm) max.				
Overall depth (from rear)	To front edge of side trim: 23-13/16" (60.5 cm)				
	To front of top grille: 24-3/4" (62.9 cm)				
	To front edge of door trim: 24" (61.0 cm)				
Cutout width	60" (152.4 cm) 66" (167.6 cm) 72" (182.9 cm)				
Cutout height	82-7/8" (210.5 cm) min. to 84-1/16" (213.5 cm) max.				
Cutout depth	24" (61.0 cm) min.*				
Electrical requirements	(2) 115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with				
	grounded 3-prong plug attached to product				
Maximum amp usage	9.9 amps per unit				
Inlet water requirements	1/4" copper tubing inlet waterline; minimum 20 psi;				
(All Freezer only)	maximum 120 psi				
Overall interior dimensions					
30" freezer	15.9 cu. ft. (450 liters)				
30" refrigerator	18.2 cu. ft. (516 liters)				
36" freezer	19.1 cu. ft. (541 liters)				
36" refrigerator	22.8 cu. ft. (646 liters)				
Maximum panel weight	30" freezer or refrigerator 50 lbs. (22.7 kg)				
	36" freezer or refrigerator 60 lbs. (27.2 kg)				
Approximate shipping weight	30" freezer or refrigerator 425 lbs. (193.2 kg)				
	36" freezer or refrigerator 500 lbs. (227.3 kg)				

^{*}Full overlay models fit flush in 25" (63.5 cm) deep cabinet openings. They can be installed in standard 24" (61.0 cm) deep openings. The door faces and top grille will protrude 3/4" (1.9 cm) into the room.

Anti-Tip Dimensions (All Refrigerator/Freezer)

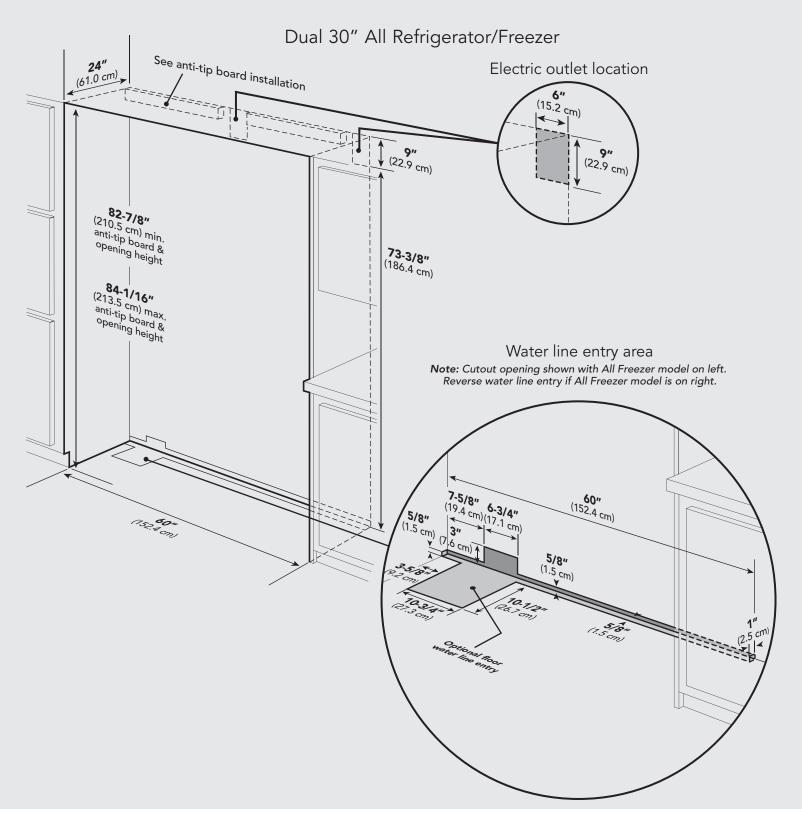

Dual 30" All Refrigerator/Freezer

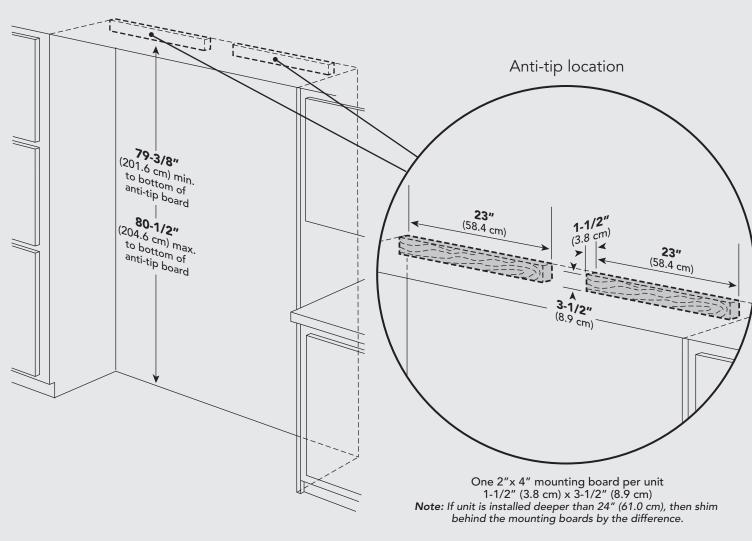



Bottom of anti-tip board is 3-7/8" (9.8 cm) below opening height.

Note: Top of unit must be placed firmly under anti-tip board.

Anti-Tip Dimensions (All Refrigerator/Freezer)


Dual 30" and 36" All Refrigerator/Freezer

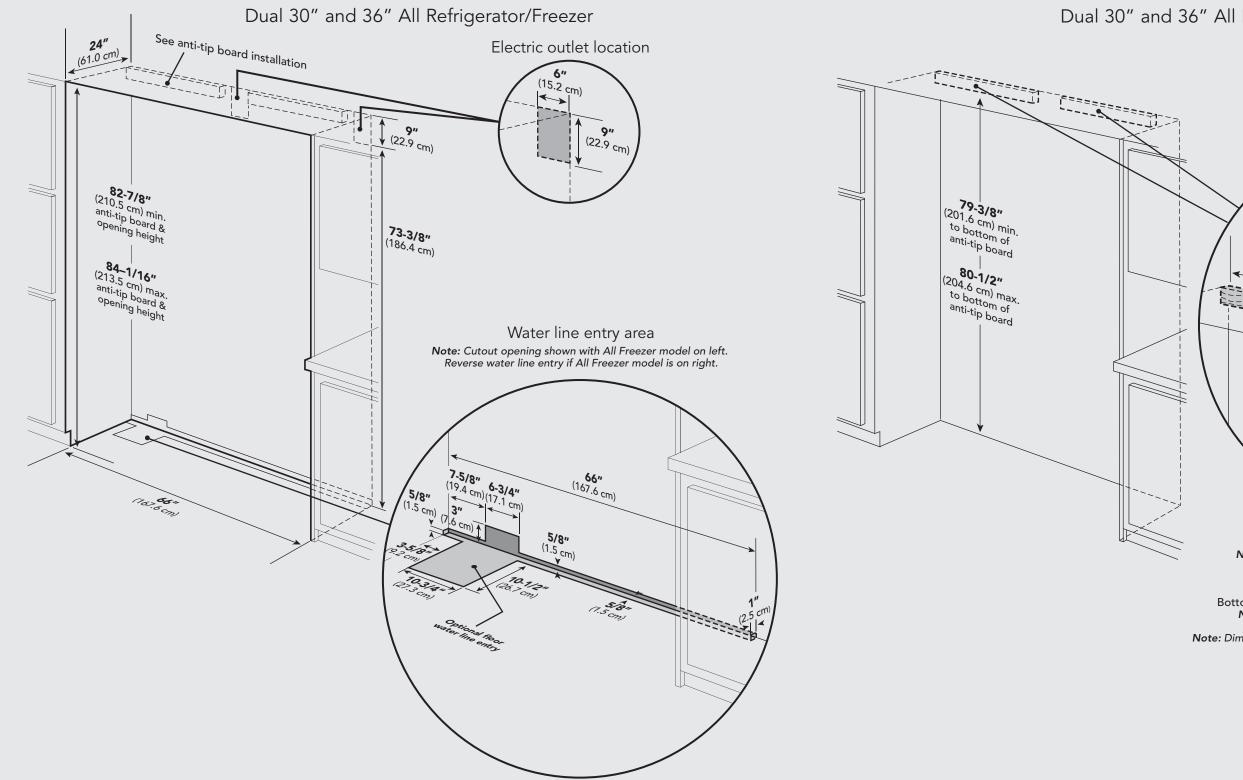

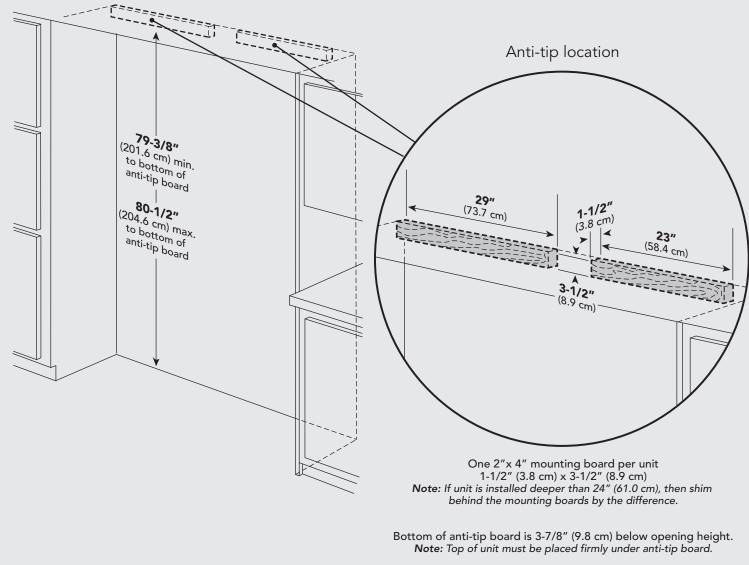

Note: Dimensions shown for 36" All Freezer/All Refrigerator model on the left. Reverse mounting boards if units are installed on the right.


Anti-Tip Dimensions (All Refrigerator/Freezer)

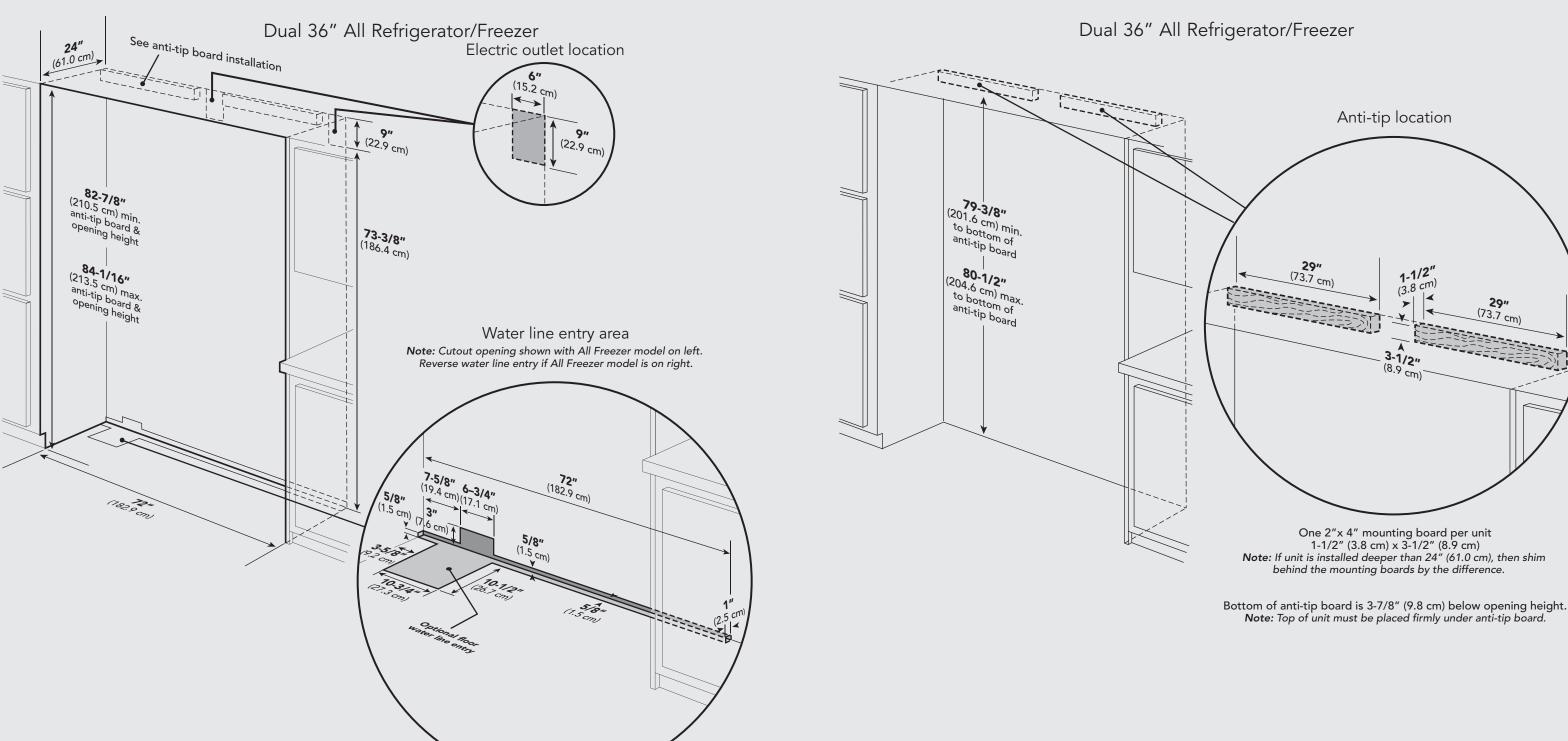

Overlay Dimensions (All Refrigerator/Freezer)

Custom Grille Dimensions (All Refrigerator/Freezer)


30" Custom Panels

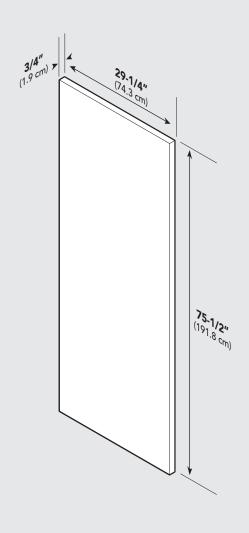


Note: Hardware placement can vary depending on single or dual installation.

Note: Panel overlays must be dry, solid, straight one piece panels. The use of multiple panel pieces to achieve the dimensions is not recommended.

Note: If 1/4" back panel is used, the dimensions are 1/4" smaller than the dimensions shown.

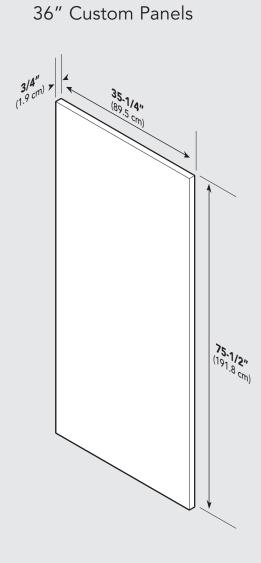

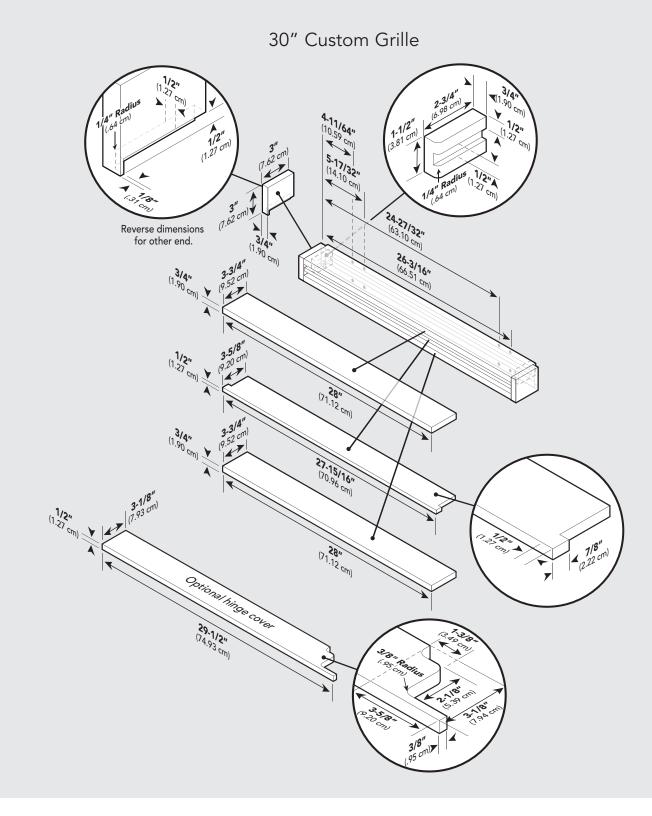


Custom Grille Dimensions (All Refrigerator/Freezer)

Custom Grille Dimensions (All Refrigerator/Freezer)


R 3/32" (0.09 cm)

▼ 3/8″

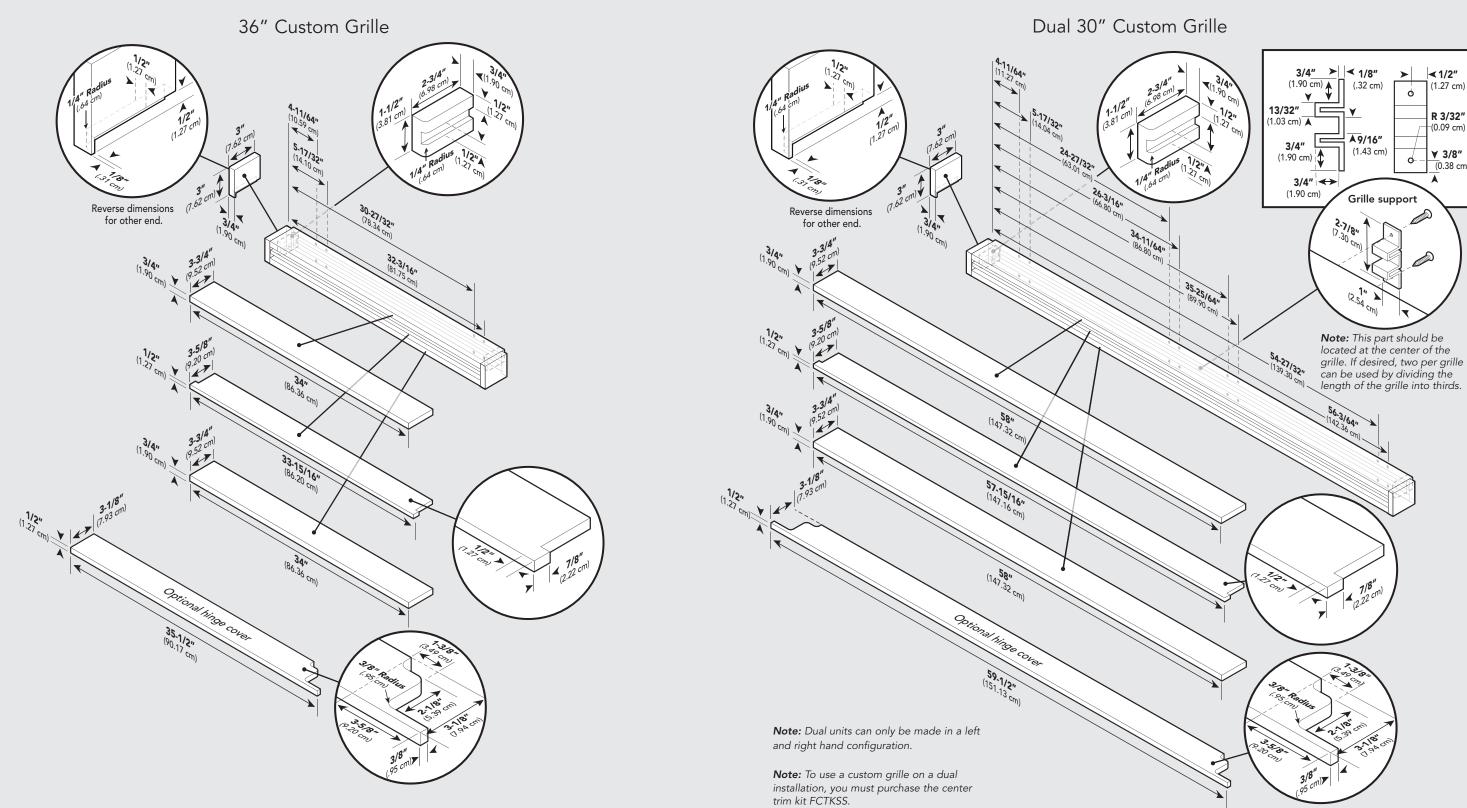


Custom Grille Dimensions (All Refrigerator/Freezer)

Custom Grille Dimensions (All Refrigerator/Freezer)

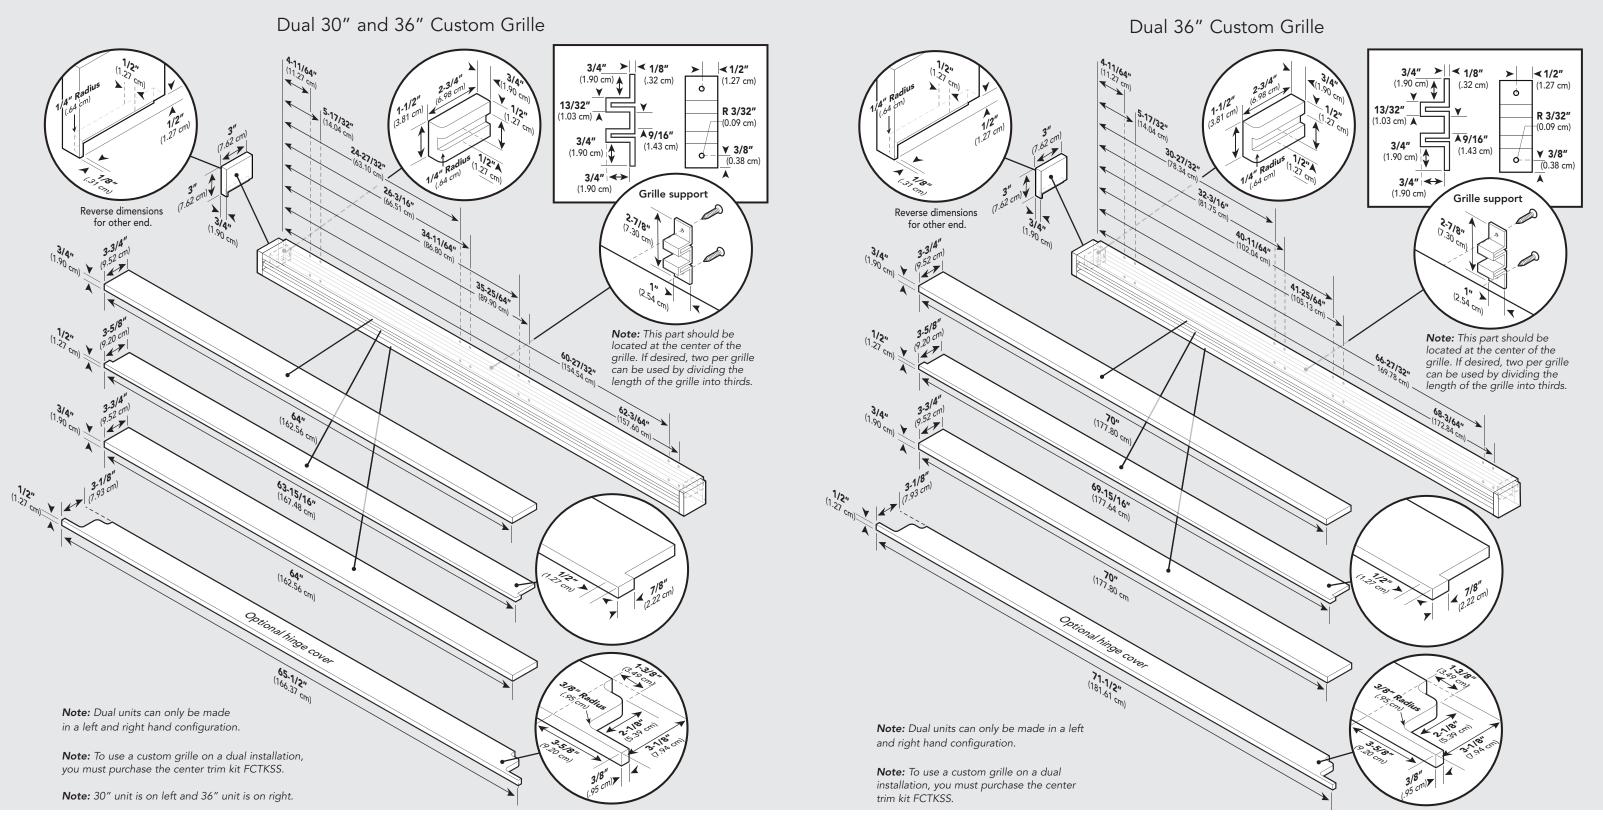


Cabinet Information

Full overlay models, (with 3/4" [1.9 cm], thick panels and custom handles locally supplied), fit flush in 25" (63.5 cm) deep (countertop depth) cabinet openings with no protrusion into room except custom handles

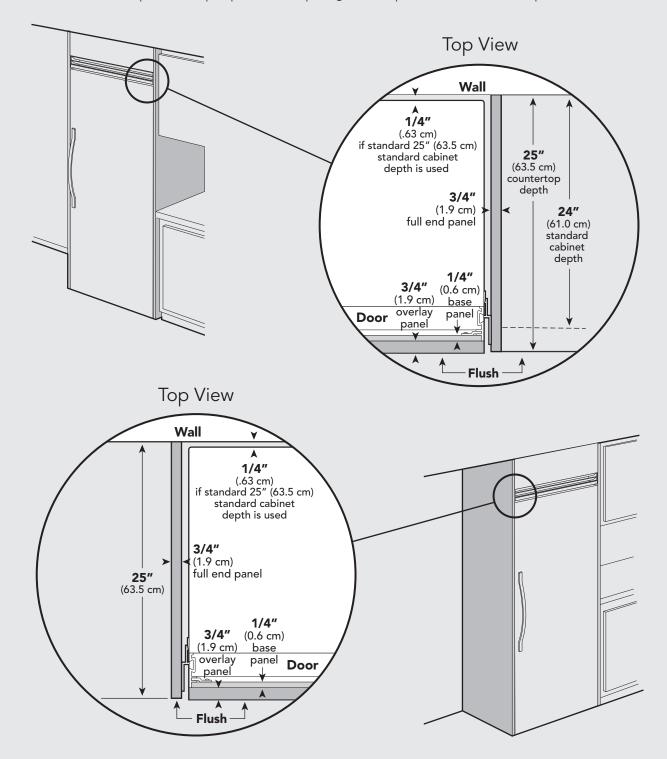

Cabinet Information

Full overlay models can be installed in standard 24" (61.0 cm) deep openings. However, the door faces and top ventilation grille will protrude 3/4" (1.9 cm) into the room. This is ideal for alignment with full overlay cabinet doors.

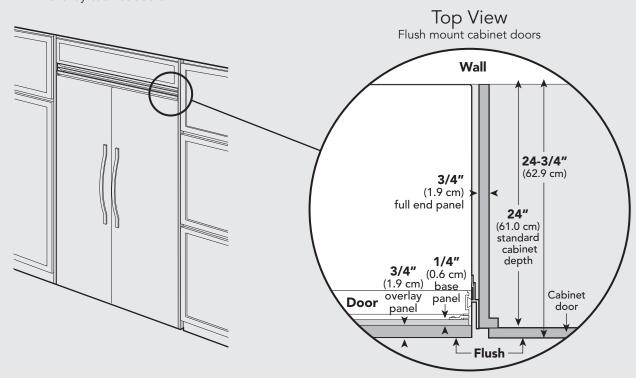

Custom Panel General Information


Custom finishing options

- All installations must allow for the refrigerator ad freezer door to open a minimum of 90°.
- For side wall or corner installation, allow for a standard 3" (7.6 cm) cabinet filler to assure door(s) open 90°.


Note: If a custom handle is used a wider filler may be necessary.

- Panel thickness must not exceed 1"
 (2.5 cm) on hinge side. Thicker panels will interfere with door swing and clearance.
- A 1/4" wood filler or insulation filler must be used between the door and 3/4" wood panel to prevent condensation from forming.


Ice and Water Dispenser Bezel Removal (if required)

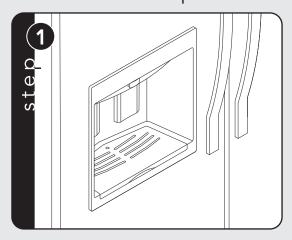


Remove packaging material surrounding bezel.

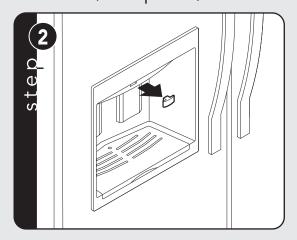


Grasping the sliding lever, pull away from bezel.

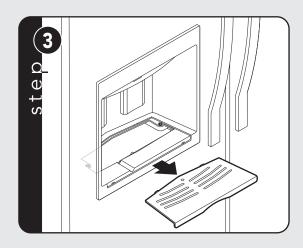


Remove spill tray form lower part of bezel exposing two screws.

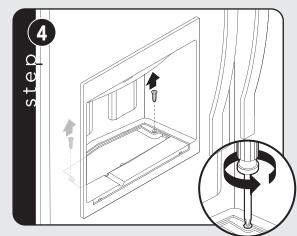


Remove screws.

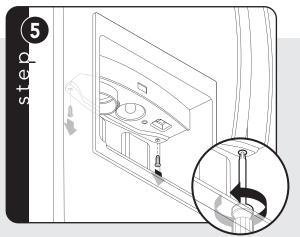

Remove two additional screws under top section of bezel.

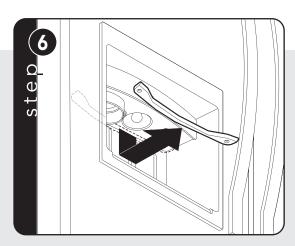


Remove mounting support.

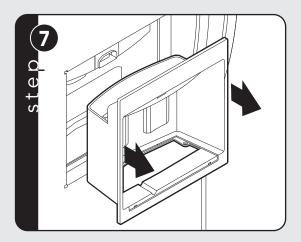

Grasping the bezel on both sides, pull away from the door cavity.


Note: Bezel needs to be pulled from the bottom first and then pull slightly downward to clear the water dispensing tube.

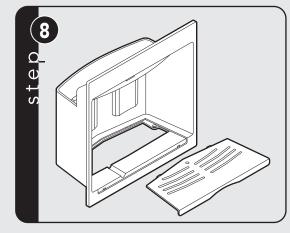


Store bezel and spill tray in safe and secure place until installation.

For re-installation steps see pages 48-49.


Custom Door Panel Installation (Refrigerator or Freezer)

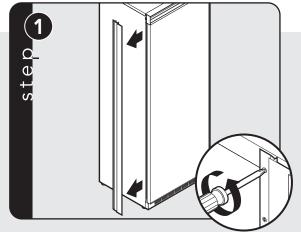


Remove handle side cabinet screws and trim with a phillips screwdriver.

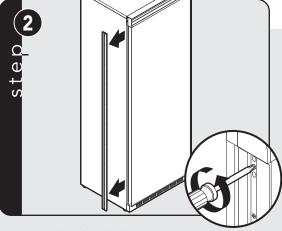


Remove handle side door trim screws and panel with a phillips screwdriver.

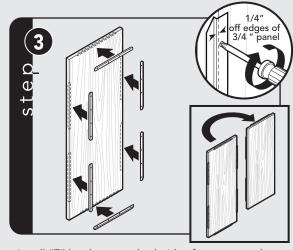


Install "Z" brackets onto back side of custom panels. Note: If 1/4" back panel is used, the brackets will be flush to the edge (back panel is 1/4" smaller than 3/4" panel dimension).

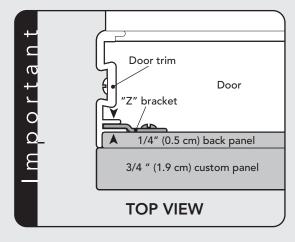


Proper "Z "brackets engagement. **Note:** A 1/4" back panel needs to be used to ensure proper insulation. If back panel is not used, the potential for condensation is present.

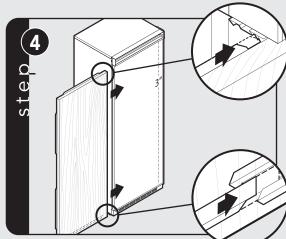


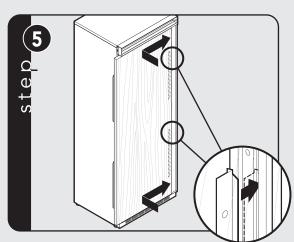


Align upper and lower "Z "brackets in door trim and For the last 3" of installation, push evenly on the custom wood panel push custom wood panel evenly toward the hinge until near the side door trim in addition to pushing from the handle side. approximately 3" from the hinge side door trim. This ensures side "Z" bracket engagement with hinge side door trim.

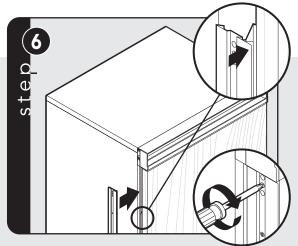


Insert handle-side door trim making sure to engage handle-side "Z" bracket in door trim. Install door trim screws.

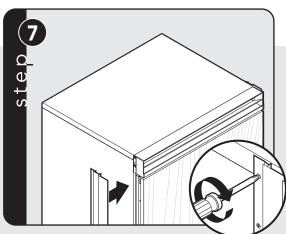


Custom Freezer Door Panel Installation (Bottom Mount Only)

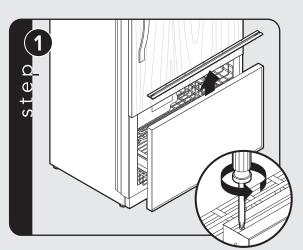


Open freezer door. Remove door trim screws and door trim with a phillips screwdriver.

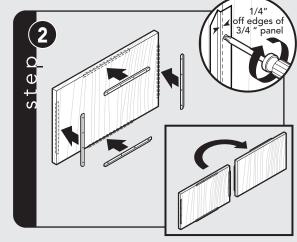

Install "Z" brackets onto back side of custom panel. Note: If 1/4" back panel is used, the brackets will be flush to the edge (back panel is 1/4" smaller than 3/4" panel dimension).

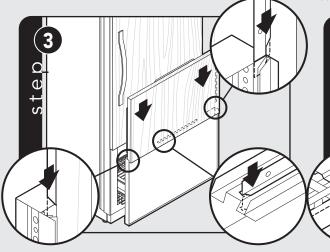


Align panel in door trim and push down evenly. Ensure side and bottom "Z" bracket engagement with door trim.

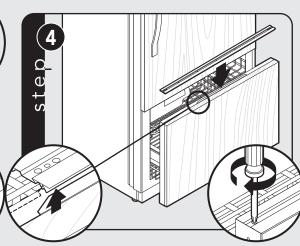


Reinstall top door trim and door trim screws with a phillips screwdriver.


Ice and Water Dispenser Bezel Installation (if required)

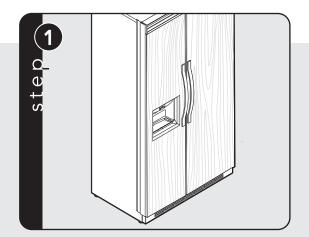


Install custom wood panels per product's installation instructions.

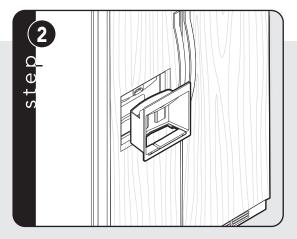


Locate opening in door and position bezel. **Note:** Graphics on bezel will be on top end, tilt slightly forward to allow water tube clearance.

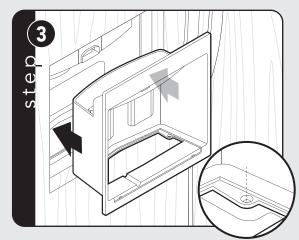


Push firmly into cavity until lower screw holes align with mounting holes on cavity.

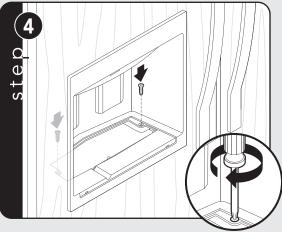


Install two screws in lower part of bezel but do not tighten all the way.

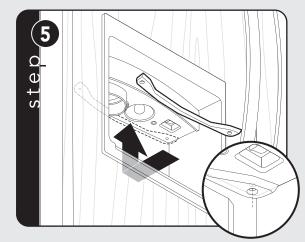


Position upper mounting support over holes underneath top section of bezel.

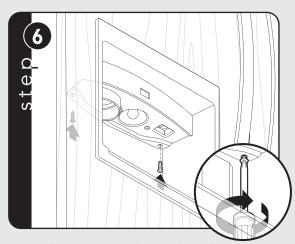


Install two screws but do not tighten all the way.

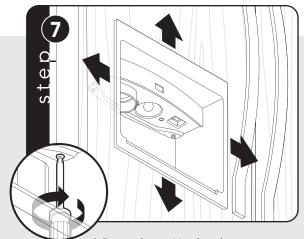

Adjust and reposition bezel as necessary. Tighten all screws securely.

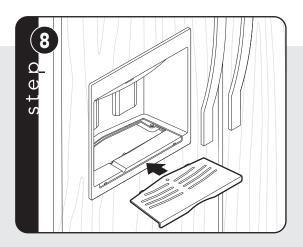


Replace spill tray in lower part of bezel.

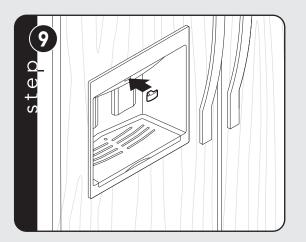


Align cube switch with sliding lever and firmly push until sliding lever is flush with bezel.

Bottom Mount Custom Panel Hinge Cutout (if required)

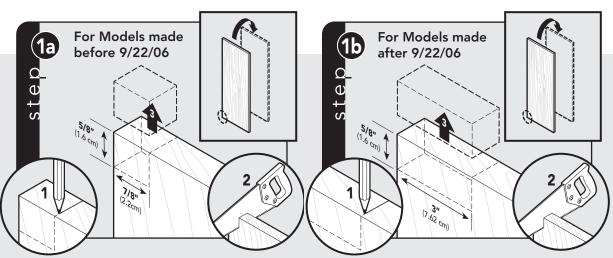


For a left hinge door, cut 5/8" x 7/8" in lower left corner. **Note:** Steps show panel upside down and notched for left hinge application. Mirror dimensions for right hinge door.


For a left hinge door, cut 5/8" x 2 3/4" in lower left corner. **Note:** Steps show panel upside down and notched for left hinge application. Mirror dimensions for right hinge door.

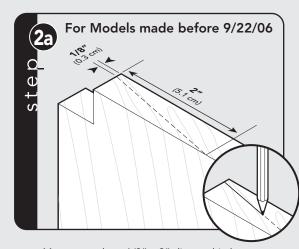


Measure and cut 1/8" x 2" diagonal in lower left corner.

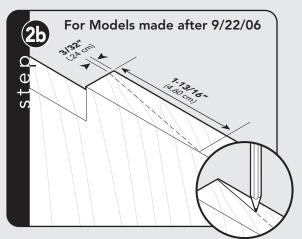

Measure and cut 2 1/16" diagonal in lower left corner.

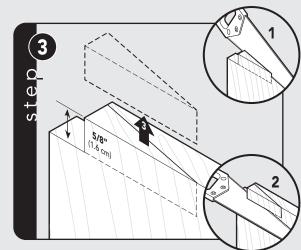


Cut out diagonal in lower left corner.

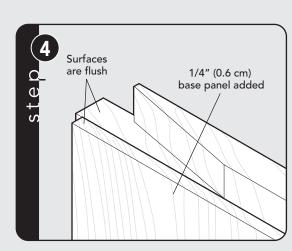


Final view of lower corner


Custom Grille Installation

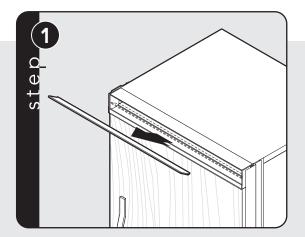


Remove air grille center blade.

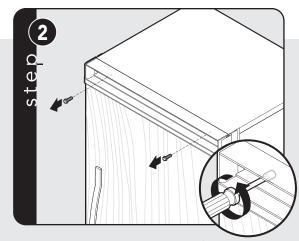


Remove two 1/4" (.6 cm) screws with a magnetic extended screwdriver at least 8" (20.3 cm) long.

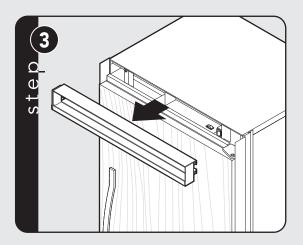


Pull air grille assembly forward.

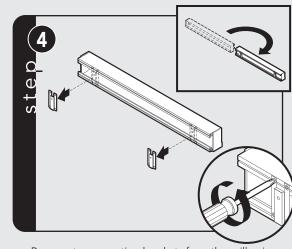


Remove two mounting brackets from the grille air assembly.

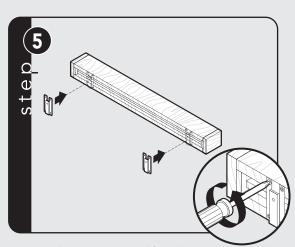


Using eight screws removed from the mounting brackets, attach mounting brackets to the custom wood grille using predrilled pilot holes. (See grille overlay specifications for proper alignment and pilot hole placement.)

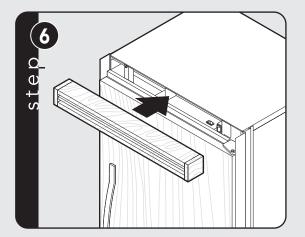

Insert custom air grille assembly.

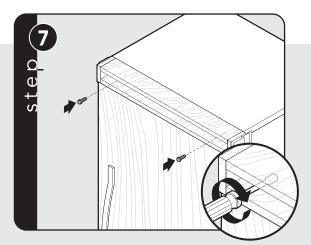

Install two 1/4" (.6 cm) screws with a magnetic extended screwdriver at least 8" (20.3 cm) long.

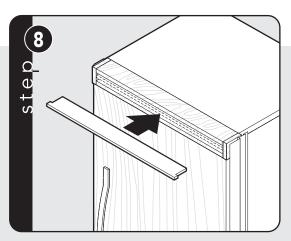

Install custom air grille center blade.

General Information

Area Requirements

Verify the following:

- Unit can fit into residence and can be moved around corners and through doorways.
- Floors can support unit's weight plus food weight (approximately 1200 pounds [540 kg] per unit).
- Rear wall is solid and is able to support two horizontally mounted 2X4s (included) bolted to two wall studs. The 2X4 board bolt heads must be flush with 2X4 to prevent obstruction.
- Remove anything attached to rear or side walls that can obstruct unit installation.
- Cutout dimensions are accurate.
- Electrical outlet is in correct location.
- Water line is in correct location.
- Do not install a refrigeration unit near a heat source, nor in a location where the surrounding temperature will fall below 60° F (16° C).

Electrical Requirements

It is the customer's responsibility to:

- contact a qualified electrical installer.
- assure that the electrical installation is adequate and in conformance with the National Electrical Code, ANSI/NFPA 70latest edition or Canadian Electrical Code C22.1-1998 and C22.2 No. 0-M91 (or latest edition), and all local codes and

ordinances. A 115 volt, 60-Hz, 15 amp, fused, electrical supply is required. It is required that a separate circuit serving only this appliance be provided. This appliance is equipped with a power supply cord having a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating 3-prong, grounding-type wall receptacle.

Do not use an extension cord.

If codes permit a separate grounding wire to be used, it is recommended that a qualified electrician determine that the grounding path is adequate.

DO NOT ground to a gas line. Check with a qualified electrician if you are not sure if the appliance is properly grounded. **DO NOT** have a fuse in the neutral or grounding circuit

Anti-Tip Requirements

The anti-tip boards should be fastened into position prior to moving the unit into the opening.

Note: Additional mounting boards may be required if the unit does not touch the back wall of the enclosure. To prevent unit from tipping forward, it must be secured in place with a solid soffit or wood block.

General Information

Water Supply Requirements

A WARNING

To avoid serious illness or death, do not use unit where water is microbiologically unsafe or of unknown quality, without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts. The contaminants or other substances removed or reduced by this water treatment system are not necessarily in your water.

Use only 1/4" (6 mm) copper tubing for water line. Do Not install copper tubing in area where temperatures drop below 35° F (1.7° C). Before attaching copper tubing to the unit, flush at least 2 quarts (1.9 L) of water through the copper tubing and into a bucket to remove any particles in the water line.

- Viking Range Corporation is not responsible for property damage due to improper installation or water connection.
- Connect 1/4" (6mm) flexible copper tubing to household plumbing in compliance with local codes and ordinances.
- Length of copper tubing must reach from water supply connection to the unit connection with an additional length to facilitate moving the unit out of enclosure for cleaning or service. Tubing should be soft instead of rigid and ends should be free of burrs.
- Copper tubing route must be above 35° F (1.7° C) to prevent water line from freezing.

- Do not use plastic water lines from the household plumbing to the water inlet valve connection on the refrigeration unit.
- Do not use the self-piercing feature of a saddle valve. The hole made by the piercing lance is too small for the water flow rate required by the ice maker.
- If saddle valve is not used, place a separate shut-off valve in an easily accessible location between water supply and the unit. Do not install shut-off valve behind the unit.
- The installation of Viking units with a reverse osmosis system is acceptable as long as the water pressure remains within the allowable PSI as stated below. It is important to note that with many reverse osmosis systems, the pressure starts off high, but then it decreases as the water level of the reverse osmosis storage area drops. This must be considered when checking the water pressure coming into the unit.
- Connect a vertical or horizontal 1/2" (1.2 cm) to 1 1/4" (3.2 cm) COLD water line near water area.
- Run water line through the floor, back, or side wall. Tubing should lay flat on floor underneath the unit. Clamp tubing to wall or floor.
- Water pressure must be greater than 20 psi and less than 120 psi on non-dispensers and greater than 35 psi and less than 120 psi on dispensers.

General Information

- Most of the unit's weight is at the top.
 Extra care is needed when moving the unit to prevent tipping.
- Do Not remove protective film until unit is in operating position.
- All four leveling legs must make contact with the floor to support and stabilize the full weight.
- Do not drop unit.
- Remove exterior shipping materials prior to moving unit into home.
- Use two or more people to move and install unit. Failure to follow this instruction can result in back or other injury.
- To avoid personal injury, wear gloves when performing any installation procedure and wear eye protection when cutting metal straps.


TIP OVER HAZARD

Appliance is top heavy and tips easily when not completely installed. Keep doors closed until appliance is completely installed and secured per installation instructions. Use two or more people to move and install the appliance. Failure to do so can result in death or serious injury.

Unpacking unit

- 1. Remove top and bottom strap.
- 2. Remove top cap.
- 3. Cut rear of carton approximately 1/4" (0.6 cm) to 1" (2.5 cm) from right corner with a utility knife extended 1/4" (0.6 cm).
- 4. Remove carton and exterior packaging.
 Save cardboard shipping material to
 protect floor surface when installing unit.
 Remove anti-tip board, kickplate and door
 trim pieces (DF models) from rear of unit.

Moving Unit

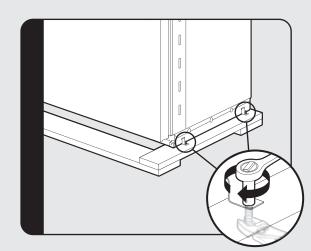


Remove shipping brackets from skid by removing four bolts (two on each side) with a 1/2" deep-well socket wench and a pair of pliers.

Note: Tilting unit is not required to remove


Note: Tilting unit is not required to remove shipping brackets.

55

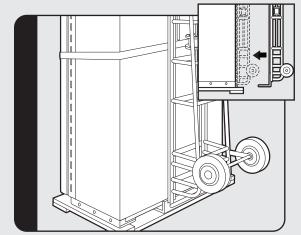


Slip cart between unit and skid. Remove unit from skid. **Note:** Use excess packaging to protect decorative trim; also, verify that leveling legs are up (0" adjustment).


Installation

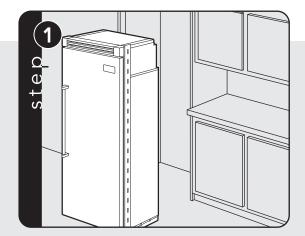


Place unit in front of cutout.

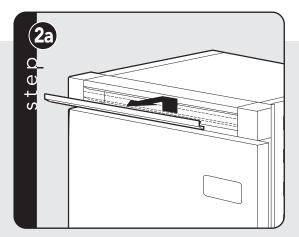


(Professional) Lift center grille louver up and pull out.

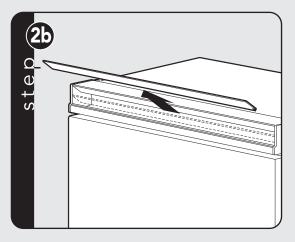

(Designer) Pull the center grille louver up at an angle and pull out.

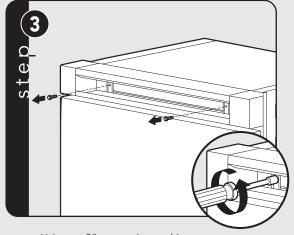


Using an 8" magnetic nut driver, remove the two 1/4" screws.

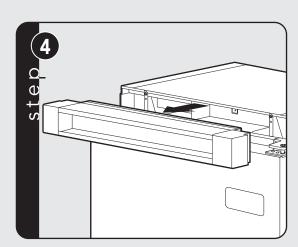


Remove grille assembly.


Hinge Adjustment

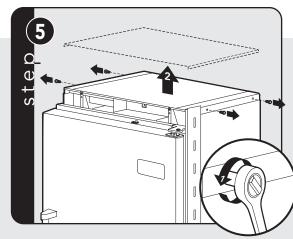


Remove four side screws and remove unit top.

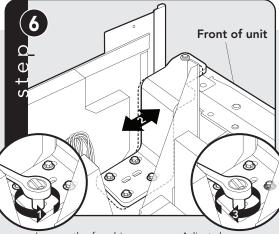


Loosen the four hinge screws. Adjust door.
Retighten four hinge screws.

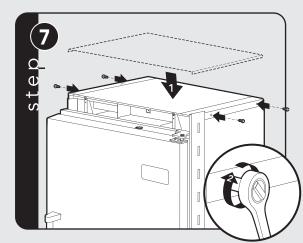


Replace unit top. Replace four side screws.

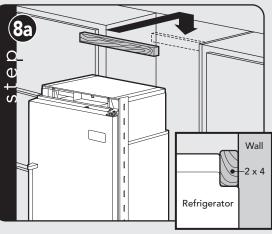

Attach one 2x4 to wall stud (refer to dimensions page for exact location).

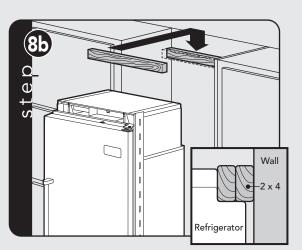


If needed, depending on cabinet and depth, attach second 2x4 to first 2x4.

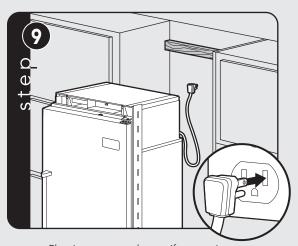


Plug in power cord to verify operation.

Note: Make sure power switch and showroom switch are in the "On" Position.

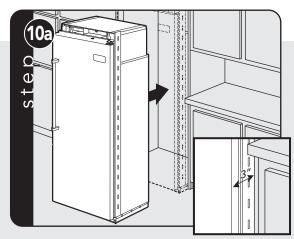


Place unit within 3" of being flush with cabinets.


Note: To avoid cabinet damage, place cardboard between cabinets and unit. When moving unit, do not crimp, kink or crush water supply line.

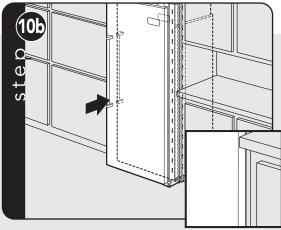


Carefully move unit until semi flush with cabinet (depending on unit).

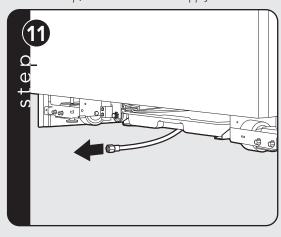

Pull supply tubing forward under unit. **Note:** DO NOT use plastic water lines.

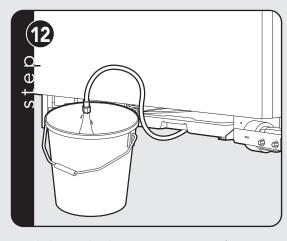


Flush water line by running two quarts of water into a bucket. Turn water off

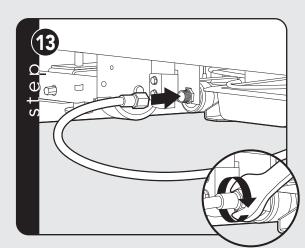


Connect supply tube to water valve using a 1/2" wrench. Note: DO NOT overtighten.

58

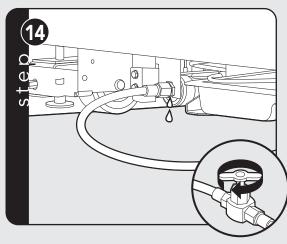


Turn on water supply and check for leaks.

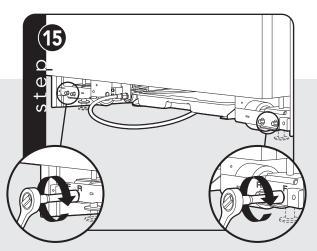


Lift unit off rollers to desired height and level unit using a 5/16" head wrench.

Note: DO NOT use an electric device. Overtightening

can cause damage.

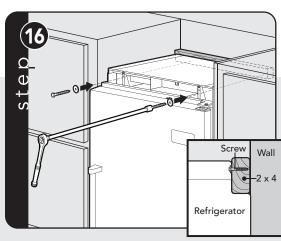


Attach positive secure self-tapping bolts to 2x4 using a 22" extension.

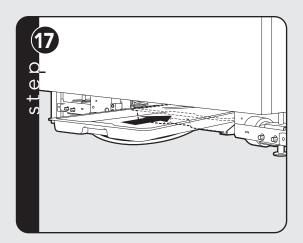


Verify that drain pan is installed and aligned.

Kickplate Installation

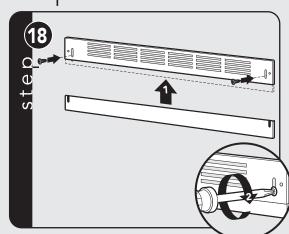


Align holes on both ends of louvered panels and insert screws.

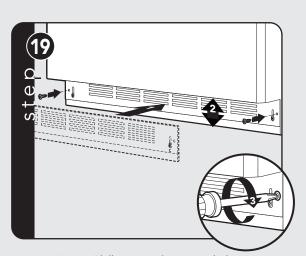

Using a Phillips screwdriver, attach the kickplate to the unit and adjust to desired height.


Door Stop Adjustment (Side-by-Side)

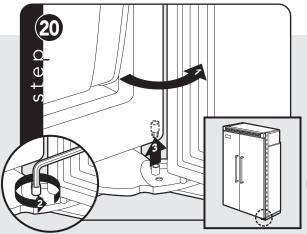

Open refrigerator door so door stop and shoulder


screw are accessible.

Note: Shoulder screw should be in 110° door opening position.

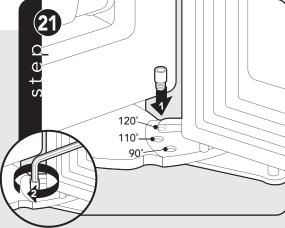


Remove shoulder screw and place in 90° or 120° position.

Door Stop Adjustment (Bottom Mount)

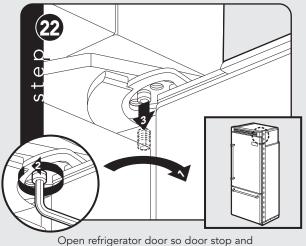


shoulder screw are accessible. **Note:** Shoulder screw should be in 110° door opening position.

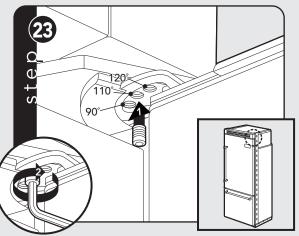


Remove shoulder screw and place in 90° or 120° position.


Water Filter Installation (Side-by-Side with Dispenser)

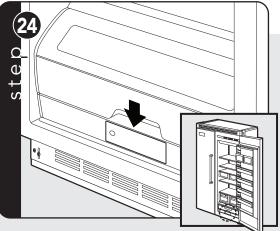


Locate water filter door. The door is located under the Meat Savor™/Produce drawer handle.

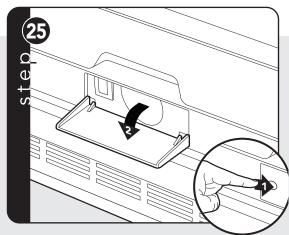

Push upper left corner of door to release latch and pull door downward.

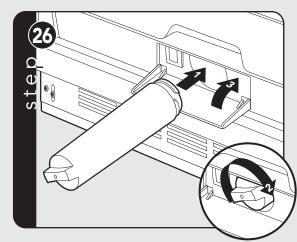

Insert filter cartridge into circular opening in filter housing. Rotate clockwise gently until filter stops. Close water filter door.

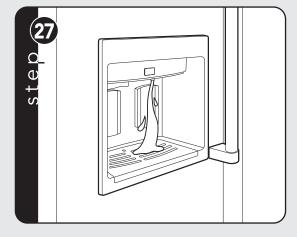

Note: Allow 1-2 minute delay in water dispersal to allow internal water tank to fill. Flush air from the system by running water through the dispenser continuously for 3 minutes.

Water Filter System Specification and Performance Data Sheet

This system has been tested according to NSF/ANSI 42/53 for reduction of the substances listed below. The concentration of the indicated substances in water entering the system was reduced to a concentration of less than or equal to the permissible limit for water leaving the system, as specified in NSF/ANSI 42/53.* (100% safety factors built-in for unmetered usage for health claims only.)

Standard No. 42: Aesthetic Effects								
Parameter	USEPA	Influent	Influent	Efflu	Effluent %Red		ıction	Min. Req.
	McL	Average	Challenge	Average	Maximum	Average	Minimum	Reduction
			Concentrations					
Chlorine		1.88 mg/L	2.0 mg/L <u>+</u> 10%	<0.05mg/L	0.06 mg/L	>97.26%	96.84%	<u>≥</u> 50%
T&O							_	
Particulates**		5,700,000 #/mL	at least	29.83#/mL	140 #/mL	99.98%	99.91%	≥ 85%
			10,000 particles/mL					

Standard No. 53: Health Effects								
Parameter	USEPA	Influent	Influent	Effluent		%Redu	uction	Min. Req.
	McL	Average	Challenge	Average	Maximum	Average	Minimum	Reduction
			Concentrations					
Turbidity	1 NTU***	10.73 NTU***	11 <u>+</u> 1 NTU	0.36 NTU	.049 NTU	97.09%	95.20%	0.5 NTU
Cysts	99.95% Reduction	200,000 #/L	min. 50,000/L	<1	<1	>99.99%	>99.99%	>99.95%
Asbestos	99% Reduction	155 MF/L	10 ⁷ & 10 ⁸ fibers/L	<1	<1	>99.99%	>99.99%	99%
			fibers>10micrometers	,				
Lead at pH 6.5	0.015 mg/L	0.153 mg/L	0.15mg/L <u>+</u> 10%	<.001	<.001	>99.35%	>99.35%	0.010 mg/L
Lead at pH 8.5	0.015 mg/L	0.150 mg/L	0.15mg/L <u>+</u> 10%	<.001	<.001	>99.35%	97.35%	0.010 mg/L
Mercury at pH 6.5	0.002 mg/L	0.006 mg/L	.006mg/L <u>+</u> -10%	0.00026	0.0005	98.72%	90.91%	0.002mg/L
Mercury at pH 8.5	0.002mg/L	0.006 mg/L	.006mg/L <u>+</u> -10%	0.0008	0.0015	98.72%	75.93%	0.002mg/L
Lindane	0.0002 mg/L	0.002 mg/L	.002mg/L <u>+</u> 10%	0.000025	0.00007	98.72%	96.50%	0.0002mg/L
Atrazine	0.003 mg/L	0.00873 mg/L	.009mg/L <u>+</u> 10%	<.002 mg/L	<.002 mg/L	76.99%	75.31%	0.003 mg/L
Toxaphene	0.003 mg/L	0.015 mg/L	.015mg/L <u>+</u> 10%	<0.001	<0.001	92.97%	91.67%	0.003mg/L

^{*}Tested using a flow rate of 0.5 gpm; pressure of 60 psig; pH of 7.5 \pm 0.5; temp of 68° \pm 5°F (20° \pm 3°C)

Operating Specifications

Capacity: Certified for up to 750 gallons (2,838 L); up to nine months

 Pressure Requirement:
 20 - 120 psi (2.8 - 8.2 bar)

 Temperature:
 33-100°F (0.6 - 38°C)

 Flow rate:
 0.78 gpm (2.9 l/min.)

Check for compliance with the state and local laws and regulations.

Note: While the testing was performed under standard laboratory conditions, actual performance may vary.

Must be installed and operated in accordance with manufacturer's recommended procedures and guidelines.

Installation instructions, parts and service availability, and standard warranty are included with the product when shipped. This drinking water system must be maintained according to manufacturer's instruction, including replacement of filter cartridges.

62


Manufactured by: Cuno, a 3M company

1000 Apollo Road Eagan, MN 55121 (651) 450-4913




System tested and certified by NSF International against Standard 42 for the reduction of chlorine taste and odor, particulate Class I and Standard 53 for the reduction of Lead, Lindane, Atrazine, Mercury, Toxaphene, Cyst, Turbidity, and Asbestos.


Final Installation

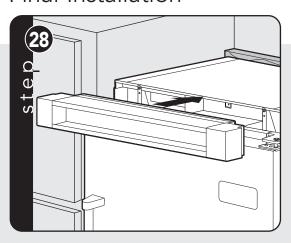


Replace top air grille.

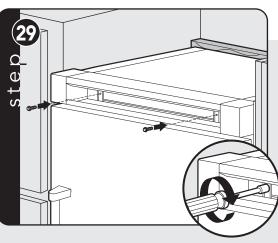


Using an 8" magnetic nut driver, replace the two 1/4" screws.

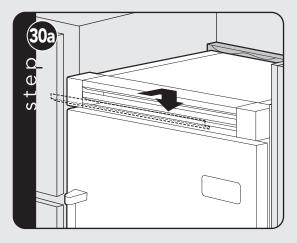


(Professional) Replace the center grille louver.

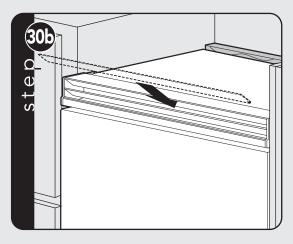

(Designer) Replace the center grille louver.

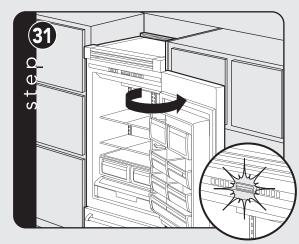

Open door. The display should flash.

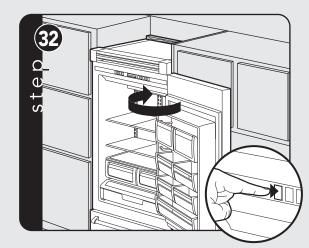


Press "DISPLAY ON" or "ACTIVATE CONTROLS" pad and close door.

Note: There is a 6 minute delay before the unit starts.


^{**}Measurement in particles/mL. Particles used were 0.5 - 1 microns


^{***}NTU = Nephelometric Turbidity units

Performance Checklist

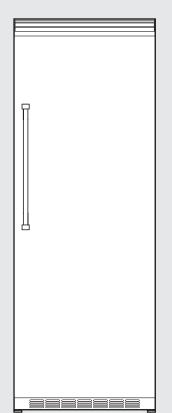

(if applicable).

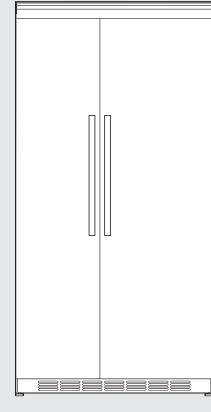

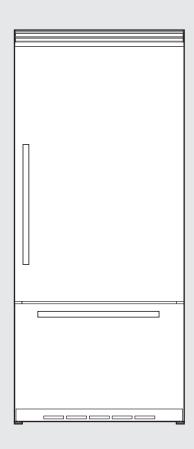


☐ Verify cabinet size.	☐ Align/square door(s).		
☐ Verify electrical supply and water supply (if applicable).	☐ Verify drain pan is properly installed and there are no leaks on water connection.		
☐ Install anti-tip device(s) and verify unit is	☐ Install kickplate.		
secure.	☐ Remove internal packaging and labels		
Position unit in cutout, level at desired height and secure unit.	and wipe unit down.		
☐ Plug-in unit and verify operation.	Installer's information:		
Connect water supply (if applicable).	Installer's Name:		
 Verify icemaker fill tube is properly inserted. 			
 Verify icemaker bail arm is down. 	Installer's Company:		
 Verify dispenser operation 	D .		


Verify Operations

Control Panels

 Bottom Mount




Side by Side

 

- 1. Press "Display On" or "Activate Controls" pad
- 2. Verify unit is not in Sabbath Mode

If in Sabbath Mode:

 A. The Sabbath Mode will disable the interior lights, display (except 3 blue squares) and alarm. (See picture below for visual indication of Sabbath Mode)




To exit the Sabbath Mode:

- B. Press & Hold "Display On" or "Activate Controls" and then "Display Off" for 3 seconds. (The control will beep 3 times to alert the user the Sabbath Mode has been exited)
- 3. Verify unit is not in Showroom Mode

If in Showroom Mode:

 A. The Showroom Mode will disable the refrigerator system but all other functions are normal. These include lights and control. (See picture below for visual indication of Showroom Mode)



To exit Showroom Mode:

 
- B. Press & Hold "Display On" or "Activate Controls"; while holding, press and hold "Higher Temp" and "Alarm Off" together. (The control will beep 3 times to alert the user that Showroom Mode
- 4. Press "Max Frz" & "Display Off" at the same time and hold until beeps (force start compressor).
- 5. All models need to be set at the 5th bar for Refrigerator & Freezer factory setting.

Date:


Verify Operations

Control Panels

All Refrigerator




All Freezer

 

- 1. Press "Display On" or "Activate Controls" pad
- 2. Verify unit is not in Sabbath Mode

If in Sabbath Mode:

 A. The Sabbath Mode will disable the interior lights, display (except 3 blue squares) and alarm. (See picture below for visual indication of Sabbath Mode)




To exit the Sabbath Mode:

- B. Press & Hold "Display On" or "Activate Controls" and then "Display Off" for 3 seconds. (The control will beep 3 times to alert the user the Sabbath Mode has been exited)
- 3. Verify unit is not in Showroom Mode

If in Showroom Mode:

 A. The Showroom Mode will disable the refrigerator system but all other functions are normal. These include lights and control. (See picture below for visual indication of Showroom Mode)



To exit Showroom Mode:

- B. Press & Hold "Display On" or "Activate Controls"; while holding, press and hold "Higher Temp" and "Alarm Off" together. (The control will beep 3 times to alert the user that Showroom Mode has been exited)
- 4. Press "Max Frz" & "Display Off" at the same time and hold until beeps (force start compressor).
- 5. All models need to be set at the 5th bar for Refrigerator & Freezer factory setting.

Service & Registration

Service & Parts

Only authorized replacement parts may be used in performing service on the appliance. Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.

Record the following information indicated below. You will need it if service is ever required. The serial number and model number for your appliance are located on the identification plate mounted on the bottom left side of the door opening.

Model Number
Serial Number
Date of Purchase
Date Installed
Dealer's Name
Address