
# Viking Installation Guide

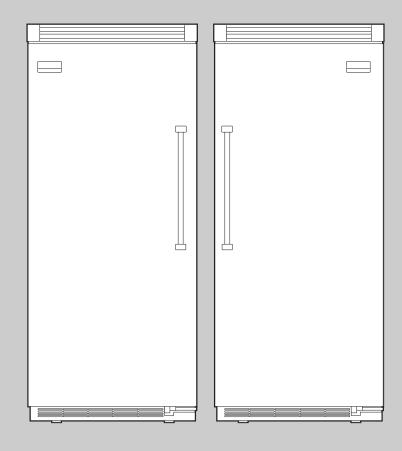

#### All Refrigerator/Freezer

111 Front Street Greenwood, Mississippi 38930 USA

#### Table of Contents

Warnings & Important Information	4
Professional	
Dimensions (30" and 36")	5
Specifications (30" and 36")	6
Cutout Dimensions (30")	7
Anti-Tip Dimensions (30")	
Cutout Dimensions (36")	
Anti-Tip Dimensions (36")	10
Dimensions (Dual 30")	11
Dimensions (Dual 30" and 36")	12
Dimensions (Dual 36")	13
	1 4
Cutout Dimensions (Dual 30")	15
Anti-Tip Dimensions (Dual 30")	16
Cutout Dimensions (Dual 30" and 36")	17
Cutout Dimensions (Dual 30" and 36")	18
Cutout Dimensions (Dual 36")	19
Anti-Tip Dimensions (Dual 36")	
Cabinet Information	21
Designer	
Dimensions (30" and 36")	23
Specifications (30" and 36")	24
Cutout Dimensions (30")	25
Anti-Tip (30")	26
Cutout Dimensions (36")	27
Anti-Tip Dimensions (36")	
Dimensions (Dual 30")	29
Dimensions (Dual 30" and 36")	30
Dimensions (Dual 36")	31
Specifications (Dual)	32
Cutout Dimensions (Dual 30")	33
Anti-Tip Dimensions (Dual 30")	34
Cutout Dimensions (Dual 30" and 36")	
Anti-Tip Dimensions (Dual 30" and 36")	
Cutout Dimensions (Dual 36")	37
Anti-Tip Dimensions (Dual 36")	
Cabinet Information	39
General Information	41
Unpacking & Moving	43
Installation	44
Hinge Adjustment	45
Kickplate Installation	47
Door Stop Adjustment	48
Final Installation	48
Performance Checklist	50
Control Panels	51
Service & Registration	52

#### **IMPORTANT**–Please Read and Follow!

- Make sure that incoming voltage is the same as unit rating. An electric rating plate specifying voltage, frequency, wattage, amperage, and phase is attached to the product.
- To reduce the risk of fire, electric shock, or injury to persons, installation work and electrical wiring must be done by gualified people in accordance with all applicable codes and standards, including fire-rated construction.
- The installer should leave these instructions with the consumer who should retain them for local inspector's use and for future reference.

#### It is your responsibility to:

- Comply with installation specifications and dimensions
- Properly install unit
- Remove any moldings or decorative panels that prevent the unit from being serviced
- Make sure that you have these materials (not provided with your unit), which are necessary for proper installation:
  - •1/4" (6 mm) copper tubing with shutoff valve
  - •6– #8 x 3" (7.6 cm) wood screws (longer screws may be required)
  - •1– Saddle valve (do not use self-piercing feature of the valve)
- Assure that floor will support unit, door panels and contents (approximately 1200 pounds [540 kg])
- Provide a properly grounded electrical outlet
- Assure that location will permit appliance doors to open 90Þ minimum

#### **A** W A R N I N

#### **ELECTRICAL SHOCK** HAZARD

Disconnect power or turn power disconnect switch to OFF position before removing top grille. Failure to do so can result in death or electrical shock.



#### Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol. This symbol alerts you to hazards that can kill or hurt you and others.

All safety messages will be preceded by the safety alert symbol and the word "DANGER" or "WARNING." These words mean:

#### D Α N (C Ξ R

You will be killed or seriously injured if you don't follow instructions.

#### WARNING

#### You can be killed or seriously injured if you don't follow instructions.

All safety messages will identify the hazard, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

#### WARNING

#### **TIP OVER HAZARD**

Appliance is top heavy and tips easily when not completely installed. Keep doors closed until appliance is completely installed




and secured per installation instructions.

Use two or more people to move and install appliance. Failure to do so can result in death or serious injury.

Most of the unit's weight is at the top. Extra care is needed when moving the unit to prevent tipping. Use cardboard shipping material or plywood under unit until it is installed in the operating position to protect floor surface.

#### Dimensions (Professional All Refrigerator/Freezer)

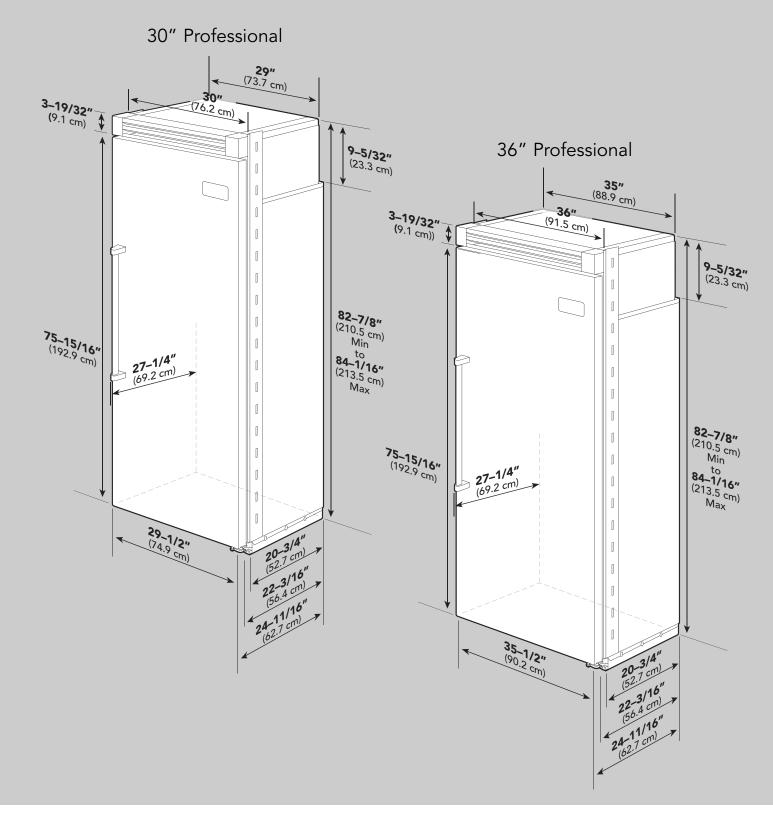


### Specifications (Professional All Refrigerator/Freezer)

30" All Refrigerator/Freezer					
Description	VCFB304 VCRB304				
Overall Width	30″ (76.2 cm)				
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to Max. 84 1/16" (213.5 cm)				
Overall Depth from Rear	To front edge of side trim: 22 3/16" (56.4 cm)				
	To front of top grille:	24 11/16" (62.7 cm)			
	To front of handle endcap:	27 1/4" (69.2 cm))			
Cutout Width	29 1/2" (74.9 cm)				
Cutout Height	Min. 82 7/8" (210.5 cm) to Max. 84 1/16" (213.5 cm)				
Cutout Depth	Min.24" (61.0 cm)				
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with				
	grounded 3-prong plug attached to product				
Maximum Amp Usage	9.1 amps	5.7 amps			
Inlet Water	1/4" copper tubing inlet				
Requirements	waterline; minimum 20 psi;	N/A			
	maximum 120 psi				
Overall Interior Dimensions					
Total Capacity	15.9 cu. ft. (450 liters)	18.2 cu. ft. (516 liters)			
Approximate Shipping Weight	530 lbs. (238.5 kg)	505 lbs. (227.3 kg)			


36" All Refrigerator/Freezer					
Description	VCFB364 VCRB364				
Overall Width	36″ (91.5 cm)				
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to	Max. 84 1/16" (213.5 cm)			
Overall Depth from Rear	To front edge of side trim: 22 3/16" (56.4 cm)				
	To front of top grille:	24 11/16" (62.7 cm)			
	To front of handle endcap:	27 1/4" (69.2 cm)			
Cutout Width	35 1/2" (90.2 cm)				
Cutout Height	Min. 82 7/8" (210.5 cm) to Max. 84 1/16" (213.5 cm)				
Cutout Depth	Min. 24" (61.0 cm)				
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with				
	grounded 3-prong plug attached to product				
Maximum Amp Usage	9.5 amps	6.5 amps			
Inlet Water	1/4" copper tubing inlet				
Requirements	waterline; minimum 20 psi;	N/A			
	maximum 120 psi				
Overall Interior Dimensions					
Total Capacity	19.1 cu. ft. (541 liters) 22.8 cu. ft. (646 lite				
Approximate Shipping Weight	585 lbs. (263.3 kg) 570 lbs. (256.5 kg)				

### Cutout Dimensions (Professional All Refrigerator/Freezer)

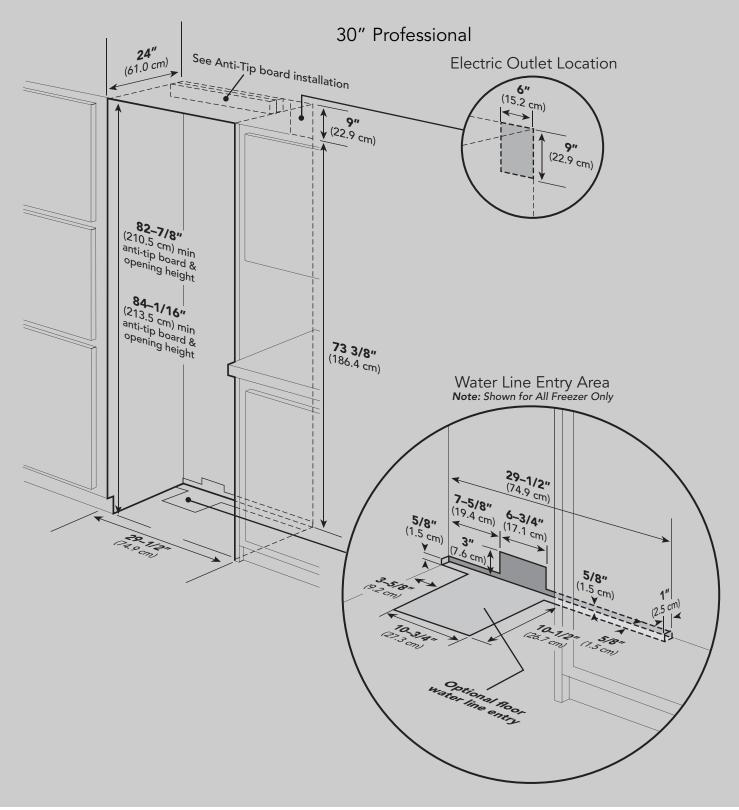


#### Anti-Tip Dimensions (Professional All Refrigerator/Freezer)

30" Professional

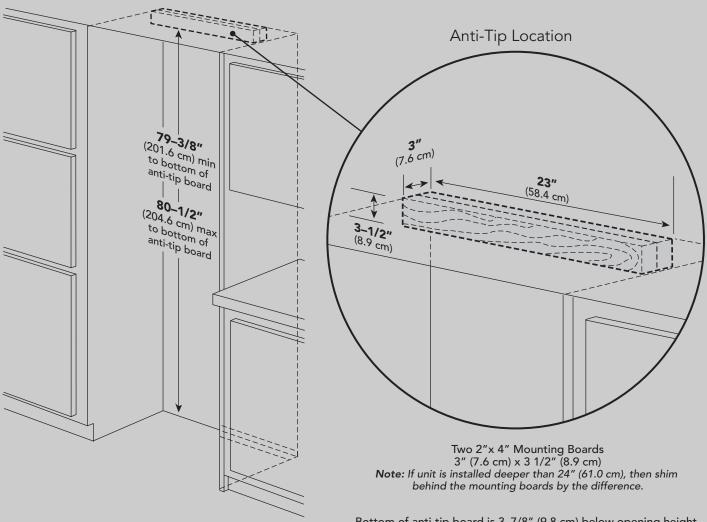


Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.

### Cutout Dimensions (Professional All Refrigerator/Freezer)

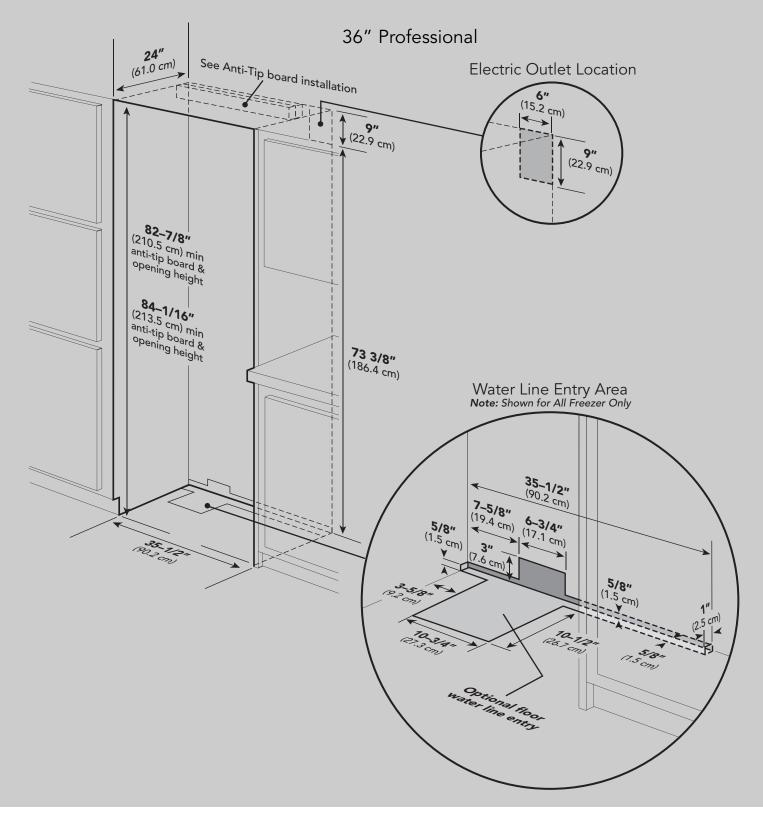


#### Anti-Tip Dimensions (Professional All Refrigerator/Freezer)


36" Professional

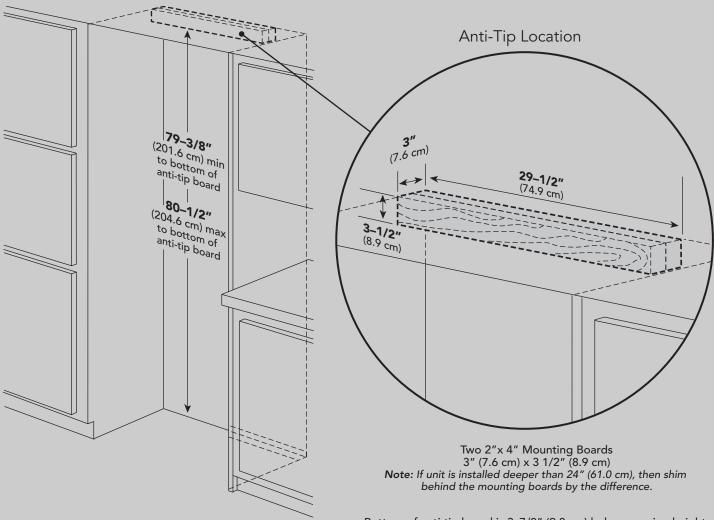



Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.

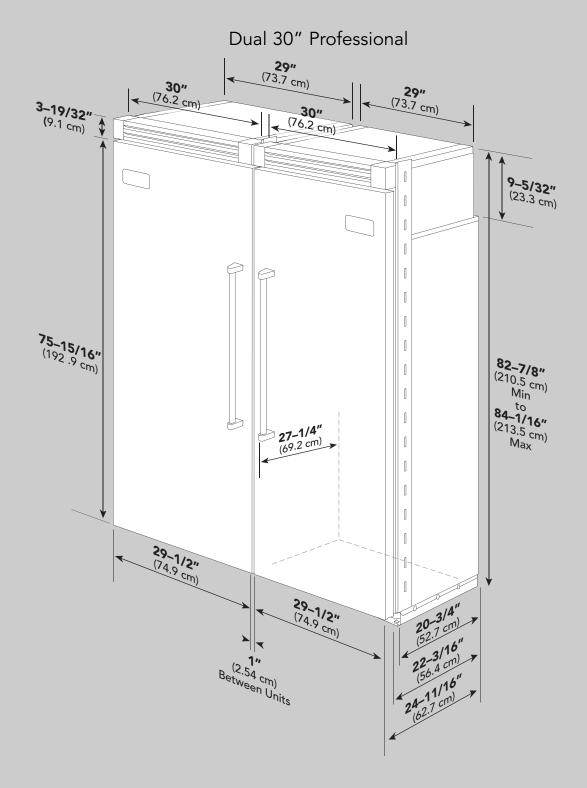

#### Dimensions (Professional All Refrigerator/Freezer)

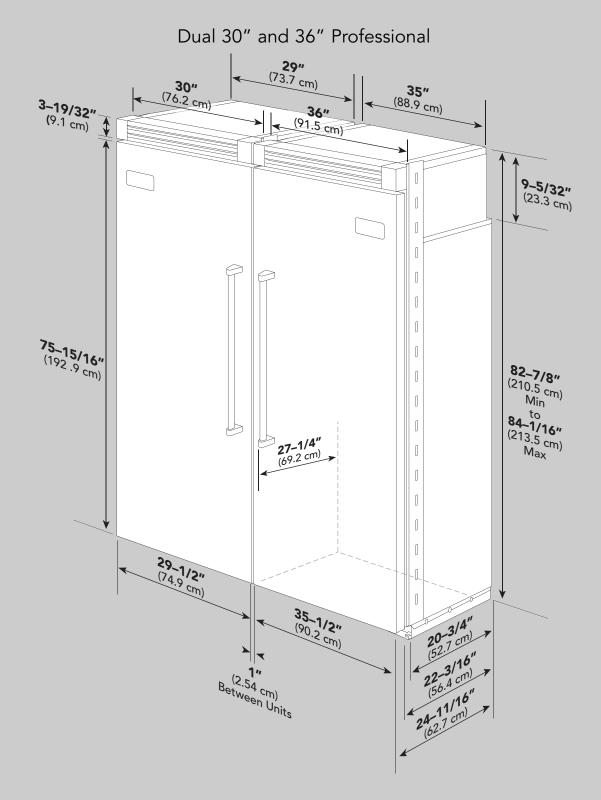

 


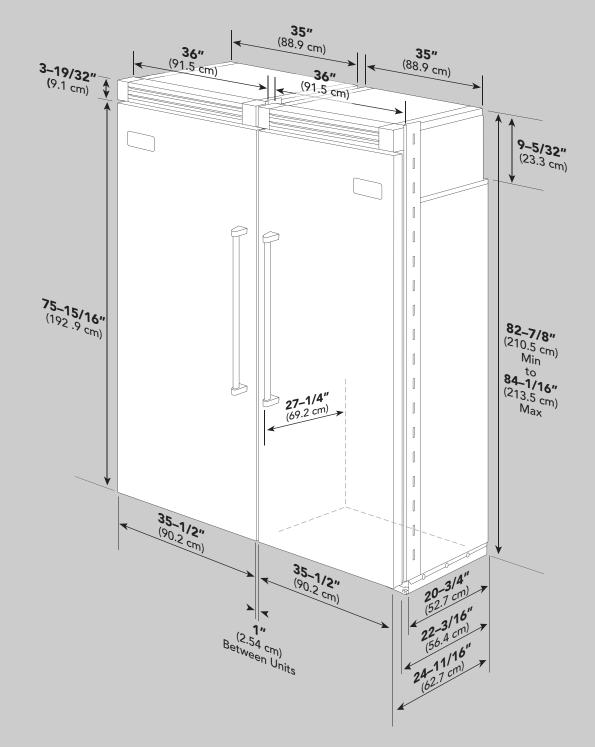

### Specifications (Professional All Refrigerator/Freezer)


Dual All Refrigerator/Freezer				
Description	(2) 30″ Units	(1) 36″ & (1)	30" Unit	(2) 36″ Units
Overall Width	60" (152.4 cm)	66" (167.		72" (182.9 cm)
Overall Height from Bottom	Min. 82	3/4" (210.2 cm) to	o Max. 84 1/16	6" (213.5 cm)
Overall Depth from Rear	To front	edge of side trim:	22 3/16′	" (56.4 cm)
	To front	of top grille:	24 11/16	6" (62.7 cm)
	To front	of handle endcap:	: 27 1/4"	(69.2 cm)
Cutout Width	59 1/2" (151.1 cm)	65 1/2" (16	6.4 cm)	71 1/2" (181.6 cm)
Cutout Height	Min. 82 7/8" (210.5 cm) to Max. 84 1/16" (213.5 cm)			
Cutout Depth	Min. 24″ (61.0 cm)			
Electrical Requirements	(2) 115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with			
	grounded 3-prong plug attached to product			
Maximum Amp Usage	30" Freezer 9.1 amps per unit 30" Refrigerator 5.7 amps per unit			ator 5.7 amps per unit
				ator 6.5 amps per unit
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi;			
(All Freezer Only)	maximum 120 psi			
Overall Interior Dimensions				
30" Freezer	15.9 cu. ft. (450 liters)			
30" Refrigerator	18.2 cu. ft. (516 liters)			
36" Freezer	19.1 cu. ft. (541 liters)			
36" Refrigerator	22.8 cu. ft. (646 liters)			
Approximate Shipping Weight	30"- Freezer 530 lbs. (238.5 kg) each; Refrigerator 505 lbs. (227.3 kg) each			
	36"- Freezer 585 lbs. (263.3 kg) each; Refrigerator 570 lbs. (256.5 kg) each			

#### Cutout Dimensions (Professional All Refrigerator/Freezer)

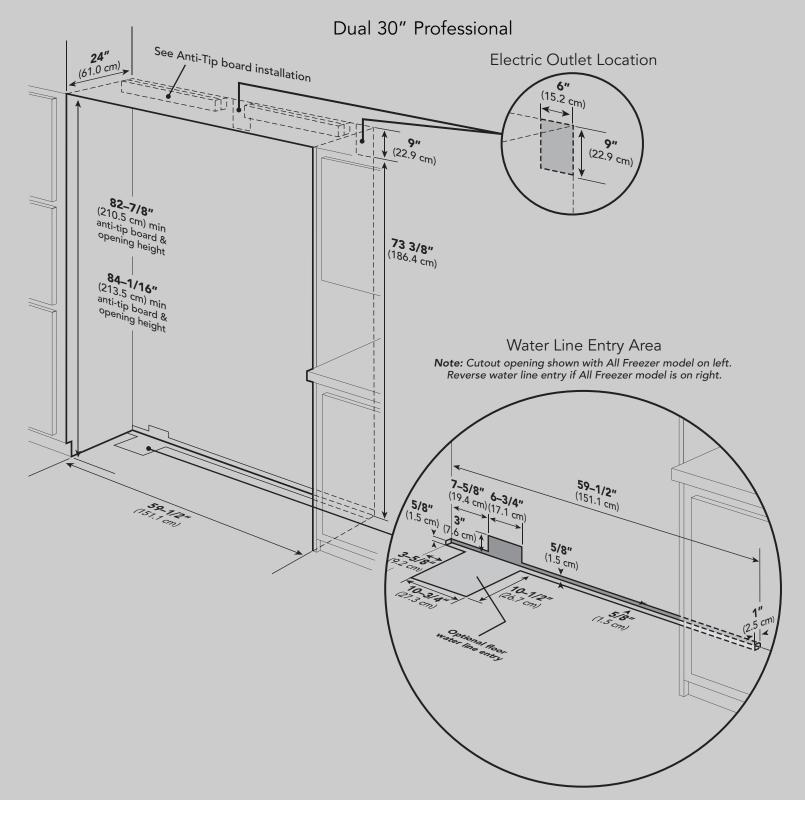


### Anti-Tip Dimensions (Professional All Refrigerator/Freezer)

Dual 30" Professional

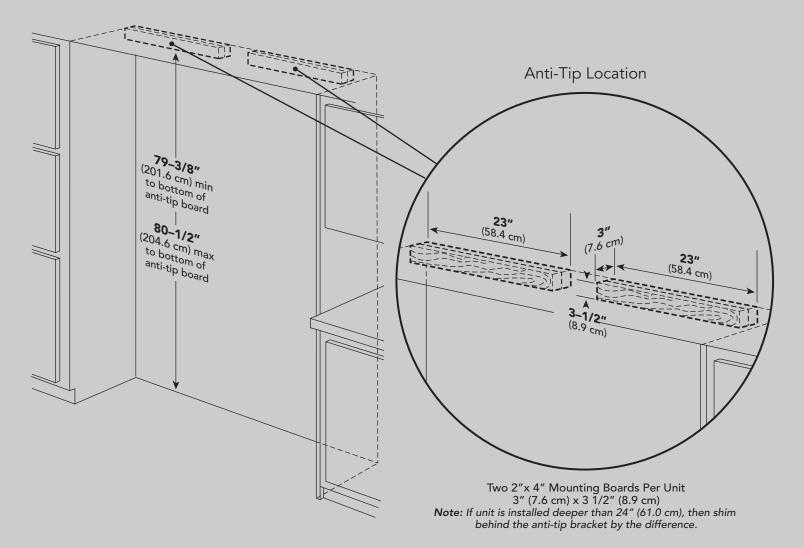


Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.

### Cutout Dimensions (Professional All Refrigerator/Freezer)

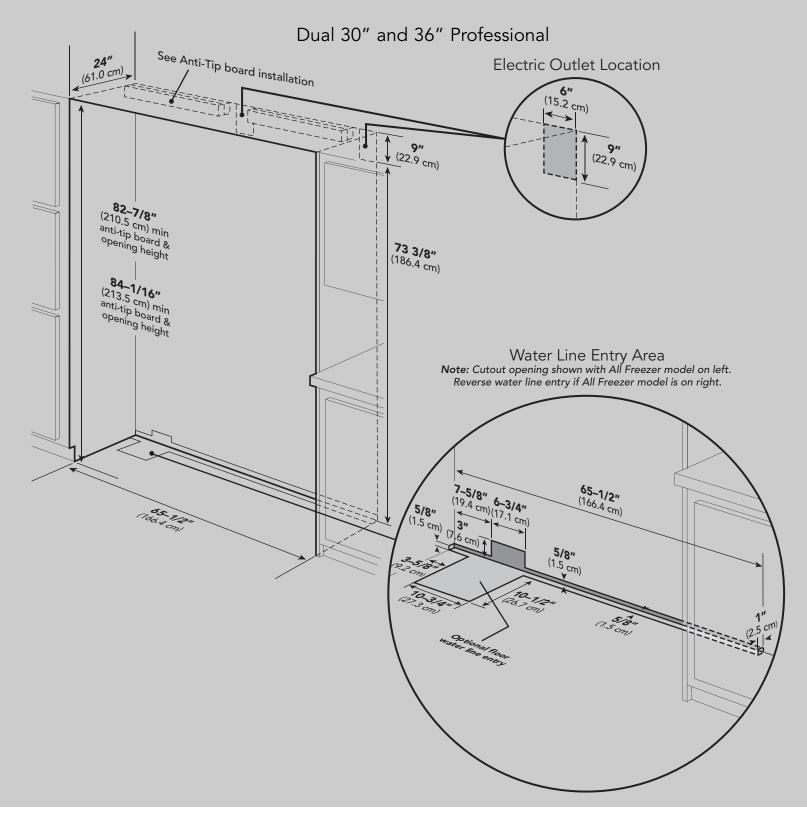

# Anti-Tip Dimensions (Professional All Refrigerator/Freezer)


Dual 30" and 36" Professional

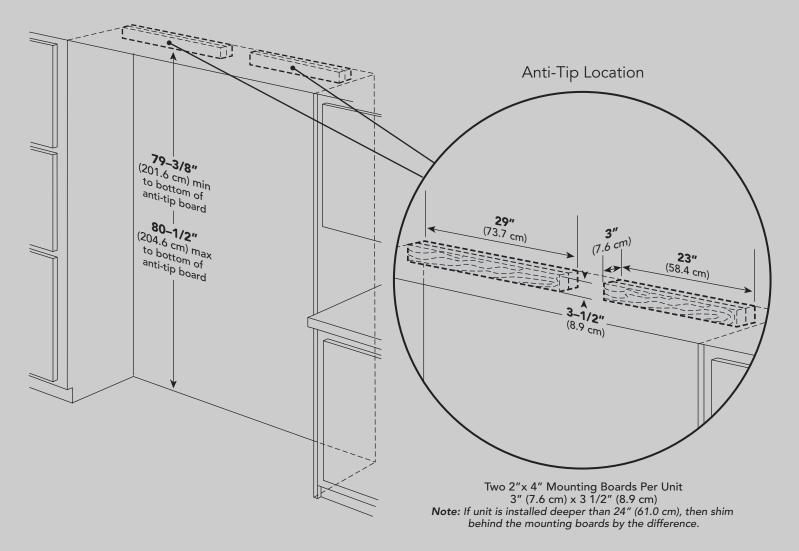


Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.

**Note:** Dimensions shown for 36" AF/AR model on the left. Reverse mounting boards if units are installed on the right.

### Cutout Dimensions (Professional All Refrigerator/Freezer)

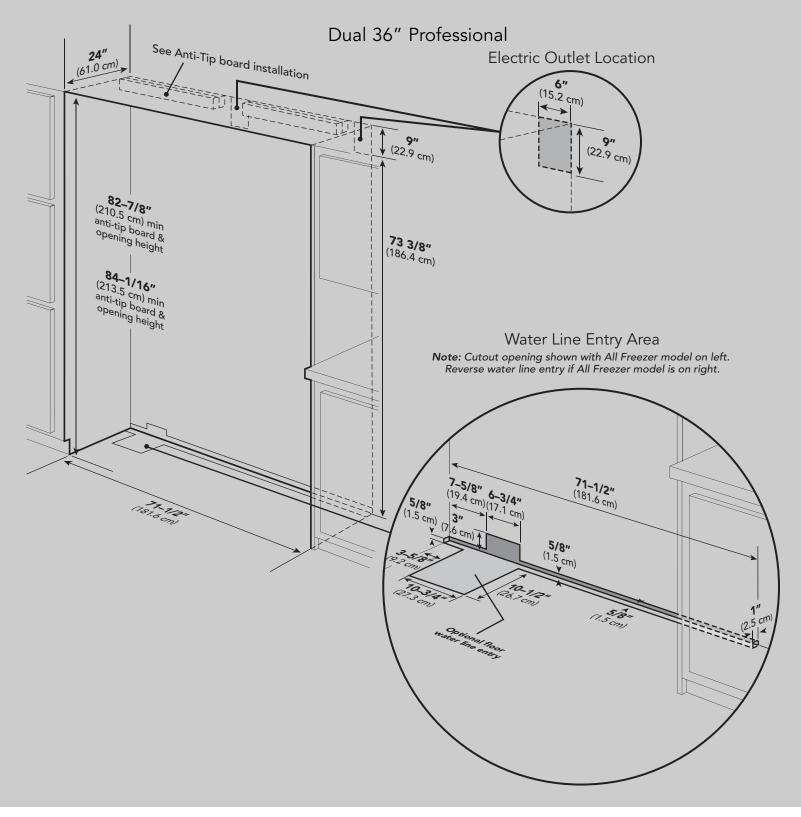


# Anti-Tip Dimensions (Professional All Refrigerator/Freezer)

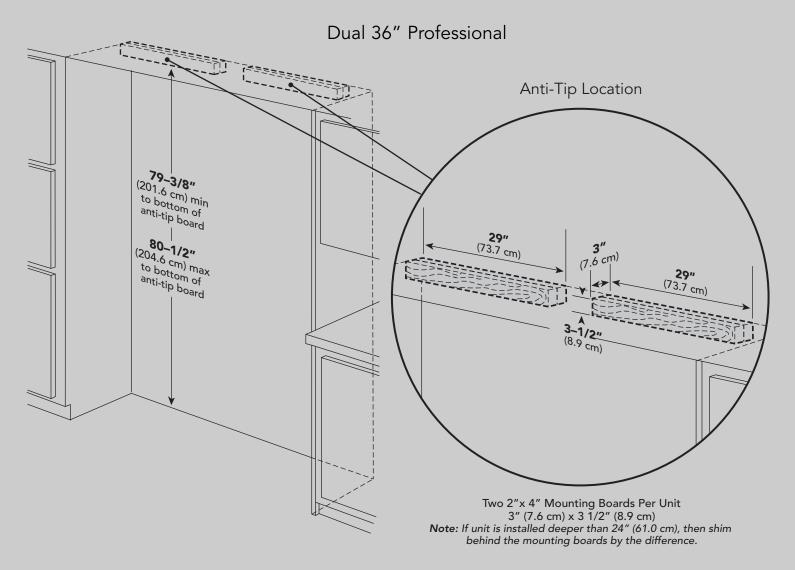

Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.


# Cabinet Information (Professional)

Professional models fit "semi-flush" in standard 24" (61.0 cm) deep cabinet openings. The door face protrudes 2-1/2" (6.4 cm) from the cabinet face. The handle protrudes an additional 2-1/2" (6.4 cm) into the room.

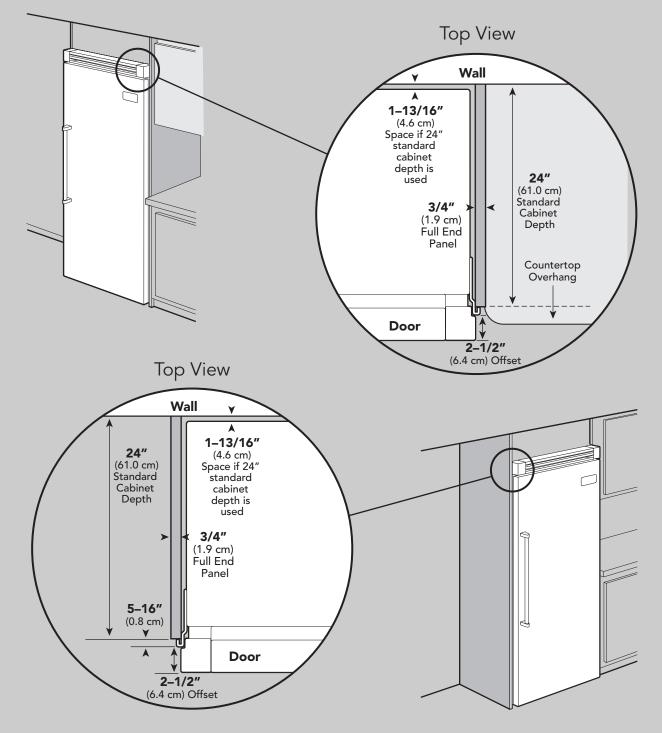


# Cabinet Information (Professional)

Professional models fit "semi-flush" in standard 24" (61.0 cm) deep cabinet openings. The door face protrudes 2-1/2" (6.4 cm) from the cabinet face. The handle protrudes an additional 2-1/2" (6.4 cm) into the room.

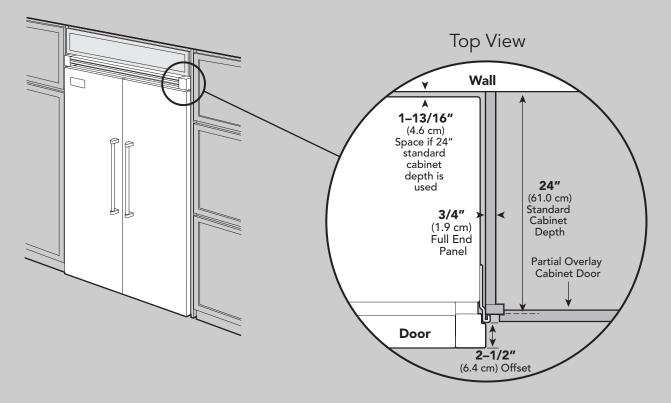

#### Dimensions (Designer All Refrigerator/Freezer)

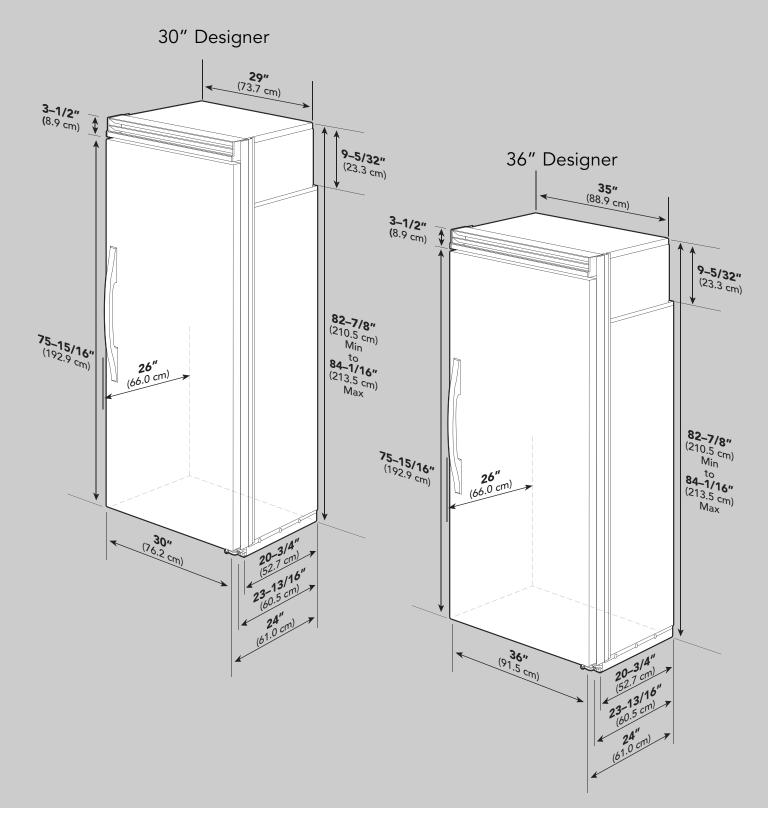


### Specifications (Designer All Refrigerator/Freezer)

30" All Refrigerator/Freezer					
Description	DDFB304 DDRB304				
Overall Width	30" (76	6.2 cm)			
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to	Max. 84 1/16" (213.5 cm)			
Overall Depth from Rear	To front edge of side trim: 23 13/16" (60.5 cm)				
	To front of top grille:	24" (61.0 cm)			
	To front of handle:	26" (66.0 cm)			
Cutout Width	30″ (76.2 cm)				
Cutout Height	Min. 82 7/8" (210.5 cm) to Max. 84 1/16" (213.5 cm)				
Cutout Depth	Min. 24″ (61.0 cm)				
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with				
	grounded 3-prong plug attached to product				
Maximum Amp Usage	9.1 amps	5.7 amps			
Inlet Water	1/4" copper tubing inlet				
Requirements	waterline; minimum 20 psi;	N/A			
	maximum 120 psi				
Overall Interior Dimensions					
Total Capacity	15.9 cu. ft. (450 liters) 18.2 cu. ft. (516 liters)				
Approximate Shipping Weight	525 lbs. (236.3 kg) 495 lbs. (222.8 kg)				


36" All Refrigerator/Freezer					
Description	DDFB364 DDRB364				
Overall Width	36" (91.5 cm)				
Overall Height from Bottom	Min. 82 3/4" (210.2 cm) to	Max. 84 1/16" (213.5 cm)			
Overall Depth from Rear	To front edge of side trim: 23 13/16" (60.5 cm)				
	To front of top grille:	24" (61.0 cm)			
	To front of handle:	26" (66.0 cm)			
Cutout Width	36″ (91.5 cm)				
Cutout Height	Min. 82 7/8" (210.5 cm) to Max. 84 1/16" (213.5 cm)				
Cutout Depth	Min. 24" (61.0 cm)				
Electrical Requirements	115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with				
	grounded 3-prong plug attached to product				
Maximum Amp Usage	9.5 amps	6.5 amps			
Inlet Water	1/4" copper tubing inlet				
Requirements	waterline; minimum 20 psi;	N/A			
	maximum 120 psi				
Overall Interior Dimensions					
Total Capacity	19.1 cu. ft. (541 liters) 22.8 cu. ft. (646 lite				
Approximate Shipping Weight	580 lbs. (261.0 kg) 555 lbs. (249.8 kg)				

#### Cutout Dimensions (Designer All Refrigerator/Freezer)

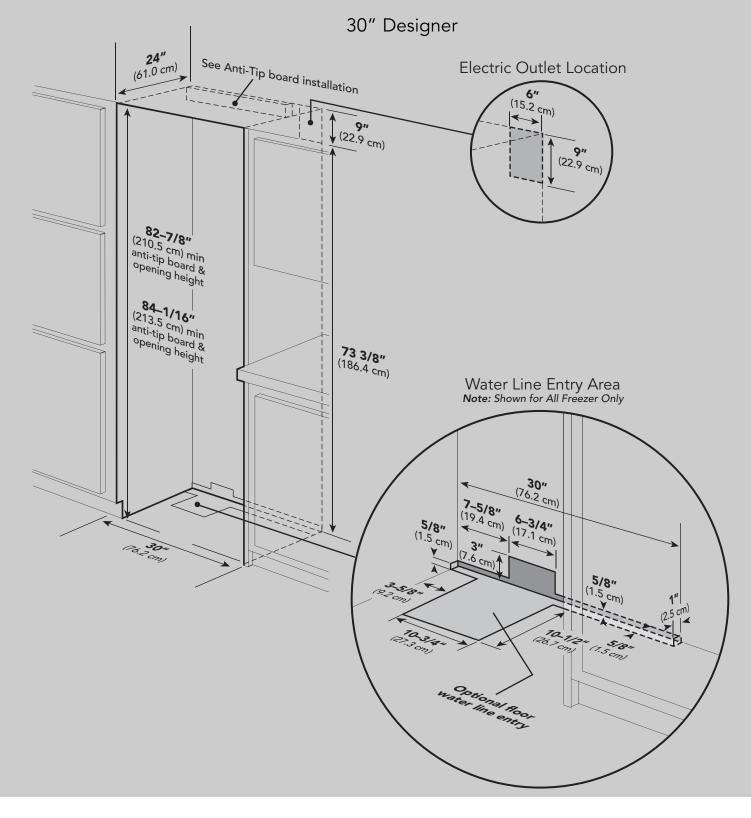


#### Anti-Tip Dimensions (Designer All Refrigerator/Freezer)

30" Designer

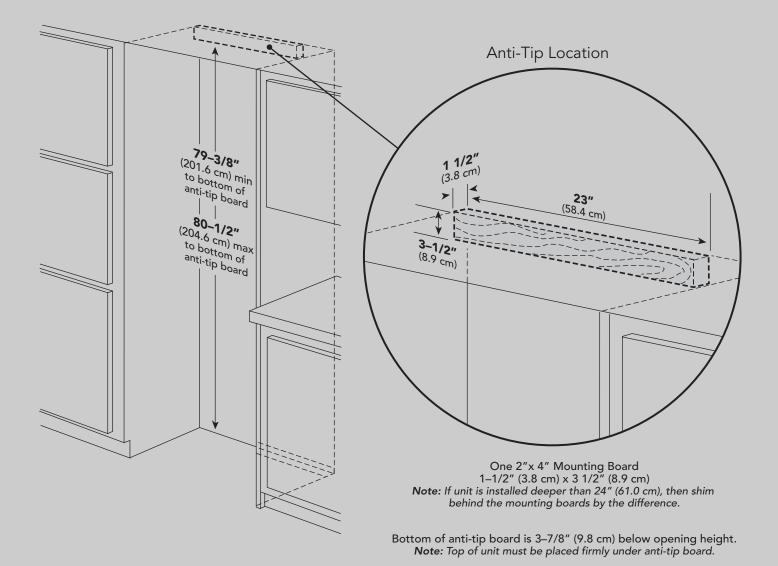


### Cutout Dimensions (Designer All Refrigerator/Freezer)

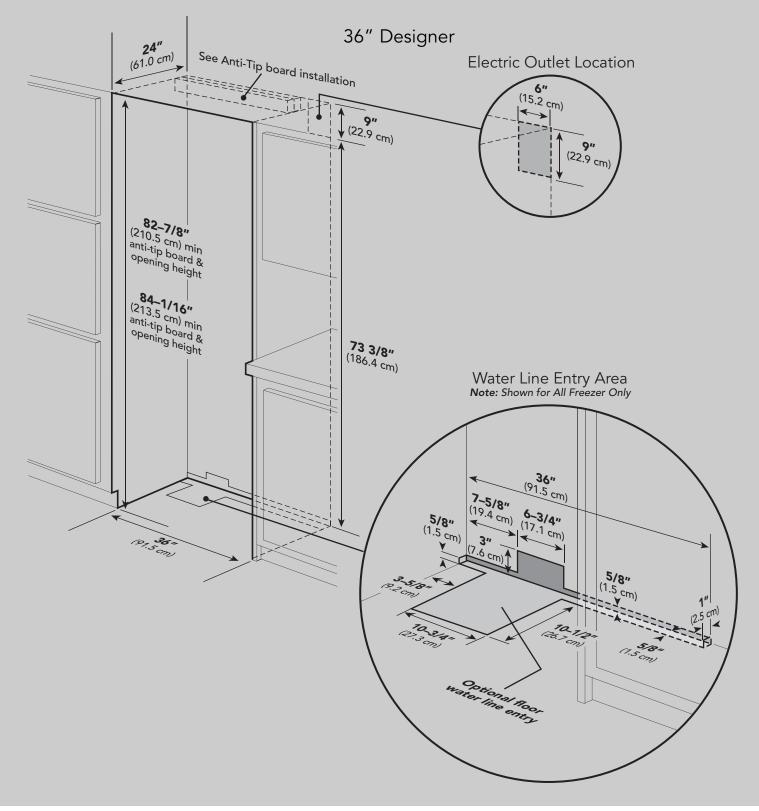



#### Anti-Tip Dimensions (Designer All Refrigerator/Freezer)


36" Designer

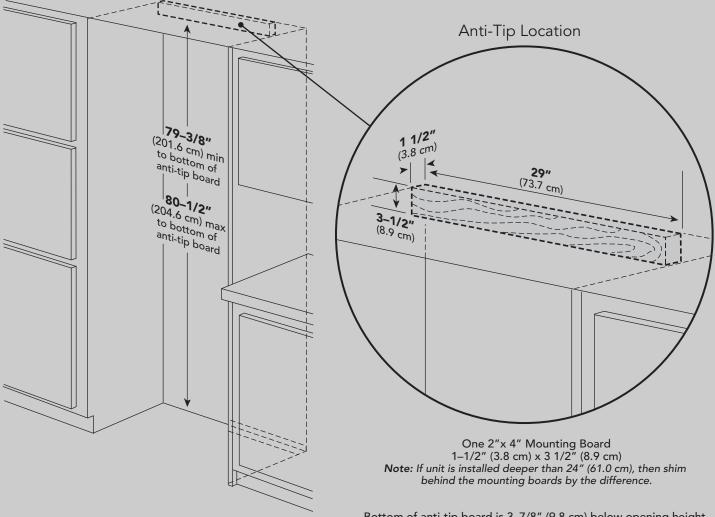

Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.

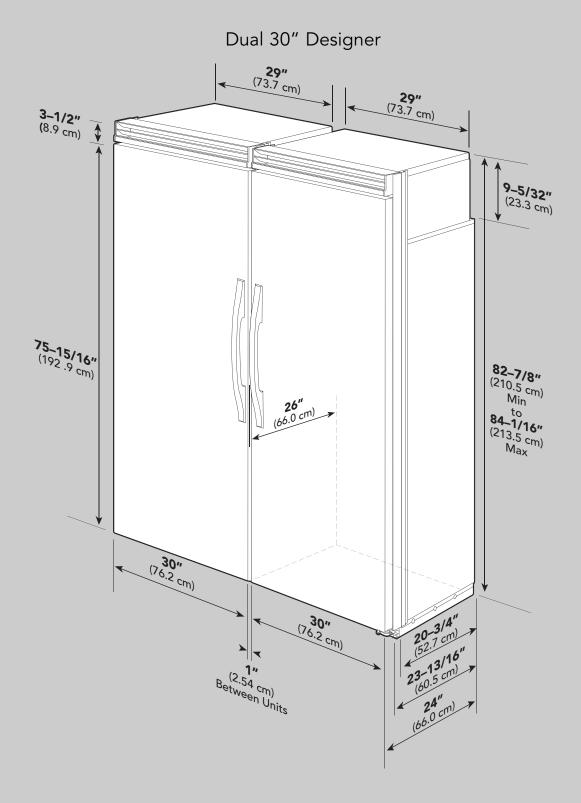

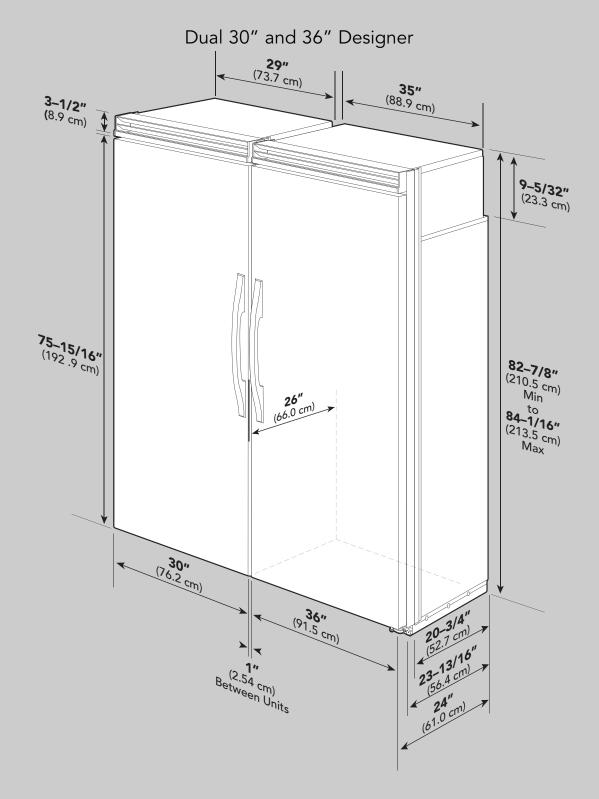


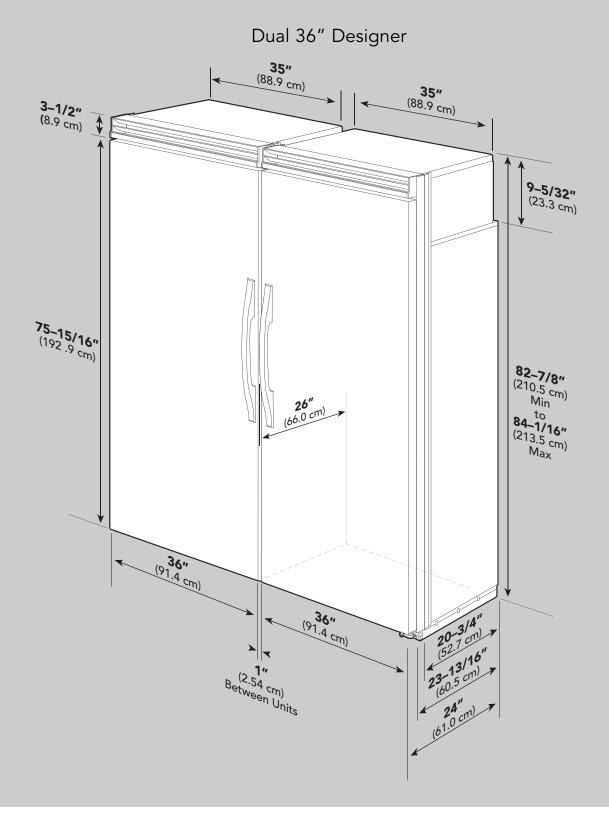

### Specifications (Designer All Refrigerator/Freezer)


Dual All Refrigerator/Freezer				
Description	(2) 30″ Units	(1) 36″ & (1)	30" Unit	(2) 36″ Units
Overall Width	60" (152.4 cm)	66" (167.	6 cm)	72" (182.9 cm)
Overall Height from Bottom	Min. 82	3/4" (210.2 cm) to	Max. 84 1/16	6" (213.5 cm)
Overall Depth from Rear	To front	edge of side trim:	23 13/16	″ (60.5 cm)
	To front	of top grille:	24" (61.0	) cm)
	To front	of handle:	26" (66.0	) cm)
Cutout Width	60" (152.4 cm)	66" (167.6	6 cm)	72" (182.9 cm)
Cutout Height	Min. 82 7/8" (210.5 cm) to Max. 84 1/16" (213.5 cm)			
Cutout Depth		Min. 24" (61.0 cm)		
Electrical Requirements	(2) 115 volt, 60 Hz, 15 amp dedicated circuit; 3-wire cord with			
	grounded 3-prong plug attached to product			
Maximum Amp Usage				ator 5.7 amps per unit
				ator 6.5 amps per unit
Inlet Water Requirements	1/4" copper tubing inlet waterline; minimum 20 psi;			
(All Freezer Only)	maximum 120 psi			
Overall Interior Dimensions				
30" Freezer	15.9 cu. ft. (450 liters)			
30" Refrigerator	18.2 cu. ft. (516 liters)			
36" Freezer	19.1 cu. ft. (541 liters)			
36" Refrigerator	22.8 cu. ft. (646 liters)			
Approximate Shipping Weight	30" Freezer 525 lbs. (236.3 kg) each; Refrigerator 495 lbs. (222.8 kg) each			

### Cutout Dimensions (Designer All Refrigerator/Freezer)

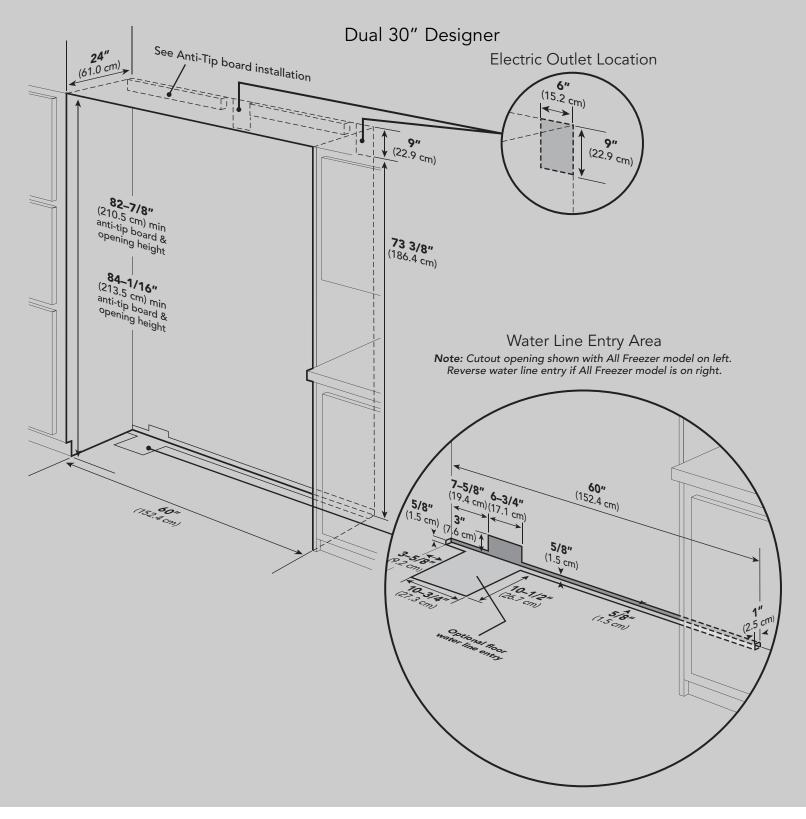


#### Anti-Tip Dimensions (Designer All Refrigerator/Freezer)

Dual 30" Designer

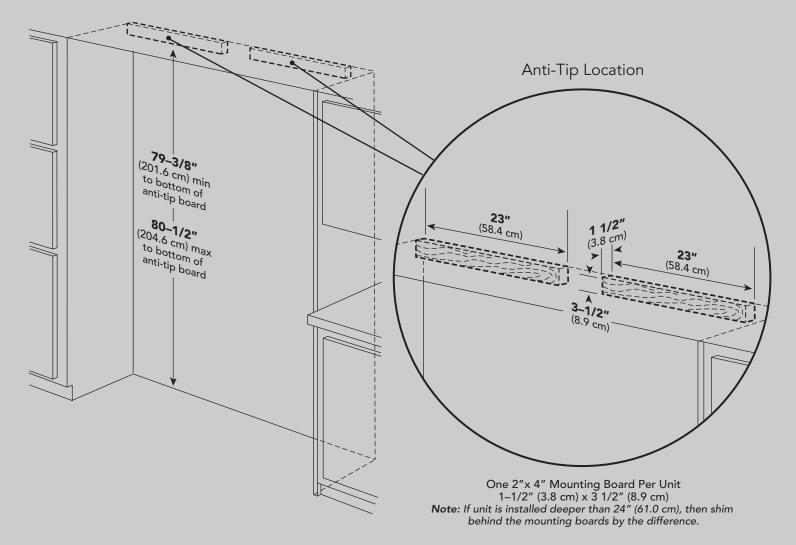


Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.

# Cutout Dimensions (Designer All Refrigerator/Freezer)

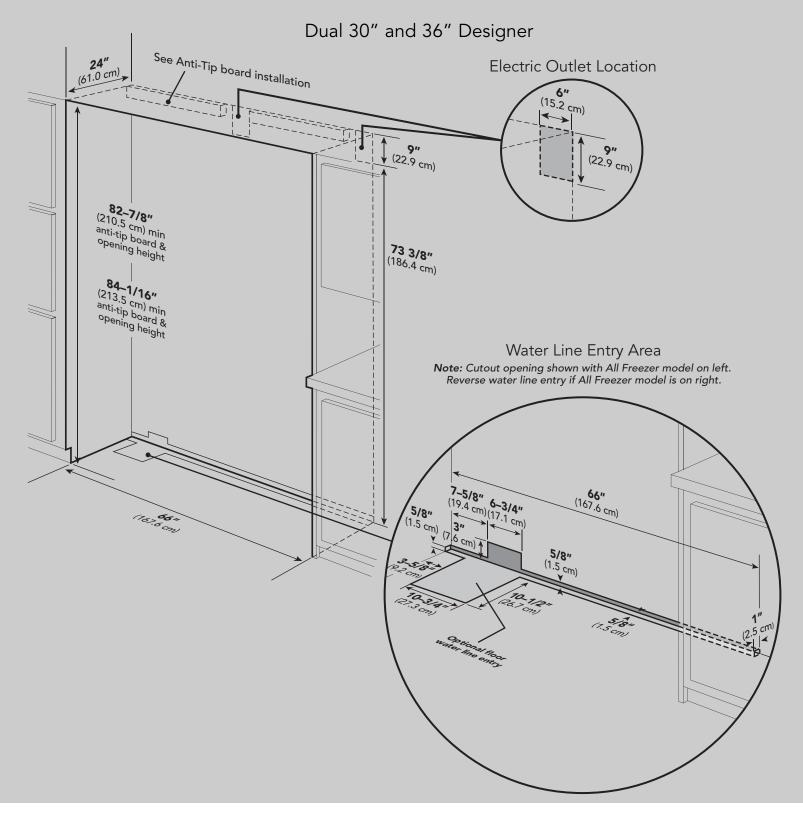

#### Anti-Tip Dimensions (Designer All Refrigerator/Freezer)


Dual 30" and 36" Designer

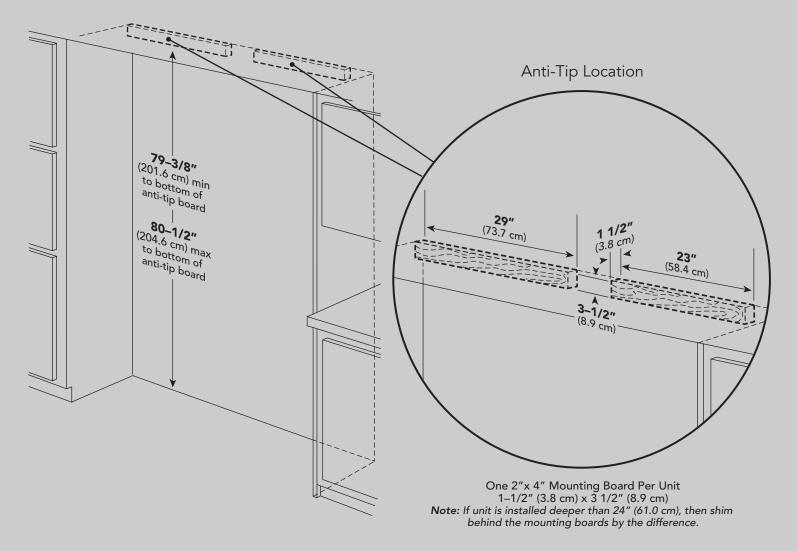

Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.


**Note:** Dimensions shown for 36" AF/AR model on the left. Reverse mounting boards if units are installed on the right.

### Cutout Dimensions (Designer All Refrigerator/Freezer)

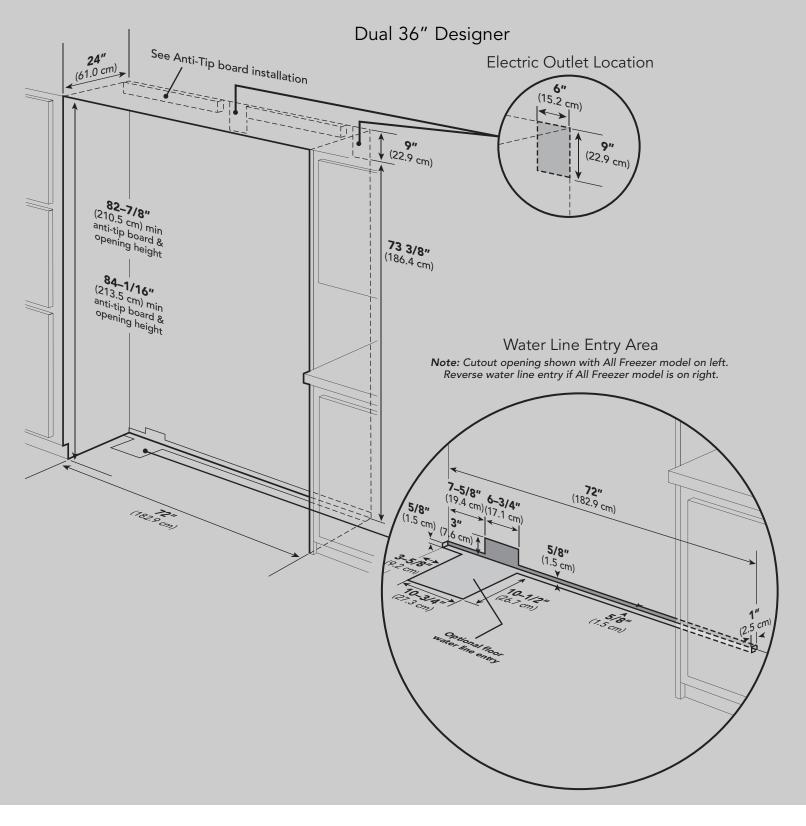

# Anti-Tip Dimensions (Designer All Refrigerator/Freezer)


Dual 36" Designer

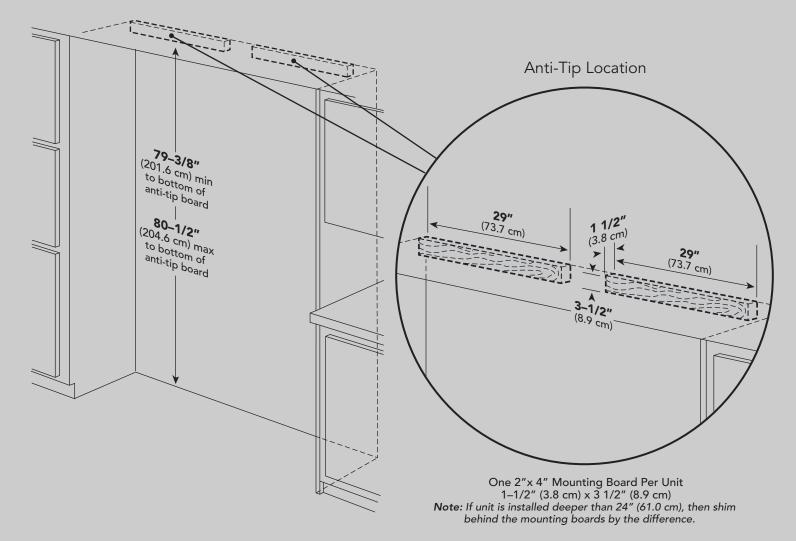

Bottom of anti-tip board is 3–7/8" (9.8 cm) below opening height. Note: Top of unit must be placed firmly under anti-tip board.


# Cabinet Information (Designer)

Designer models fit flush in standard 24" (61.0 cm) deep cabinet openings with no protrusion into the room except 2"(5.1 cm) curved handle depth.

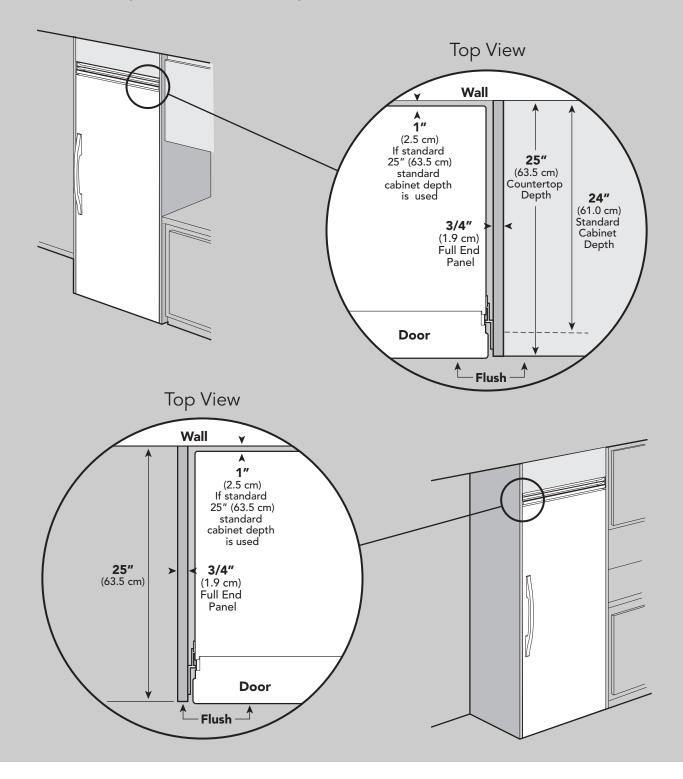

# Cabinet Information (Designer)

Designer models fit flush in standard 24'' (61.0 cm) deep cabinet openings with no protrusion into the room except 2''(5.1 cm) curved handle depth.

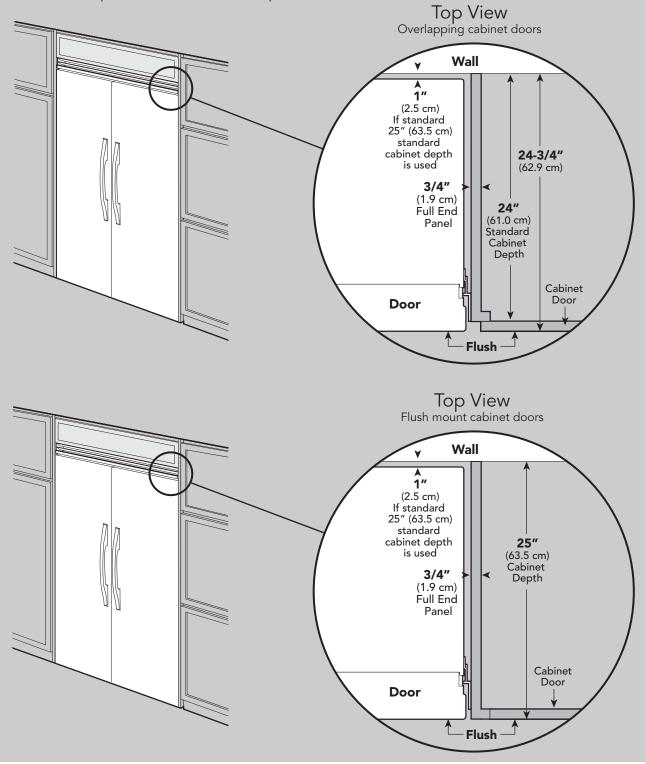

# **General Information**

### Area Requirements

Verify the following:

- Unit can fit into residence and can be moved around corners and through doorways.
- Floors can support unit's weight plus food weight (approximately 1200 pounds [540 kg] per unit).
- Rear wall is solid and is able to support two (2) horizontally mounted 2X4s (included) bolted to 2 wall studs. The 2X4 board bolt heads must be flush with 2X4 to prevent obstruction.
- Remove anything attached to rear or side walls that can obstruct unit installation.
- Cutout dimensions are accurate.
- Electrical outlet is in correct location.
- Water line is in correct location.
- Do not install a refrigeration unit near a heat source, nor in a location where the surrounding temperature will fall below 60° F (16° C).

### **Electrical Requirements**

It is the customer's responsibility to:

- contact a qualified electrical installer.
- assure that the electrical installation is adequate and in conformance with the National Electrical Code, ANSI/NFPA 70latest edition or Canadian Electrical Code C22.1-1998 and C22.2 No. 0-M91 (or latest edition), and all local codes and

ordinances. A 115 volt, 60-Hz, 15 amp, fused, electrical supply is required. It is required that a separate circuit serving only this appliance be provided. This appliance is equipped with a power supply cord having a 3-prong grounding plug. To minimize possible shock hazard, the cord must be plugged into a mating 3-prong, grounding-type wall receptacle. **Do not use an extension cord.** 

If codes permit a separate grounding wire to be used, it is recommended that a qualified electrician determine that the grounding path is adequate.

**DO NOT** ground to a gas pipe. Check with a qualified electrician if you are not sure the appliance is properly grounded. **DO NOT** have a fuse in the neutral or grounding circuit.

### Anti-Tip Requirements

The anti-tip boards should be fastened into position prior to moving the unit into the opening.

Note: Additional mounting boards may be required if the unit does not touch the back wall of the enclosure. To prevent unit from tipping forward, it must be secured in place with a solid soffit or wood block.

# **General Information**

### Water Supply Requirements

### 🛦 W A R N I N G

To avoid serious illness or death, do not use unit where water is microbiologically unsafe or of unknown quality without adequate disinfection before or after the system. Systems certified for cyst reduction may be used on disinfected water that may contain filterable cysts. The contaminants or other substances removed or reduced by this water treatment system are not necessarily in you water.

Use only 1/4" (6 mm) copper tubing for water line. Do Not install copper tubing in area where temperatures drop below  $35\flat$  F (1.7 $\flat$  C). Before attaching copper tubing to the unit, flush at least 2 quarts (1.9 L) of water through the copper tubing and into a bucket to remove any particles in the water line.

- Viking Range Corporation is not responsible for property damage due to improper installation or water connection.
- Connect 1/4" (6mm) flexible copper tubing to household plumbing in compliance with local codes and ordinances.
- Length of copper tubing must reach from water supply connection to the unit connection with an additional length to facilitate moving the unit out of enclosure for cleaning or service. Tubing should be soft instead of rigid and ends should be free of burrs.
- Copper tubing route must be above 35Þ F (1.7Þ C) to prevent water line from

freezing.

- Do not use plastic water lines from the household plumbing to the water inlet valve connection on the refrigeration unit.
- Do not use the self-piercing feature of a saddle valve. The hole made by the piercing lance is too small for the water flow rate required by the ice maker.
- If saddle valve is not used, place a separate shut-off valve in an easily accessible location between water supply and the unit. Do not locate shut-off valve behind the unit.
- The installation of Viking units with a reverse osmosis system is acceptable as long as the water pressure remains within the allowable PSI as stated below. It is important to note that with many reverse osmosis systems, the pressure starts off high, but then it decreases as the water level of the reverse osmosis storage area drops. This must be considered when checking the water pressure coming into the unit.
- Connect a vertical or horizontal 1/2" (1.2 cm) to 1 1/4" (3.2 cm) COLD water line near water area.
- Run water line through the floor, back, or side wall. Tubing should lay flat on floor underneath the unit. Clamp tubing to wall or floor.
- Water pressure must be greater than 20 psi and less than 120 psi on non-dispensers and greater than 35 psi and less than 120 psi on dispensers.

# General Information

- Most of the unit's weight is at the top. Extra care is needed when moving the unit to prevent tipping.
- Do Not remove protective film until unit is in operating position.
- All four leveling legs must contact the floor to support and stabilize the full weight.
- Do not drop unit.
- Remove exterior shipping materials prior to moving unit into home.
- Use two or more people to move and install unit. Failure to follow this instruction can result in back or other injury.
- To avoid personal injury, wear gloves when performing any installation procedure and wear eye protection when cutting metal straps.


### TIP OVER HAZARD

Appliance is top heavy and tips easily when not completely installed. Keep doors closed until appliance is completely installed and secured per installation instructions. Use two or more people to move and install appliance. Failure to do so can result in death or serious injury.


### Unpacking unit

- 1. Remove top and bottom strap.
- 2. Remove top cap.
- Cut carton rear approximately 1/4" (0.6 cm) to 1" (2.5 cm) from right corner with a utility knife extended 1/4" (0.6 cm).
- Remove carton and exterior packaging. Save cardboard shipping material to protect floor surface when installing unit. Remove anti-tip board, kickplate and door trim pieces (DF models) from rear of unit.

### Moving Unit

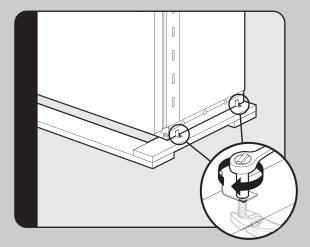


Remove shipping brackets from skid by removing 4 bolts (2 on each side) with a 1/2" deep-well socket wench and a pair of pliers. Note: Tilting unit is not required to remove shipping brackets.

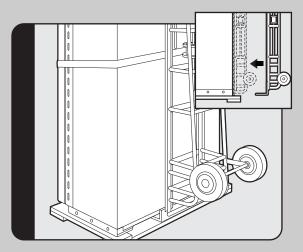


Slip cart between unit and skid. Remove unit from skid. Note: Use excess packaging to protect decorative trim; also, verify that leveling legs are up (0" adjustment).


## Installation

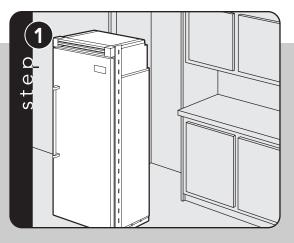


Place unit in front of cutout.

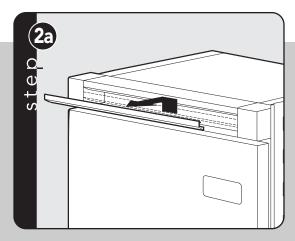


(Professional) Lift center grille louver up and pull out.

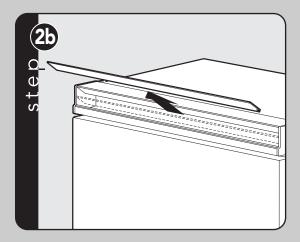

(Designer) Pull the center grille louver up at an angle and pull out.

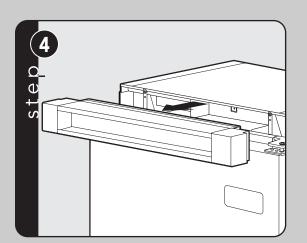


Remove grille assembly.

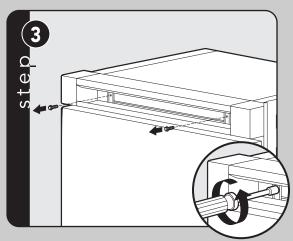


Using an 8" magnetic nut driver, remove the two 1/4" screws.

## Hinge Adjustment

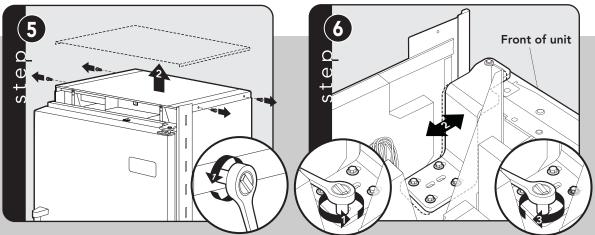


Remove four side screws and remove unit top.


Loosen the four hinge screws. Adjust door. Retighten four hinge screws.

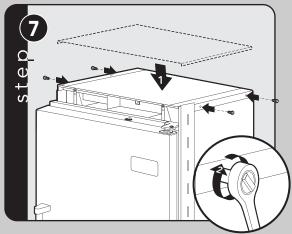


Replace unit top. Replace four side screws.

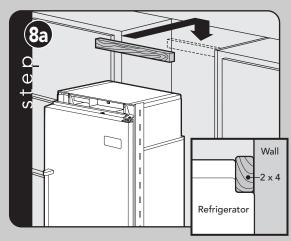


Attach one 2x4 to wall stud (refer to dimensions page for exact location).

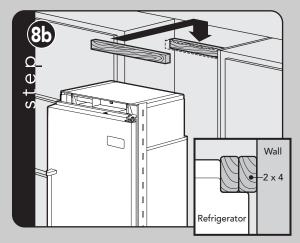


If needed, depending on cabinet and depth, attach second 2x4 to first 2x4.

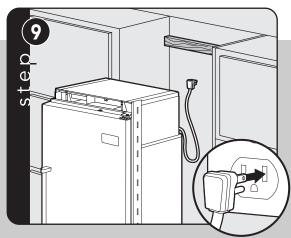


Plug in power cord to verify operation. Note: Make sure power switch and showroom switch are in the "On" Position.

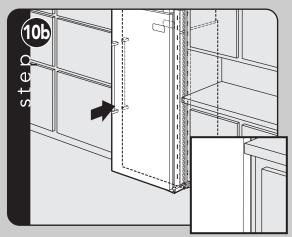


Carefully move unit until semi flush with cabinet (depending on unit).

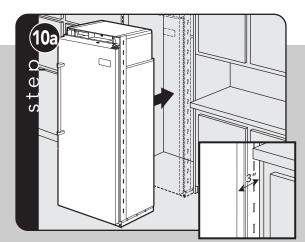


Place unit within 3" of being flush with cabinets. Note: To avoid cabinet damage, place cardboard between cabinets and unit. When moving unit, do not crimp, kink or crush water supply line.

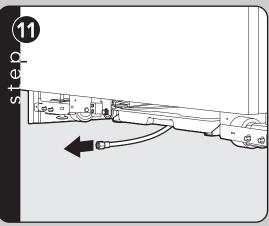


Pull supply tubing forward under unit. Note: DO NOT use plastic water lines.

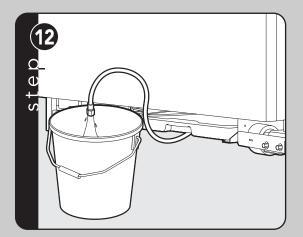


Flush water line by running two quarts of water into a bucket. Turn water off

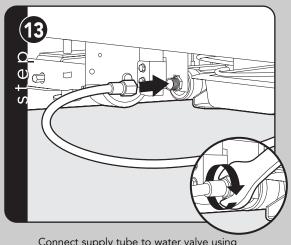


Connect supply tube to water valve using a 1/2" wrench. Note: DO NOT overtighten.

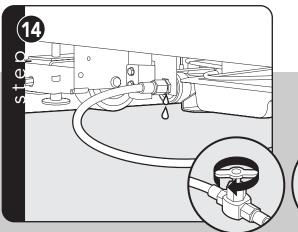

Turn on water supply and check for leaks.

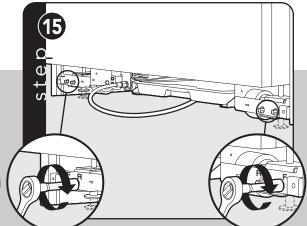


Lift unit off rollers to desired height and level unit using a 5/16" head wrench. Note: DO NOT use an electric device. Overtightening can cause damage.

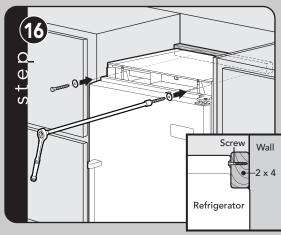



Attach positive secure self-tapping bolts to 2x4 using a 22" extension.


## Kickplate Installation

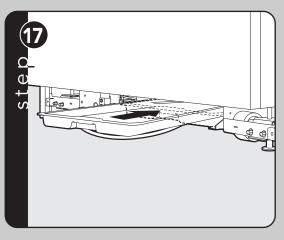

 Verify that drain pan is installed and aligned.

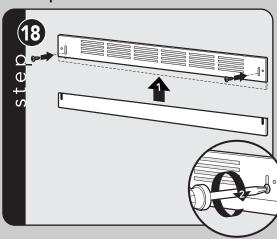




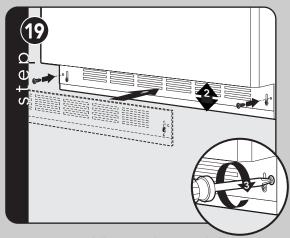



Using a Phillips screwdriver, attach the kickplate to the unit and adjust to desired height.

# Door Stop Adjustment

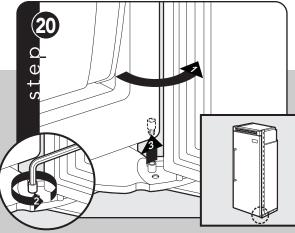


 Open refrigerator door so door stop and shoulder screw are accessible. Note: Shoulder screw should be in 110P door opening position.

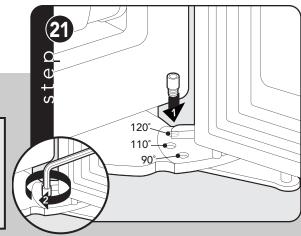





## Final Installation

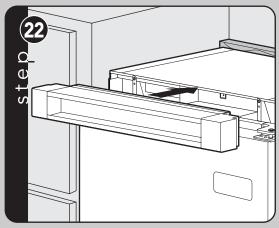


Replace top air grille.

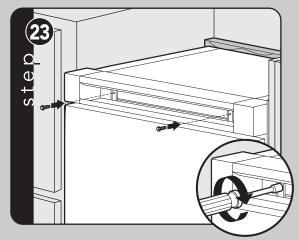


Using an 8"magnetic nut driver, replace the two 1/4" screws.

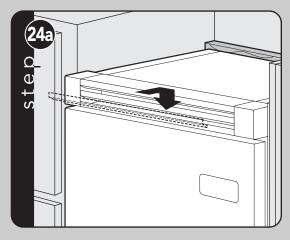


(Professional) Replace the center grille louver.

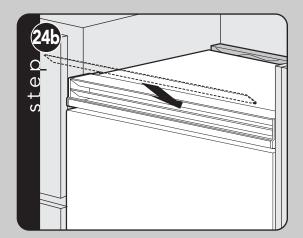

(Designer) Replace the center grille louver.

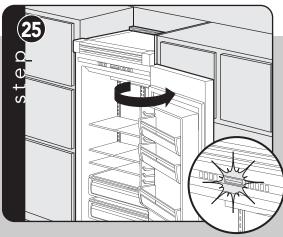



Open door. Display should flash.

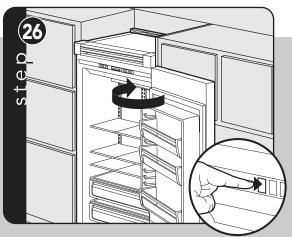

Press "ACTIVATE CONTROLS" button pad and close door. Note: There is a 6 minute delay before the unit starts.

# Performance Checklist

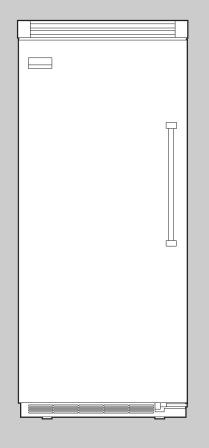

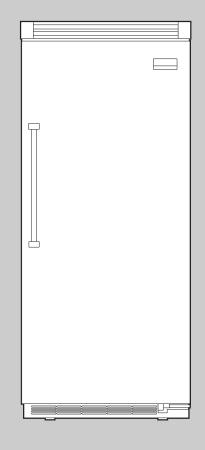

Uverify cabinet size.

- Uverify electrical supply and water supply (if applicable).
- Install anti-tip device(s) and verify unit is secure.
- Position unit in cutout, level at desired height, and secure unit.
- Plug-in unit and verify operation.
- Connect water supply (if applicable).
  - Verify icemaker fill tube is properly inserted.
  - Verify icemaker bailarm is down.
  - Verify dispenser operation (if applicable).

- Align/square door(s).
- Verify drain pan is properly installed and there are no leaks in water connection.
- Install kickplate.
- Remove internal packaging and labels and wipe unit down.

#### Installer's information:

Installer's Name:\_\_\_\_\_

 
Installer's Company:\_\_\_

Date: \_


# Verify Operations

## **Control Panels**

All Refrigerator




All Freezer

 

- 1. Press "Display On" or "Activate Controls" pad
- 2. Verify unit is not in Sabbath Mode

#### If in Sabbath Mode:

 A. The Sabbath Mode will disable the interior lights, display (except 3 blue squares) and alarm. (See picture below for visual indication of Sabbath Mode)




#### To exit the Sabbath Mode:

- B. Press & Hold "Display On" or "Activate Controls" and then "Display Off" for 3 seconds. (The control will beep 3 times to alert the user the Sabbath Mode has been exited)
- 3. Verify unit is not in Showroom Mode

#### If in Showroom Mode:

 A. The Showroom Mode will disable the refrigerator system but all other functions are normal. These include lights and control. (See picture below for visual indication of Showroom Mode)



#### To exit Showroom Mode:

- B. Press & Hold "Display On" or "Activate Controls"; while holding, press and hold "Higher Temp" and "Alarm Off" together. (The control will beep 3 times to alert the user that Showroom Mode has been exited)
- 4. Press "Max Frz" & "Display Off" at the same time and hold until beeps (force start compressor).
- 5. All models need to be set at the 5th bar for Refrigerator & Freezer factory setting.

# Service & Registration

### Service & Parts

Only authorized replacement parts may be used in performing service on the appliance. Do not repair or replace any part of the appliance unless specifically recommended in the manual. All other servicing should be referred to a qualified technician.

Record the following information indicated below. You will need it if service is ever required. The serial number and model number for your appliance are located on the identification plate mounted on the bottom left side of the door opening.

Model Number

Serial Number

Date of Purchase

Date Installed

Dealer's Name

Address



Viking Range Corporation

111 Front Street

Greenwood, Mississippi 38930 USA

(662) 455-1200

For product information,

call 1-888-VIKING1 (845-4641)

or visit the Viking Web site at

www.vikingrange.com