


RANGE MODEL: ER30D

dacor
The Life of the Kitchen.®

Backguard
AERB30 -D6 -D9

**INSTALLATION
INSTRUCTIONS**

 DANGER: Electric shock and explosion hazard! Before installation, turn off power at the circuit breaker or fuse box and shut off the gas supply valve.

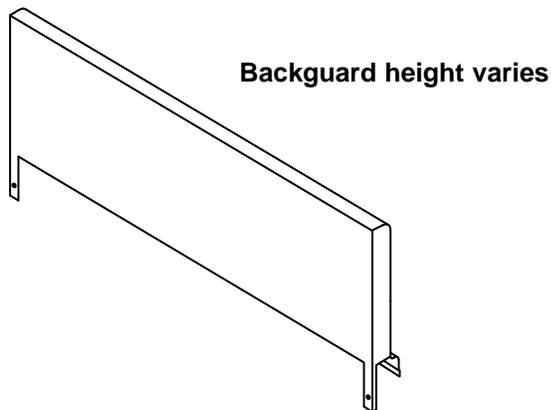

Instructions:

STEP 1: Disconnect power to the range at the circuit breaker or fuse box. Turn off the gas at the gas supply valve.

STEP 2: Slide the range out from the cabinet.


STEP 3: Remove the grates.

 WARNING: Do not disassemble the range until it has cooled.


STEP 4: Remove and retain the three (3) screws on the front of the existing backguard.

STEP 5: Remove the two (2) top screws on the back of the side panels.

STEP 6: Remove the existing backguard.

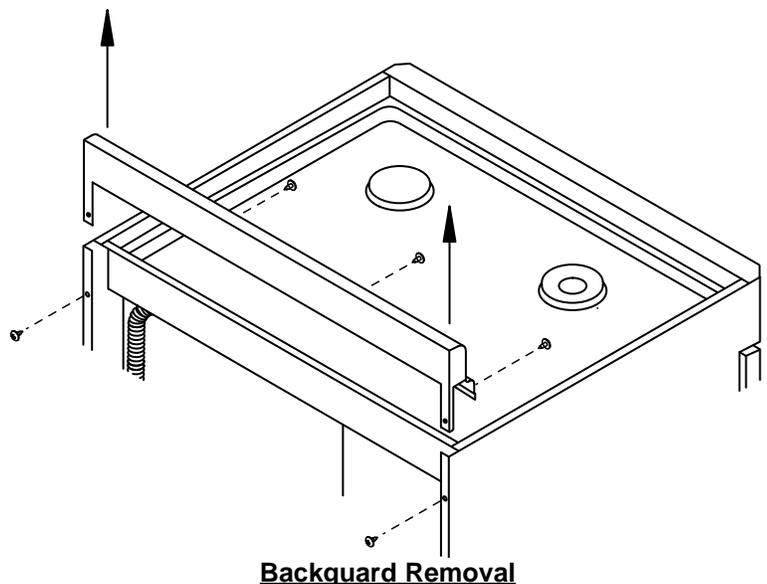

- STEP 7:** Remove the protective plastic cover from the new backguard.
- STEP 8:** Place the new backguard over the back of the range.
- STEP 9:** Fasten the backguard in place with the three (3) existing chrome plated screws.
- STEP 10:** Tighten the two (2) top screws on the back of the side panels.
- STEP 11:** Reinstall the grates.
- STEP 12:** Turn on the gas at the gas supply valve. Turn on power to the range at the circuit breaker or fuse box.

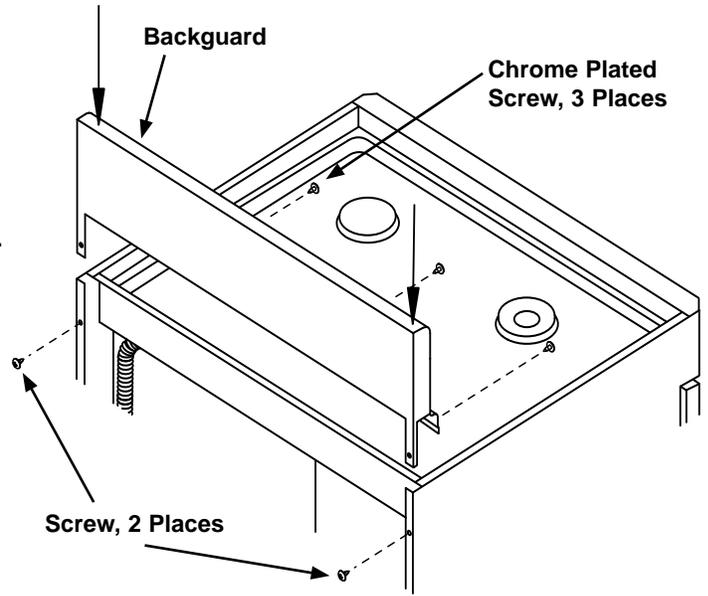

dacor[®]
The Life of the Kitchen.[®]