

ER30D/ER30DSR

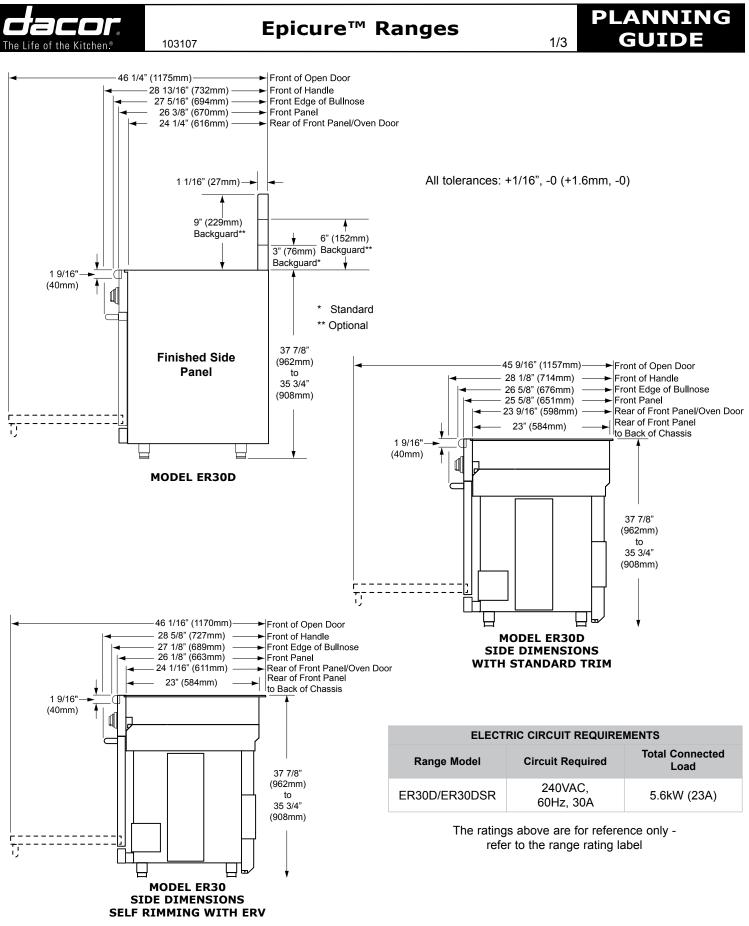

Web: http://www.Dacor.com Corporate Phone: 800-793-0093


5.7

ER30D/ER30DSR

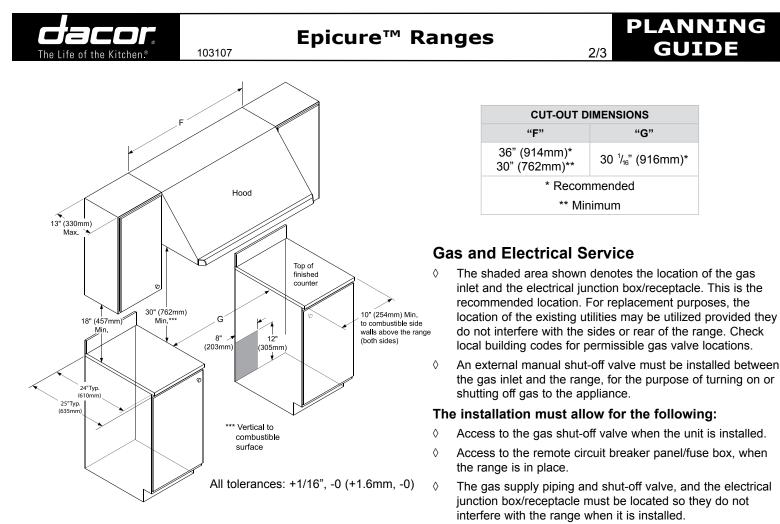


CABINET CUT-OUT DIMENSIONS

The junction box and gas shut off valve must be located so that the range can be pulled out for service while the appliance remains connected.

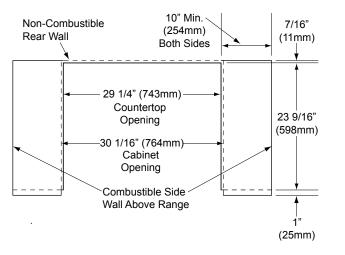


CABINET CUT-OUT DIMENSIONS SELF RIMMING INSTALLATION

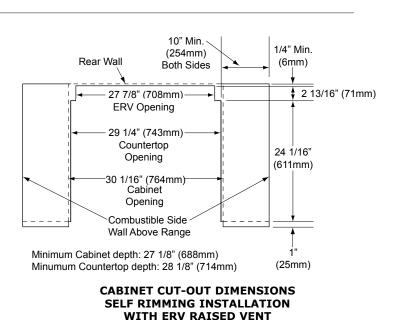

Web: http://www.Dacor.com Corporate Phone: 800-793-0093 Specifications are subject to change without notice. See installation instructions for additional details. **5.8**

ER30D/ER30DSR



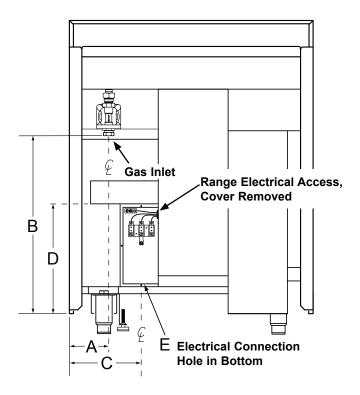

BACK OF RANGE

GAS - ELECTRICAL ACCESS DIMENSIONS				
" A "	"B"	"C"	"D"	"E"
4 7/8"	21 3/4"	8 5/8"	10 3/16"	7/8"*
(124mm)	(552mm)	(219mm)	(259mm)	(22mm)

* The hole size can be increased to 1 1/8" by removing the conduit bracket inside the range electrical access box.

GAS SUPPLY PRESSURE REQUIREMENTS				
Gas Type	Manifold Pressure	Minimum Gas Supply Pressure		
Natural Gas	5" Water Column	6" Water Column		
Petroleum (LP)	10" Water Column	11" Water Column		