Dishwashers

1 Electrolux

EWDW6505G S, EWDW6505G W, EWDW6505G B

Featuring Wave-Touch™ Electronic Controls





Wave-Touch™ Controls

Features fully integrated Wave-Touch™ controls. One simple touch and the control panel activates. Includes 9 wash cycles and 5 dishcare options to make it a most versatile dishwasher.



Quietest in its Class*

So quiet you can run it whenever you want and no one will notice. Tested to 45 dBA sound level.



Sure-2-Fit™ Racking System

The most versatile dishware racking system there's a perfect place for over 180 items, from chopsticks to stockpots to stemware. There's also an adjustable/removable top rack for the utmost flexibility.



Largest Usable Capacity


Largest usable capacity** in its class so all of your dinner party dishware fits.

NERGY STAR®	Yes
Sabbath Mode (Star-K® Approved for Storage)	Yes
Features	
Stainless Steel Interior	Yes
Signature Soft-Arc Door and Handle Design	Yes
Luxury-Hold™ Door	Yes
Wave-Touch™ Electronic Controls	Yes
Fully Integrated Control Panel Tall Tub Design	Yes Yes
Smart Soil Sensor™	Yes
Luxury-Quiet™ Sound Package	Yes
Wash Levels	5
AquaLux™ Wash System	Yes
Luxury-Dry™ Power Dry System	Yes
Adjustable Rinse Aid Dispenser with Indicator	Yes
Cycles	
Auto Wash	Yes
Heavy	Yes
Normal	Yes
Favorite	Yes
Quick	Yes
Delicate	Yes
Eco Wash	Yes
Perfect Stemware™	Yes
Rinse Only	Yes
Options	
Hi-Temp. Wash	Yes
Hi/Low Pressure	Yes
Air Dry	Yes
NSF® Certified Sanitize Option	Yes
Delay Start (Hours)	30 min. – 24 hrs.
Rack System	
Sure-2-Fit™ Nylon Rack System	Yes
Luxury-Glide™ Nylon Upper Rack –	
Adjustable Height	Yes
Cup Shelf/Stemware Holder	2/Yes
Cup Clips Perfect Stemware™ Holder	Yes
Fold-Down Tines	4 Rows
Rack Handle	Yes
Versa-Tray™	Yes
Luxury-Glide™ Nylon Lower Rack –	
Fold-Down Tines	6 Rows
Rack Handle	Yes
Knife Holder	Yes
Utility Tray/Shelf	Yes
Stemware/Champagne Glass Holders	4
Silverware Basket	3-Piece Split
Special Items Cover/Mesh Basket	Yes
Specifications	
Overall Exterior Dimensions –	
Height (Adjustable)	33-7/8" - 34-7/8"
Width	23-3/4"
Depth (to Center of Arc)	24-5/8"
(with 90° Door Open) Power Supply/Water Inlet Location	49-7/8" Middle Bottom Rea
Leveling Legs	Yes
Water Useage (Gallons) – Normal Cycle	4.9 – 8.5
Water Oseage (California Oycle Water Pressure (PSI)	15 – 120
Water Fressure (FSI)	120V/60Hz/15A
Voltage Rating	1.44
,	1.44
Voltage Rating	9
Voltage Rating Connected Load (kW Rating) @ 120 Volts [‡]	

^{*}Based on published MSRP and specifications.

Specifications subject to change



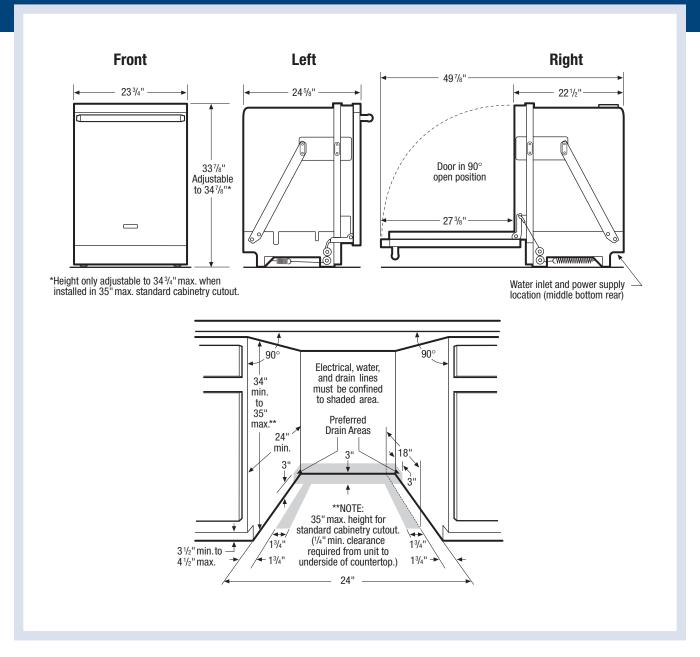

Built-In Dishwasher Specifications

- Product Weight 98 Lbs.
- Voltage Rating –120V/60Hz/15 Amps
- Connected Load (kW Rating) @ 120 Volts = 1.44kW (For use on adequately wired 120V, dedicated circuit having 2-wire service with a separate ground wire. Appliance must be grounded for safe operation.)
- Amps @ 120V = 9 Amps
- Always consult local and/or national electric & plumbing codes.
- Water Pressure Hot water line to dishwasher must provide between 15 and 120 pounds per square inch (psi).
- Make sure location has right drain, water and electrical outlets to make connections.
- Keep back free of drain, water & electrical supply.
- Electrical and water supplies should enter cabinet opening on floor, or through back or side walls, as shown in shaded areas.

USA • 250 Bobby Jones Expressway • Augusta, GA 30907 • 1-877-4electrolux (1-877-435-3287) • electroluxappliances.com

- Connections preferably located toward left side of dishwasher. Do not cross drain, water or electrical lines in front of motor, blower or frame.
- Minimum clearance of 1/4" required from unit to underside of countertop.
- Leveling legs supplied to adjust height. (Note: Height only adjustable to 34-3/4" max. when installed in 35" max. standard cabinetry cutout to allow for 1/4" min. clearance.)
- When installing in corner, allow 2" clearance between opened door and wall, to allow door to open.
- When installing at end of cabinet line, sides must be fully enclosed.
- Do not install unit under a cooktop, damage may occur.

Note: For planning purposes only. Refer to Product Installation Guide on the web at electroluxappliances.com for detailed instructions.





