


WC400SS Exploded View

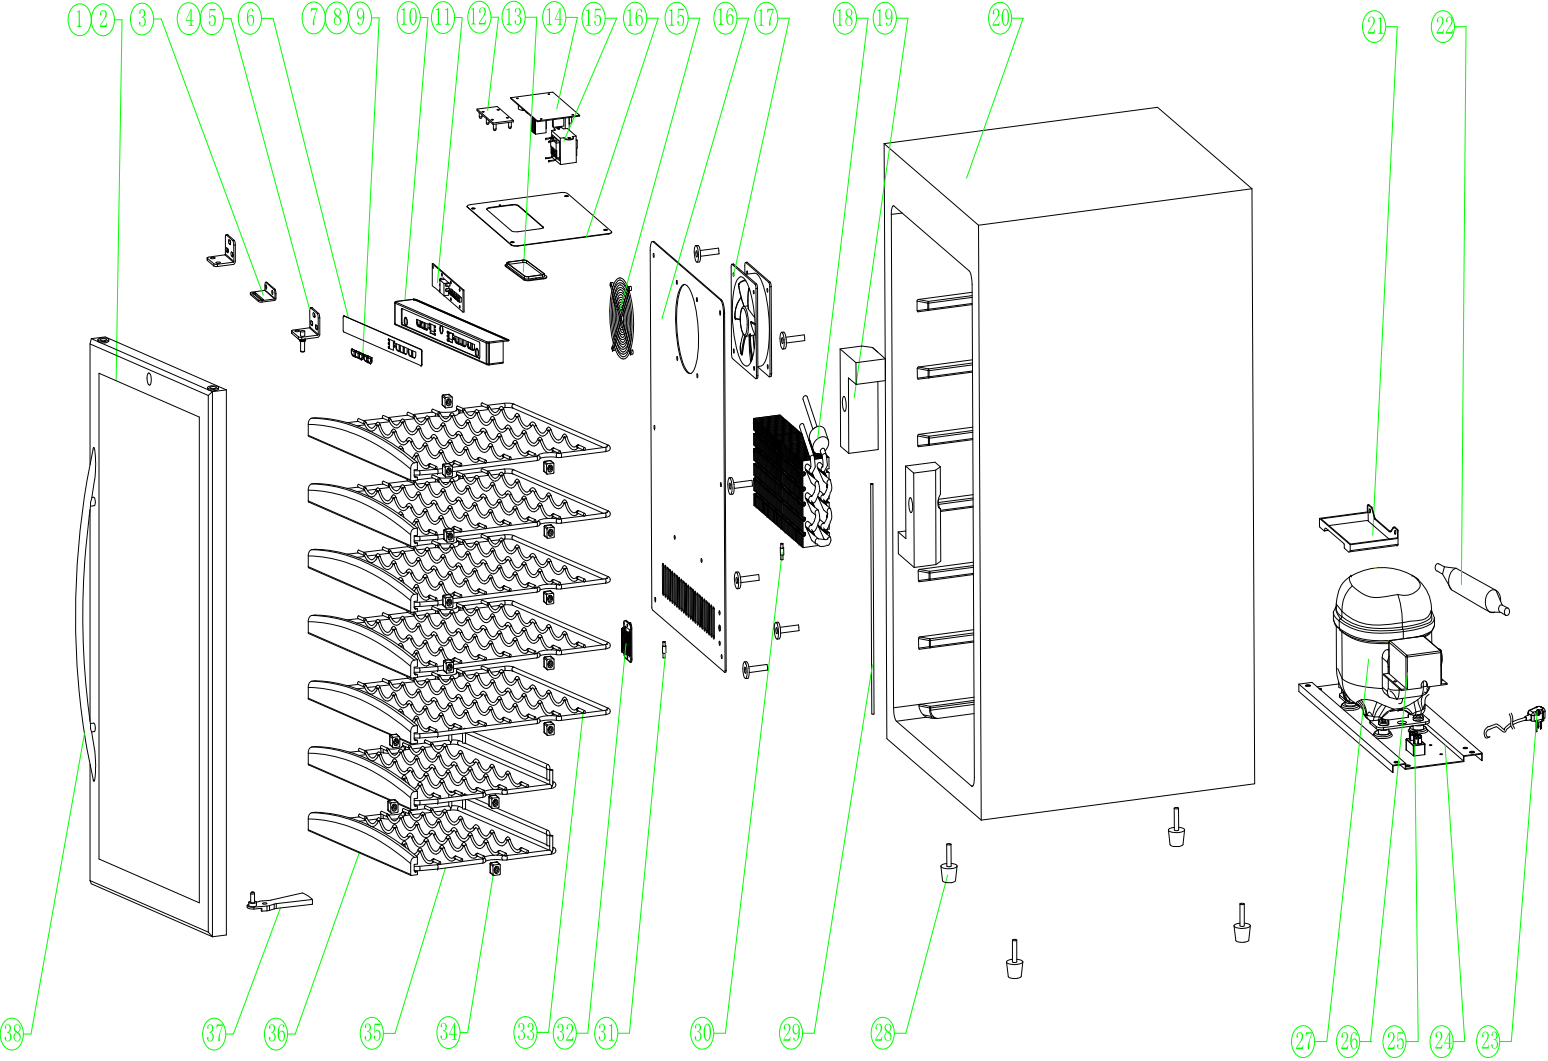

WC400SS Parts List

No.	Part No.	Description	Q'ty
1	DG23-1006.1	Glass Door	1
2	DG16-1006.1	Door Gasket	1
3	DG14-1005	Lock Piece	1
4	DG14-1003	Upper Door Hinge	2
5	DG14-502.1	Door Axle	1
6	DG20-1001	Control Panel Film	1
7	DG13-501	Left Button	2
8	DG13-503	Middle Button	1
9	DG13-502	Right Button	2
10	DG13-1006.1	Top Insert	1
11	DG3-1008.1	Display PCB	1
12	DG3-1001.1	LED Light	1
13	DG13-5	Light Cover	1
14	DG3-1008	Main PCB	1
15	DG6-3	Transformer	1
16	DG22-502	Top Cover	1
17	DG7-3	Evapoartor Fan Motor	1
18	DG12-1003	Evapoartor	1
19	DG18-1001	Foam	2
20	DG23-1066	Cabinet	1
21	DG13-120	Water Drip Tray	1
22	DG11-4	Dry Filter	1
23	DG2-1	Power Supply Cord	1
24	DG22-16	Compressor Base	1
25	DG11-2	Terminal	1
26	DG13-2	Junction Box	1
27	DG1-1002	Compressor	1
28	DG13-6.1	Leg	4
29	DG12-1005	Suction Pipe Assembly	1
30	DG8-8	Thermistor 1	1
31	DG8-501	Thermistor 2	1
32	DG13-511	Thermistor Supporter	1
33	DG15-1045	Large Wire Shelf	5
34	DG13-7	Plastic Post	14
35	DG15-1046	Small Wire Shelf	2
36	DG15-1042.1	Wood Insert	7
37	DG14-36	Lower Door Hinge	1
38	DG14-1029.1	Handle	1