

# SABBATH MODE: RANGES

## “How To” Instructions

### WHAT IS ‘SABBATH MODE’?

(For use on the Jewish Sabbath & Holidays)



For further assistance, guidelines for proper usage, and a complete list of models with the Sabbath feature, please visit the web at <http://www.star-k.org>

The Sabbath feature, which can only be used with baking only, sets the oven so that it remains on continuously. The oven temperature may be set higher or lower after setting the Sabbath feature. (The oven temperature adjustment feature should be used only during Jewish holidays.) The display, however, will not change and tones will not sound when a change occurs.

Once the oven is properly set for baking with the Sabbath feature active, the oven will remain on continuously until cancelled. This will override the factory preset 12 hour energy saving feature. If you need the oven light on during the Sabbath, press the **OVEN LIGHT** pad before activating the Sabbath feature. Once the oven light is turned on and the Sabbath feature is active, the oven light will remain on until the Sabbath feature is turned off. If the oven light needs to be off, be sure to turn the oven light off before activating the Sabbath feature.

# SABBATH MODE: ELECTRIC RANGE

## “How To” Instructions

### Model

### Steps

**FER300**  
**NE595R0**  
**NE595R1**  
**NE595N0**  
**NE597R0**  
**NE597N0**  
**FE710**

- 1. Press the BAKE pad** (The default temperature is 350 °F.)
- 2. Enter the temperature you want** (eg.375 °F, by using the number pad)
- 3. Press the START/SET pad**  
(The temperature display will start to change once the oven temperature reaches 150 °F)
- 4. Press the CLOCK and the TIMER ON/OFF pads at the same time for 3 seconds** (The display will show “Sab.”)  
Once “Sab” appears in the display, the oven control will no longer beep or display any further changes. You may change the oven temperature once baking has started. Remember that the oven control will no longer beep or display any further changes once you turn on the Sabbath feature.
- 5. You can turn the oven off at any time by pressing the CLEAR/OFF pad. This will turn only the oven off.**

**If you want to deactivate the Sabbath feature, hold down the CLOCK and TIMER ON/OFF pads at the same time for 3 seconds.** (“Sab” will disappear from the display.)

\*Do not attempt to activate any other programmable features except BAKE while the Sabbath feature is active. ONLY the following key pads will function correctly with the Sabbath feature: NUMBER, BAKE, START/SET and CLEAR/OFF. ALL OTHER KEYPADS should not be used once the Sabbath feature is activated.

# SABBATH MODE: GAS RANGE

## “How To” Instructions

Model	Steps
NX583 NX510 FX710 NX58F5300 NX58F5500 NX58H5600 NX58H5650 NX58F5700	<ol style="list-style-type: none"> <li><b>1. Position the oven rack in the desired location.</b></li> <li><b>2. Press the BAKE pad. The oven will beep every time a pad is pressed until the Sabbath function is activated.</b>                      The default temperature, <b>350°</b>, will blink on the display. If the default temperature is the desired cooking temperature, skip to step 4 or step 6.</li> <li><b>3. Press the number pads for the desired cooking temperature.</b></li> <li><b>4. Press the COOKING TIME pad.</b>                      The display will show - --</li> <li><b>5. Press the number pads for the desired cooking time.</b>                      The Start indicator will blink on the display. You can set the time to any length of time between 1 minute and 9 hours and 99 minutes.</li> <li><b>6. Press the START pad.</b></li> <li><b>7. Press and hold the CLOCK and TIMER ON/OFF pad at the same time for 3 seconds.</b>                      The display will show SAB. The oven signals, display LEDs, and all oven controls except the number, BAKE, COOKING TIME, START, and CLEAR/OFF pads will be deactivated. In approximately 20 seconds, the control panel will “click” and the oven will start the lighting and preheating process. After the oven reaches the selected cooking temperature, the oven will continue to cook at that temperature until the Cook Time has elapsed or the Sabbath function is canceled. The display will not count down the set cook time, but the oven will shut off at the end of the set time.</li> </ol>

# SABBATH MODE: SLIDE-IN RANGE

## “How To” Instructions

Model	Steps
<p>NE58F9500 NE58F9710 NE58H9950 NE58H9970 NX58H9500 NX58H9950</p>	<ol style="list-style-type: none"> <li><b>1. Press BAKE/CHEF BAKE</b> (The default temperature is 350 °F.)</li> <li><b>2. Enter the temperature you want</b> (e.g. 375 °F, by using the number pad)</li> <li><b>3. Press the OVEN START/SET</b> (The temperature display will start to change once the oven temperature reaches 150 °F)</li> <li><b>4. Press BAKE/CHEF BAKE and TOUCH TO WAKE-UP at the same time for 3 seconds.</b> The display will show “SAb.”  Once SAb appears in the display, the oven control will no longer beep or display any further changes. You may change the oven temperature once baking has started. Remember that the oven control will no longer beep or display any further changes once the Sabbath feature is active.</li> <li><b>5. You can turn the oven off at any time by pressing OVEN OFF.</b> This will turn only the oven off.</li> <li><b>6. If you want to deactivate the Sabbath feature, hold down BAKE/CHEF BAKE and TOUCH TO WAKE-UP at the same time for 3 seconds.</b> “Sab” will disappear from the display.</li> </ol> <p>*Do not attempt to activate any other program feature except BAKE while the Sabbath feature is active. ONLY the following key pads will function correctly with the Sabbath feature: NUMBER PAD, BAKE, OVEN START/SET and OVEN OFF. ALL OTHER KEYPADS should not be used once the Sabbath feature is activated.</p>