



ENGLISH

ESPAÑOL

# OWNER'S MANUAL AIR PURIFIER

Read this owner's manual thoroughly before operating the appliance and keep it handy for reference at all times.

Model name: AS401WWA1



MFL68181332  
Rev.03\_020817

[www.lg.com](http://www.lg.com)

Copyright © 2016 - 2017 LG Electronics Inc. All Rights Reserved.





2 TABLE OF CONTENTS

---

# TABLE OF CONTENTS

## 3 PRODUCT FEATURES

---

## 4 SAFETY INSTRUCTIONS

---

## 8 PRODUCT OVERVIEW

---

- 8 Front
- 8 Back
- 9 Control Panel and Display
- 10 Multi-Stage Filtration System

## 11 INSTALLATION

---

- 11 Choosing the Proper Location
- 11 Tips for Using the Air Purifier
- 12 Initial Installation of Filter

## 13 OPERATION

---

- 13 Air Purification
- 13 Lighting
- 14 PM Indicator Display
- 14 Air Quality Indicator Light
- 16 Sleep Timer
- 17 Lock Function
- 18 Filter Reset

## 19 MAINTENANCE

---

- 19 Cleaning the Filters
- 21 Filter Maintenance Schedule
- 21 Cleaning the Exterior
- 22 Cleaning the Sensor
- 23 Storing the Product

## 24 TROUBLESHOOTING

---

## 26 SPECIFICATIONS

---

## 27 WARRANTY

---





# PRODUCT FEATURES

## SMART AIR QUALITY SYSTEM

The air quality display senses and shows indoor particulate levels in real time. It can sense fine particulate matter as small as 1.0 micron.

## MULTI-STAGE FILTRATION SYSTEM

The combination of the washable pre-filter, PuriCare main filter, and deodorizing filter provide fresh indoor air by removing invisible air pollutants. Remove irritants ranging from pet hair and pollen to tobacco smoke odors and VOCs (volatile organic compounds).

## LODECIBEL QUIET OPERATION

In the sleep mode, the air purifier runs at only 20 dB and can be scheduled to shut off automatically, making falling asleep easy.

## PuriCare MAIN FILTER

The **PuriCare** Main Filter captures particles as small as 0.3 microns. This particulate matter can include pollen and dust.





## 4 SAFETY INSTRUCTIONS

# SAFETY INSTRUCTIONS

### **READ AND SAVE THESE INSTRUCTIONS**

**Your safety and the safety of others are very important.**

We have provided many important safety messages in this manual and on the appliance. Always read and follow all safety messages.



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or injure you or others. All safety messages will follow the safety alert symbol and either the word **WARNING** or **CAUTION**.

These words mean:



### **WARNING**

If you do not follow instructions, it could result in death or serious injury.



### **CAUTION**

If you do not follow instructions, it could result in minor or moderate injury or damage to the product.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what may happen if the instructions are not followed.

### **IMPORTANT SAFETY INSTRUCTIONS**



### **WARNING**

To reduce the risk of explosion, fire, death, electric shock, scalding, or injury to persons when using this appliance, follow basic precautions, including the following:

#### Installation

- Do not modify or extend the power cord.
- Do not plug the product into an outlet which is loose or damaged.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- Do not use the product in locations where it will be exposed to high humidity, moisture, or oil splatter such as in the bathroom, laundry, or near the stove.
- Connect the product to a properly rated, protected, and sized power circuit to avoid electrical overload.
- In the event of a gas leak (propane gas, LP gas, etc.) do not operate this or any other appliance. Open a window or door to ventilate the area immediately.
- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- If you detect a strange sound, a chemical or burning smell, or smoke coming from the product, unplug it immediately and contact an LG Electronics customer information center.

- Be careful not to allow the power cord to be pinched, crushed or damaged under heavy objects.
- Do not install the product in direct sunlight, near heat sources such as furnaces or ovens, near fireplaces or other open flames, or in wet or humid locations.
- Keep packing materials out of the reach of children. Packaging material can be dangerous for children. There is a risk of suffocation.
- Store and install the product where it will not be exposed to temperatures below freezing or exposed to outdoor weather conditions.

## Operation

Read all instructions before using the product and save these instructions.

- Use this product only for its intended purpose.
- Do not tamper with controls.
- Do not allow children to play on or with the product. Close supervision of children is necessary when the product is used near children.
- Repair or immediately replace all power cords that have become damaged. Do not use a cord that shows cracks or abrasion damage along its length or at either end.
- Do not grasp the power cord or touch the appliance controls with wet hands.
- Do not modify or extend the power cord.
- If the product has been submerged, contact LG Electronics customer information center for instructions before resuming use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If the electrical supply cord is damaged, it must only be replaced by the manufacturer or its service agent or a similar qualified person in order to avoid a hazard.
- Never unplug the appliance by pulling on the power cord. Always grip the plug firmly and pull straight out from the outlet.
- Do not place obstacles at the air suction port or discharge port of the product.
- Do not move the product while it is under operation.
- Do not put hands, glue or metal objects near the air suction port or discharge port of the product.
- Do not install the product in locations with excessive industrial oil smoke or metallic dust. Doing so may result in fire or product failure.
- Use only the handle to move the product.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this owner's manual. Use only authorized factory parts.
- Disconnect the appliance from the power supply before cleaning and attempting any user maintenance. Turning the controls to the OFF position does not disconnect the appliance from the power supply.



## 6 SAFETY INSTRUCTIONS

---

- Do not disassemble or repair the appliance by yourself.
- Avoid any impact to the front panel of the appliance.

### California Safe Drinking Water and Toxic Enforcement Act

**WARNING:** This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. *Wash hands after handling.*

### CAUTION

To reduce the risk of injury to persons, malfunction, or damage to the product or property when using the appliance, follow basic safety precautions, including the following:

### Installation

- Avoid installing within 3 1/4 ft (1 m) of any TV or audio equipment.
- Do not use this appliance as a substitute for a ventilation fan or hood for a range.
- Unplug the appliance and wait for the fan to stop rotating before servicing or cleaning. The fan rotates at a high speed and may cause injury.
- Do not use the product to remove toxic gas such as carbon monoxide.
- Install the product on a firm and level surface. Avoid dropping or impacts to the product.
- Provide clearance of at least 5 ft (1.5 m) from lighting appliances and at least 4 in. (10 cm) from walls. Failure to do so may result in product discoloration or loss of cleaning performance.
- Use only 115 V.
- This appliance is not designed for maritime use or for mobile installations such as in RVs, trailers, or aircraft.

### Operation

- This product is not intended for use in preserving animals/plants, precision equipment, art pieces, etc. Use this appliance only for its intended purpose.
- Do not use solvents or strong detergents to clean the product. Doing so may result in fire and product deformation.
- Unplug the product if it will remain unused for a long time.
- Do not place objects on or step on the Air Purifier.
- Insert all filters (including the pre-filter) before operating, and clean the filter regularly following the schedule suggested in this owner's manual. Failure to do so may shorten the effective life of the filter.
- Remove the tie from the power cord before use.



---

SAFETY INSTRUCTIONS 7

- Allow the pre-filter to dry completely, out of direct sunlight, after washing. Do not operate appliance with a damp filter. Do not operate appliance without pre-filter.
- Do not insert inflammables inside the product.
- Do not place the appliance where it can come into contact with the moisture from a humidifier.
- Do not open the rear panel while the product is in operation.

ENGLISH



 


ENGLISH


8 PRODUCT OVERVIEW

# PRODUCT OVERVIEW

## Front

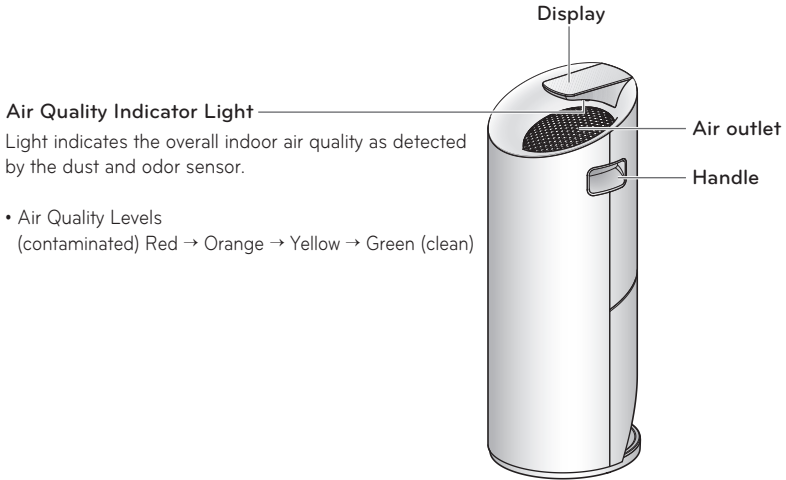

## Back

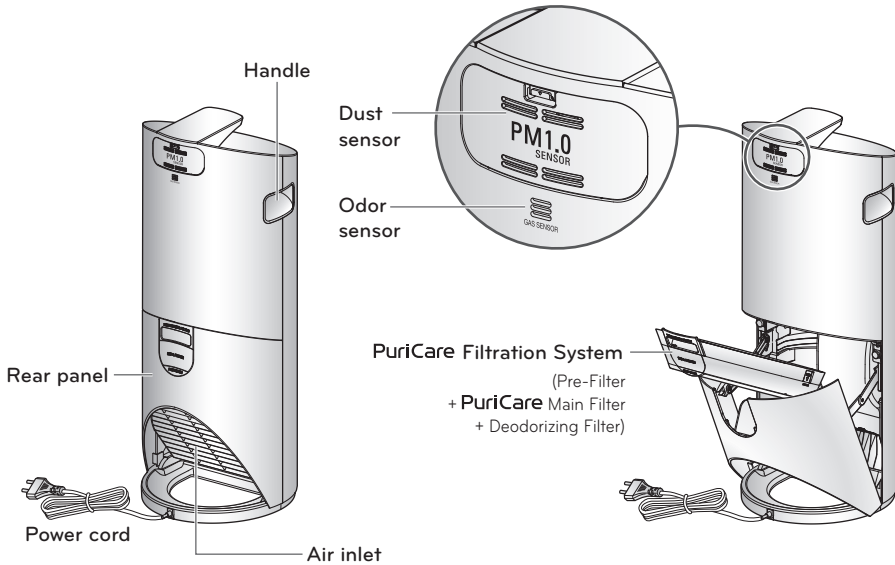 


\* The shape of power cord can be different by country.





## Control Panel and Display

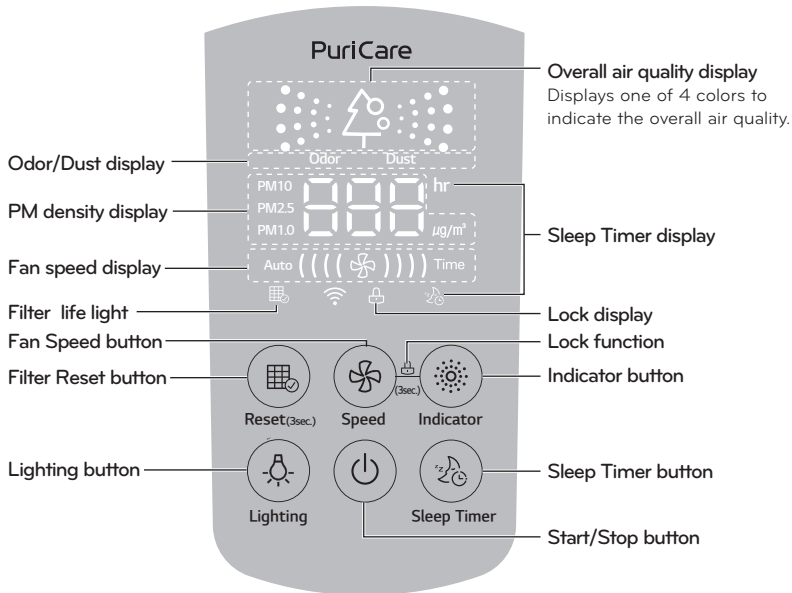 

<b>Start/Stop button</b>	Starts and stops the product.
<b>Fan Speed button</b>	Adjusts the speed and volume of the fan.
<b>Indicator button</b>	Toggles between PM density results for different dust particle sizes.
<b>Sleep Timer button</b>	Sets the appliance to sleep mode and automatically turns it off after the selected amount of time.
<b>Filter Reset button</b>	Resets operating time after replacing the filter.
<b>Lock function</b>	Locks control panel so product won't be accidentally turned off or settings changed by children or others.
<b>Filter Life light</b>	Turns on when filter needs to be replaced (after 4000 hours of operation). * After replacing the filter, use the Filter Reset function to reset the operating time.
<b>PM density display</b>	Shows the density of dust for three different particle sizes.
<b>Lighting button</b>	Turn the air quality indicator light on/off.

### \* Guide to PM (Particulate Matter)

 
- PM10: dust particle size is equal or below 10  $\mu\text{m}$   
(Sources include nearby fires and dust stirred up by vehicles on roads.)
- PM2.5: dust particle size is equal or below 2.5  $\mu\text{m}$   
(Sources include exhaust from motor vehicles or power plants, wood burning fires, and some industrial processes.)
- PM1.0: dust particle size is equal or below 1.0  $\mu\text{m}$  (Sources include cigarette smoke and smog.)



ENGLISH

10 PRODUCT OVERVIEW

## Multi-Stage PuriCare Filtration System

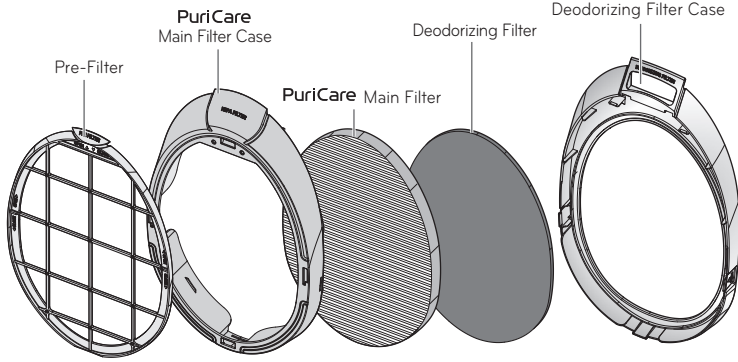

Filter name	Function
Pre-Filter	Filters out large particles to prolong the lifespan of the <b>PuriCare Main Filter</b> .
<b>PuriCare Main Filter</b>	Removes fine particles such as pollen, cigarette smoke (particulates), micro dust motes and animal fur.
Deodorizing Filter	Comprehensively removes odors from cigarette smoke, garbage, pets, strong acids or bases (vinegar, bleach).
※ The life-expectancy of the filters depends on the usage environment of the air purifier. ※ Do not discard the filter case. Replacement filters do not include a new case.	

**! NOTE**

- The effective life of the filters varies depending on the operational environment.
- The composition of filters can vary by model.
- Replacement filters can be purchased from a nearby LG service center or online through LG.com.
- Use only the filters designed and approved by the manufacturer for use with this product.





# INSTALLATION

## Choosing the Proper Location

- Place within reach of a power outlet.
- Make sure air inlet and outlet are free from obstacles.
- Place on a level, stable surface where air circulates freely.

### WARNING

This product is not designed for maritime use or for mobile installations such as in RVs, trailers, or aircraft. Failure to follow this warning can result in product failure.

### WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

### WARNING

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## Tips for Using the Air Purifier

- Avoid using the air purifier while cooking strong-smelling or fried foods such as fish.
  - The vaporized oil from the cooking may affect the performance and life-expectancy of the filters and the odors may cling to the filter.
- Do not place the air purifier closer than 3 1/4 ft (1 m) to the bed.
  - The fan speed in sleep mode is low, but it could cause an unwanted draft.
- Do not place the air purifier in a corner.
  - Avoid surrounding the appliance with furniture and electronic equipment or crowding it into a corner. The air purifier works best when air is free to circulate around it.
- Please use the table or on the floor.

 


## 12 INSTALLATION


### Initial Installation of Filter

Remove the packaging before installing the filter.


1. Pull to open the rear panel.

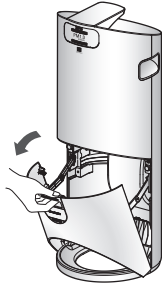

 
2. Remove the filter from the appliance.

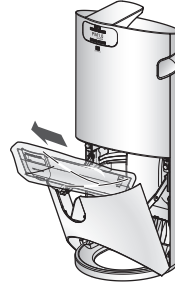

 
3. Remove the filter from its packaging.

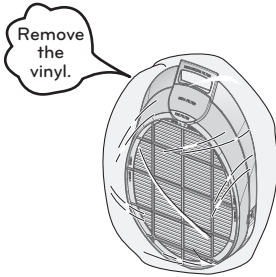

 
4. Insert the filters with the deodorizing filter facing up. Make sure to slide the tabs on the top of the handle into the grooves at the top of the rear panel.

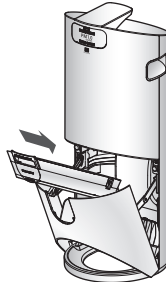

 5. Close the rear panel.

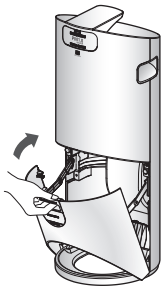

 6. Place the air purifier on a stable, level surface with a clear area around it for air to circulate.

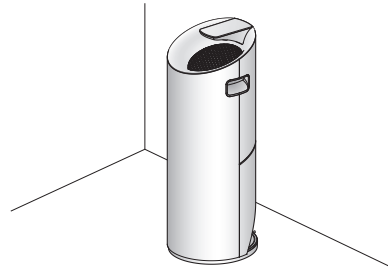

### CAUTION



Remove packaging from the filter before use or the product will not be able to circulate air.

 


# OPERATION

## Air Purification

The air purifier cleans and refreshes indoor air.

1. Press the  button to turn on the air purifier.
  - A chime sounds and the PM density display and the fan speed display turn on.
2. Press the  Speed button to select the desired fan speed.

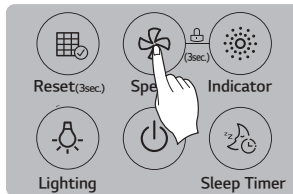

- Press the button repeatedly to toggle through the settings: Auto → Low → Medium → High → Turbo → Auto.
- The default mode is AUTO.  
(The AUTO mode controls fan speed based on the air quality.)




- The sensor takes 30 seconds on initial startup to stabilize and prepare an air quality level reading. After 30 seconds, the indoor air quality and PM density levels are displayed.

### Indoor Air Quality Color Range

 (contaminated) red → orange → yellow → green (clean)

## Lighting


Press the Lighting button to turn the air quality indicator light on/off.

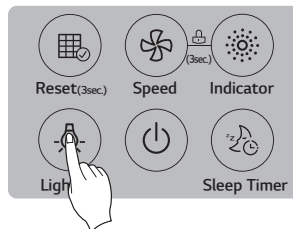




## 14 OPERATION

## PM Indicator Display

 - Press the  Indicator button to check the density of PM10/PM2.5/PM1.0.
  - Pressing the button repeatedly toggles through to check the density of PM10 → PM2.5 → PM1.0 in turn. The selected density displays for 10 seconds before the display reverts to the highest measured PM (particulate matter) level.

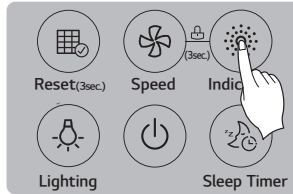

- Check the dust particle size LED indicators.
  - PM density is displayed based on the dust density result with the highest contamination level.  
For example, if PM10 density is 100 (normal), PM2.5 is 50 (bad), and PM1.0 is 30 (normal), the value for PM2.5 is displayed for PM density.

## Air Quality Indicator Light

Overall indoor air quality is displayed as one of four colors depending on the contamination level of PM10, PM2.5, PM1.0, and odors.

 
(contaminated) red → orange → yellow → green (clean)

- The color that the air quality indicator light displays is based on the worst level among PM10, PM2.5, PM1.0, and odor.

### Indoor Air Quality Levels

Overall air quality	Status	Dust density (unit $\mu\text{g}/\text{m}^3$ )			Odor density
		PM 10	PM 2.5	PM 1.0	Odor
Red	Very Bad	Equal or above 255	Equal or above 56	Equal or above 56	Strong ↑
Orange	Bad	155~254	36~55	36~55	
Yellow	Normal	55~154	13~35	13~35	Weak
Green	Good	0~54	0~12	0~12	

\* PM density ranges from 8 to 999 in increments of 1. PM density values follow the data sheets provided by the sensor supplier.

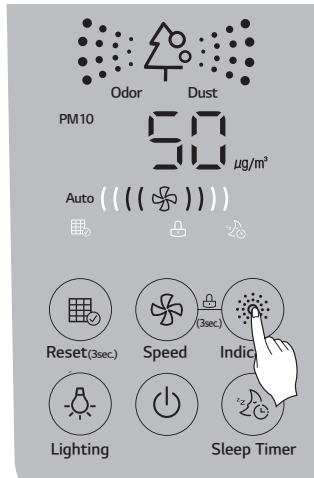

- In the example above, the PM1.0 density displays at 50  $\mu\text{g}/\text{m}^3$  (a bad or orange level) and the dust particle size LED indicator for PM1.0 is lit. This indicates that the PM1.0 level is higher than the PM10 or PM2.5 levels. If all the PM density levels are normal/good and the air quality indicator light is orange/red, the level of odors is very high.

#### NOTE

- PM10 and PM2.5 density levels follow standards provided by the U.S. EPA (Environmental Protection Agency).
  - The overall air quality level displayed on the product may differ from the level announced by the EPA.
- The PM density level for PM1.0 is displayed in the same manner as the PM density level for PM2.5 (using standards developed by LG Electronics).
- The displayed density of PM10 / PM2.5 could differ from the forecast of the EPA and from other measurement devices or products.
  - Indicated dust concentration values can differ from each other depending on the differences in dust measuring methods and also from real dust concentration levels.
  - The assessment of dust density was made against dust used for LG Electronics standards tests.
- The use of products which generate steam and micro particles (humidifiers, cooling devices, sprayers, etc.) can change the micro dust density.
- Because the indoor air quality display shows the overall dust and odor level, it could differ from the density value of PM10, PM2.5, and PM1.0.
- Even in the same space, the PM10 density value could differ from other products due to air circulation.
- The displayed PM density value could change depending on the installation environment (including the presence of sofas, beds, carpets, vacuum cleaners, humidity, smoke, oils, and other factors).
- The displayed density value of PM10/PM2.5/PM1.0 could change depending on the surrounding environment (construction site, roadside, factory, etc.)
- The density of micro dust could be higher near exit doors, windows, and vents or anywhere where outside air enters.
- Do not clean the sensor with anything but water. Doing so may cause product failure.







## 16 OPERATION

 
## Sleep Timer

Use this to set the air purifier to sleep mode before it turns off automatically.

1. Press the  button to turn on the air purifier.
2. Press the  Sleep Timer set the amount of time in sleep mode until the air purifier automatically turns off.
  - The amount of time in sleep mode can be set by pressing Sleep Timer repeatedly to toggle through the options: 2 hours, 4 hours, 8 hours, 12 hours, disabled (reverts to normal display).
  - For example, if set for two hours the product operates for two hours in sleep mode then automatically turns off.

Once Sleep Timer is set, only the Sleep Timer LED is lighted. All other lights on the product, including the air quality light, are turned off. The fan is maintained at a low speed to keep noise to a minimum. Once Sleep Timer is set, pressing the Sleep Timer button again displays the set turn off time and wakes the display up.



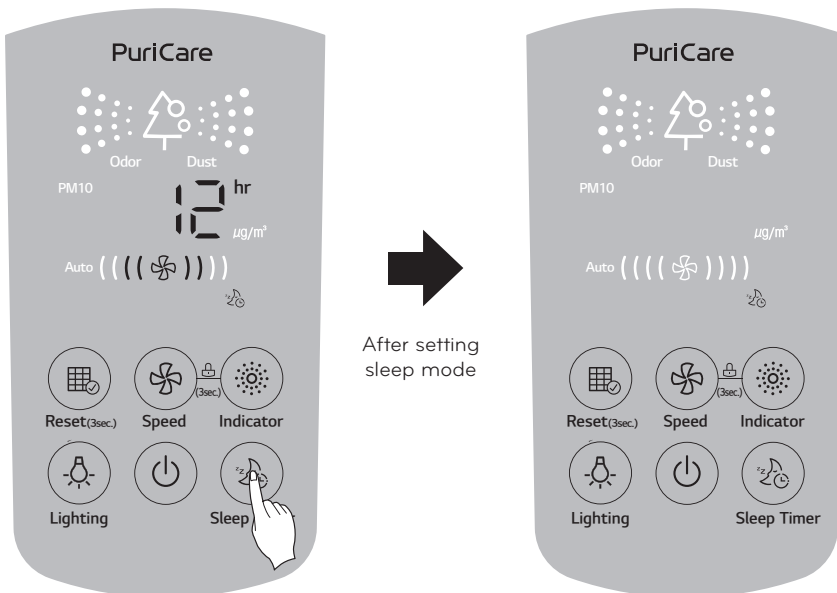




3. To disable the Sleep Timer function, press the Sleep Timer button repeatedly until 12 appears in the display. Press once more to disable the function and return the display to normal.
4. Even though Sleep Timer function, Lock function and Filter Life light can appear on the display.
5. Once The product is turned off, Sleep Timer function set is off.








## Lock Function

 1. Press the  button.
2. Press and hold the  Speed Button and  Indicator Button at the same time for 3 seconds or until a beep sounds and the  lights up.
  - The Lock function helps protect the product from unwanted operation by children or others.
  - To disable the Lock function, press and hold the  Speed and  Indicator buttons at the same time for 3 seconds. A beep sounds and the  Lock display turns off when the Lock function is disabled.
  - The Lock function cannot be set while the power cord is unplugged.

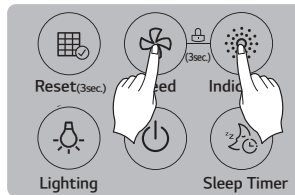




# MAINTENANCE






## Cleaning the Filters

 1. Turn off the power and unplug the appliance.  
Then pull open the rear panel.

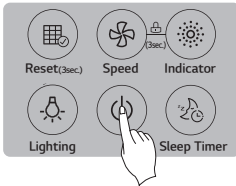

2. Pull the filter set by the top handle to remove it from the appliance.
  - Dust may accumulate on the filter net.
  - Before disassembling filter set, move the filters to a convenient location for vacuuming.
  - Place a newspaper or paper towel down to catch any loose dust.
3. While holding the filter case over the newspaper, push up on the sides of the pre-filter to separate it from the filter set.

     Clean the pre-filter using a vacuum cleaner or brush.  
If the filter is very dirty, rinse it under running water after cleaning it with a vacuum cleaner.

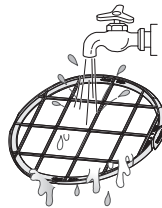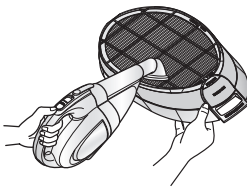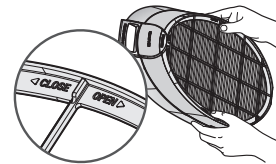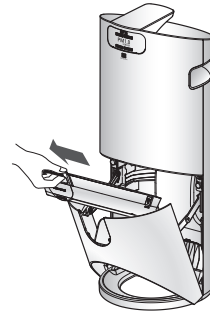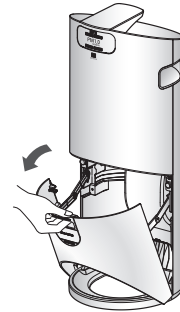



### CAUTION

- Allow pre-filter to dry completely, out of direct sunlight, before reinstalling.
- Do not use pre-filter while damp. Doing so may cause odor.
- Do not operate air purifier without pre-filter installed.




## 20 MAINTENANCE

  - Do not wash the **PuriCare** Main Filter or the deodorizing filter with water. Replace them when they become very dirty. Do not expose them to water during operation.
  - The life-expectancy of filters may differ depending on the usage environment.
- Press in the marked tabs on the sides of the deodorizing filter case to separate it from the PuriCare main filter case.
  - Remove and replace the deodorizing filter if necessary.
    - Do not operate the air purifier without the deodorizing filter.
  - Remove and replace the PuriCare main filter if necessary. Make sure to completely insert the new filter so it fits under the four tabs on the inside of the filter case.

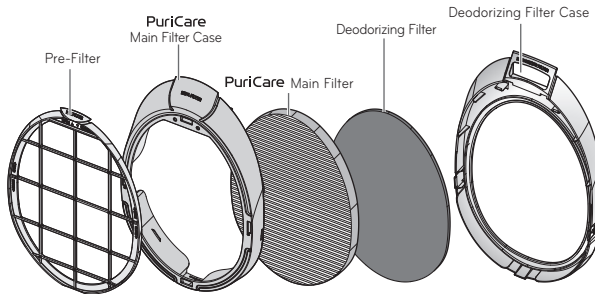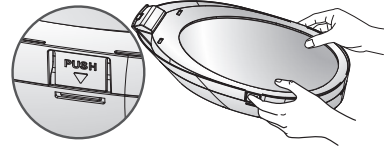

- After cleaning or replacing filters, reassemble the filters and filter cases. Insert the bottom tab on the deodorizing filter case into the bottom slot on the PuriCare main filter case before snapping the two cases together. Then fit the tabs on the pre-filter into the slots on the PuriCare main filter case and push down on the sides to lock the pre-filter in place.
- Insert the filters back into the air purifier with the deodorizing filter facing up. Remember to fit the two tabs on the filter case handle into the slots on the top of the rear panel.
- Close the rear panel.

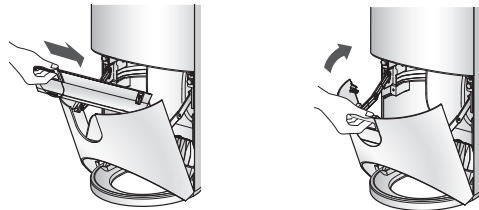 

## Filter Maintenance Schedule

Filter types	Classification	Cleaning cycle	Cleaning Method
Pre-Filter	washable	about every month	Clean pre-filter with vacuum cleaner or brush, followed by rinsing under running water if very dirty.
<b>PuriCare</b> Main Filter	not washable, replace	about every 12 months	* The replacement cycle for <b>PuriCare</b> Main Filter and Deodorizing Filter may vary depending on the usage environment.
Deodorizing Filter			

\* Contact an LG Customer Information Center for replacement filters.

## Cleaning the Exterior

Wipe the Air Purifier with a soft cloth and warm water.

The air inlet especially can accumulate dust and should be cleaned periodically.

### CAUTION

- Do not clean the body or display using products containing bleach or other alkalines.
- Do not clean the surface of the Air Purifier using sulfuric acid, hydrochloric acid or organic solvents (thinners, kerosene, or others). Do not put stickers on the surface. Doing so may damage the surface of the product.
- Do not use abrasive pads or cloths when cleaning. They may scratch the surface of the product.
- Do not allow water inside product while cleaning the exterior. Turn off power and unplug the power cord before cleaning. (Always check whether fan is moving.)



 
## 22 MAINTENANCE

## Cleaning the Sensor

Turn off and unplug the product.

Open the dust sensor cover.

Clean the dust sensor lens with cotton swab.  
(Clean once every six months.)

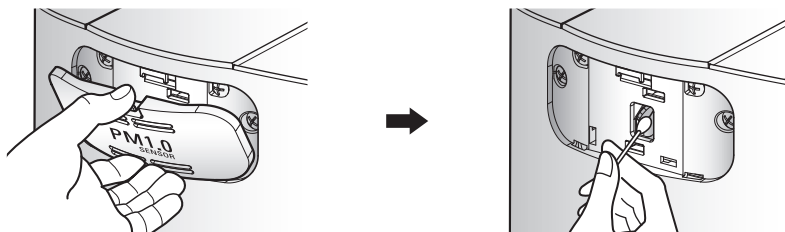


### ! CAUTION

 
- Use only water to clean the sensor. Failure to follow this warning can result in product failure.




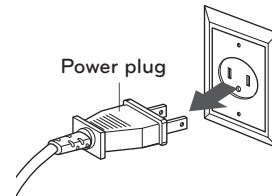 
## Storing the Product

If the product will not be used for an extended period, store it in a dry place out of direct sunlight.

 
1. Press the  button to turn on the air purifier.
  - Run the air purifier for an hour on a clear day to remove any musty odor inside the product.

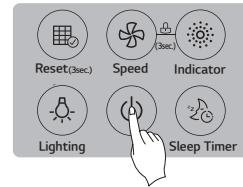

2. Press the  button to turn off the air purifier and then unplug it.



3. Remove the filters and store them tightly in a vinyl bag out of direct sunlight.
  - If the filters are stored in a humid place, they may take on a musty or mildewy odor.

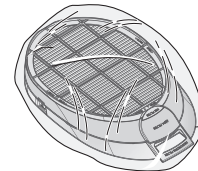

4. Clean the air purifier before storing it. Store the appliance in a vinyl cover to prevent any dust or foreign objects from getting inside.
  - Use a soft cloth when cleaning the appliance to avoid scratching the surface.
  - Store the appliance in a cool area out of direct sunlight.



5. Do not store the product where it will be exposed to high humidity or direct sunlight.
  - Doing so may result in odor, product deformation, or product malfunction.



## TRUBLESHOOTING

### Before Calling for Service

If there is a problem with the product, check the following first before calling for service.

Problem	Possible Cause	Solutions
<b>Air purifier does not turn on.</b>	<ul style="list-style-type: none"> <li>• Power cord not plugged in.</li> <li>• Incorrect power rating.</li> </ul>	<ul style="list-style-type: none"> <li>• Plug cord securely into socket.</li> <li>• Make sure outlet is rated for 115V.</li> </ul>
<b>Air output is weak, product makes a noise.</b>	<ul style="list-style-type: none"> <li>• Pre-filter is clogged.</li> <li>• Dust accumulation on the Puricare Main Filter.</li> </ul>	<ul style="list-style-type: none"> <li>• Clean the pre-filter.</li> <li>• Replace the Puricare Main Filter.</li> </ul>
<b>Air purification does not work well.</b>	<ul style="list-style-type: none"> <li>• Indoor air quality is very bad.</li> <li>• Dust has built up on the pre-filter or Puricare Main Filter.</li> <li>• Usage area is too large.</li> <li>• Nearby objects are blocking air circulation.</li> <li>• The product is installed in a corner.</li> </ul>	<ul style="list-style-type: none"> <li>• Ventilate the room before using the air purifier.</li> <li>• Clean the pre-filter or replace the Puricare Main Filter.</li> <li>• Use the product in a smaller area or an area more protected from the influx of outside air.</li> <li>• Remove nearby obstacles or move the product to a different location.</li> <li>• Move the product.</li> </ul>
<b>Strange odor coming from air outlet.</b>	<ul style="list-style-type: none"> <li>• Installed in area with heavy smoke or odors.</li> <li>• Odor coming from deodorizing filter.</li> </ul>	<ul style="list-style-type: none"> <li>• Very heavy smoke or odors may degrade the performance of the filters. Ventilate the area before using the air purifier.</li> <li>• Replace the deodorizing filter.</li> </ul>
<b>There is an odor, but the Indicator lamp does not change.</b>	<ul style="list-style-type: none"> <li>• Odor sensor may not respond to food odors as harmful.</li> </ul>	<ul style="list-style-type: none"> <li>• Odor sensor may not respond to food odors as harmful, but odors are removed by the deodorizing filter.</li> </ul>
<b>Air quality shows red continuously.</b>	<ul style="list-style-type: none"> <li>• Air purifier may be unable to process amount of contamination in air.</li> <li>• Water or oil sprayed near air purifier.</li> </ul>	<ul style="list-style-type: none"> <li>• Try moving product to another room to clear the indicator.</li> <li>• Do not spray water or oil near the air purifier.</li> </ul>
<b>Buttons do not work.</b>	<ul style="list-style-type: none"> <li>• Lock function is enabled.</li> </ul>	<ul style="list-style-type: none"> <li>• Press and hold Speed button and Indicator button for 3 seconds to disable the Lock function.</li> </ul>





 
Problem	Possible Cause	Solutions
<b>There has been no change in micro dust concentration.</b>	<ul style="list-style-type: none"> <li>• Sensor may be dirty or blocked by foreign material.</li> <li>• Air purifier may be in enclosed area.</li> </ul>	<ul style="list-style-type: none"> <li>• See instructions for cleaning sensor.</li> <li>• Indoor air quality may stay the same in an enclosed area.</li> </ul>
<b>The fine dust concentration value keeps showing high.</b>	<ul style="list-style-type: none"> <li>• Air purifier installed in area with constant influx of outside air.</li> </ul>	<ul style="list-style-type: none"> <li>• Levels can remain high in areas where there is a constant influx of outside air.</li> </ul>
<b>Air quality light remains red/orange while PM levels show low/normal.</b>	<ul style="list-style-type: none"> <li>• Air quality issue is from odor.</li> </ul>	<ul style="list-style-type: none"> <li>• The air quality indicator is an overall evaluation based on odor and dust. If an odor is strong while PM levels are low, the light may remain on red/orange.</li> </ul>
<b>The air quality indicator differs from the EPA guide.</b>	<ul style="list-style-type: none"> <li>• The air purifier and EPA air quality values are measured differently.</li> </ul>	<ul style="list-style-type: none"> <li>• The EPA guide indicates an average value during a given time period and the air purifier's air quality indicator measures and displays on a real-time basis.</li> </ul>
<b>The filter produces odors.</b>	<ul style="list-style-type: none"> <li>• The deodorizing filter has become dirty.</li> <li>• The air purifier is being used instead of a vent hood while cooking.</li> </ul>	<ul style="list-style-type: none"> <li>• Replace the filter. Filter life-expectancy can vary based on usage environment.</li> <li>• Filter life can be greatly reduced if the air purifier is used while cooking strong-smelling or oily food. Do not use the product in place of a vent hood. Ventilate the area during cooking to remove strong odors and oily splatter, then use the air purifier to eliminate any remaining odors.</li> </ul>



26 SPECIFICATIONS

ENGLISH

# SPECIFICATIONS

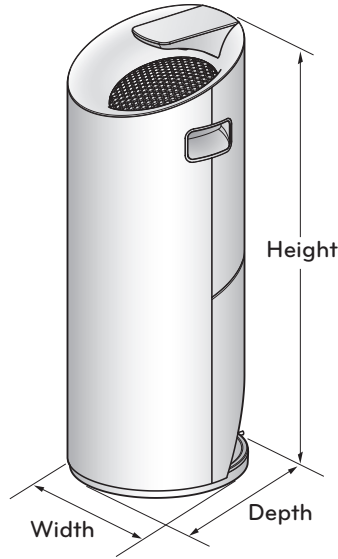

The external dimensions, design and product standards may change to improve the quality of the product.

Model name	AS401WWA1
Power supply	115 V~ / 60 Hz
Suggested room size	217 ft <sup>2</sup>
CADR*(ft <sup>3</sup> /min)	Smoke CADR : 140 Dust CADR : 175 Pollen CADR : 160
Product size (width x height x depth)	11 5/8 in. x 30 43/64 in. x 12 1/8 in. (295 mm x 779 mm x 308 mm)

\*CADR(Clean Air Delivery Rate)

## WARRANTY (USA)

Should the LG Air Purifier fail due to a defect in materials or workmanship under normal home use, during the warranty period set forth below, LG will at its option repair or replace the product. This limited warranty is valid only to the original retail purchaser of the product and applies only when purchased and used within the United States, including U.S. Territories. Proof of original retail purchase is required to obtain warranty service under this limited warranty.

Warranty Period	Scope of Warranty	Remark
One (1) year from date of original retail purchase	Any internal / functional parts and labor	LG will provide parts and labor to repair or replace defective parts.
Ten (10) years from date of original retail purchase	Smart Inverter Motor	Parts Only. Customer will be responsible for any labor or in-home service to replace defective parts.

- Replacement products and parts are warranted for the remaining portion of the original warranty period or ninety (90) days, whichever is greater.
- Replacement products and parts may be new or remanufactured.

**THIS WARRANTY IS IN LIEU OF ANY OTHER WARRANTY, EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. TO THE EXTENT ANY IMPLIED WARRANTY IS REQUIRED BY LAW, IT IS LIMITED IN DURATION TO THE EXPRESS WARRANTY PERIOD ABOVE. NEITHER THE MANUFACTURER NOR ITS U.S. DISTRIBUTOR SHALL BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL, INDIRECT, SPECIAL, OR PUNITIVE DAMAGES OF ANY NATURE, INCLUDING WITHOUT LIMITATION, LOST REVENUES OR PROFITS, OR ANY OTHER DAMAGE WHETHER BASED IN CONTRACT, TORT, OR OTHERWISE.**

Some states do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above exclusion or limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

### THIS LIMITED WARRANTY DOES NOT COVER:

- Service trips to deliver, pick up, or install or repair the product; instruction to the customer on operation of the product; repair or replacement of fuses or correction of wiring or plumbing, or correction of unauthorized repairs/installation.
- Failure of the product to perform during power failures and interrupted or inadequate electrical service.
- Damage caused by leaky or broken water pipes, frozen water pipes, restricted drain lines, inadequate or interrupted water supply or inadequate supply of air.
- Damage resulting from operating the product in a corrosive atmosphere or contrary to the instructions outlined in the product's owner's manual.
- Damage to the product caused by accidents, pests and vermin, lightning, wind, fire, floods, or acts of God.
- Damage or failure caused by unauthorized modification or alteration, or if it is used for other than the intended purpose, or any water leakage where the unit was not properly installed.
- Damage or failure caused by incorrect electrical current, voltage, or plumbing codes, commercial or industrial use, or use of accessories, components, or consumable cleaning products that are not approved by LG.
- Damage caused by transportation and handling, including scratches, dents, chips, and/or other damage to the finish of your product, unless such damage results from defects in materials or workmanship and is reported within one (1) week of delivery.
- Damage or missing items to any display, open box, discounted, or refurbished product.
- Products with original serial numbers that have been removed, altered, or cannot be readily determined. Model and serial numbers, along with original retail sales receipts, are required for warranty validation.
- Increases in utility costs and additional utility expenses.
- Repairs when the product is used for other than normal and usual household use (e.g. commercial use, in offices and recreational facilities) or contrary to the instructions outlined in the product's owner's manual.



## 28 WARRANTY

---

- Costs associated with removal of the product from your home for repairs.
- The removal and reinstallation of the product if it is installed in an inaccessible location or is not installed in accordance with published installation instructions, including LG's owner's and installation manuals.
- Damage resulting from misuse, abuse, improper installation, repair, or maintenance. Improper repair includes use of parts not approved or specified by LG.

**The cost of repair or replacement under these excluded circumstances shall be borne by the consumer.**

TO OBTAIN WARRANTY SERVICE AND ADDITIONAL INFORMATION

For additional product information, visit the LG website at <http://www.lg.com>

For assistance using this product or to schedule service, contact LG Electronics at 1-800-243-0000 (US).

For further assistance, write: LG Electronics, 201 James Record Road, Huntsville, Alabama 35813

