



Felix Storch, Inc.

SUMMIT SPECIALTY APPLIANCES DIV.®

USE AND CARE GUIDE

COMBINATION KITCHENS

- **C301 Series**
- **C301 AUTO Series**
- **C39 Series**
- **C39 AUTO Series**
- **C48 Series**
- **C60 Series**

If you need service or call with a question, please have this information ready. We advise you to keep this Owner's Manual in your possession.

Model: _____ **Options added:** _____

Serial number: _____

Date of purchase: _____ **Dealer:** _____

For parts: visit our website www.summitapplianceparts.com

Thank you for purchasing this SUMMIT Combination Kitchen. This product has been manufactured to the high standards identified with the SUMMIT name, and assembled in the U.S.A. We fully expect it to bring you many years of excellent service.

Please read this manual before installing and using the unit, and keep the manual in a handy spot for future reference. There is a separate manual for the refrigerator in your Combination Kitchen, so be sure to read and keep that manual also.

Table of Contents

<i>Appliance Safety</i>	2-3
<i>Technical Information</i>	3
<i>Description of Models</i>	4
<i>Location of Parts</i>	5
<i>Installation Instructions</i>	6
<i>Operating Tips</i>	7
<i>Cleaning and Maintenance</i>	7
<i>Dimensional Layouts</i>	8-11
<i>Accessories</i>	12-14
<i>Appliance Platform</i>	12-13
<i>Power Allocator</i>	13
<i>Wall Cabinets</i>	14
<i>Warranty</i>	16

Appliance Safety

Your safety and the safety of others are very important to us. We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. Serious injury or even death can be the result if you do not follow these instructions. All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

WARNING! To reduce the risk of fire, electric shock or injury when using your appliance, follow these basic precautions:

- Plug into a grounded 3-prong outlet.
- Do not remove grounding prong, nor use a 3/2 adaptor.
- Do not use an extension cord.
- Do not plug into outlets controlled by wall switches.
- Disconnect power before servicing or cleaning.
- After servicing, replace all parts and panels before operating.
- Use nonflammable cleaners.

- Keep flammable materials and vapors, such as gasoline, away from this product.
- Use two or more people to move and install this product.
- Use this product only for its intended purpose. This product is recommended for household use only. It should never be used as a space heater.
- Do not leave hot cooking utensils on the burners when they are not in use. Water from condensation can cause rust.
- Since the appliance gets hot during use, avoid placing materials sensitive to high temperatures anywhere near it.
- Always unplug the burners when you are finished cooking and before you clean the appliance.
- Never leave the appliance unattended while the burners are on.
- Do not spray cleaning solvents onto the burners when they are hot.
- Keep children away from the controls and the burners.
- Never use any electrical appliance if the cable or plug are damaged.

Proper Disposal of Your Old Appliance

***Old appliances can represent
a suffocation hazard to children.***

- Remove doors from your old appliance.
- Leave shelves in place.
- If an old appliance contains refrigerants, it must be recycled by a licensed service or disposal company.

Technical Information

Burners

Number of burners:	2
Construction:	Solid cast iron
Size of burners:	7½" diam, 1500W 6" diam., 1300W
Electrical Input:	120V-AC, 60Hz
Fuse/Circuit breaker required:	30A
Thermostat type:	Dial

Specifications are subject to change without notice.

WARNING: Keep vents clear.

Refrigerator

 
Refer to Owner's Manual accompanying refrigerator.

Description of Models

Model	Width	Height	Depth	Finish	Defrost	Description
C301	30"	40"	24"	White	Manual	30" fully assembled combination kitchen with 2 electric burners (110V). Refrigerator and full one-piece stainless steel top with sink. Storage cabinet with shelf. Faucet included; complete with line cord.
C301 AUTO	30"	40"	24"	White	Auto-matic	30" fully assembled combination kitchen with 2 electric burners (110V). Auto defrost refrigerator and full one-piece stainless steel top with sink. Storage cabinet with shelf. Faucet included; complete with line cord.
C39	39"	39"	24"	White	Manual	39" fully assembled combination kitchen with 2 electric burners (110V). Refrigerator and full one-piece stainless steel top with sink. Storage cabinet with shelf. Faucet included; complete with line cord.
C39 AUTO	39"	39"	24"	White	Auto-matic	39" fully assembled combination kitchen with 2 electric burners (110V). Auto defrost refrigerator and full one-piece stainless steel top with sink. Storage cabinet with shelf. Faucet included; complete with line cord.
C48	48"	39"	24"	White	Cycle	48" fully assembled combination kitchen with 2 electric burners (110V). Refrigerator and full one-piece stainless steel top with sink. Storage cabinet with shelf. Faucet included; complete with line cord. Includes a larger 24 inch wide deluxe refrigerator-freezer (Model CT67).
C60	60"	39"	24"	White	Cycle	60" fully assembled combination kitchen with 2 electric burners (110V). Refrigerator and full one-piece stainless steel top with sink. Two storage cabinets, each with shelf. Faucet included; complete with line cord. Includes a larger 24 inch wide deluxe refrigerator-freezer (Model CT67).
Suffix APSS	Choice	18"	18"	St. Steel	N/A	High shelf in stainless steel, with power allocator system to regulate the refrigerator, a microwave and coffee maker. All stainless steel construction. Some assembly required.
Suffix APSW	Choice	18"	18"	White	N/A	Same as above in a white finish.

Location of Parts

Typical Top Surface

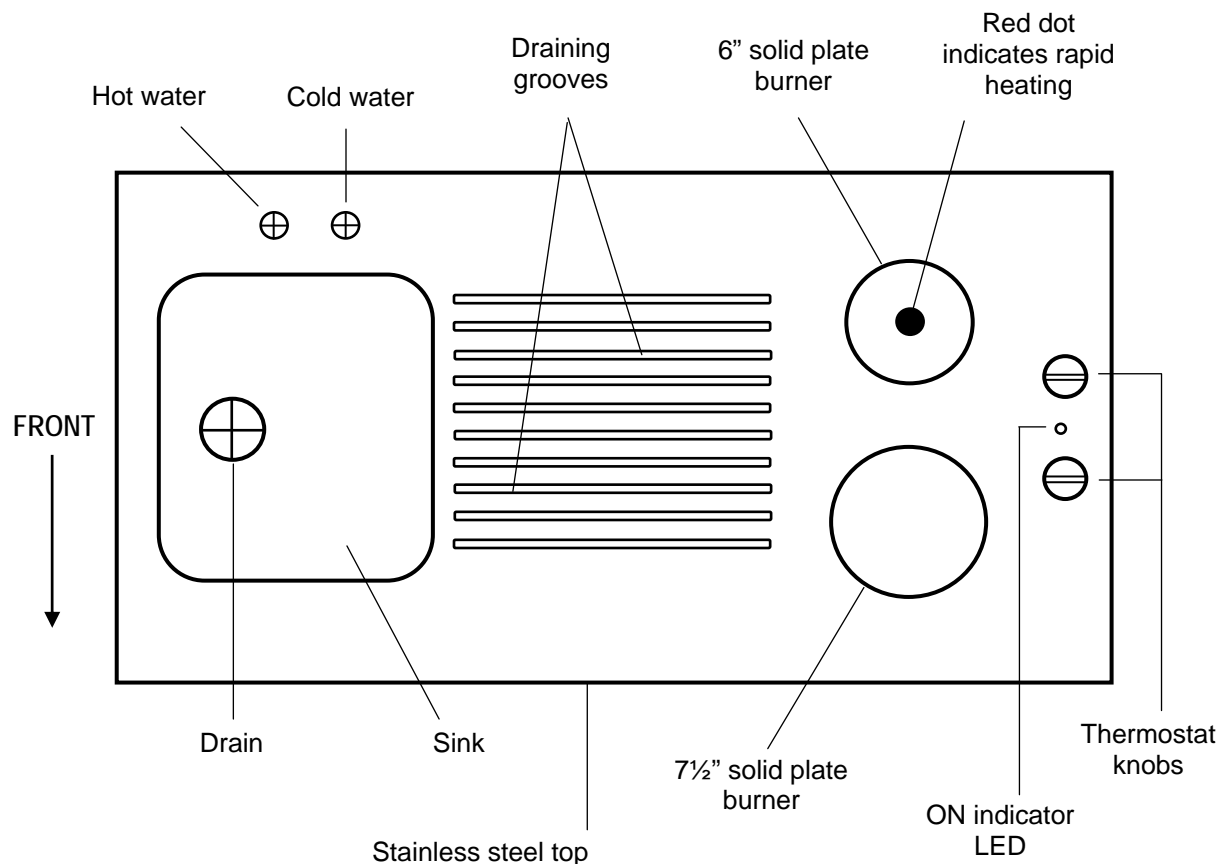

NOTE: Models C60 and C301 have sink on right and burners on left. C301 has burner controls on front of stainless steel top.

The thermostat knobs control the burners. When the knob is set at 0, the burner is off. When a burner is on, the indicator LED next to the thermostat knob glows red.

All models include a storage compartment with shelf (two compartments on C60) and are shipped fully assembled, including faucet. Each model comes with a refrigerator that fits precisely into the slot in the assembly that has been prepared for it.

Installation Instructions

Unpacking

1. Remove packaging material.
2. Remove tape and glue residue from surfaces before using the appliance. Rub a small amount of liquid dish detergent over the adhesive with your fingers. Rinse with warm water and dry.
3. Do not use sharp instruments, rubbing alcohol, flammable fluids or abrasive cleansers to remove tape or glue. These products can damage the surface of the appliance.
4. When Moving Your Appliance:
Your appliance is heavy. When moving the appliance for cleaning or service, be sure to protect the floor. Always pull the appliance straight out when moving it. Do not wiggle or “walk” the appliance when trying to move it, because floor damage can occur.
5. Clean Before Using:
After you remove all of the packaging materials, clean your appliance thoroughly before using it. See cleaning instructions in the *Cleaning and Maintenance* section of this manual.

Location Requirements

Check the strength of the floor before installing the appliance. It should hold the weight of a fully loaded appliance, including refrigerator.

Once your Combination Kitchen is in place, have a plumber connect the hot and cold water feeds and drain line.

Keep flammable materials and vapors such as gasoline away from appliances. Failure to do so can result in fire or explosion.

Recommended Grounding Method

A 120V, 60Hz AC-only, grounded electrical supply, including a 30-amp fuse or circuit breaker, is required for the burners. (A 10-amp fuse or circuit breaker would be sufficient for the refrigerator.) It is recommended that separate circuits serving only your appliance be provided. Use outlets that cannot be turned off by a switch or pull chain. Connect the burners to a 3-prong power supply socket (which has a good ground terminal). If you only have a two-prong outlet, have it replaced by a qualified electrician with an outlet that meets the local codes. **DO NOT USE AN EXTENSION CORD.** The connection to the power supply and grounding has to be made according to current standards and regulations.

Operating Tips

 
- Before using your burners for the first time, plug the appliance into the appropriate socket, turn both controls to their highest setting, and allow the burners to heat up for three minutes with no cooking utensils on them.
- Keep the surfaces of the burners clean because dirt affects their efficiency.
- You can use ordinary cooking utensils (saucepans, frying pans, etc.) as long as the base of the utensil is smooth and flat and at least the same diameter as the burner (6" or 7½").
- Pyrex-type glass utensils may be used on electric hot plates as long as they are exactly the same size as the burner. If they are larger, the pressure that develops inside them may cause them to break. Special care must be taken when using Pyrex-type glass utensils on the fast-heating burner (red dot in center).
- The bottoms of your pots and pans should be clean and dry when you place them on the burner.
- Don't leave oil or grease on the burners because they could catch fire. When cooking with large quantities of oil or fat, be sure to keep an eye on the pots and pans at all times.
- Don't cook food in aluminum foil or plastic containers because these materials will melt.

Cleaning and Maintenance

- After use and once the top has cooled, remove traces of food with a clean cloth dampened with a solution of warm water and mild dishwashing detergent.
- Do not use corrosive cleaning agents, bleaches or sharp objects to remove rust or stains.
- Residues from boiling water, especially if they contain salt, should be carefully removed from the surface and surrounding areas of the burners.
- To clean badly stained burners, mix one part salt and one part vinegar and heat in a pan. Polish the burners with this solution using a rough cloth.
- Clean the stainless steel parts of the unit with any suitable commercial product.
- If the power cord is damaged, have it repaired or replaced by a qualified electrician rather than try to do it yourself.


Dimensional Layouts of the Four Basic Models

Model C301

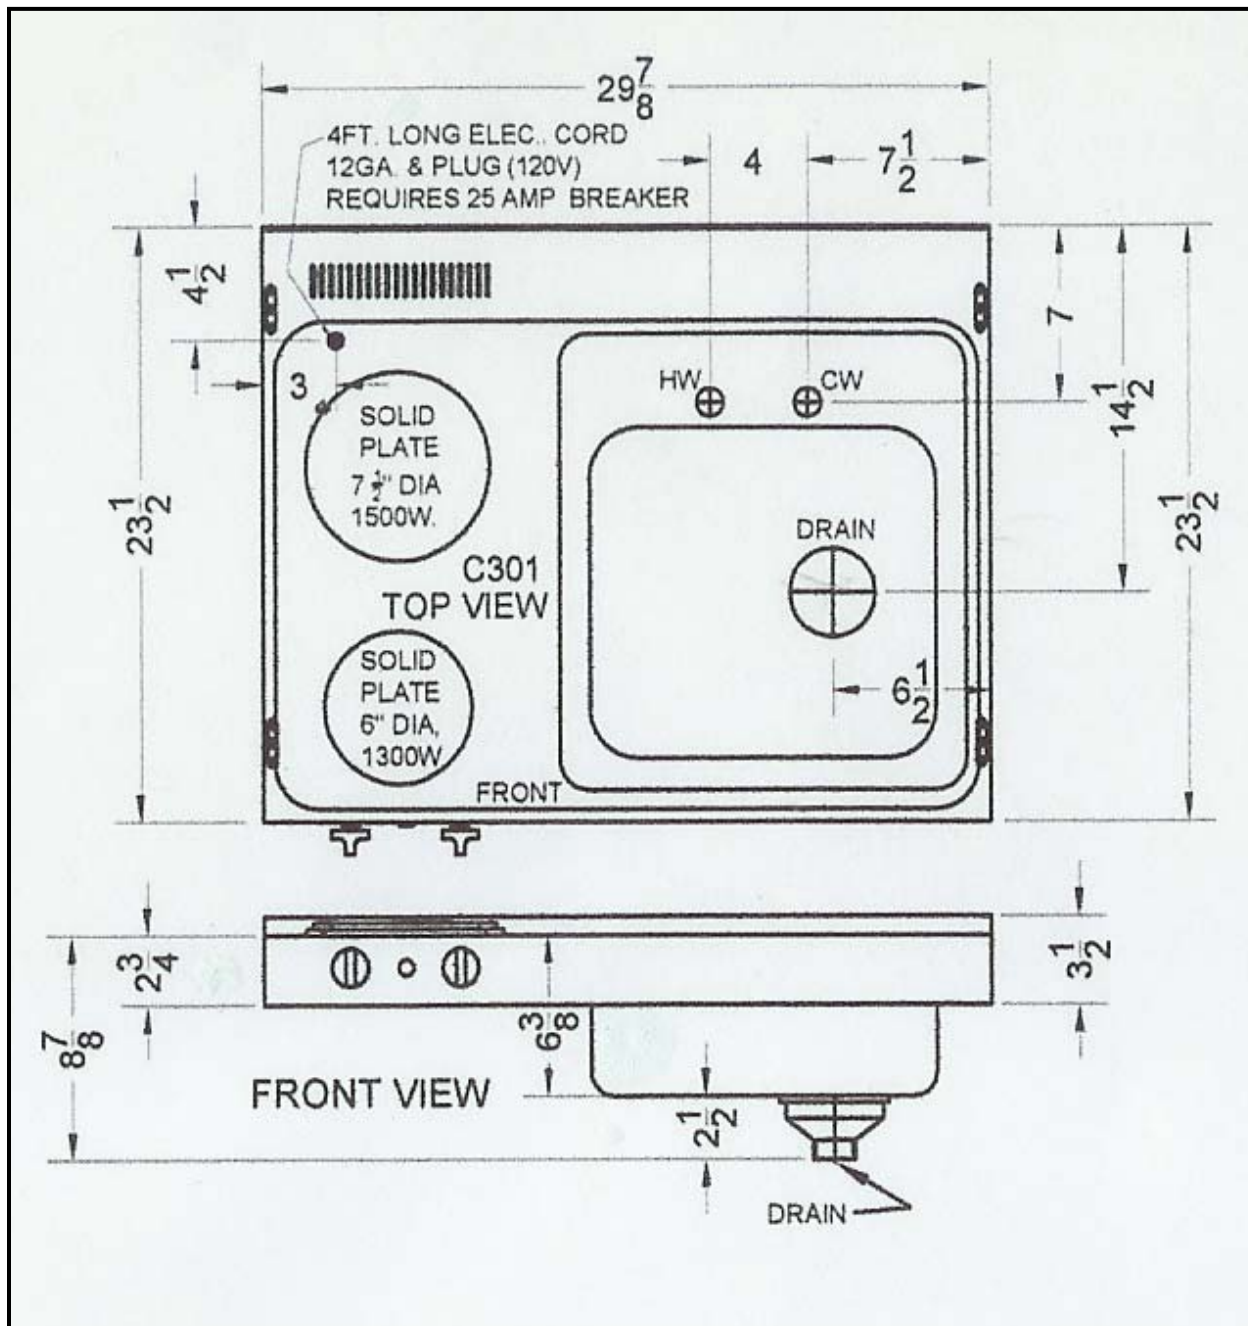


Dimensional Layouts (cont'd)

 Model C39

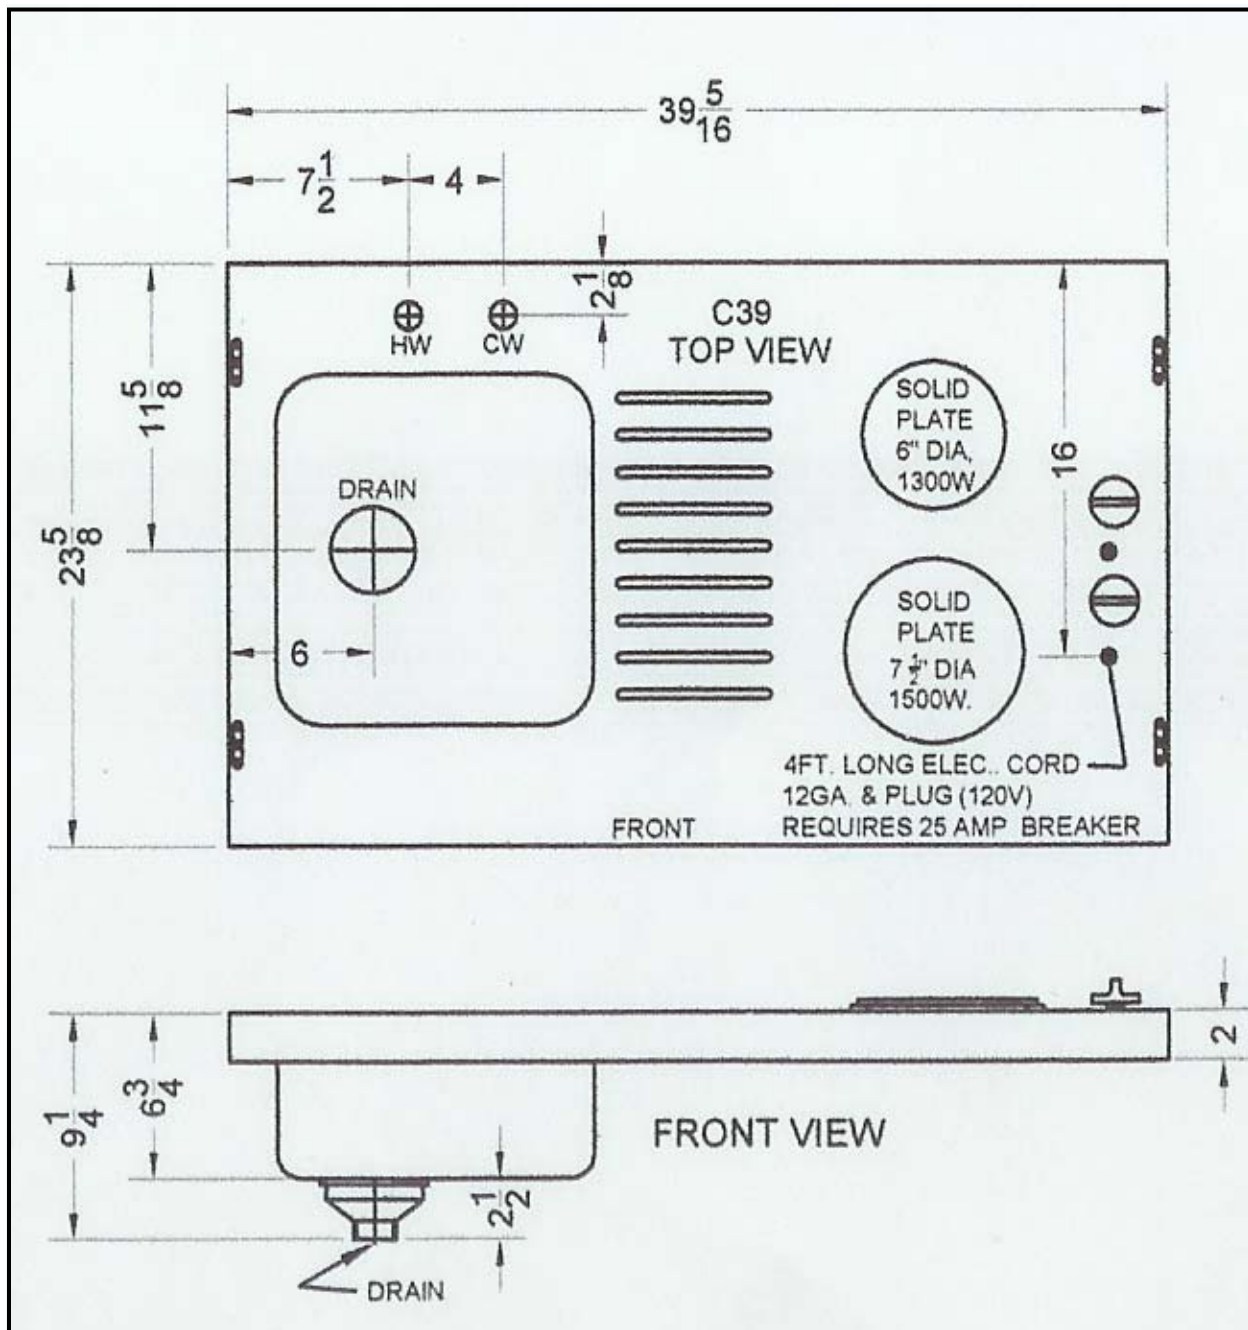


Dimensional Layouts (cont'd)

 Model C48

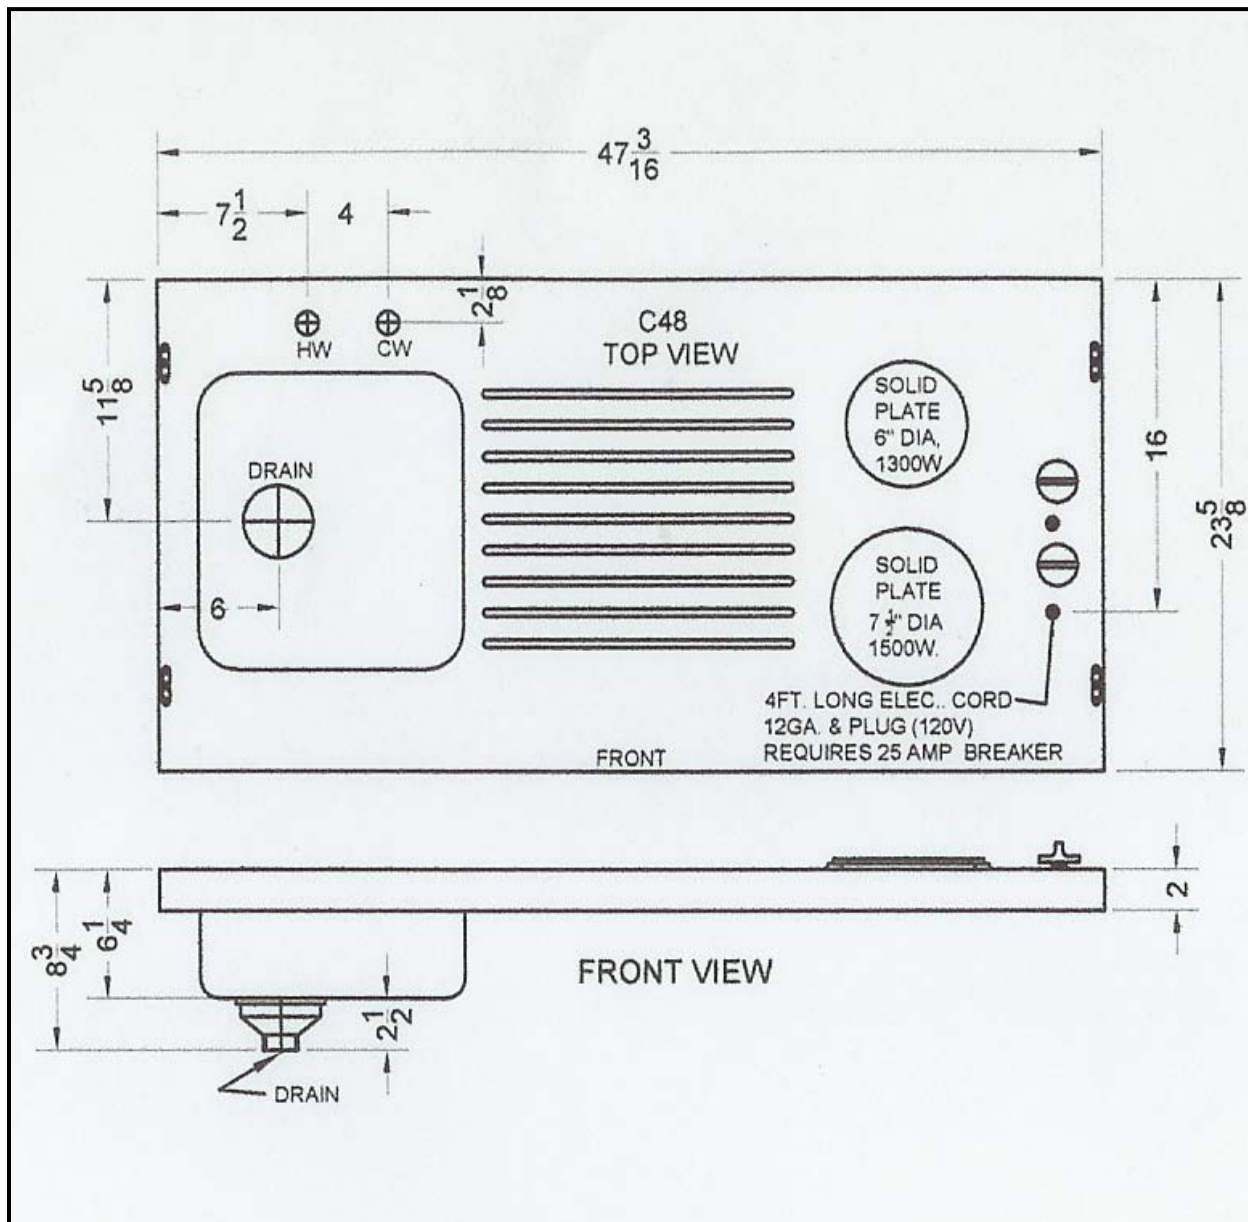

Dimensional Layouts (cont'd)


 
Model C60

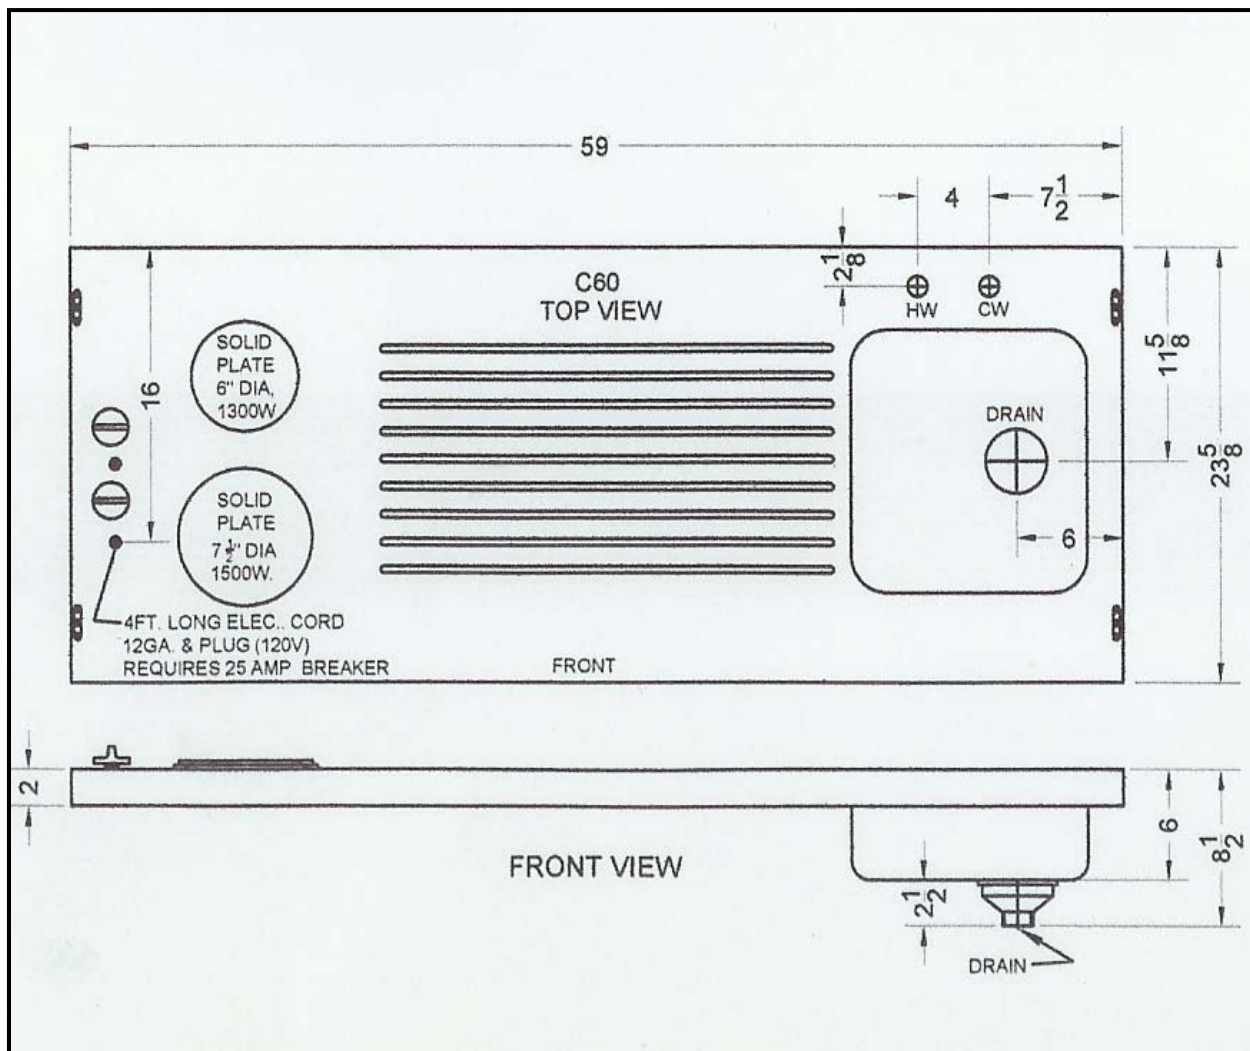


Accessories**Appliance Platform**

This is an 18-inch high mantel that you assemble and mount over the basic Combination Kitchen unit to provide a shelf for a microwave oven, coffee maker or other small appliances. The width of the platform depends on the Combination Kitchen model you choose. The finish is either Stainless Steel (suffix **APSS**) or White (suffix **APSW**).

   
Follow the steps illustrated below to assemble and mount the platform. Screws are provided, but you'll need a Phillips head screwdriver.

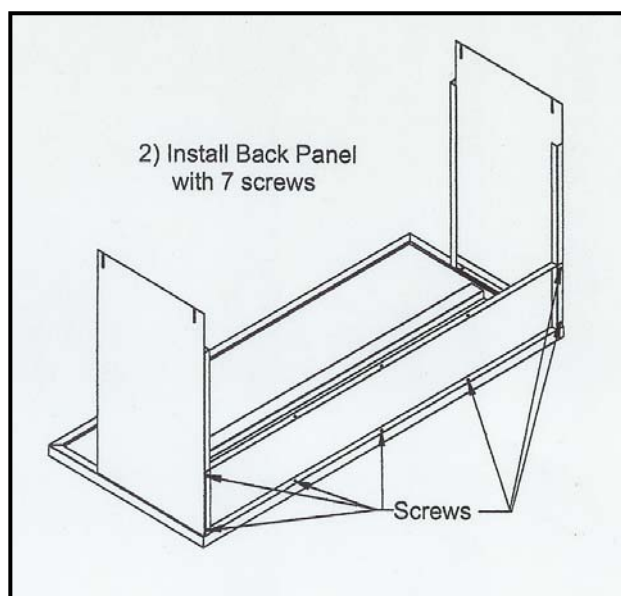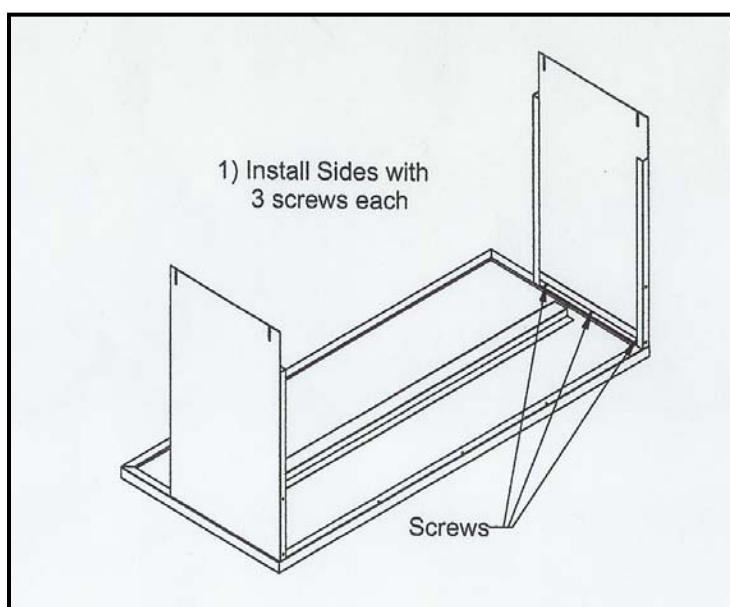

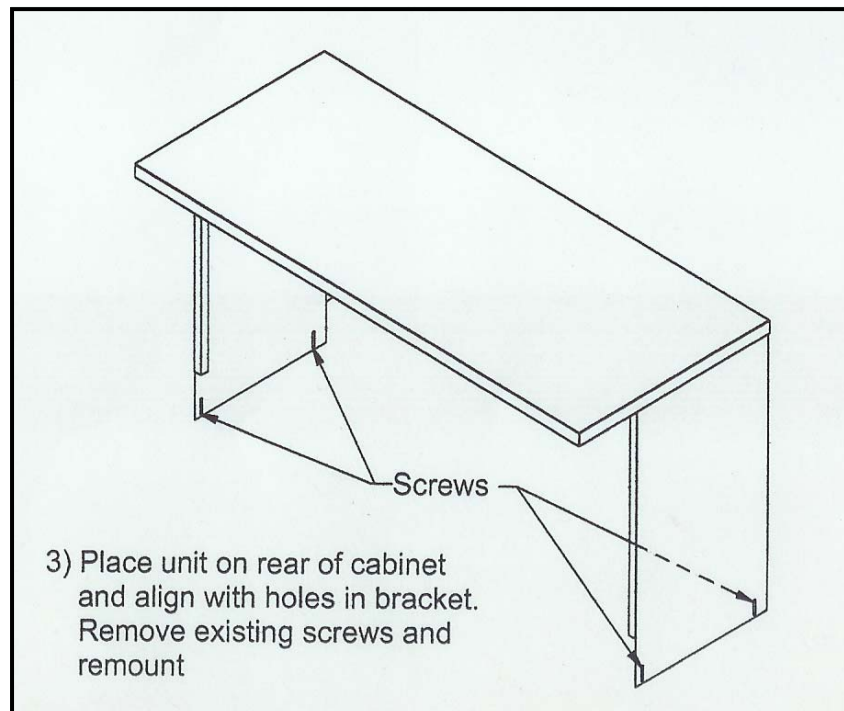

Power Allocator

 The Appliance Platform comes with a 3-socket Allocator box which regulates overall power consumption to 10 amps. Use it to plug in the refrigerator, a microwave, or another small appliance.

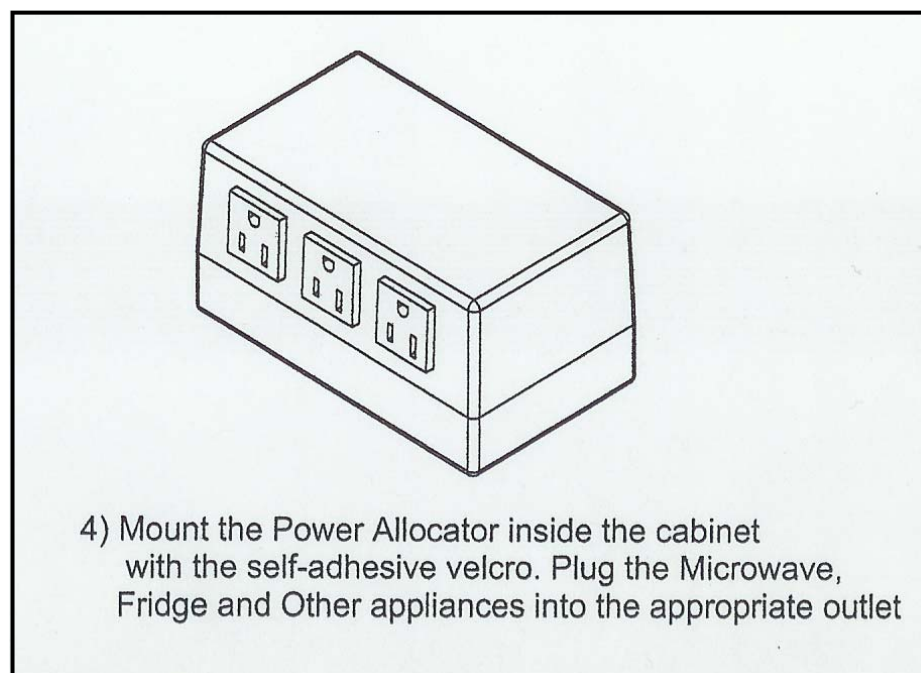

Accessories (cont'd)

Wall Cabinets

These optional hanging wall cabinets match the finish of your Combination Kitchen and come in two widths. Model **Cab2416** is 16" wide and Model **Cab2420** is 20" wide. Both cabinets are 24" high and 12" deep. An adjustable shelf along with all the necessary hardware is included. Cabinets can be purchased either fully assembled or not.

Notes

WARRANTY

Call customer service toll-free in the U.S.A. @ 1-800-287-8799, Monday to Friday 9:00 a.m. - 5:00 p.m. (ET).

Order parts online at www.summitapplianceparts.com

1 YEAR LIMITED WARRANTY

Within the 48 contiguous United States, for one year from the date of purchase, when this appliance is operated and maintained according to instructions attached to or furnished with the product, warrantor will pay for factory-specified parts and repair labor to correct defects in materials or workmanship. Service must be provided by a designated service company. Outside the 48 states, all parts are warranted for one year from manufacturing defects. Plastic parts, shelves and cabinets are warranted to be manufactured to commercially acceptable standards, and are not covered from damage during handling or breakage.

5 YEAR COMPRESSOR WARRANTY

1. The compressor is covered for 5 years.
2. Replacement does not include labor.

ITEMS WARRANTOR WILL NOT PAY FOR:

1. Service calls to correct the installation of your appliance, to instruct you how to use your appliance, to replace or repair fuses or to correct wiring or plumbing.
2. Service calls to repair or replace appliance light bulbs or broken glass shelves. Consumable parts (such as filters) are excluded from warranty coverage.
3. Damage resulting from accident, alteration, misuse, abuse, fire, flood, acts of God, improper installation, installation not in accordance with electrical or plumbing codes, or use of products not approved by warrantor.
4. Replacement parts or repair labor costs for units operated outside the United States.
5. Repairs to parts or systems resulting from unauthorized modifications made to the appliance.
6. Expenses for travel and transportation for product service in remote locations.
7. The removal and reinstallation of your appliance if it is installed in an inaccessible location or is not installed in accordance with published installation instructions.

DISCLAIMER OF IMPLIED WARRANTIES:**LIMITATION OF REMEDIES**

CUSTOMER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY SHALL BE PRODUCT REPAIR AS PROVIDED HEREIN. IMPLIED WARRANTIES, INCLUDING WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR. WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, OR LIMITATIONS ON THE DURATION OF IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SO THESE EXCLUSIONS OR LIMITATIONS MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.



Felix Storch, Inc.

770 Garrison Avenue
Bronx, NY 10474

Phone: (718) 893-3900

Fax: (718) 842-3093

Web Site:

www.summitappliance.com