 
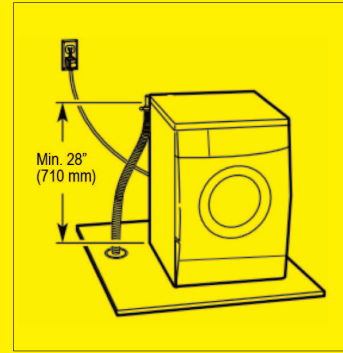 
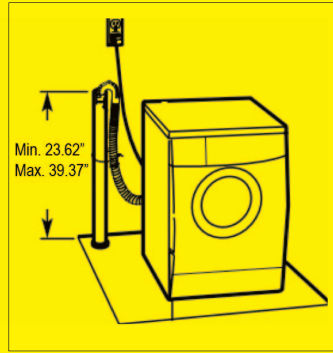 


# QUICK START GUIDE

 
## SPWD2200W COMBO WASHER-DRYER

- 1** This washer requires a standard washer hook up as shown in any of the 4 diagrams

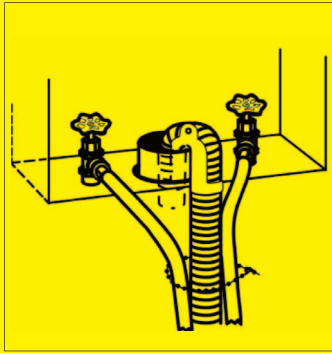

**IT IS NOT SUITABLE FOR PORTABLE USE OR HOOK-UP TO A SINK.**

- 2** Installation must be performed by a qualified, licensed professional

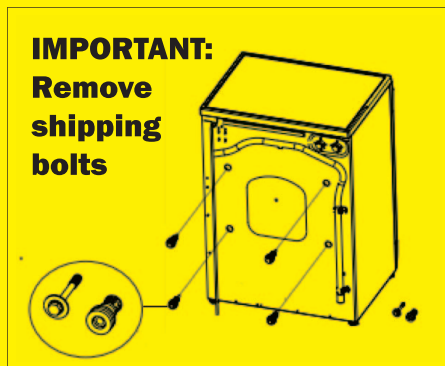


**IMPORTANT: Remove shipping bolts**

- Remove packing material and discard.
- Cover holes with transport hole plugs
- Keep shipping bolts for future use



**IMPORTANT:**

 For best performance, washer/dryer must rest solidly on a sturdy floor or platform, with minimum vibration.

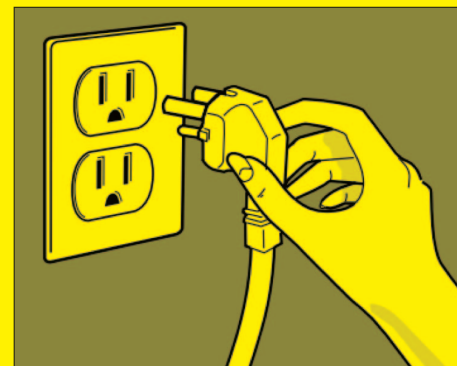

**NOTE:**

Remove four (4) shipping bolts prior to plugging machine into electrical outlet. Do not cut power supply cord

See ground instruction on pg. 5 for complete details.

## **⚠ CAUTION**

- Use only high efficiency detergent in this machine
- Run one cycle in cotton and hot water setting without clothes before washing clothes for the first time.

**BEFORE USING WASHER/DRYER READ MANUAL THOROUGHLY!**



SUMMIT APPLIANCE DIVISION FELIX STORCH, INC.

770 Garrison Avenue, Bronx, NY 10474 USA TEL 718-893-3900 FAX 844-478-8799 info@summitappliance.com www.summitappliance.com