




Cooker

DER 202 BS

DER 202 BS

C5N0AV103X

tav. 1

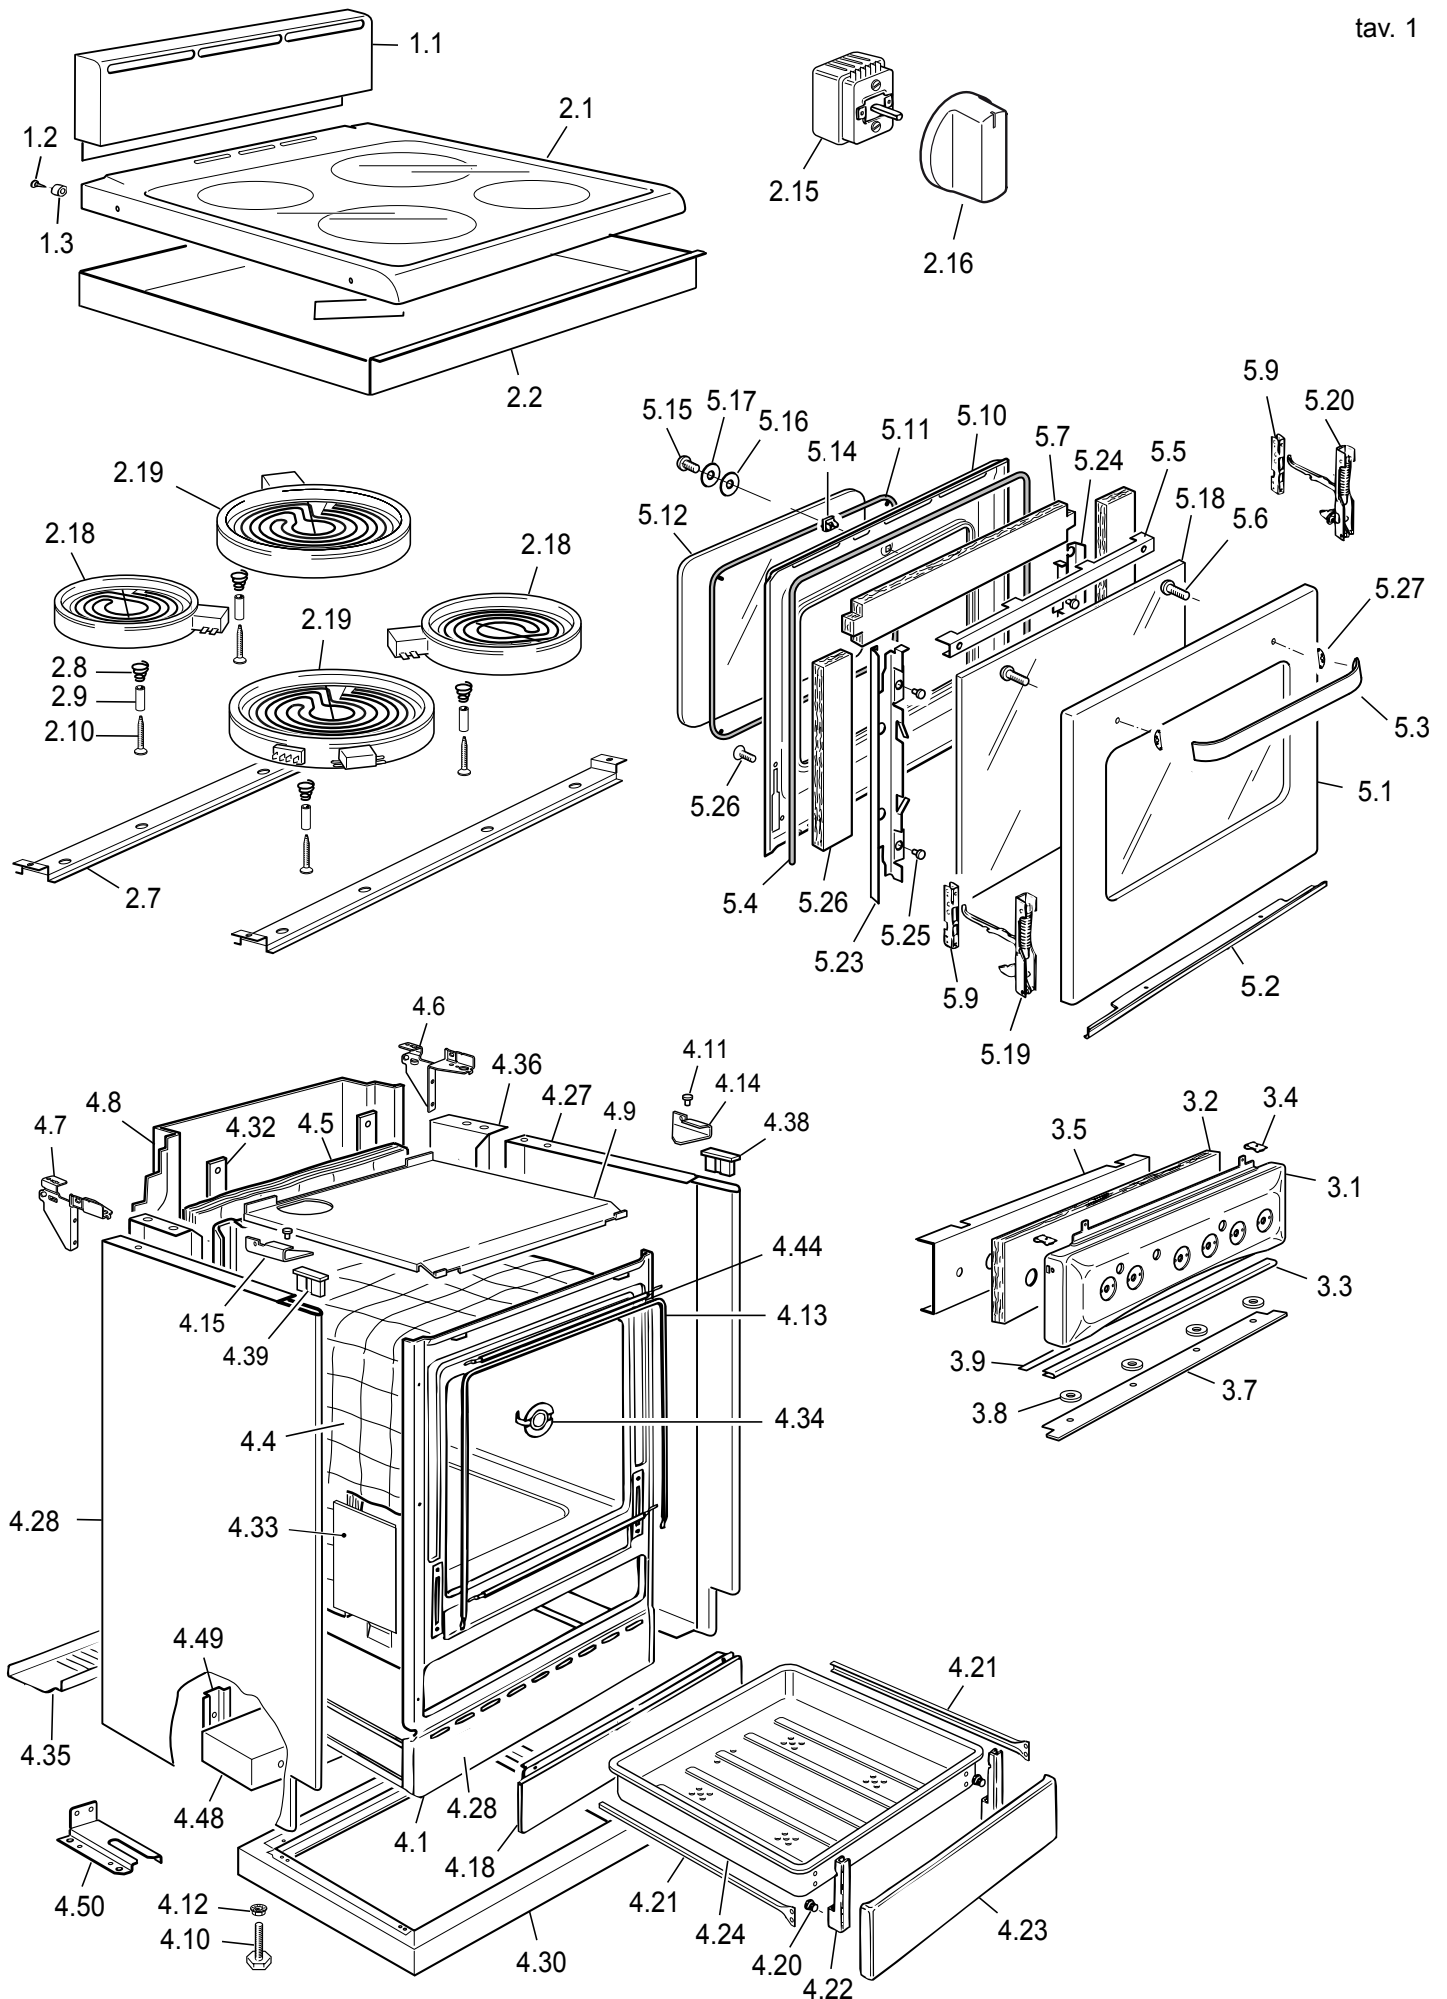










REF.	CODE	DESCRIPTION
1.1	1031010063	Rear trim
1.2	001130	Screw
1.3	040031002	Plug
2.1	355VC5611	Glass with frame
2.2	094540	Hotplates protection
2.3	001175	Screw
2.7	51B5611.1	Hotplates support
2.8	035075	Spring
2.9	085043	Spacer
2.10	001111	Screw
2.15	050064240	Energy regulator
2.16	2183A3X559	Knob
2.18	04777240	Hotplate - Ø 145 - 1200W
2.19	04778240	Hotplate - Ø 180 - 1700W
3.1	35C5N08SA1	Control panel
3.2	030167.1	Control panel insulation
3.3	053113	Seal
3.4	213007	Clip
3.5	4115N04	Insulation support
3.7	51B5N06H	Deflector
3.8	003066	Spacer
3.9	103916	Seal reinforcement
4.1	4415N1ES23	Oven frame
4.4	030162	Oven insulation
4.5	030168	Rear insulation
4.6	094354DX	Rear right coupler
4.7	094354SX	Rear left coupler
4.8	4115109	Rear panel
4.9	4215102Z	Upper shelter
4.10	103854	Shim
4.11	040011	Buffer
4.12	214056	Nut shim
4.13	053066	Seal
4.14	094333DX	Front right coupler
4.15	094333SX	Front left coupler
4.18	103204061	Base panel
4.20	040012	Buffer
4.21	094171	Drawer rail
4.22	094138	Drawer fixing bracket
4.23	39E5101S	Drawer front panel
4.24	39K5104Y	Drawer
4.27	36C6ND1HH	Right side panel
4.28	36C6NS1HH	Left side panel
4.30	68056004	Plinth
4.32	4215101Z	Rear insulation support
4.34	035097	Rotisserie hole plug
4.35	4215N04Z	Bottom panel
4.36	51B5606	Rear side panel bar
4.38	081083080	Right stopper
4.39	081084080	Left stopper
4.44	053074	Top/bottom seal
4.48	103326	Balance weight
4.49	213016	Balance weight bracket
4.50	094495	Anti-tip stability device

REF.	CODE	DESCRIPTION
5.1	0313274	Door glass
5.2	083211081	Lower door trim
5.3	037353061	Door handle
5.4	053115	Door seal
5.5	51B5N07	Handle bar
5.6	001183	Screw
5.7	030167.1	Top insulation door
5.9	063109	Door hinge (female)
5.10	373F5106G	Door panel
5.11	053085	Gasket
5.12	031999.1TH	Inner glass
5.14	214021	Nut
5.15	001214	Screw
5.16	003035	Washer
5.17	103205.1	Washer
5.18	0312473	Third glass
5.19	063095	Left door hinge (male)
5.20	063094	Right door hinge (male)
5.23	51B6N03	Left inner glass support
5.24	51B6N04	Right inner glass support
5.25	040056	Third glass rubber
5.26	030178.1	Side insulation door
5.27	1031484080	Handle spacer

DER 202 BS

C5N0AV103X

 tav. 2

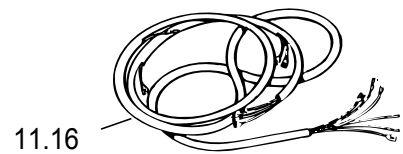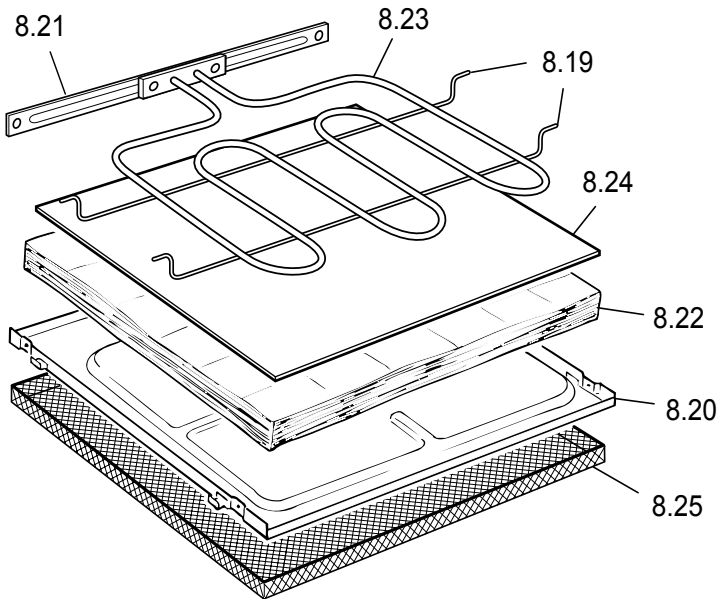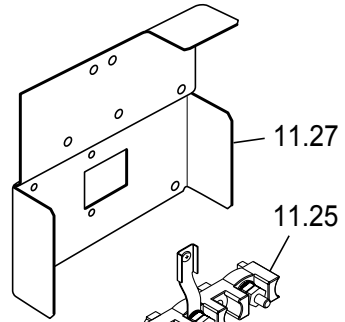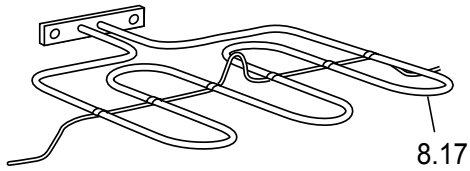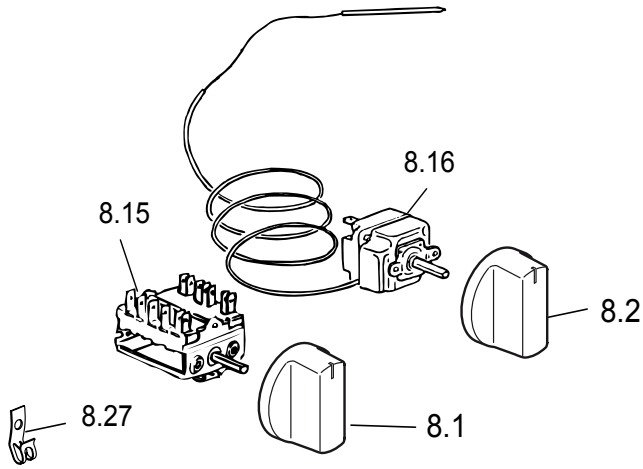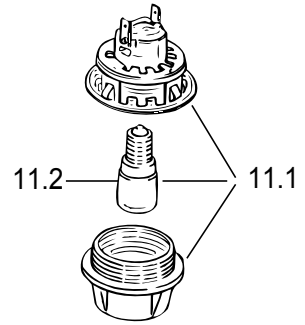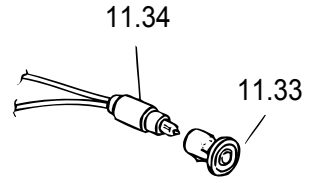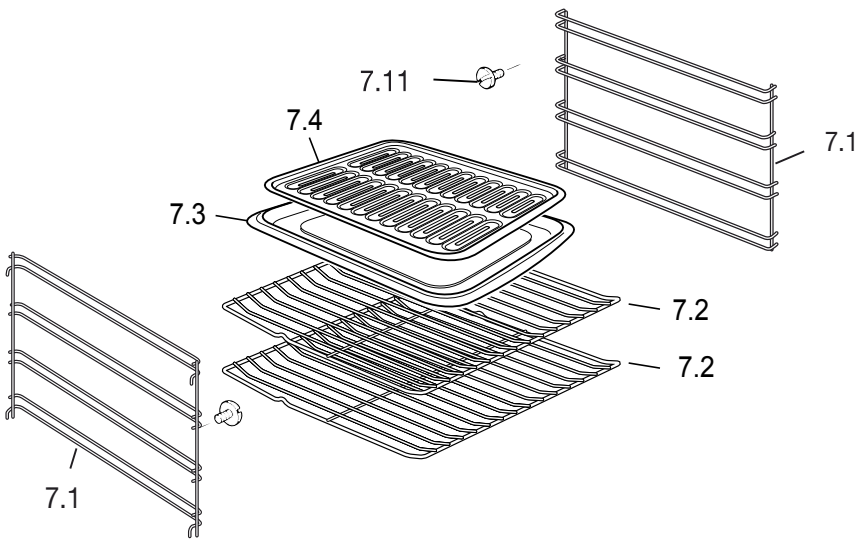

REF.	CODE	DESCRIPTION
7.1	217350	Shelf support
7.2	217719	Oven shelf
7.3	48B6105G	Broiling pan tray
7.4	48E6104G	Pastry plate
7.11	001142	Fixing screw
1 . 8	2183H0X559	Switch knob
8.2	2183H1X559	Thermostat knob
8.15	050040.1	Oven switch
8.16	066141	Oven thermostat
8.17	062123001	Grill element - 240V
8.19	103203	Bottom element bar
8.20	4215102Z	Bottom element support
8.21	51B5103	Bottom element fixing bar
8.22	030061.1	Bottom element insulation
8.23	062122001	Bottom element - 240V
8.24	4215N05Z	Bottom element plate
8.25	4215N03Z	Bottom protection plate
=	4215N06Z	Bottom protection plate
8.27	213025	Clip
11.1	072005	Lamp holder
11.2	073013001	Lamp
11.16	1131558	Wiring
11.16	1131559	Wiring
11.25	051064	Terminal block
11.26	094539	Power cord bracket
11.27	094544	Terminal block support
11.30	066057	Cut-off thermostat - 140°
11.33	07306202.2	Control lamp cover - Red
11.34	073078	Control lamp
-	1105078	Users operating instructions
-	1105077	Installation instructions