











Avanti[®]
ELITE

Cooker

DER 242 BS

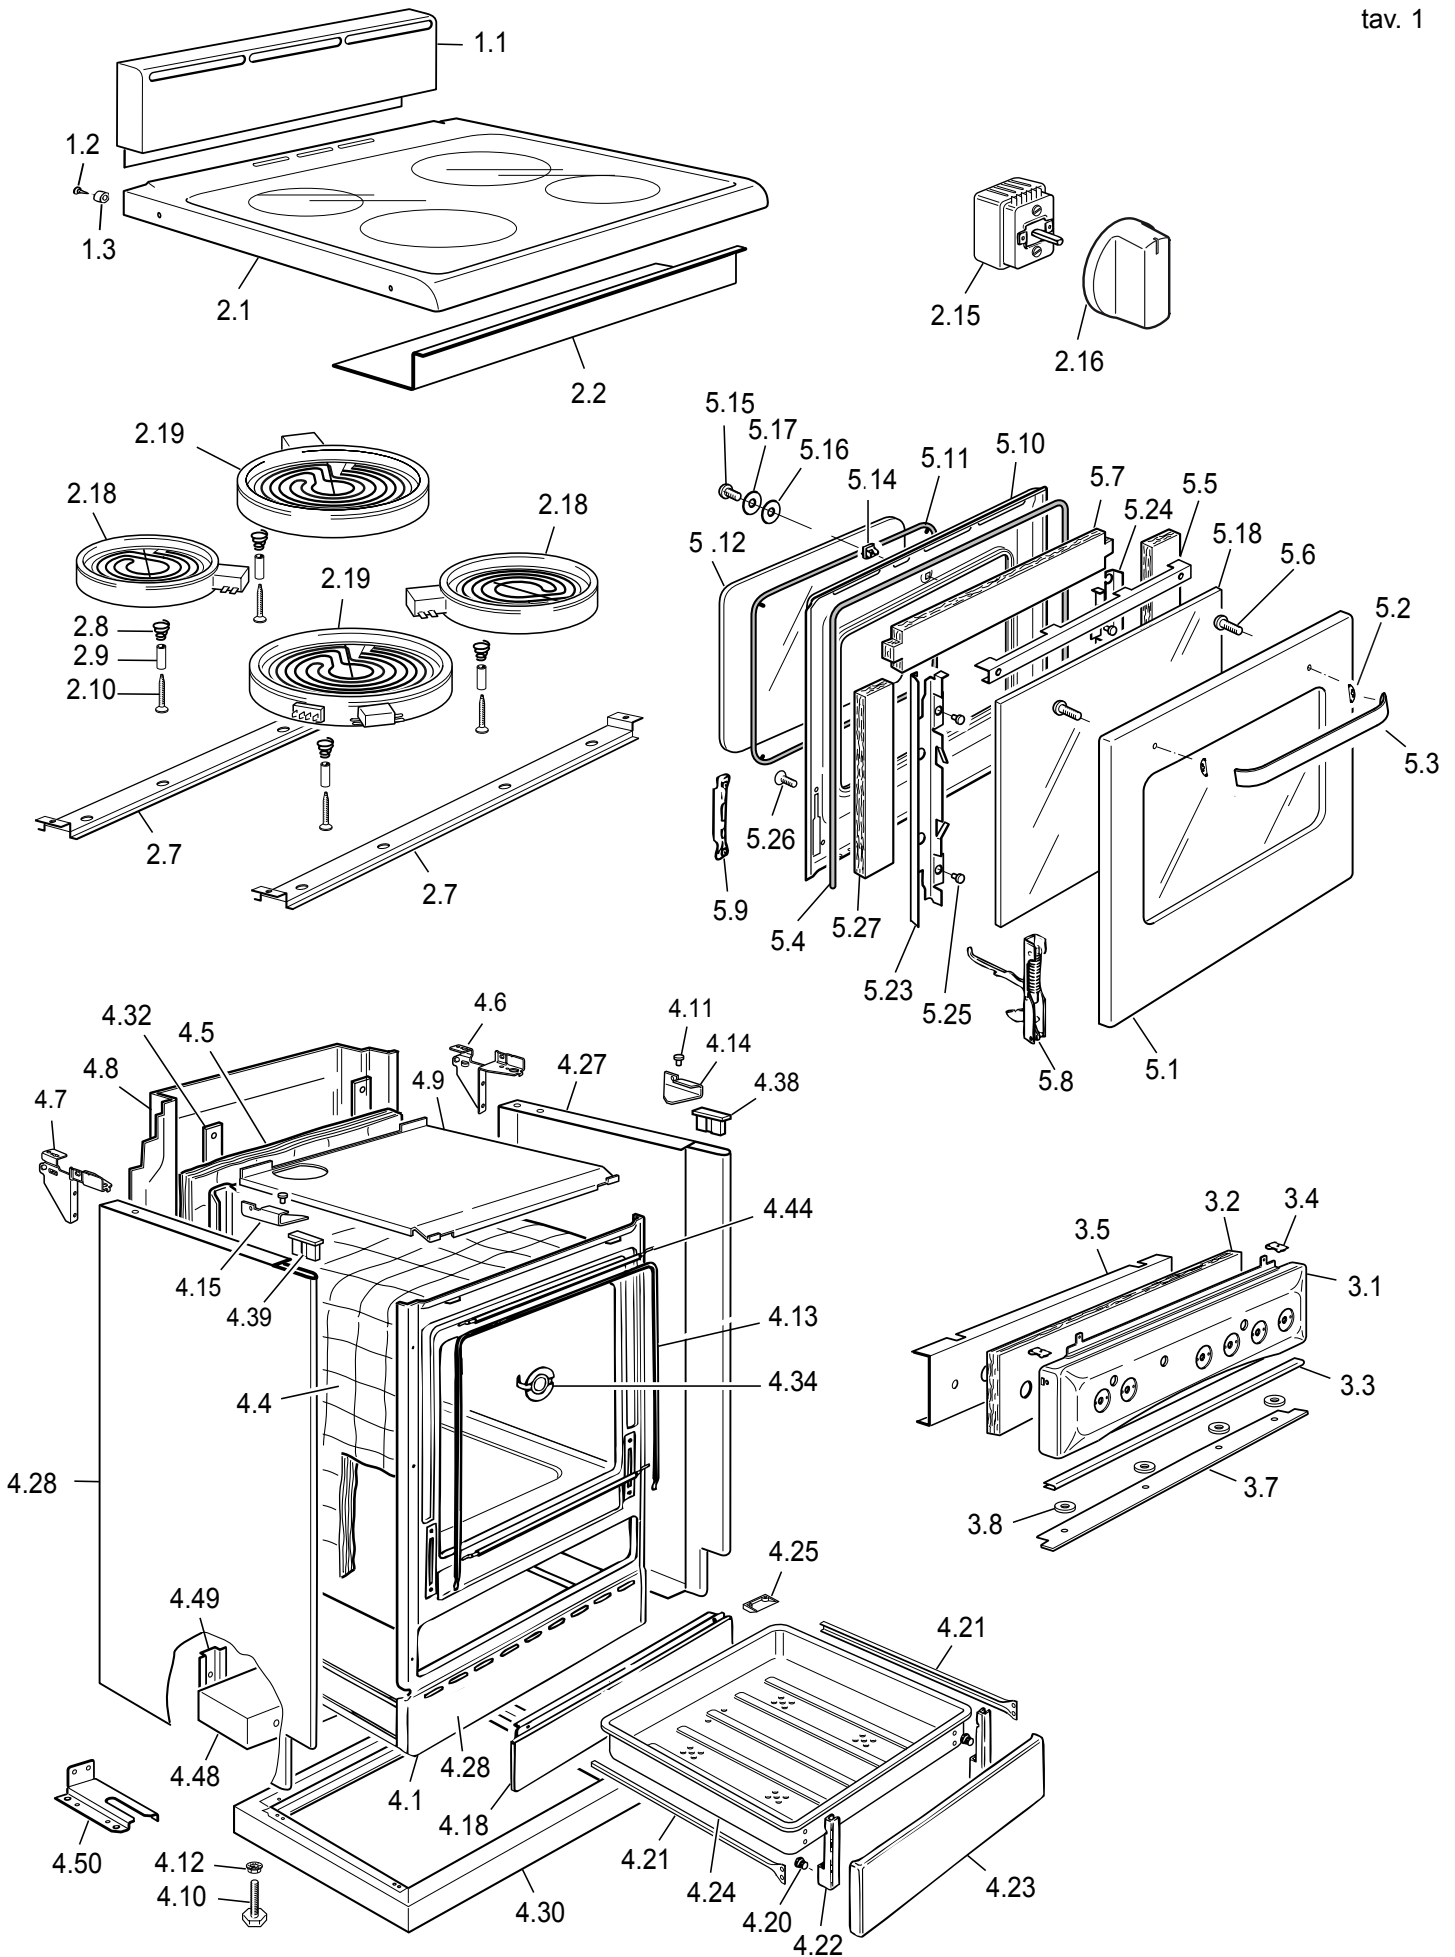

REF.	CODE	DESCRIPTION	REF.	CODE	DESCRIPTION
1.1	1031007063	Rear trim	5.1	032653275	Door glass
1.2	001130	Screw	5.2	1031484080	Spacer
1.3	040031002	Plug	5.3	037316061	Door handle
2.1	355VC6133	Glass with frame	5.4	053112	Door seal
2.2	094507	Hotplates protection	5.5	51B6N05	Handle bar
2.3	001175	Screw	5.6	001183	Screw
2.7	51B6113.1	Hotplates support	5.7	030177.1	Door insulation
2.8	035075	Spring	5.8	063154	Door hinge (male)
2.9	085043	Spacer	5.9	063148	Door hinge (female)
2.10	001111	Screw	5.10	373FF722G	Door panel
2.15	050064240	Energy regulator	5.11	053084	Gasket
2.16	2183A3X559	Knob	5.12	0311000.1T	Inner glass
2.18	04777240	Hotplate - Ø 145 - 1200W	5.14	214021	Nut
2.19	04778240	Hotplate - Ø 180 - 1700W	5.15	001214	Screw
3.1	35C6N32SA1	Control panel	5.16	003035	Washer
3.2	030165.1	Control panel insulation	5.17	103205.1	Washer
3.3	053111	Seal	5.18	0312474	Third glass
3.4	213007	Clip	5.23	51B6N03	Left inner glass support
3.5	4116N07	Insulation support	5.24	51B6N04	Right inner glass support
3.7	51B6N02H	Deflector	5.25	040056	Third glass rubber
3.8	003066	Spacer	5.26	001253	Screw
4.1	4416N1ES02	Oven body	5.27	030178.1	Side insulation door
4.4	030159	Oven insulation			
4.5	030160	Rear insulation			
4.6	094354DX	Rear right coupler			
4.7	094354SX	Rear left coupler			
4.8	4116N08	Rear panel			
4.9	4216101Z	Upper shelter			
4.10	103854	Shim			
4.11	040011	Buffer			
4.12	214056	Nut shim			
4.13	053039	Seal			
4.14	094333DX	Front right coupler			
4.15	094333SX	Front left coupler			
4.18	103160061	Base panel			
4.20	040012	Buffer			
4.21	094075	Drawer rail			
4.22	094138	Drawer fixing bracket			
4.23	39E6603L	Drawer front panel			
4.24	39K6101Y	Drawer			
4.25	081073	Drawer stopper			
4.27	36C6ND1HH	Right side panel			
4.28	36C6NS1HH	Left side panel			
4.30	68061010	Plinth			
4.32	4219604Z	Rear insulation support			
4.34	053097	Rotisserie hole plug			
4.38	081083080	Right front trim plug			
4.39	081084080	Left front trim plug			
4.44	053074	Top/bottom seal			
4.48	103326	Balance weight			
4.49	213016	Balance weight bracket			
4.50	094495	Anti-tip stability device			

 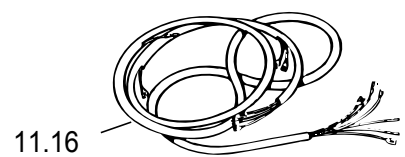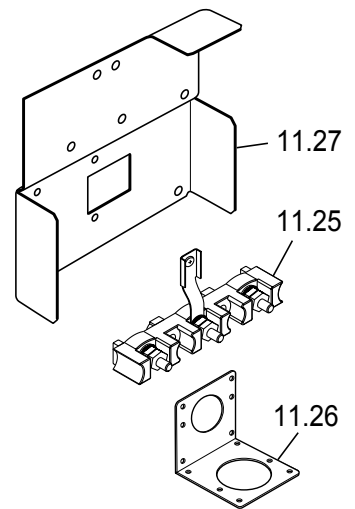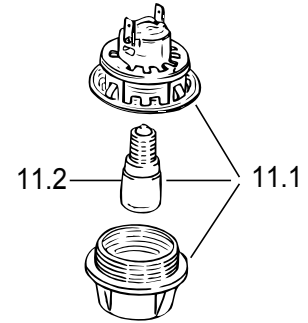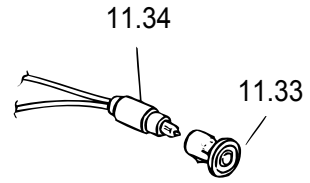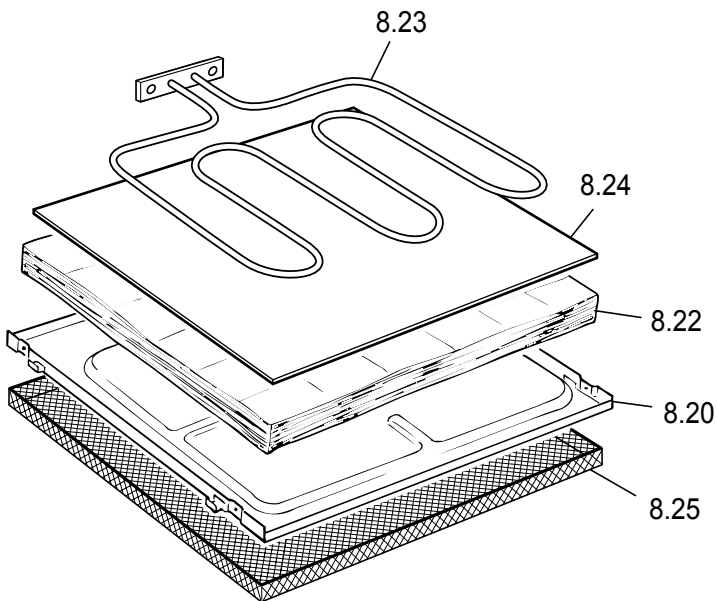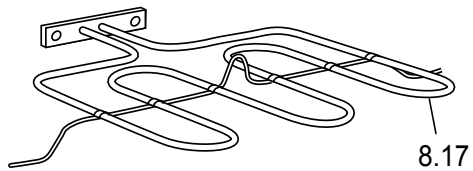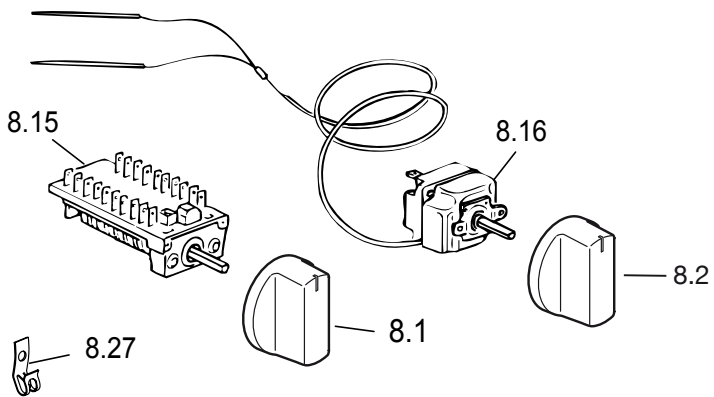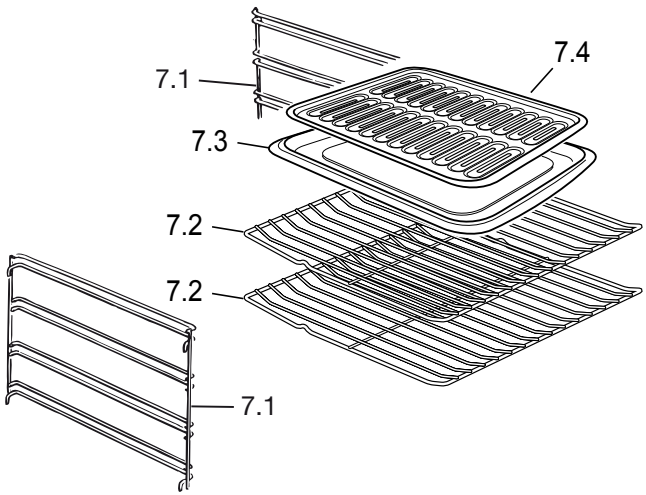

REF.	CODE	DESCRIPTION	NOTE
7.1	217291	Shelf support	
7.2	217722	Oven shelf	
7.3	48B6105G	Pastry plate	
7.4	48E6104G	Broiling pan tray	
8.1	2183H0X559	Switch knob	
8.2	2183H2X559	Thermostat knob	
8.15	050040.1	Oven switch	
8.16	066141	Oven thermostat	
8.17	062120001	Grill element - 240V	
8.20	4216102Z	Bottom element support	
8.22	030083.1	Bottom element insulation	
8.23	062121001	Bottom element - 240V	
8.24	4216108Z	Bottom element plate	
8.25	4216N02Z.1	Bottom protection plate	
=	4216N03Z	Bottom protection plate	
8.27	213023	Clip	
11.1	072005	Lamp holder	
11.2	073013001	Lamp	
11.16	1131555	Wiring	
11.16	1131556	Wiring	
11.25	051064	Terminal block	
11.26	094539	Power cord bracket	
11.27	094538	Terminal block support	
11.30	066057	Cut-off thermostat	
11.33	07306202.2	Control lamp cover - Red	
11.34	073078	Control lamp	
11.35	094221	Earth plate	
-	1105081	Users operating instructions	
-	1105080	Installation instructions	