

USE & CARE GUIDE



L Series Built-In Ovens



Contents

| | |
|--|----|
| Wolf L Series Built-In Ovens | 3 |
| Safety Instructions | 4 |
| L Series Oven Features | 6 |
| L Series Oven Operation | 10 |
| L Series Oven Care | 32 |
| Wolf Cooking Guide | 34 |
| Troubleshooting Guide | 37 |
| Service Information | 38 |
| Wolf Warranty | 39 |

Features and specifications are subject to change at any time without notice. Visit our website, wolfappliance.com for the most up-to-date information.

IMPORTANT NOTE: Throughout this guide, dimensions in parentheses are millimeters unless otherwise specified.

Important Note

To ensure the safe and efficient use of Wolf equipment, please take note of the following types of highlighted information throughout this guide:

IMPORTANT NOTE highlights information that is especially important.

CAUTION signals a situation where minor injury or product damage may occur if instructions are not followed.

WARNING states a hazard that may cause serious injury or death if precautions are not followed.



Thank You

Your purchase of a Wolf L series oven attests to the importance you place upon the quality and performance of your cooking equipment. We understand this importance and have designed and built your oven with quality materials and workmanship to give you years of dependable service.

We know you are eager to start cooking, but before you do, please take some time to read this use & care guide. Whether you are a beginning cook or an expert chef, it will be to your benefit to familiarize yourself with the safety practices, features, operation and care recommendations of the Wolf L series oven.

Your Wolf L series oven is protected by a warranty that is one of the finest in the industry. Take a moment to read the warranty statement at the end of this guide and refer to it should service become necessary.

IMPORTANT NOTE: Performance may be compromised if the electrical supply is less than 240 volts.

CAUTION

Do not place cookware on oven floor or use aluminum foil or other material to line the oven floor or side walls. Failure to adhere to this notice will damage the porcelain and will void your warranty.

IMPORTANT INSTRUCTIONS

IMPORTANT NOTE: Read all safety instructions before using this appliance.

- Read this use & care guide carefully before using your new built-in oven to reduce the risk of fire, electric shock or injury to persons.
- Ensure proper installation and servicing. This appliance must be properly installed and grounded by a qualified technician.
- Warranty service must be performed by Wolf factory certified service.
- Have installer show you where the fuse or electrical box is located in your home. Learn how and where to shut off the electricity to the oven.
- Use oven only for cooking tasks expected of a home oven as outlined in this guide.
- Always properly clean and maintain the oven as recommended in this guide. Clean only those parts listed in this guide.

⚠ CAUTION

Do not place cookware on oven floor or use aluminum foil or other material to line the oven floor or side walls. Failure to adhere to this notice will damage the porcelain and will void your warranty.

GENERAL SAFETY REQUIREMENTS

- Always use dry pot holders when removing pans from the oven. Wet or damp pot holders can cause steam burns. Do not let pot holders touch hot heating elements. Do not use a towel or other bulky cloth.
- Exercise caution when opening the oven door. Let hot air or steam escape before looking or reaching into the oven.
- Be sure that the oven cool air intake (located above the door) and oven exhaust vent (located below the door) are unobstructed at all times.
- Position oven racks in desired locations when oven is cool. If a rack must be repositioned after the oven is already hot, be certain pot holder does not contact a hot heating element in the oven.
- Before using the self-clean feature, remove broiler grill and pan, oven racks, oven rack guides and any other utensils.
- The cooling fan should be operating during the self-clean feature. If you notice that the cooling fan is not operating, contact Wolf factory certified service before using the self-clean feature again.

IMPORTANT INSTRUCTIONS

GENERAL SAFETY REQUIREMENTS

- Do not use commercial oven cleaners or oven liner protective coatings, such as aluminum foil, on any part of the oven.
- Do not place cookware on the floor of the oven.
- Do not repair or replace any part of the oven unless specifically recommended in literature accompanying this appliance. All service should be referred to Wolf factory certified service.
- Do not use oven for warming or heating a room.
- Do not leave children alone or unattended in the area where the oven is in use. Never allow children to sit or stand on any part of the oven. Do not let children play with the oven.
- Do not use water on grease fires. Smother any flames with a lid, baking sheet or flat tray. Flaming grease can be extinguished with baking soda or a multipurpose chemical or foam extinguisher.
- Do not heat unopened food containers as they could burst and cause injury.
- Do not store combustible, flammable or explosive materials in the oven or adjacent cabinets.
- Do not use abrasive or caustic cleaners or detergents on this appliance as these may cause permanent damage. Do not use aerosol cleaners as these may be flammable or cause corrosion of metal parts.
- Do not clean the oven gasket, because rubbing or moving the gasket may eliminate the required tight door seal.
- Do not wear loose or hanging apparel while using the oven.
- Do not touch heating elements or interior surfaces of the oven. Heating elements may be hot even though they are dark in color. Interiors of the oven become hot enough to cause burns. During and after use, do not touch, or let clothing or other flammable materials contact heating elements or interior surfaces of the oven until they have had sufficient time to cool. Other surfaces of the oven may become hot enough to cause burns. These surfaces include the oven door, window, oven vent and the surface near the oven vent.

⚠ CAUTION

Do not store items of interest to children above the oven, as they could climb on the appliance to reach items and be injured.


30" (762) Single Oven Features

- Framed and unframed door styles with tubular handle.
- Crafted of heavy-duty stainless steel.
- Dual convection oven with two fans for even heat distribution.
- Ten cooking modes—bake, roast, broil, convection bake, convection roast, convection broil, convection and proof—bake stone and dehydration modes require accessory.
- Wolf exclusive rotating glass touch control panel.
- Cobalt blue porcelain oven interior.
- Six-level rack guides with three adjustable oven racks;
- one full-extension easy glide, one full-extension door glide and one standard.
- Large viewing, triple-pane window and dual halogen interior lights.
- Hidden bake element and recessed broil element.
- Temperature probe and broiler pan.
- Self-clean, delayed start, timed cook and Sabbath features.
- Wolf exclusive spring and damper door hinge system for smooth opening and closing.
- CSA certified for US and Canada.
- Two and five year residential warranty—exclusions apply, see warranty at the end of this guide.

This appliance is certified by Star-K to meet strict religious regulations in conjunction with specific instructions found on www.star-k.org.

30" (762) L SERIES SINGLE OVEN

Model SO30U/S shown

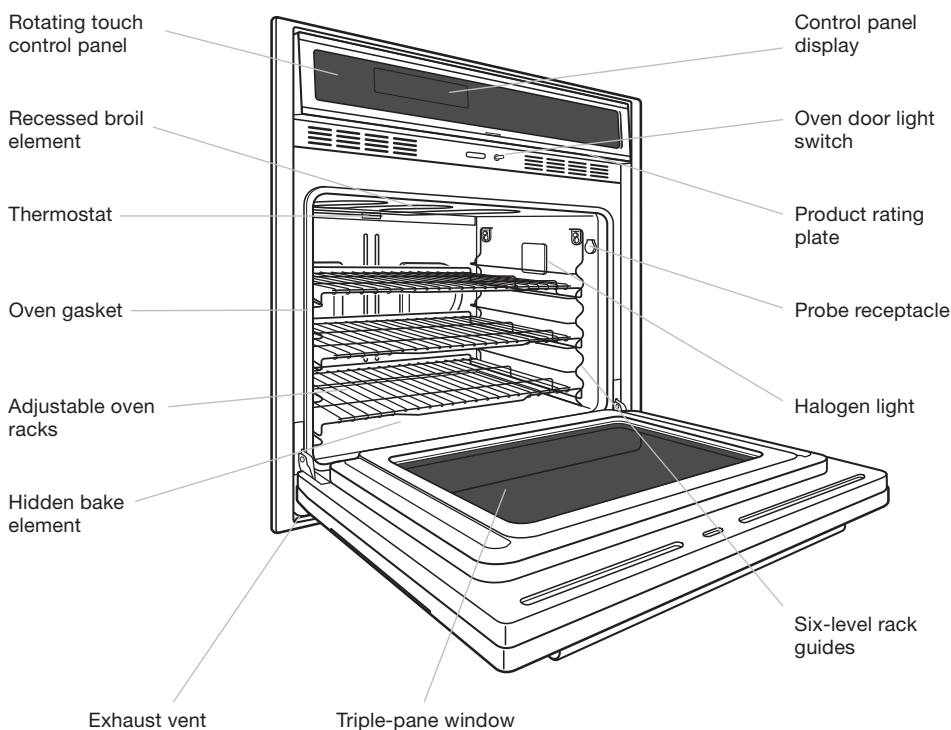


36" (914) Single Oven Features

- Unframed door style with tubular handle.
- Crafted of heavy-duty stainless steel.
- Dual convection oven with two fans for even heat distribution.
- Ten cooking modes—bake, roast, broil, convection bake, convection roast, convection broil, convection and proof—bake stone and dehydration modes require accessory.
- Wolf exclusive rotating glass touch control panel.
- Cobalt blue porcelain oven interior.
- Five-level rack guides with three adjustable oven racks; one full-extension easy glide, one full-extension door glide and one standard.
- Large viewing, triple-pane window and dual halogen interior lights.
- Hidden bake element and recessed broil element.
- Temperature probe and broiler pan.
- Self-clean, delayed start, timed cook and Sabbath features.
- Wolf exclusive spring and damper door hinge system for smooth opening and closing.
- CSA certified for US and Canada.
- Two and five year residential warranty—exclusions apply, see warranty at the end of this guide.

This appliance is certified by Star-K to meet strict religious regulations in conjunction with specific instructions found on www.star-k.org.

36" (914) L SERIES SINGLE OVEN

Model SO36U/S

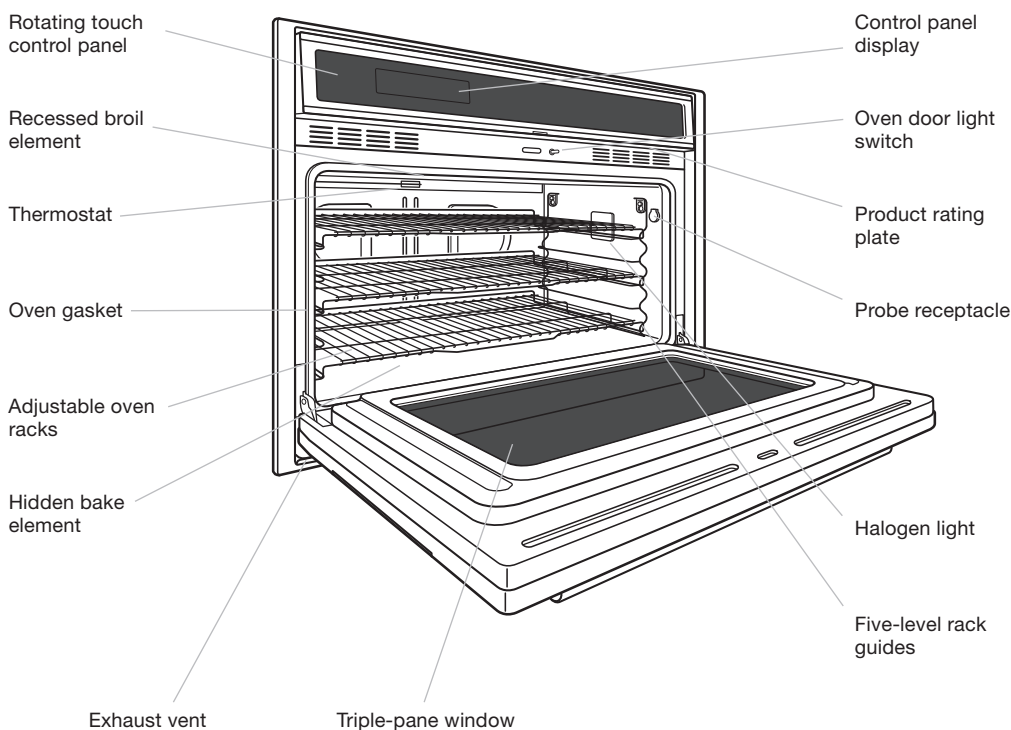


30" (762) Double Oven Features

- Framed and unframed door styles with tubular handles.
- Crafted of heavy-duty stainless steel.
- Dual convection ovens with two fans for even heat distribution.
- Ten cooking modes—bake, roast, broil, convection bake, convection roast, convection broil, convection and proof—bake stone and dehydration modes require accessory.
- Wolf exclusive rotating glass touch control panel with independent oven displays.
- Cobalt blue porcelain oven interiors.
- Six-level rack guides with three adjustable oven racks;
- one full-extension easy glide, one full-extension door glide and one standard in each oven.
- Large viewing, triple-pane windows and dual halogen interior lights.
- Hidden bake elements and recessed broil elements.
- Temperature probe and broiler pan.
- Self-clean, delayed start, timed cook and Sabbath features.
- Wolf exclusive spring and damper door hinge system for smooth opening and closing.
- CSA certified for US and Canada.
- Two and five year residential warranty—exclusions apply, see warranty at the end of this guide.

This appliance is certified by Star-K to meet strict religious regulations in conjunction with specific instructions found on www.star-k.org.

30" (762) L SERIES DOUBLE OVEN

Model DO30U/S shown

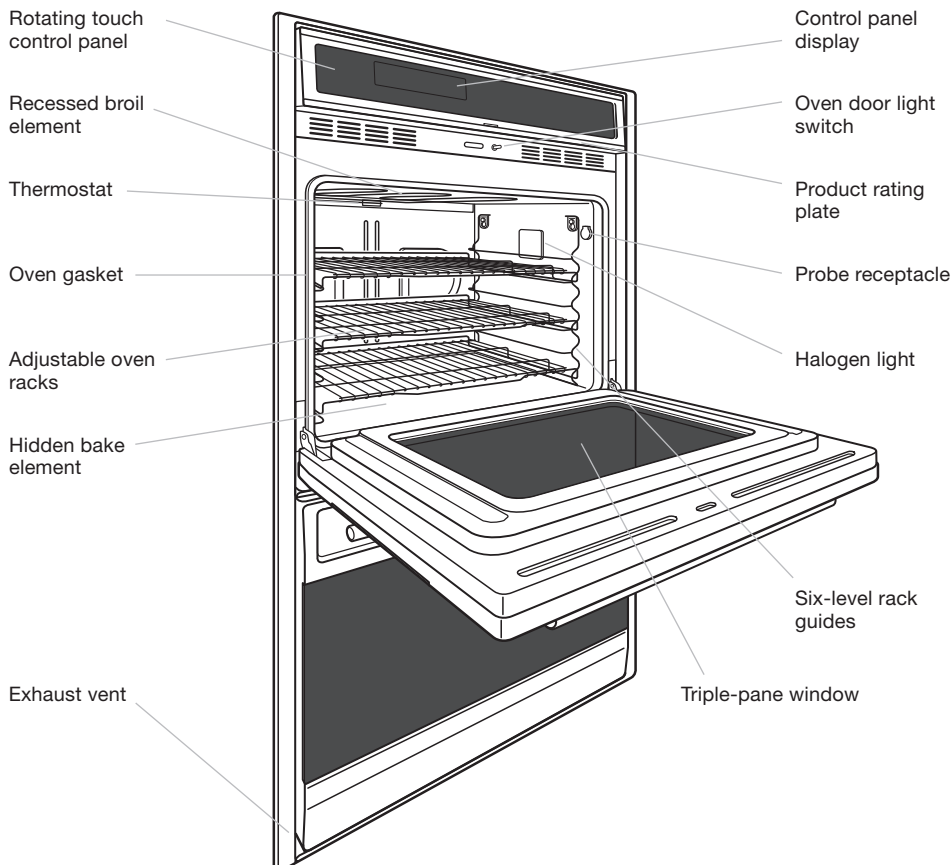

L Series Oven Features

- Multiple cooking modes, each dedicated to giving the best results for a specific kind of cooking. This is the ultimate in oven performance, fine-tuned for your individual cooking preferences.
- Large, easy-to-see and read graphics on control panel.
- Electronic responses and directions on the control panel are displayed using clear, concise words.
- On the double oven, two control panel displays, where the setting and status of each oven are clearly visible.
- Large cooking cavity increases usable oven capacity for extra-large baking pans and oversized turkeys.
- Bake element located beneath the oven floor makes it easy to access any spillover.
- Door hinge with hydraulic damper assures smooth opening and closing of the heavy door.
- Bottom rack can be fully extended, making it easier and safer to reach food in a hot oven.

Electronic Control Panel

To open or close the rotating control panel, press the switch directly below the control panel. When the electronic control panel is visible, the oven is operational.


The electronic control panel features touch pads for cooking modes and other operations. Refer to the illustrations below.

The control panel can be locked to keep it child-safe and prevent the oven from accidentally being turned on. To lock the control panel, touch and hold PANEL LOCK for three seconds. Two audible chimes will sound and 'Panel Locked' will appear in the control panel display for five seconds. To unlock, touch and hold PANEL LOCK for three seconds.


IMPORTANT NOTE: When the oven is in use, the control panel may be warm to the touch.

⚠ CAUTION

Do not place cookware on oven floor or use aluminum foil or other material to line the oven floor or side walls. Failure to adhere to this notice will damage the porcelain and will void your warranty.

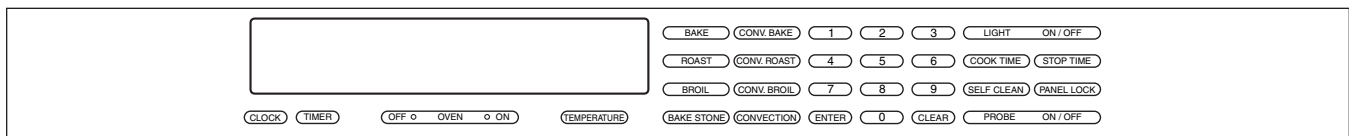

Single oven control panel.

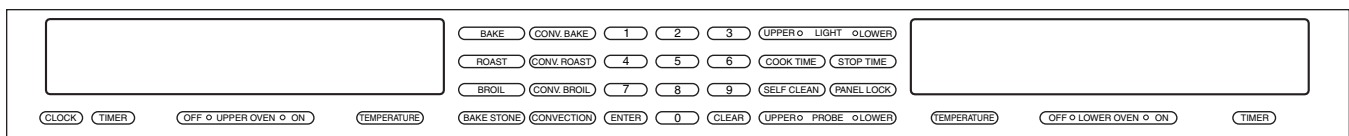

Double oven control panel.

Oven Operation

CHANGING OVEN TEMPERATURE

The oven temperature can be changed at any time once a cooking mode has been selected.

- 1) Touch TEMPERATURE.
- 2) Touch number pads to set new oven temperature.
- 3) Touch ENTER.

This will change the oven temperature immediately. If ENTER is not touched, the oven will automatically switch to the new oven temperature within five seconds.

OVEN PREHEAT

IMPORTANT NOTE: During preheat, the oven is heated in a manner unsuitable for cooking.

The oven preheat feature is used for all cooking modes except broil and convection broil. In order not to damage food, preheating will not occur once the oven reaches its set temperature. Increasing oven temperature during cooking will result in the oven taking a very long time to reach the new temperature. To reach a new temperature quickly, touch OFF to exit the current mode. Touch ON, then the desired cooking mode and enter a new temperature of at least 50° higher than the previous operating temperature.

AUTOMATIC SHUT OFF

As a safety feature, the L series oven(s) will shut off automatically after 12 hours of continual use, unless dehydration mode or Sabbath feature is in use.

BEFORE USING FOR THE FIRST TIME

Before using your L series oven for the first time, clean thoroughly with hot water and a mild detergent. Rinse and dry with a soft cloth. Refer to care recommendations on page 33.

Set the oven to CONV ROAST at 500°F (260°C) for one hour. Refer to page 18 for convection roast mode instructions. Allow the oven to cool gradually with the door closed.

This process will burn off any residual oil and grease used during the manufacturing process. A small amount of smoke and odor may be noticed during the initial break-in period. The oven door can be opened after the oven has cooled significantly. The first time the self-clean feature is used, there will be further burn-off that may create smoke and odor.

Time-of-Day Clock

Immediately after the oven is installed, set the 12-hour clock to the current time of day. It may need to be reset after a prolonged power failure. The clock is visible on the control panel during all modes. If the upper oven timer is set, the clock will not be visible in the upper oven control panel display.

SETTING CLOCK

- 1) Touch CLOCK.
- 2) Touch number pads to set current time of day.
- 3) Touch CLOCK or ENTER to start clock.

24-HOUR CLOCK

The time-of-day clock can be changed from a 12-hour clock to a 24-hour clock. After the clock has been set, touch TEMPERATURE for three seconds, touch CLOCK, then touch ENTER. Follow the same sequence to change back to the standard 12-hour clock setting.

Fahrenheit to Celsius

The oven can be changed from Fahrenheit (°F) temperature to Celsius (°C) or vice versa.

SETTING CONTROLS

- 1) Oven(s) must be off.
- 2) Press and hold TEMPERATURE on the control panel for 5 seconds for upper or lower oven.
- 3) Touch COOK TIME to change to F° or C°.
- 4) Touch ENTER. The new display of C° or F° is accepted 10 seconds after the selection if ENTER is not touched.

Oven Timer

Each oven has a timer which operates independently from the controls and from the other oven. Once a time is set in hours and minutes, the countdown is seen in the control panel display. Only the last minute counts down in seconds.

An audible signal acts as a reminder when the amount of time runs out. The timer will chime once at the beginning of the last minute, then again at the end of the time. To stop the signal, touch CLEAR. The maximum time that can be set is 9 hours and 59 minutes.

SETTING TIMER

- 1) Touch TIMER for the desired oven.
- 2) Touch number pads to set the hours and minutes.
- 3) Touch ENTER to start; touch CLEAR to stop timer setup.
- 4) When timing is complete, touch TIMER, then touch CLEAR to clear the timer.

Oven Racks

OVEN RACK GUIDES

To insert the rack guides in the oven, locate the screws in the oven side walls. Place the rack guide mounting tabs over the screw heads and slide down until the screws are fully seated in the tabs. Refer to the illustration below.

To remove the rack guides, pull the rack guide straight up and then out so that the mounting tabs clear the screw heads. Remove the rack guide from the oven.

IMPORTANT NOTE: Remove all oven racks and rack guides before using the self-clean feature. They will discolor if left in the oven during self-clean.

OVEN RACKS

To insert a rack in the oven, place the rack anti-tip lock under the side rack guide rails. Slide the rack toward the back of the oven and lift up to clear the rack stops. Continue sliding the rack until it is completely inside the oven.

To remove a rack from the oven, slide the rack forward and lift up and out, clearing the rack stops from the side rack guide rails. Refer to the illustration below.

The bottom oven rack has a full-extension capability. With the rack in rack guide position 1, slide it onto the stainless steel door guides. This adds stability to the rack when using a heavy pan for large meat and poultry. With the rack fully extended, it is easier to safely reach hot food. Refer to the illustration below for rack guide positions.


OVEN RACK ARRANGEMENT

One of the factors affecting optimum cooking results is the level of rack placement in the oven. Rack position 1 is closest to the bottom and position 6 is closest to the top. The Wolf cooking guide on pages 34–36 provides suggested rack positions for optimum results.

- When using only one rack, place rack in the center of the oven.
- When using only one rack for roasting meats, place rack on rack guide position 1, 2 or 3.
- When using two or three racks, place at least one rack position between them.
- When positioning racks, the easy glide rack can be placed in any position except position 1. The full-extension bottom rack was specifically designed to be placed in position 1.

▲ CAUTION

Use dry pot holders when handling oven racks. Racks become hot when the oven is on and hold heat after it is turned off.

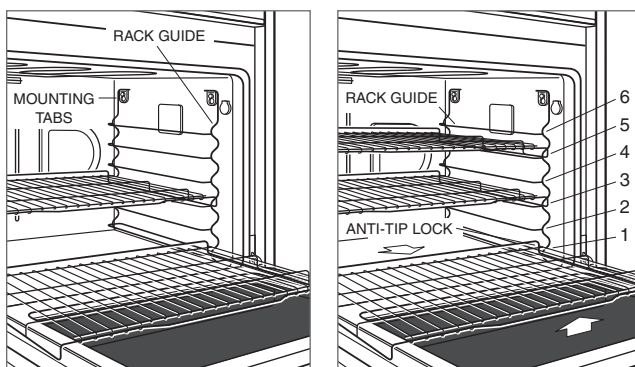

Oven rack guide removal.

Oven rack positions and full extension bottom rack.

Cooking Modes and Features

L series ovens feature ten cooking modes and multiple features for precise, easy-to-use control. Instructions for setting controls and tips for success are outlined for each mode and feature on the following pages.

IMPORTANT NOTE: The cooking modes and features on the following pages outline the operation for a single oven. To initiate a cooking mode or feature in a double oven, simply specify upper or lower oven on the control panel and follow the same steps as for a single oven.

COOKING MODES AND FEATURES

- Bake mode 14
- Roast mode 15
- Broil mode 16
- Convection bake mode 17
- Convection roast mode 18
- Convection broil mode 19
- Convection mode 20
- Proof mode 21
- Bake stone mode (with accessory) 22
- Dehydration mode (with accessory) 24
- Delayed start feature 25
- Temperature probe feature 26
- Timed cook feature 28
- Sabbath feature 28
- Self-clean feature 30

Bake Mode

In bake mode, both the hidden bake element and the broil element are used to heat the air, and they cycle on and off to maintain temperature. This mode is best for single-rack cooking, primarily baked foods. Always use bake mode for your standard recipes. The temperature probe may be used in this mode.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

WOLF TIPS FOR SUCCESS

- Always preheat for bake mode.
- During preheat, convection fans and elements are used to quickly and uniformly heat the oven.
- Use only one rack.
- Allow at least 1" (25) between edge of pan and walls of oven.
- Size, shape and finish of cookware affects baking time.
- Food cooked in dark metal pans cook somewhat faster than food cooked in shiny pans.
- Dark, nonstick pan coatings brown more than light, nonstick coatings.
- Use the interior oven light and window to check browning. Limit frequent door openings to prevent losing heat and lengthening total cooking time.

▲ CAUTION

Do not place cookware on oven floor or use aluminum foil or other material to line the oven floor or side walls. Failure to adhere to this notice will damage the porcelain and will void your warranty.

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch BAKE. Oven temperature is preset at 350°F (175°C). Oven begins to heat after 5 seconds. To change oven temperature from 350°F (175°C), immediately enter another temperature using the number pads.
- 3) Touch ENTER.
- 4) Add food when the chime signals that the oven has reached preheat temperature.
- 5) If the temperature probe is used, follow temperature probe feature directions on pages 26–27.
- 6) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 7) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 8) Touch oven OFF to end this mode.

Roast Mode

In roast mode, both bake and broil elements are used to heat the air, and they cycle on and off to maintain temperature. This is designed especially for roasting less tender cuts of meat that should be covered, such as chuck roasts, lamb shanks, pot roasts and stew meat. The temperature probe may be used in this mode.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

WOLF TIPS FOR SUCCESS

- Always preheat for roast mode.
- During preheat, convection fans and elements are used to quickly and uniformly heat the oven.
- Roasting bags may be used.
- When roasting a large item, such as a turkey, the pan should not cover the entire rack and block heat from circulating naturally.
- Cook stuffed turkeys weighing over 15 lbs (6.8 kg) in roast mode. Always cook stuffing to an internal temperature of 165°F (75°C).

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch ROAST. Oven temperature is preset at 350°F (175°C). Oven begins to heat after 5 seconds. To change oven temperature from 350°F (175°C), immediately enter another temperature using the number pads.
- 3) Touch ENTER.
- 4) Add food when the chime signals that the oven has reached preheat temperature.
- 5) If the temperature probe is used, follow temperature probe feature directions and USDA temperature recommendations on pages 26–27.
- 6) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 7) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 8) Touch oven OFF to end this mode.

Broil Mode

In broil mode, the top heating element is used to produce an intense, radiant heat that browns one side of the food at a time.

Broiled foods usually must be turned over to brown the other side and finish cooking. The high heat cooks quickly and gives a rich, brown outer appearance. This mode is best for meats, fish and poultry pieces up to 1" (25) thick. The temperature probe cannot be used with this mode.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

WOLF TIPS FOR SUCCESS

- Do not preheat for broil mode.
- Broil with oven door closed.
- Preferred for meat, fish and poultry pieces equal to or less than 1" (25) thick.
- Always use the two-piece broiler pan shipped with your oven. Always use slotted top grid of broiler pan. It allows fat to drip away from food and from intense radiant heat. This reduces spattering, smoking and risk of fire.
- Turn food halfway through cooking time.
- Brush lean meat and fish with peanut oil before cooking to prevent sticking.
- Start cooking poultry with skin side down.
- Begin with cold food directly from the refrigerator.

SETTING CONTROLS

- 1) Place food in oven at the desired rack position. Close oven door.
- 2) Touch desired oven ON.
- 3) Touch BROIL. Oven temperature is preset at 1 for 550°F (290°C) high broil. Oven begins to broil after 5 seconds. To change setting, immediately touch 2 number pad for 450°F (230°C) medium broil or 3 for 350°F (175°C) low broil.
- 4) Touch ENTER.
- 5) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 6) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 7) Touch oven OFF to end this mode.

▲ CAUTION

When turning food or checking doneness, open the door carefully. Smoke and steam may have accumulated. Never use heatproof glass (e.g. Pyrex) or pottery. They can shatter.

Convection Bake Mode

Convection bake mode combines heat from two convection elements with some heat from the bake element that is located beneath the oven floor. Two convection fans circulate this heat within the oven cavity. The added heat source from the bottom of the oven makes this mode ideal for pie baking. The temperature probe may be used in this mode.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

WOLF TIPS FOR SUCCESS

- Always preheat for convection bake mode.
- Reduce standard recipe temperatures by 25° in this mode.
- Bake multiple pies on the same rack, rather than on different racks.
- This mode is ideal for single rack baking.

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch CONV BAKE. Oven temperature is preset at 375°F (190°C). Oven begins to heat after 5 seconds. To change oven temperature from 375°F (190°C), immediately enter another temperature using the number pads.
- 3) Touch ENTER.
- 4) Add food when the chime signals that the oven has reached preheat temperature.
- 5) If the temperature probe is used, follow temperature probe feature directions on pages 26–27.
- 6) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 7) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 8) Touch oven OFF to end this mode.

Convection Roast Mode

In convection roast mode, heat from both convection fans, with additional heat from the broil element, intensifies the convective and radiant heating. This combination gently browns the exterior and seals in juices, making it perfect for roasting tender cuts of beef, lamb, pork and poultry. The temperature probe may be used in this mode.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

WOLF TIPS FOR SUCCESS

- Always preheat oven for convection roast mode.
- Use low-sided, uncovered pans on a roast rack to cook food.
- Reduce standard recipe temperatures by 25° in this mode.
- The lower part of the broiler pan with a meat rack makes an excellent roasting pan.
- Roasting time may be less than expected; check doneness earlier than usual.
- Select foods that are to be roasted uncovered.
- Begin with cold food directly from the refrigerator.
- Cook stuffed turkeys weighing over 15 lbs (6.8 kg) in roast mode. Always cook stuffing to an internal temperature of 165°F (75°C).

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch CONV ROAST. Oven temperature is preset at 325°F (165°C). Oven begins to heat after 5 seconds. To change oven temperature from 325°F (165°C), immediately enter another temperature using the number pads.
- 3) Touch ENTER.
- 4) Add food when the chime signals that the oven has reached preheat temperature.
- 5) If the temperature probe is used, follow temperature probe feature directions and USDA temperature recommendations on pages 26–27.
- 6) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 7) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 8) Touch oven OFF to end this mode.

Convection Broil Mode

In convection broil mode, intense radiant heat from the top element browns and sears the surface of the food while both convection fans circulate hot air around the food.

This mode shortens broiling times for thicker cuts of meat, fish and poultry. The heat of the broiler browns the exterior, while the convection fans keep the interior moist and juicy. The temperature probe cannot be used with this mode.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

WOLF TIPS FOR SUCCESS

- Do not preheat for convection broil mode.
- Convection broil with oven door closed.
- Preferred for meat, fish and poultry pieces thicker than 1" (25).
- Always use the two-piece broiler pan packaged with your oven. Always use slotted top grid of broiler pan. It allows fat to drip away from food and from intense radiant heat. This reduces spattering, smoking and risk of fire.
- Turn food halfway through cooking time.
- Brush lean meat and fish with peanut oil before cooking to prevent sticking.
- Start cooking poultry with skin side down.
- Begin with cold food directly from the refrigerator.

SETTING CONTROLS

- 1) Place food in oven at the desired rack position. Close oven door.
- 2) Touch desired oven ON.
- 3) Touch CONV BROIL. Oven temperature is preset at 1 for 550°F (290°C) high broil. Oven begins to broil after 5 seconds. To change setting, immediately touch 2 number pad for 450°F (230°C) medium broil or 3 for 350°F (175°C) low broil.
- 4) Touch ENTER.
- 5) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 6) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 7) Touch oven OFF to end this mode.

▲ CAUTION

When turning food or checking doneness, open the door carefully. Smoke and steam may have accumulated. Never use heatproof glass (e.g. Pyrex) or pottery. They can shatter.

Convection Mode

In convection mode, dual convection fans, each with a heating element, operate from the back of the oven to move the heated air throughout the entire oven cavity. Uniform air movement makes it possible to multi-level rack cook in this mode. The heat is cycled on and off to maintain the temperature, resulting in evenly browned food. The temperature probe may be used in this mode.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

WOLF TIPS FOR SUCCESS

- Always preheat for convection mode.
- Use low-sided, uncovered pans to cook foods.
- A 14" (356) x 16" (406) baking sheet is an optimum size. Allow at least 1" (25) between edge of pan and walls of oven.
- Reduce standard recipe temperatures by 25° in this mode.
- Pans do not need to be staggered when cooking on more than one rack.
- Baking time may be less than expected; check doneness 5 to 10 minutes early.

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch CONVECTION. Oven temperature is preset at 325°F (165°C). Oven begins to heat after 5 seconds. To change oven temperature from 325°F (165°C), immediately enter another temperature using the number pads.
- 3) Touch ENTER.
- 4) Add food when the chime signals that the oven has reached preheat temperature.
- 5) If the temperature probe is used, follow temperature probe feature directions on pages 26–27.
- 6) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 7) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 8) Touch oven OFF to end this mode.

Proof Mode

In proof mode, a combination of broil and bake elements are used to heat and balance the air to maintain temperature. This mode is ideal for proofing, or rising bread dough.

WOLF TIPS FOR SUCCESS

- No need to preheat for proof mode.
- Proof bread until dough has doubled in bulk.
- For best results, place a shallow pan with 1 to 3 cups (.2-.7 L) boiling hot water on rack position 1 to keep the air moist inside the oven cavity.
- The oven does not allow the temperature to be set above 110°F (45°C) in proof mode. If the oven is too hot, the oven door should be opened to allow the oven to cool down below 120°F (50°C) to prevent destroying the yeast.
- Allow at least 1" (25) between edge of pan and walls of oven.
- Limit frequent door openings to prevent losing heat and lengthening proofing time.

⚠ CAUTION

Do not place cookware on oven floor or use aluminum foil or other material to line the oven floor or side walls. Failure to adhere to this notice will damage the porcelain and will void your warranty.

SETTING CONTROLS

- 1) Place dough in oven-safe dish in oven.
- 2) Touch desired oven ON.
- 3) Touch and hold BAKE for 3 seconds to put oven into proof mode. Oven temperature is preset to 85°F (30°C). To change the temperature from 85°F (30°C), immediately touch another temperature, from 85°F (30°C) to 110°F (45°C), using the number pads.
- 4) Touch ENTER or wait 10 seconds and the oven will begin to heat automatically.
- 5) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 6) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 7) Touch oven OFF to end this feature.


Bake Stone Mode

A specially designed rack and bake stone are used for bake stone mode to assure the food quality expected from this specific form of cooking. To produce a hot oven environment necessary for baking on a ceramic stone, the heat from all elements creates the perfect “brick oven” effect. Both convection fans help circulate the air throughout the oven cavity, so even temperatures are achieved. The temperature probe may be used in this mode.

To prepare the oven, remove all oven racks. Slide the bake stone rack onto rack guide position 1 and place the bake stone on the rack with the lip hanging over front edge of rack. Refer to the illustration below. Preheat the oven for approximately 35 minutes when using bake stone mode.

IMPORTANT NOTE: Use care in handling the bake stone. It will chip or break if dropped.

Refer to the Wolf cooking guide on pages 34–36. Use cooking times as a guide for similar foods.

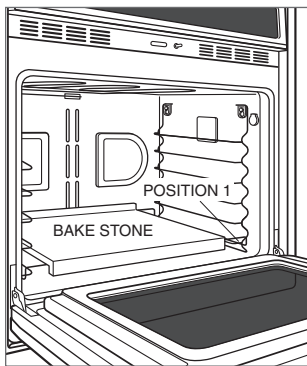

Bake stone placement.

WOLF TIPS FOR SUCCESS

- Always preheat for bake stone mode after positioning the oven rack and ceramic stone. Allow approximately 35 minutes for this function to reach the set oven temperature. For best results, preheat oven for one hour before adding food.
- During preheat, convection fans and all elements are used to quickly and uniformly heat the oven.
- Use only the Wolf bake stone in bake stone mode.
- Use only one bake stone rack per oven.
- Food is usually cooked directly on the stone. To prevent sticking, apply plenty of cornmeal or flour to the bottom of the food.
- When baking a series of breads or pizzas in a row, allow 5 minutes between foods for the bake stone to return to the proper temperature.
- Bake stone and rack should be removed after baking and not left in oven during any of the other cooking modes.

⚠ CAUTION

Avoid cooking foods with a high fat content on the bake stone. The porous ceramic material will absorb grease and discolor the stone. Flare-ups can occur.

Bake Stone Mode

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch BAKE STONE. Oven temperature is preset at 400°F (205°C). Oven begins to heat after 5 seconds. To change oven temperature from 400°F (205°C), immediately enter another temperature using the number pads.
- 3) Touch ENTER.
- 4) Add food when the chime signals that the oven has reached preheat temperature.
- 5) If the temperature probe is used, follow temperature probe feature directions on pages 26–27.
- 6) If the timer is set, the oven will chime when one minute is left on the timer and will chime again when cooking time is finished. If the timer is not cleared, it will continue to chime every 30 seconds.
- 7) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 8) Touch oven OFF to end this mode.

BAKE STONE ACCESSORY

The bake stone accessory is available through your authorized Wolf dealer. For local dealer information, visit the find a showroom section of our website, wolfappliance.com. Additional use & care information is provided with the bake stone accessory.

BAKE STONE CARE

Remove excessive food using a scraper. Brush off any crumbs. Allow the stone to cool completely before wiping with a wet cloth. Wet cloths on a hot surface can cause steam burns. Do not soak or immerse the bake stone in water and do not use soap or detergent. The ceramic stone could absorb the taste and transmit those flavors to the food.

Stubborn stains may occur on the bake stone. These will not impair the flavor of the food being baked.

Allow the bake stone to cool completely before removing from oven.

IMPORTANT NOTE: Use care in handling the bake stone. It will chip or break if dropped.

▲ CAUTION

Allow the bake stone to cool completely before wiping with a wet cloth. Wet cloths on a hot surface can cause steam burns.

Dehydration Mode

Dehydration mode allows for slowly drying out food for preservation and other cooking uses. Use the convection mode for dehydration. Wolf accessory dehydration racks (not included with the oven) are required. This mode is suitable for drying a variety of fruits, vegetables, herbs and meat strips.

IMPORTANT NOTE: As a safety feature, the L series oven will shut off after 12 hours. Dehydration mode overrides the 12-hour shut off.

DEHYDRATION ACCESSORY

Dehydration racks are available through your authorized Wolf dealer. For local dealer information, visit the find a showroom section of our website, wolfappliance.com. Additional instructions are provided with the dehydration rack accessory.

WOLF TIPS FOR SUCCESS

- Do not preheat when using dehydration mode.
- Multiple racks can be used simultaneously.
- Some foods require as many as 14 to 15 hours to fully dehydrate.
- Consult a food preservation book for specific times and handling of various foods.

⚠ CAUTION

Foods must be dried to below .60 water activity or dry to the touch to be safely stored with no danger of mold, yeasts or bacteria growing. When in doubt, dehydrate for the maximum time specified.

SETTING CONTROLS

- 1) Place food in oven on dehydration racks.
- 2) Place door stop (supplied with dehydration accessory) in the proper position to keep oven door open. Refer to instructions provided with the accessory kit.
- 3) Touch and hold CONVECTION for 3 seconds to put the oven into dehydration mode.
- 4) Oven preset temperature is 135°F (60°C). To change the temperature setting, immediately touch another temperature; 110°F (45°C) to 160°F (70°C) using the number pads.
- 5) Touch ENTER or wait 5 seconds and the oven will begin to heat automatically.
- 6) Leave food in oven until completely dry to the touch.
- 7) Remove food from racks before completely cool for easy removal. If sticking occurs, place racks back in the oven to warm slightly for easier removal.
- 8) Touch oven OFF to end this mode.

DEHYDRATION GUIDE

The following is a list of foods commonly dehydrated. Use dehydration times as a guide for similar foods. Place food on dehydration racks with no overlapping. Oven preset temperature for dehydration is 135°F (60°C).

- **Apples:** Slice 1/4" (6) thick. Remove seeds and stems. Dehydrate 6–7 hours.
- **Bananas:** Slice 1/4" (6) thick. Dehydrate 12–13 hours.
- **Green Bell Peppers:** Wash, seed and stem. Slice 1/4" (6) thick or into 1" (25) x 2" (51) chunks. Dehydrate 14–15 hours.
- **Tomato Slices:** Wash, seed and stem. Slice 1/4" (6) thick. Dehydrate 6–7 hours.
- **Tomato Chunks:** Wash, seed and stem. Cut each tomato into 16 equal pieces. Dehydrate 12–13 hours.

Delayed Start Feature

Delayed start feature controls the automatic timing of the oven's ON and OFF function. Set a mode to start later in the day and shut off when the cooking is complete or set it to shut off at a preset time. Use in combination with any cooking mode except broil, convection broil and bake stone.

WOLF TIPS FOR SUCCESS

- Ovens can be set independently.
- Do not delay the start when preheating is critical to the cooking results.
- When using the delayed start feature, place food directly from the refrigerator into the oven.
- The time-of-day clock must display the correct time prior to programming a timed activity.

FOOD SAFETY GUIDELINES

WARNING

Food safety is important. Adhere to the following guidelines to avoid potential illness or spoilage of food:

- Perishable food should not be left out more than 2 hours at room temperature; 1 hour when the temperature is above 90°F (30°C). For more information, see www.usda.com.
- Avoid using foods that will spoil before the cooking cycle begins. These include eggs, dairy products, cream soups, cooked and uncooked meats, poultry and fish.
- If cooking will not begin immediately, place only very cold or frozen food into the oven.

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch desired cooking mode (except BROIL, CONV BROIL and BAKE STONE). Change preset temperature if needed.
- 3) Touch STOP TIME. Use the number pads to set the time of day the oven will shut off. Example: Set 6:00 for the time of day the oven turns off.
- 4) Touch COOK TIME. Use the number pads to set the number of hours/minutes the oven will stay on. Example: Set 3:30 for the oven to remain on for 3¹/₂ hours.
- 5) Touch ENTER. The display appears as if the oven is on. Using the example above, the oven will start heating at 2:30 and remain on for 3¹/₂ hours, turning off at 6:00.
- 6) One audible chime will sound before the last minute of the cooking time. Three chimes that repeat every 30 seconds signal the end of cooking time.
- 7) The oven will shut off after the stop time has been reached.
- 8) Remove food. Always use dry pot holders when removing hot pans from the oven.
- 9) Touch oven OFF to clear the display and stop the signal.

Temperature Probe Feature

The temperature probe measures doneness by measuring the internal temperature of food without opening the oven door. It is a convenient and accurate way to achieve the perfect doneness regardless of the type, cut or weight of the food. Calculating a total cooking time by weight is no longer necessary using this feature. Use with all modes except broil and convection broil modes.

IMPORTANT NOTE: The accuracy of the probe is decreased for all temperatures below 100°F (40°C). Food taken directly from the refrigerator could display the incorrect temperature until it has reached 100°F (40°C).

WOLF TIPS FOR SUCCESS

- Insert sensor into the thickest part of meat before placing in oven.
- To determine the center, hold sensor outside of the meat with point at center of cut. Mark length of insertion by placing your fingers on sensor at top of meat. Move sensor to thickest part of meat and insert up to your fingers.
- Standing time refers to the 10- to 15-minute time period the meat rests before being carved. This helps more juices to be retained in the meat.
- For poultry, insert probe into the thickest part of the thigh.
- Use aluminum foil to cover meat during the standing time to help keep it hot before carving.
- Wash probe by hand; do not soak or clean in the dishwasher.

INTERNAL TEMPERATURE

The internal temperatures shown in the chart below are USDA recommended carving temperatures.

INTERNAL TEMPERATURE

| DONENESS | INTERNAL TEMP |
|----------------------------|---------------|
| BEEF, LAMB AND VEAL | |
| Rare | 140°F (60°C) |
| Medium Rare | 145°F (65°C) |
| Medium | 160°F (70°C) |
| Well Done | 170°F (75°C) |
| PORK | |
| Well Done | 170°F (75°C) |
| POULTRY | |
| Well Done Breast | 170°F (75°C) |
| Well Done Thigh | 180°F (80°C) |
| Well Done Stuffing | 165°F (75°C) |

Temperature Probe Feature

SETTING CONTROLS FOR MEATS

- 1) Preheat oven to desired oven temperature in desired mode.
- 2) Place meat on a rack in the roasting pan. Insert the probe sensor into the thickest part of the meat as described in tips for success on the previous page.
- 3) When the oven signals that preheat is completed, use a dry pot holder to lift the probe sensor cover. Slide the probe connector into the receptacle on the wall of the oven until it snaps into place. Close the oven door.
- 4) Touch PROBE. Touch number pads for the carving temperature of the meat. It is recommended that meat be allowed to rest before carving.
- 5) Touch ENTER. The word 'Lo' appears as the probe temperature until it registers 100°F (40°C). Then it shows the degrees as they count up to the doneness setting. The display alternates between the probe temperature and the oven temperature.
- 6) When the probe temperature is reached, three chimes signal doneness. Remove probe from the oven receptacle. The chime continues every 30 seconds until the probe is unplugged or until you touch CLEAR.
- 7) To end this feature and turn the oven off, touch oven OFF.

IMPORTANT NOTE: If the probe connector is not fully seated into the probe receptacle, you will hear an audible signal, and PROBE SHORTED will show in the display. Refer to the troubleshooting guide on page 37.

SETTING CONTROLS FOR BREADS

- 1) Preheat oven to desired oven temperature in bake or bake stone mode.
- 2) Place bread on bake stone or in oven in bread pans.
- 3) Bake 10 minutes at the desired oven temperature.
- 4) Insert probe sensor into the thickest part of the bread.
- 5) Using a dry pot holder, lift the probe sensor cover. Slide the probe connector into the receptacle on the wall of the oven until it snaps into place. Close the oven door.
- 6) Touch PROBE. Touch number pads for the end internal baking temperature, 195°F (90°C) to 210°F (100°C).
- 7) Touch ENTER. The word 'Lo' appears as the probe temperature until it registers 100°F (40°C). Then it shows the degrees as they count up to the doneness setting. The display alternates between the probe temperature and the oven temperature.
- 8) When the probe temperature is reached, three chimes signal doneness. Remove probe from the oven receptacle. The chime continues every 30 seconds until the probe is unplugged or until you touch CLEAR.
- 9) To end this feature and turn the oven off, touch oven OFF.

⚠ CAUTION

Probe and probe sensor cover become very hot.
Handle with a dry pot holder.

Timed Cook Feature

Timed cook feature allows the oven to shut off automatically when cooking is complete. Use in combination with any cooking mode except broil, convection broil and bake stone.

SETTING CONTROLS

- 1) Touch oven ON.
- 2) Touch cooking mode, such as BAKE. Change preset temperature if needed.
- 3) Touch COOK TIME. Use the number pads to set the number of hours/minutes the oven is to stay on.
- 4) Touch ENTER. Oven begins to heat after 5 seconds. Stop time will automatically be added to the display. At the end of cook time, oven turns off.
- 5) Touch oven OFF or CLEAR to clear the display.

Sabbath Feature

STAR-K CERTIFIED

Sabbath feature allows for baking or keeping food warm while adhering to the “no work” requirements on religious Sabbath days. It provides an unchanging heat source for an uninterrupted extended period of time. Once the oven reaches its desired temperature, it does not change. Use this feature only in the bake and roast modes.

While in Sabbath mode, the oven will stay on indefinitely until manually turned off. Oven temperature may be adjusted, but the display will remain unchanged. Lights stay either on or off, all chimes are turned off and heating cycles are not interrupted by opening the door.

For double ovens, ovens can be set independently, though both ovens will be set in Sabbath feature. Each oven can have options individually set such as temperature and lights.

IMPORTANT NOTE: As a safety feature, the L series oven will shut off after 12 hours. Sabbath feature overrides the 12-hour shut off.

IMPORTANT NOTE: After a power outage, the oven will not return to the Sabbath feature settings.

Sabbath Feature

SETTING CONTROLS

- 1) Touch desired oven ON.
- 2) Touch oven LIGHT ON, turning on the lights in one or both ovens (optional).
- 3) Touch BAKE or ROAST. Oven is preset at 350°F (175°C). To change oven temperature, immediately enter another temperature using number pads.
- 4) Touch ENTER. If preferred, repeat the above steps with other oven.
- 5) Touch and hold ENTER for 5 seconds to set Sabbath feature.
- 6) Oven chimes twice and 'SABBATH' appears in the control panel display. To change oven temperature while in Sabbath feature, touch TEMPERATURE, the number pads for desired oven temperature and touch ENTER. The oven will randomly change oven temperature.
- 7) Touch oven OFF to end this feature. Oven remains on until this feature is cancelled.

EXAMPLE: To set Sabbath feature in a double oven with upper oven in roast mode set at 240°F (115°C) and lower oven in bake mode set at 200°F (95°C).

- To set upper oven: Touch upper oven ON. Touch ROAST. Enter 2-4-0 using the number pads. Touch ENTER.
- To set lower oven or a single oven: Touch lower oven ON. Touch BAKE. Enter 2-0-0 using the number pads. Touch ENTER.
- Touch and hold ENTER for 5 seconds to enter Sabbath feature.
- Touch desired oven OFF to end this feature. Oven(s) remain on until the feature is cancelled.

SETTING CONTROLS FOR TIMED COOK

- 1) Add food to the oven.
- 2) Touch desired oven ON.
- 3) Touch BAKE or ROAST. Oven is preset at 350°F (175°C). To change oven temperature, immediately enter another temperature using number pads.
- 4) Touch COOK TIME. Use the number pads to set the number of hours/minutes the oven will stay on. Example: Set 3:30 for the oven to remain on for 3¹/₂ hours.
- 5) Touch STOP TIME. Use the number pads to set the time of day the oven will shut off.
- 6) Touch oven LIGHT ON or OFF as desired.
- 7) For double ovens, repeat steps 1–6 with other oven. Touch and hold ENTER for 5 seconds to set Sabbath feature. 'SABBATH' appears in the control panel display(s).
- 8) When cooking time is finished, remove food. Ovens cannot be reset until the Sabbath feature is manually ended.
- 9) After the Sabbath or holiday is over, touch oven OFF to end this feature.

Self-Clean Feature

With the self-clean feature, the oven is heated in graduated steps to a high preset temperature. During this process, food soil is burned off, leaving some white ash residue. For safety, the oven door automatically locks during self-clean and unlocks when the oven has cooled to below 300°F (150°C). If you stop the self-clean cycle before completion, the door will remain locked until the oven has cooled sufficiently. Oven lights are deactivated during self-clean.

Set in combination with delayed start feature, the self-clean feature can be programmed to start at a later time. Refer to delayed start feature on page 25.

IMPORTANT NOTE: For a double oven, the self-clean feature may be used in only one oven at a time and the other oven cannot be used for cooking.

IMPORTANT NOTE: Before using the self-clean feature, remove all oven racks and rack guides. They will discolor if left in the oven during self-clean. Refer to oven racks on page 12.

IMPORTANT NOTE: Never use oven cleaners. They are not necessary with the self-clean feature.

You may hear a popping or crackling sound during the self-clean cycle. These sounds are normal and are caused by the expansion and contraction of metal surfaces as they heat up and cool down. It is also normal to see a brief flame-up, depending on the amount and content of the soil.

IMPORTANT NOTE: A small amount of smoke and odor may be noticed during the first self-clean cycle, as residual oil and grease used during the manufacturing process is burned off.

⚠ CAUTION

Do not use commercial oven cleaners or oven liner protective coatings on or around any part of the oven.

⚠ CAUTION

The oven gasket is important for a good seal. Do not hand clean, rub, puncture or remove this gasket.

⚠ CAUTION

Never wipe a warm or hot porcelain surface with a damp sponge. It may cause chipping or crazing (tiny hairlike lines).

Self-Clean Feature

WOLF TIPS FOR SUCCESS

- Before using the self-clean feature, remove the oven racks and rack guides. They will discolor if left in the oven during self-clean.
- Remove broiler pan and any other utensil stored inside the oven.
- Remove any food particles and grease from spillovers before starting self-clean.
- Food with high sugar or acid content, such as fruit juice, milk and tomatoes, may cause a permanent dull spot. Wipe up immediately or remove with a razor blade scraper before using the self-clean feature.
- Use the self-clean feature as often as necessary. Do not wait until heavy soil accumulates.
- After the self-clean cycle is complete and the oven has cooled, use a damp sponge or paper towel to wipe up any ash.

SETTING CONTROLS

- 1) Remove all oven racks and rack guides before using the self-clean feature. Touch oven ON.
- 2) Touch SELF CLEAN. The control panel will automatically scroll the following message: Remove all oven racks and rack guides. Press ENTER to continue.
- 3) Press ENTER to start the default clean for a total time of 4 hours—cleaning for 3 hours and cool down for 1 hour.
- 4) The cleaning time can be adjusted to any amount of time between 3 and 4 hours. Press COOK TIME, then enter the cleaning time. For best results, the cleaning time should be set at 4 hours.
- 5) Enter the desired stop time and press ENTER. The oven will automatically start and stop based on the desired cleaning time and stop time.
- 6) Touch desired oven OFF to clear the display when oven is finished cleaning.

▲ WARNING

During self-clean, exterior surfaces may get hotter than usual. Children should be kept away.

Oven Light Bulb Replacement

⚠ WARNING

Shut off electrical power to the oven before replacing light bulb.

IMPORTANT NOTE: Allow the oven to cool sufficiently before replacing the light bulb.


The oven uses a 20-watt halogen light bulb. Oven rack guides must be removed to access the light bulb. Refer to page 12.

To remove the light cover, place a hot pad against the oven wall, press a screwdriver against the hot pad and under the edge of the light cover. Gently pry the edge of the light cover up and away from the wall. Be careful not to scratch the porcelain oven interior. Use a paper towel to handle the light bulb and remove it from the socket.

Avoid direct contact with the replacement bulb. Handle with a paper towel to keep oil from fingers off the bulb, or the bulb will burn out at first use. To replace the light bulb, insert the bulb prongs into the socket until it snaps into place. Replace the light cover and oven rack guides. Turn on electrical power and reset the time-of-day clock.

⚠ CAUTION

Use caution when handling light bulbs. Halogen bulbs get hot instantly and adjacent parts may retain heat.

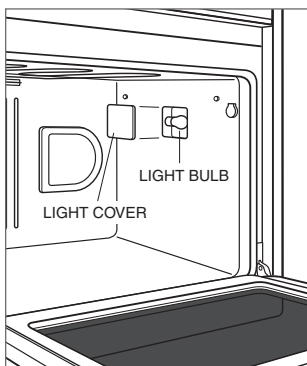

Light bulb replacement.

Bakeware Selection

For best results, we recommend medium- to heavy-weight bakeware. Use the following guidelines when selecting bakeware:

- A 14" (356) x 16" (406) baking sheet is an optimum size for the ovens. Allow at least 1" (25) between edge of pan and walls of oven.
- Size, shape and finish of bakeware affects the baking time. Food on insulated bakeware cooks more slowly. Food cooked in dark metal pans may cook faster than food cooked in shiny pans.
- Dark, nonstick pan coatings brown more than light, nonstick coatings.

Care Recommendations

Oven exterior, handle and trim (stainless steel).

- Do not use abrasive cleaners; they will permanently scratch the surface.
- Exterior cleaning: Use a soft, nonabrasive stainless steel cleaner like Signature polish and apply with a soft, lint-free cloth. To bring out the natural luster, lightly wipe the surface with a water-dampened microfiber cloth, followed with a dry microfiber cloth. All work should follow the grain direction of the finish. Best results are obtained by keeping the cloth in continuous contact with the metal. Signature polish is available from Signature Limited Laboratory, P. O. Box 13436, Dayton, Ohio 45413, 877-376-5474.

Oven cavity and door interior (porcelain enamel).

- Never wipe a warm or hot porcelain surface with a damp sponge; it may cause chipping or crazing (tiny hairlike cracks).
- General care: When cool, clean splatters and spills immediately. Do not allow food with a high sugar or acid content, such as milk, tomatoes, sauerkraut, fruit juices or pie filling, to remain on any porcelain enamel surface. Failure to remove these foods may cause a permanent dull spot. When hand cleaning a spot, use only non-abrasive cleaners or scrubbers.
- Self-clean feature can be used.

Oven door window (heat-tempered glass).

- When the window is cool, use a razor blade to gently lift baked-on foods with a multi-surface spray cleaner.

Oven light cover (heat-tempered glass).

- When the oven is cool, follow instructions on page 32 to remove oven light cover. Wash with mild abrasive cleaner. Rinse and dry thoroughly. Replace oven light cover. A 20-watt halogen oven light bulb replaces the existing bulb.

Oven racks and rack guides (nickel-plated steel).

- Before using the self-clean feature, remove oven racks and rack guides. They will discolor if left in the oven during self-clean. Clean with steel wool soap pad and hot water. Rinse and dry.

Oven gasket (fiberglass netting and wire).

- Do not hand clean, rub, puncture or remove the oven gasket; this may compromise the tight door seal.

Broiler pan (porcelain enamel).

- Top: While slightly warm, place in the sink and lay dish towels on top. Pour very hot water on the towels and allow steam to soften cooked-on residue. Clean with hot water and a mild detergent. Rinse and dry.
- Bottom: Pour grease into a disposable can. When cool, wash in hot water and a mild detergent. Rinse and dry.

Bake stone (ceramic).

- Use care in handling the bake stone. It will chip or break if dropped. Do not soak or immerse the bake stone in water and do not use soap or detergent. Refer to bake stone care on page 23.

Control panel (polycarbonate plastic).

- Do not use abrasive cleaners, steel-wool pads, gritty washcloths or some paper towels. Damage may occur.
- Use glass cleaners or all-purpose cleaners (without oil) with soft cloth or sponge. Apply cleaner to soft cloth or sponge, not directly to the panel.

Cooking Guide

BAKED GOODS

| FOOD | COOKING MODE | OVEN TEMPERATURE | RACK POSITION | COOKING TIME |
|---|--------------|-------------------------------|-----------------------|-----------------|
| BREAD | | | | |
| Biscuits* (multiple trays) | Bake | 450°F (230°C) | 4 | 8–10 min |
| | Convection | 425°F (220°C) | 2 and 5 or 2, 4 and 6 | 8–10 min |
| Cinnamon rolls (multiple trays) | Bake | 350°F (175°C) | 4 | 20–25 min |
| | Convection | 325°F (165°C) | 2 and 5 | 20–25 min |
| Rolls (multiple trays) | Bake | 350°F (175°C) | 4 | 20–25 min |
| | Convection | 325°F (165°C) | 2 and 5 | 15–20 min |
| Yeast bread** | Convection | 325°F (165°C) | 4 | 25–30 min |
| Yeast loaf** | Bake Stone | 400°F (205°C) | 1 | 10–15 min |
| Cornbread | Convection | 375°F (190°C) | 4 | 20–25 min |
| Quick breads (single or multiple) | Convection | 325°F (165°C) | 3 or 2 and 5 | 40–45 min |
| CAKES | | | | |
| Angel food | Bake | 350°F (175°C) | 2 | 37–45 min |
| Bundt | Convection | 325°F (165°C) | 4 | 40–45 min |
| Mixes (multiple) | Bake | 350°F (175°C) | 4 | 30–40 min |
| | Convection | 325°F (165°C) | 2 and 5 | 25–30 min |
| Cupcakes (multiple trays) | Bake | 350°F (175°C) | 4 | 20–25 min |
| | Convection | 325°F (165°C) | 2 and 5 | 18–23 min |
| COOKIES | | | | |
| Brownies (multiple trays) | Bake | 350°F (175°C) | 4 | 20–25 min |
| | Convection | 325°F (165°C) | 2 and 5 | 15–20 min |
| Sugar (multiple trays) | Bake | 350°F (175°C) | 4 | 8–12 min |
| | Convection | 325°F (165°C) | 2 and 5 or 2, 4 and 6 | 8–12 min |
| Chocolate chip (multiple trays) | Bake | 375°F (190°C) | 4 | 8–12 min |
| | Convection | 350°F (175°C) | 2 and 5 or 2, 4 and 6 | 8–9 min |
| MUFFINS | | | | |
| Muffins (single tray) (multiple trays) | Bake | 400°F (205°C) | 4 | 15–20 min |
| | Convection | 375°F (190°C) | 4 | 10–15 min |
| | Convection | 375°F (190°C) | 2 and 5 | 10–15 min |
| PIES | | | | |
| Filled | Conv Bake | 375°F (190°C) | 4 | 40–45 min |
| Frozen | Conv Bake | 375°F (190°C) | 4 | 50–55 min |
| Lemon meringue | Broil | Low (3) | 4 | 2½ min |
| Pumpkin | Conv Bake | 425°F (220°C) / 325°F (165°C) | 4 | 15 min / 1 hr |
| Pastry crust | Conv Bake | 425°F (220°C) | 4 | 10–12 min |
| OTHER | | | | |
| Popovers (single tray) (multiple trays) | Bake | 450°F (230°C) / 350°F (175°C) | 4 | 15 min / 20 min |
| | Convection | 450°F (230°C) / 350°F (175°C) | 2 and 5 | 15 min / 20 min |
| Puff pastry (single or multiple) | Bake | 400°F (205°C) | 4 | 10–12 min |
| | Convection | 375°F (190°C) | 4 or 2, 4 and 6 | 10–12 min |
| Cream puffs | Convection | 400°F (205°C) | 4 or 2, 4 and 6 | 30–35 min |
| Custard and Pudding | Bake | 350°F (175°C) | 4 | 35–40 min |

*For refrigerated biscuits, follow package directions. **Internal temperature of 195–200°F (90–95°C). This chart is a guide; recipe or package directions should take precedence.

Cooking Guide

MEATS

| FOOD | COOKING MODE | OVEN TEMP | RACK | COOKING TIME | INTERNAL TEMP |
|--|--------------|---------------|------|--------------|------------------------|
| BEEF | | | | | |
| Chuck roast, 2–4 lbs (.9–1.8 kg) | Conv Roast | 325°F (165°C) | 3 | 20–25 min/lb | Med 160°F (70°C) |
| Ground, patties | Broil | High (1) | 6 | 10–12 min | Med 150°F (65°C) |
| Rib roast, 4–6 lbs (1.8–2.7 kg) | Conv Roast | 325°F (165°C) | 3 | 25–30 min/lb | Rare 140°F (60°C) |
| Sirloin rump roast, 4–6 lbs (1.8–2.7 kg) | Conv Roast | 325°F (165°C) | 3 | 30–35 min/lb | Rare 140°F (60°C) |
| Sirloin tip roast, 3–5 lbs (1.3–2.3 kg) | Conv Roast | 325°F (165°C) | 3 | 30–35 min/lb | Rare 140°F (60°C) |
| Steaks, 1 1/2" (38) thick | Conv Broil | High (1) | 5 | 20–25 min | Rare 140°F (60°C) |
| Steaks, 1" (25) thick | Broil | High (1) | 5 | 12–15 min | Rare 140°F (60°C) |
| Tenderloin, 2–3 lbs (.9–1.3 kg) | Conv Roast | 325°F (165°C) | 3 | 20–25 min/lb | Rare 140°F (60°C) |
| POULTRY | | | | | |
| Chicken, bone-in breasts | Conv Broil | Med (2) | 5 | 20–25 min | Well 170°F (75°C) |
| Chicken, boneless breasts | Broil | Med (2) | 6 | 10–15 min | Well 170°F (75°C) |
| Chicken, quarters | Conv Broil | Med (2) | 5 | 30–35 min | 180°F (80°C) in thigh |
| Chicken, thighs | Conv Broil | Med (2) | 5 | 20–25 min | Well 180°F (80°C) |
| Chicken, whole | Conv Roast | 325°F (165°C) | 3 | 18–20 min/lb | 180°F (80°C) in thigh |
| Turkey breast, whole | Conv Roast | 300°F (150°C) | 2 | 12–15 min/lb | 170°F (75°C) in breast |
| Turkey, pieces | Conv Broil | Med (2) | 4 | 40–45 min | 180°F (80°C) in thigh |
| Turkey, whole | Conv Roast | 325°F (165°C) | 1 | 11–14 min/lb | 180°F (80°C) in thigh |
| Cornish game hens | Conv Roast | 325°F (165°C) | 3 | 28–33 min | 180°F (80°C) in thigh |
| Cornish game hens | Roast | 350°F (175°C) | 3 | 28–33 min | 180°F (80°C) in thigh |
| Duck, 5–7 lbs (2.3–3.2 kg) | Conv Roast | 325°F (165°C) | 3 | 18–20 min/lb | 180°F (80°C) in thigh |
| Goose, 8–10 lbs (3.6–4.5 kg) | Conv Roast | 325°F (165°C) | 2 | 18–20 min/lb | 180°F (80°C) in thigh |
| PORK | | | | | |
| Chops, 1" (25) thick | Broil | Med (2) | 6 | 10–15 min | Med 160°F (70°C) |
| Loin, 3–4 lbs (1.3–1.8 kg) | Conv Roast | 325°F (165°C) | 3 | 18–22 min/lb | Med 160°F (70°C) |
| Steak, 1" (25) thick | Broil | Med (2) | 5 | 25–30 min | Med 160°F (70°C) |
| Ham, 1/2" (13) thick | Broil | High (1) | 6 | 6–8 min | 140°F (60°C) |
| Ham, 1" (25) thick | Broil | High (1) | 6 | 10–12 min | 140°F (60°C) |
| LAMB | | | | | |
| Chops, 3/4" (19) thick | Broil | High (1) | 5 | 8–10 min | Med Rare 145°F (65°C) |
| Chops, 3/4" (19) thick | Broil | High (1) | 5 | 11–12 min | Med 160°F (70°C) |
| Leg, 4–6 lbs (1.8–2.7 kg) | Conv Roast | 325°F (165°C) | 3 | 20–25 min/lb | Med Rare 145°F (65°C) |
| Crown rack | Conv Roast | 325°F (165°C) | 1 | 15–18 min/lb | Med Rare 145°F (65°C) |
| OTHER | | | | | |
| Veal roast, 2–3 lbs (.9–1.4 kg) | Conv Roast | 300°F (150°C) | 3 | 30–35 min/lb | Med Rare 140°F (60°C) |
| Meat loaf | Conv Roast | 325°F (165°C) | 3 | 50–60 min | 160°F (70°C) |
| Sausage | Broil | Med (2) | 5 | 8–10 min | Med 160°F (70°C) |

*Min/lb indicates specified cook time per pound or .45 kg. Probe cannot be used in broil or convection broil modes, use a meat thermometer to check internal temperature. This chart is a guide; recipe or package directions should take precedence.

Cooking Guide

ENTREES AND MISC

| FOOD | COOKING MODE | OVEN TEMPERATURE | RACK POSITION | COOKING TIME |
|------------------------------|-------------------------------|------------------|---------------|--------------|
| ENTREES | | | | |
| Calzone | Bake Stone | 400°F (205°C) | 1 | 9–10 min |
| Quiche | Bake (convection not advised) | 375°F (190°C) | 4 | 40–50 min |
| Soufflé | Bake | 375°F (190°C) | 4 | 35–40 min |
| PIZZA | | | | |
| Frozen | Bake Stone | 400°F (205°C) | 1 | 8–14 min |
| Homemade | Bake Stone | 450°F (230°C) | 1 | 10–13 min |
| SEAFOOD | | | | |
| Fillet, 1/2" (13) thick | Broil | Med (2) | 6 | 5–7 min |
| Fillet, 1" (25) thick | Conv Broil | Med (2) | 6 | 12–17 min |
| Red snapper | Broil | Med (2) | 6 | 5–7 min |
| Salmon, 1/2" (13) thick | Broil | Med (2) | 6 | 12–15 min |
| Swordfish, 1 1/2" (38) thick | Broil | Med (2) | 6 | 10–12 min |
| VEGETABLES | | | | |
| Potatoes | Bake | 400°F (205°C) | 3 | 45–60 min |
| Sweet potatoes | Bake | 400°F (205°C) | 3 | 40–50 min |
| Winter squash | Convection | 350°F (175°C) | 3 | 40–45 min |
| Winter squash | Bake | 375°F (190°C) | 3 | 50–55 min |
| OTHER | | | | |
| Baked Alaska | Broil | Low (3) | 4 | 5–7 min |
| French bread pizza | Broil | Med (2) | 5 | 2–3 min |
| Garlic bread, 1" (25) thick | Broil or Conv Broil | Med (2) | 5 | 3–3 1/2 min |
| Toast, 1/2" (13) thick | Broil | Med (2) | 6 | 2 min |

Probe cannot be used in broil or convection broil modes, use a meat thermometer to check internal temperature. This chart is a guide; recipe or package directions should take precedence.

Troubleshooting

If your Wolf L series oven is not operating properly, use the following troubleshooting guide before calling Wolf factory certified service. This guide will save you time and trouble and may help you avoid the expense of a service call.

Oven door not closing properly.

- Oven racks or rack guides not installed properly.

Exterior browning is uneven.

- Pan is too large for good heat circulation or too many pans on a rack.
- Rack covered with aluminum foil, trapping heat below.

Oven temperature is too hot.

- Food cooked in glass, glass ceramic, or dark metal which holds more heat than shiny pans.
- Oven temperature setting is too high or baking pan too large for recipe.
- Change rack level or cooking mode.

Oven temperature is not hot enough.

- Oven is not fully preheated.
- Door opened too often or left open too long.
- Food wrapped in foil; check mode for tips that give best results.
- Pan is too small for recipe.

Excessive smoke when broiling.

- Pan other than two-piece broiler pan is being used.
- Failure to trim off extra fat.
- Lower rack level or shorten time.

Warm air venting into kitchen after oven has been turned off.

- Warm air exhaust is a normal function and is necessary to maintain and cool down oven temperatures. It turns off automatically when oven cools sufficiently.

PROBE SHORTED flashes when using probe feature.

- Touch oven OFF. Push probe into probe receptacle completely until it snaps into place. Reset oven temperature and probe temperature.

Service Information

When requesting information, literature, replacement parts or service, always refer to the model and serial numbers of your Wolf L series oven. This information is found on the product rating plate located below the control panel. The oven door must be open to view the rating plate. For location of the rating plate, refer to the illustration for your specific model on pages 6–8. Record the rating plate information below for future reference.

Model Number: _____

Serial Number: _____

Installation Date: _____

Wolf Factory Certified Service:

Phone: _____

Authorized Wolf Dealer:

Phone: _____

BEFORE CALLING FOR SERVICE

Before calling Wolf factory certified service, refer to the troubleshooting guide on page 37.

PRODUCT REGISTRATION

Register your new Wolf product today so that we may ensure your satisfaction. You may register by one of the following options:

- 1) Mail in the completed Wolf product registration card.
- 2) Register online at wolfappliance.com.
- 3) Register by phone by calling Wolf customer care at **800-222-7820**.

The model and serial numbers of your unit are printed on the enclosed Wolf product registration card. If you provide us with your e-mail address, we will send you exciting new product updates and recipes as they become available, along with information on special events.

The information and images in this guide are the copyright property of Wolf Appliance, Inc. Neither this guide nor any information or images contained herein may be copied or used in whole or in part without the express written permission of Wolf Appliance, Inc. ©Wolf Appliance, Inc. all rights reserved.

Wolf, Wolf & Design, Wolf Gourmet, W & Design and the color red as applied to knobs are registered trademarks and service marks of Wolf Appliance, Inc. Sub-Zero, Sub-Zero & Design, Dual Refrigeration, Constant Care and The Living Kitchen are registered trademarks and service marks of Sub-Zero, Inc. (collectively, the "Company Marks.") All other trademarks or registered trademarks are property of their respective owners in the United States and other countries.

Wolf Appliance Products Limited Warranty

FOR RESIDENTIAL USE ONLY

FULL TWO YEAR WARRANTY*

For two years from the date of original installation, your Wolf Appliance product warranty covers all parts and labor to repair or replace, under normal residential use, any part of the product that proves to be defective in materials or workmanship. All service provided by Wolf Appliance under the above warranty must be performed by Wolf factory certified service, unless otherwise specified by Wolf Appliance, Inc. Service will be provided during normal business hours.

LIMITED FIVE YEAR WARRANTY

For five years from the date of original installation, Wolf Appliance will repair or replace the following parts that prove to be defective in materials or workmanship: gas burners (excluding appearance), electric heating elements, blower motors (ventilation hoods), electronic control boards, magnetron tubes and induction generators. The part(s) will be repaired or replaced, free of charge, with the owner paying for all other costs including labor. All service provided by Wolf Appliance under the above warranty must be performed by Wolf factory certified service, unless otherwise specified by Wolf Appliance, Inc. Service will be provided during normal business hours.

TERMS APPLICABLE TO EACH WARRANTY

The warranty applies only to products installed for normal residential use. The warranty applies only to products installed in any one of the fifty states of the United States, the District of Columbia or the ten provinces of Canada. This warranty does not cover any parts or labor to correct any defect caused by negligence, accident or improper use, maintenance, installation, service or repair.

THE REMEDIES DESCRIBED ABOVE FOR EACH WARRANTY ARE THE ONLY ONES THAT WOLF APPLIANCE, INC. WILL PROVIDE, EITHER UNDER THIS WARRANTY OR UNDER ANY WARRANTY ARISING BY OPERATION OF LAW. WOLF APPLIANCE, INC. WILL NOT BE RESPONSIBLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES ARISING FROM THE BREACH OF THIS WARRANTY OR ANY OTHER WARRANTY, WHETHER EXPRESS, IMPLIED OR STATUTORY.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights that vary from state to state.

To receive parts and/or service and the name of Wolf factory certified service nearest you, contact Wolf Appliance, Inc., P.O. Box 44848, Madison, WI 53744; check the contact & support section of our website, wolfappliance.com or call 800-222-7820.

*Stainless steel doors, panels, handles, product frames and interior surfaces are covered by a limited 60-day parts and labor warranty for cosmetic defects.

*Replacement filters for ventilation hood recirculating kits are not covered by the product warranty.





WOLF APPLIANCE, INC. P. O. BOX 44848 MADISON, WI 53744 WOLFAPPLIANCE.COM 800.222.7820

816986 REV-B

2/2012

