

**CAUTION: IRRITANT** MAY IRRITATE EYES AND SKIN. DANGEROUS FUMES FORM WHEN MIXED WITH OTHER PRODUCTS. Do not mix with cleaning products containing ammonia, bleach or acids. Do not get in eyes, on skin or clothing. Do not breathe dust. Keep out of reach of children.


**FIRST AID TREATMENT** Contains potassium permanganate. If swallowed, call a Poison Control Center or doctor immediately. Do not induce vomiting. If in eyes, rinse with water for 15 minutes. If on skin, rinse with water.

**INSTALLING YOUR PRODUCE PRESERVER IS AS EASY AS A-B-C!**



**A. Install Produce Preserver Pouches**

1. Remove both FreshFlow™ Produce Preserver pouches from outer packaging.
2. Open the housing by pulling back on the top lip.
3. Insert both pouches for optimal performance and snap the housing closed.

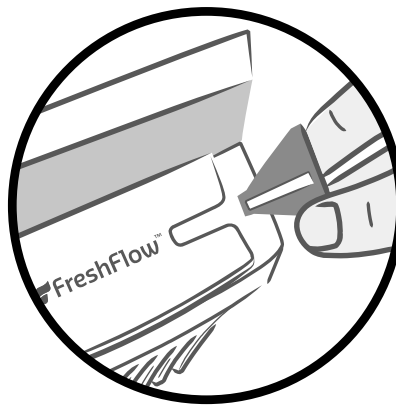

**B. Install Status Indicator**

1. Place indicator facedown on a firm flat surface.
2. Press the bubble on the back of the indicator to activate.
3. Slide the tab on top of the housing to the left and place indicator inside facing out.
4. Close the tab and make sure the indicator is visible.  
NOTE: Cap will not close easily if the indicator has not been activated.




**C. Install the Produce Preserver**

1. Clean and dry the area where the Produce Preserver will be installed in the crisper.
2. Remove paper backing from tape on the rear of housing.
3. **Press and hold** housing evenly against the wall of crisper for 5 seconds.

Disposable pouches and status indicator should be replaced **EVERY 6 MONTHS**, when the indicator has changed completely from white to red.

To replace Produce Preserver, remove pouches and status indicator and follow directions in the previous sections.

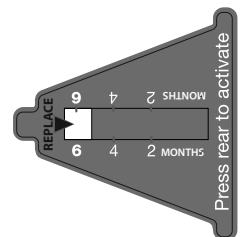

To order  
replacements:

[www.whirlpool.com/accessories](http://www.whirlpool.com/accessories)  
1-800-901-2042

