



Dual Fuel and Induction Range Kickplate Installation

wolfappliance.com 800.222.7820

30" AND 36" RANGE CONTENTS

- | | |
|---|-----------|
| 1 | Kickplate |
|---|-----------|

48" AND 60" RANGE CONTENTS

- | | |
|---|-----------|
| 2 | Kickplate |
|---|-----------|

DUAL FUEL AND INDUCTION RANGE KICKPLATE INSTALLATION

- 1 Remove the existing leg covers, if installed.
- 2 Remove the paper backing from the adhesive on the sides of the kickplate(s).
- 3 Place the kickplate(s) and leg cover(s) on a flat, protected work surface.
- 4 Align the tab on the kickplate with the back of the leg cover and press to secure.
- 5 Slide the kickplate assembly into position and secure with the dual lock fasteners.

