

# **Whirlpool® Upright Freezer**

 
## PRODUCT MODEL NUMBERS

EV161FZT      EV181FZT  
 EV161NZT      EV181NZT  
                  EV185NXT  
                  EV201NZT  
                  EV209NBT

**Electrical:** A 115 Volt, 60 Hz., AC only 15 or 20 amp fused (or circuit breaker), grounded electrical supply is required. It is recommended that a separate circuit serving only your freezer be provided. Use an outlet that cannot be turned off by a switch. Do not use an extension cord.

**Water Supply:** Connect the ice maker to a cold water line with water pressure between 30 and 120 psi.


## OVERALL DIMENSIONS

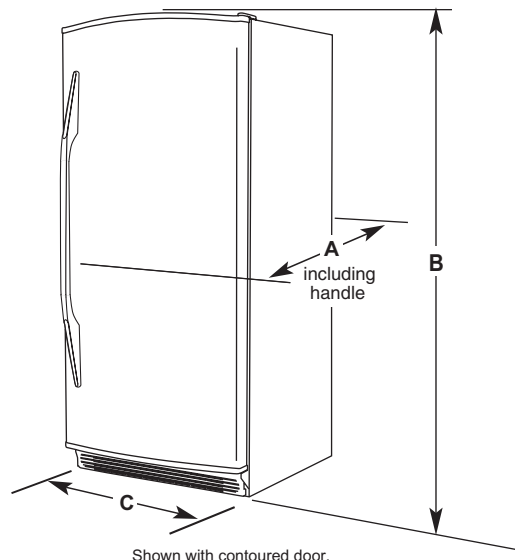

Door swing is right-fixed.

| Model    | Depth<br>"A" | Cabinet Height<br>"B" | Width<br>"C" |
|----------|--------------|-----------------------|--------------|
| EV161FZT | 30 5/16"     | 61.0"                 | 30.0"        |
| EV161NZT | 31 5/16"     | 61.0"                 | 30.0"        |
| EV181FZT | 30.0"        | 67.0"                 | 30.0"        |
| EV181NZT | 32.0"        | 67.0"                 | 30.0"        |
| EV185NXT | 32.0"        | 67.0"                 | 30.0"        |
| EV201NZT | 32.0"        | 67.0"                 | 30.0"        |
| EV209NBT | 32.0"        | 67.0"                 | 30.0"        |

## LOCATION REQUIREMENTS

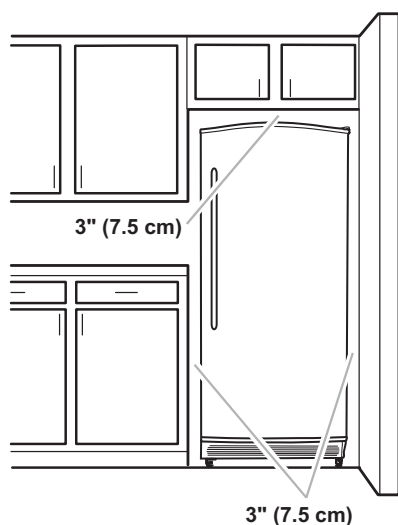 

Allow at least 3 in. (7.5 cm) of air space at the top and on both sides of the freezer and 1 in. (2.5 cm) between the back of the freezer and the wall. If the freezer is to be against a wall, leave extra space on the hinge side so the door can open wider.

**NOTE:** This freezer may be installed side by side with another refrigerator or freezer. Allow for a 3 in. (7.5 cm) clearance at the top and sides and a 1/4 in. (0.64 cm) clearance between the appliances.

**IMPORTANT:** Do not install the freezer near an oven, radiator, or other heat source, nor in a location where the temperature will fall below 40°F (5°C).