

The Samsung logo is located in the top right corner of the page. It consists of the word "SAMSUNG" in white, uppercase letters, set against a dark blue, horizontally-oriented oval background.

E-MANUAL

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

Model _____ Serial No. _____

Contents

e-Manual Guide

Viewing the e-Manual

- 1 Scrolling a Page
- 1 Using the Top Icons
 - 1 Returning to the Home Page
 - 2 Searching the Index
 - 2 Searching Pages
 - 2 Closing the e-Manual
- 2 Jumping to a Menu Item
- 2 Updating the e-Manual

Getting Started

Antenna Connection

Video Device Connections

- 4 HDMI Connection
- 5 Component Connection
- 5 AV Connection

Audio Device Connections

- 6 Digital Audio (Optical) Connection
- 7 Audio Output Connection
- 7 ARC (Audio Return Channel)

Computer Connection

- 8 HDMI Connection
- 9 HDMI-to-DVI Connection

Switching Between Video Sources

Programming

- 11 Auto Program
- 11 Remove Scrambled Channels

Channel Management

- 12 Remove Channels
- 13 Restore Removed Channels
- 13 Program Rating Lock
 - 13 Blocking Programs Using the TV Rating
 - 14 Blocking based on Movie Rating (MPAA)
 - 14 Blocking Based on Canadian English Rating
 - 15 Blocking Based on Canadian French Rating
 - 15 Blocking Based on Downloadable U.S. Rating
 - 15 Watching Blocked / Restricted Programs
- 15 Rename Analog Channels

Favorite Channels

- 17 Add Favorite Channels
- 17 Remove Favorite Channels
- 18 Rearrange the Favorite Channels List
- 18 Rename a Favorite Channel List
- 18 Copy a Favorite Channels List

Network Configuration

- 19 Wired Network
- 20 Wireless Network
 - 20 PDP 5500, LED 5500 series and above
 - 20 LED 4300 Series models
 - 21 Wireless Network Precautions
 - 21 Network Security Protocols

Wired Network Setup

- 22 Automatic Wired Network Setup
- 22 Manual Wired Network Setup
- 24 Failed Wired Connection

Wireless Network Setup

- 25 Automatic Wireless Network Setup
- 26 Manual Wireless Network Setup
- 28 Using the WPS Button
- 28 Failed Wireless Connection

Checking the Network Status

Mobile Device Connection

- 31 Wi-Fi Direct
- 31 AllShare Settings
- 31 Rename the TV

Controlling the TV

Smart Touch Control

- 32 Inserting the Batteries (AAA X 2)
- 32 Connecting to the TV
 - 33 Reconnecting the Smart Touch Control
- 33 Battery Low Alarm
- 34 Buttons and Descriptions
- 36 Special Functions

Using the touch pad

- 37 Dragging
- 37 Pressing
- 38 Flicking
- 38 Pressing and Holding
- 38 Pressing and Dragging
- 39 Scrolling Up/Down
- 39 Scrolling Left/Right
- 40 Changing Channels by Entering Numbers
 - 40 Numerical Input Guide
- 40 Adjusting the Touch pad
- 41 Show Status and Notification Banner
- 41 Recommended
- 41 History
 - 41 Deleting History Data
- 41 Searching

Virtual Remote Control

- 42 Changing the Virtual Remote Control Panel
- 42 Change a position of the Virtual Remote Panel
- 42 Using the Number Panel
- 42 Using the Playback Control Panel
- 42 Using the Quick Access Panel
- 42 Adjusting the virtual remote control

Universal Remote Setup

- 43 Connecting the IR Extender
- 44 Add the External Device
- 44 Using the Universal Remote Control
- 44 Registered External Device Management

Entering Text using the Onscreen Keypad

- 45 Entering Text using the QWERTY Keypad
 - 45 Additional Features

SMART Interaction

- 46 Precautions
 - 46 Face Recognition
 - 46 TV Camera Use
 - 47 Motion Control
 - 47 Voice Recognition

Voice Recognition

- 48 Operating Environment
- 49 Enabling Voice Recognition
- 49 Voice Recognition Tutorial
- 49 Basic Voice Recognition Use
- 49 Voice Recognition Settings
- 50 Interactive Voice Recognition Commands
- 50 Deactivating Voice Recognition

Motion Control

- 51 Operating Environment
- 52 Motion Control Environment Test
- 52 Motion Control Tutorial
- 52 Motion Control Activation
- 53 Using the Basic Motion Controls
- 53 Motion Control Options
- 54 Motion Control Screen
 - 54 The Screen Composition while Viewing TV
 - 55 The Smart Hub Screen Composition

Face Recognition

- 57 Operating Environment
- 58 Face Registration
 - 58 Face Registration from the Smart Hub account information screen
 - 59 Face Registration for the Smart Hub account using face recognition
- 59 Face Recognition Login

Using Peripheral Devices

- 60 Keyboard Connection
 - 60 Keyboard Use
- 61 Mouse Connection
 - 61 Mouse Use

TV Viewing

TV Viewing

- 62 Program Info
- 62 Change the Broadcast Signal
- 63 Guide
 - 63 Change Channels
 - 63 Change Category
 - 63 Quick Navigation
 - 64 Schedule Viewing
 - 64 Checking the Program Info
- 65 Channel List
 - 65 Change Channels
 - 65 Genre
 - 66 Change the Broadcast Signal
 - 66 Change the Channel List

Schedule Viewing

- 67 Digital Channel Schedule Viewing
 - 68 Guide
 - 68 Program Info
- 68 Analog Channel Schedule Viewing
- 68 Cancel a Schedule Viewing
- 68 Edit Schedule List

3D TV

- 69 Precautions
 - 70 Restrictions
 - 70 Tips
- 71 Activating 3D Mode
- 71 Setting 3D Effects

PIP

Analog Screen Calibration

- 73 Fine Tune

Broadcast Audio Options

- 74 Digital Broadcast Audio Options
- 74 Analog Broadcast Audio Options

Sports Mode

Subtitles

- 75 Show Subtitles
- 75 Subtitle Options
- 75 Subtitle Display Options

TV Settings

Basic Picture Settings

- 76 Changing the Picture Mode
- 77 Picture Quality
 - 77 Applying the Current Picture Quality Setting to Another Input
- 78 Picture Size
- 79 Screen Position
- 79 Picture Off
- 79 Reset Image Settings

Advanced Settings

Picture Options

Basic Sound Settings

- 84 Changing the Sound Mode
- 85 Adjusting the Sound Settings
- 85 Auto Volume
- 85 TV Installation Type
- 85 Resetting the Sound

3D Audio

Speaker Settings

- 87 Speaker Select
- 88 Digital Audio Output
- 88 Samsung Audio Device Connection

Clock and Timer

- 89 Setting the Time
 - 90 Auto
 - 90 Manual
- 90 Sleep Timer
- 91 On Timer
- 91 Off Timer

Screen Protection and Maintenance

- 92 Eco Solution
- 93 Screen Burn Protection
 - 93 Pixel Shift
 - 93 Auto Protection Time
 - 94 Scrolling
 - 94 Side Gray
- 94 Auto Protection Time

Password

- 95 Change Password

Additional Features

- 96 Changing the Menu Language
- 96 Game Mode
 - 96 Precautions and Restrictions
- 97 BD Wise
- 97 Menu Transparency
- 97 Sound Feedback
- 97 Panel Locking
- 97 Booting Logo
- 97 DivX® Video On Demand

SMART TV Features

Smart Hub

- 98 Agreements Required to Use Smart Hub
- 99 Samsung Account
 - 99 Creating a Samsung Account
 - 99 Logging In
 - 100 Terms and Conditions, Privacy Policy
 - 100 Linking a Samsung Account to Other Accounts
 - 100 Managing Accounts
- 101 Resetting Smart Hub

Searching

- 101 Keyword Search
- 101 Setting Search Scope

Status and Notification

- 102 Show Status and Notification Banner
 - 102 Voice Recognition & Motion Control Configuration
 - 102 Samsung Account Configuration
 - 102 Network Configuration
 - 102 Check Notifications

Social

- 103 Social Settings
 - 103 Checking the Application
 - 103 Connecting a Service to a Samsung Account
- 104 Watching Videos
- 104 Friend Profile
- 104 Video Calling a Friend
- 104 Filters

Apps

- 105 Precautions
- 106 Installing Standard Applications
- 106 Launching an Application
- 106 Samsung Apps
 - 106 Searching for Apps
 - 106 Installing Applications
- 107 Apps Management
 - 107 Edit My Apps
 - 108 Deleting Applications
 - 108 Managing Application Folders
 - 108 Application Lock/Unlock
 - 108 Application Update

109 Fitness
109 Creating a Profile

109 Kids

110 WebBrowser

110 Social Networks
110 Linking Service Accounts

111 Apps Settings
111 Auto Ticker
111 Push Notification Settings
111 Channel-Bound Apps
111 Properties

On TV

113 On TV Settings
113 On TV Setup
113 Recommendation Notice
113 Auto Start
113 Recommendation Method
113 Adult Contents Block

114 Watching an On-Air Recommended Program

114 Scheduled Recommended Program Info

114 Activating the Guide

114 Program Recommendations by Time

Movies & TV Shows

116 Buying Movies

116 Playing Movies

116 Parental Control

Photos, Videos & Music

117 Restrictions

118 Supported File Formats

118 USB Device Connection
118 USB Device Removal

119 Playing all the Content on a Storage Device

119 Clearing the Recent Playlist

119 Using Networked External Storage Devices
120 Allowing DLNA Device Connections
120 AllShare

120 Exporting Contents

Videos

121 Changing the view mode

121 Playlist Creation

122 Opening a Different File

122 Video Scanning

123 Show Subtitles

123 Additional Video Playback Settings

Music

124 Changing the view mode

124 Playlist Creation

125 Music Scanning

125 Opening a Different File

125 Additional Music Playback Settings

Photos

126 Changing the view mode

126 Slide Show
126 Slide Show Settings

126 Playlist Creation

127 Opening a Different File

127 Background Music
127 Mini Player

127 Additional Photo Playback Settings

Anynet+ (HDMI-CEC)

128 Precautions

129 Anynet+ (HDMI-CEC) Setup

129 Using the Anynet+ (HDMI-CEC)
129 Switching between Anynet+ Devices
130 Anynet+ (HDMI-CEC) Device Menu

131 ARC

Sharing Mobile Device Screens on the TV

131 Screen Mirroring
131 Mobile Device Connection

Other Information

Support

132 Remote Management

- 133 What is Remote Support?
- 133 How Does it Work?

134 e-Manual

134 Self Diagnosis

- 134 Picture Test
- 135 Sound Test
- 135 Motion Control Environment Check
- 135 Signal Information
- 135 Reset

136 Updating the Software

- 136 Update now
- 136 Auto Update

137 Usage Mode

137 Support Info

Kensington Security Lock

Display Resolution

138 PDP 5500, LED 5500 series and above

- 138 IBM
- 138 MAC
- 139 VESA DMT

140 LED 4300 series models

- 140 IBM
- 140 MAC
- 141 VESA DMT

Picture Size and Input Signal

Supported 3D Resolutions

143 HDMI

- 143 3D Format: L/R, T/B
- 143 3D Format: Frame Packing

144 Component

144 Digital Channel

144 Videos/Photos

144 HDMI PC Mode

Subtitle and Media Contents file formats, and Codec

145 Subtitle

- 145 External
- 145 Internal

146 Supported image resolutions

146 Supported music file formats

147 Video Codec

- 147 Other Restrictions
- 148 Video Decoders
- 148 Audio Decoders

3D Precautions

149 CAUTION!

150 SAFETY PRECAUTIONS

WARRANTY

151 PROCEDURE FOR MAKING A WARRANTY CLAIM

151 WARRANTY CONDITIONS

Licenses

Troubleshooting

Screen

Sound

3D TV

Antenna (Air/Cable) Connection

PC Connection

Networking

Miscellaneous

Anynet+ (HDMI-CEC)

Apps

Photos, Videos & Music

Reset the Personal Info and TV settings


Web Browser


Viewing the e-Manual

The embedded e-Manual contains information about your TV's key features.

Navigate to the screen menu and select e-Manual (**Support** > **e-Manual (Troubleshooting)**).

1. Select a category from the left side of the screen.
2. Select an item. The e-Manual will open on the page containing the selected information.





 Words in blue refer to screen menu options and words in light blue refer to remote control buttons.

 Arrows are used to indicate the menu path. (Example: Screen Menu > **Support** > **e-Manual (Troubleshooting)**)





Scrolling a Page

To scroll a page, use one of the following methods:

PDP 5500, LED 6400 series and above

- Press the  or  button on the scroll bar at the right edge of the screen.
- Drag or flick up or down from the line on either the left or right edge of the touch pad. This method is not available with LED 4300 - 6300 series.
- Place the focus on the  or  button at the right edge of the screen, drag or flick up or down on the touch pad.

LED 4300 - 6300 series


- Press the  or  button on the scroll bar at the right edge of the screen.
- Place the focus on the  or  button at the right edge of the screen, press the up or down arrow button on the remote.


Using the Top Icons

Use the **Back**, **Forward**, and **Opened pages** icons on the top left of the screen to navigate through pages. These icons are available when two or more pages are passed.

Returning to the Home Page

PDP 5500, LED 6400 series and above

To return to the home page, select the **A** button on the virtual remote panel or select  on the top right of the screen.


 To select a letter button (**A**, **B**, **C**, **D**), press the **MORE** button on the Smart Touch Control to display a panel of the virtual remote. Flick the Touch Pad until the Playback Control Panel appears, select the a button, and then press the Touch Pad.

LED 4300 - 6300 series


To return to the home page, press the **A** button or select  on the top right of the screen.

Searching the Index

PDP 5500, LED 6400 series and above


Select the **B** button on the virtual remote panel or select  on the top right of the screen to display the index. Select a term to display the page containing the term.

LED 4300 - 6300 series


Press the **B** button or select  on the top right of the screen to display the index. Select a term to display the page containing the term.

Searching Pages

PDP 5500, LED 6400 series and above

Select the **C** button on the virtual remote panel or select  on the top right of the screen, and enter search criteria. Select a page from the list of search results to display it.

LED 4300 - 6300 series


Press the **C** button or select  on the top right of the screen, and enter search criteria. Select a page from the list of search results to display it.

Closing the e-Manual

PDP 5500, LED 6400, 6800 and 7050/7100 series

To close the e-Manual, press and hold the **RETURN** button or select  at the upper-right corner of the screen.

LED 4300 - 6300 series

To close the e-Manual, press the **EXIT** button or select  at the upper-right corner of the screen.

Jumping to a Menu Item

To directly jump to the menu item that is described in the current section, select **Try Now**. It is possible to jump from a menu item directly to the related section in the e-Manual.

PDP 5500, LED 6400 series and above

On the screen menu, press the **MORE** button on the Smart Touch Control and then select **e-Manual** on the virtual remote panel that appears on the screen.

LED 4300 - 6300 series

On the screen menu, press the **E-MANUAL** button that appears on the screen.

 This feature may not be available, depending on the menu.

Updating the e-Manual


Press the  button and select **Apps**, and then select **More Apps**. The e-Manual can be updated in the same way with an application update.

On the **More Apps** screen, select **Update Apps**, and then select e-Manual from the list. The e-Manual starts updating to the latest version. However, **Update Apps** appears on the screen only when the update is required.

Antenna Connection

Refer to the diagram and connect the antenna cable to the antenna input connector. Make sure that you do not bend the cable. The number of connectors and their names and locations may vary depending on the model.

Connect the correct antenna cable for your viewing environment (over-the-air or cable broadcasting). However, an antenna connection is not necessary if you are using a cable box or satellite receiver.

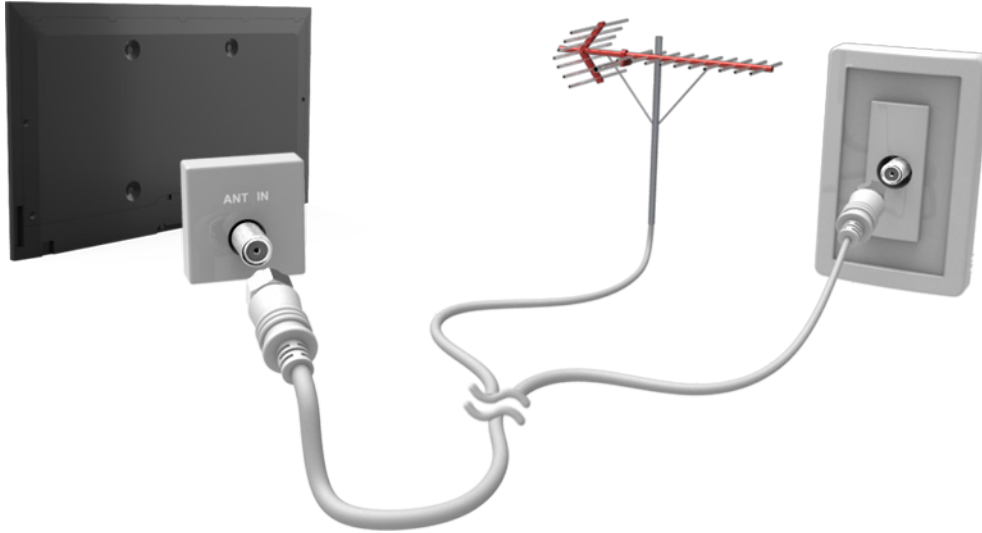

The displayed image may differ depending on the model.

Video Device Connections

This TV has a wide range of connectors for video input from video devices such as Blu-ray players, DVD players, camcorders and gaming consoles. Below is a list of featured connectors shown in descending order of picture quality.

- HDMI
- Component
- AV

Connect the video device to the TV via an HDMI connector for the best picture quality. If the device does not have an HDMI connector, try a component connector to get the next best possible picture quality.

The number of connectors and their names and locations may vary depending on the model.



When connecting an external device, refer to the device's operating manual. The number of external device connectors and their names and locations may vary depending on the manufacturer.

HDMI Connection

Refer to the diagram and connect the HDMI cable to the video device's HDMI output connector and the TV's HDMI input connector. One of the following HDMI cable types is recommended:

- High-Speed HDMI Cable
- High-Speed HDMI Cable with Ethernet

Use an HDMI cable with a thickness of 14 mm or less. Using a non-certified HDMI cable may result in a blank screen or a connection error.


-  Some HDMI cables and devices may not be compatible with the TV due to different HDMI specifications.
-  This TV does not support the HDMI Ethernet Channel.



The displayed image may differ depending on the model.

Component Connection


Connect the TV's component video and audio input connectors to the external device's component video and audio output connectors using a component cable, so that the connectors of the same color connect to each other, as shown in the figure.

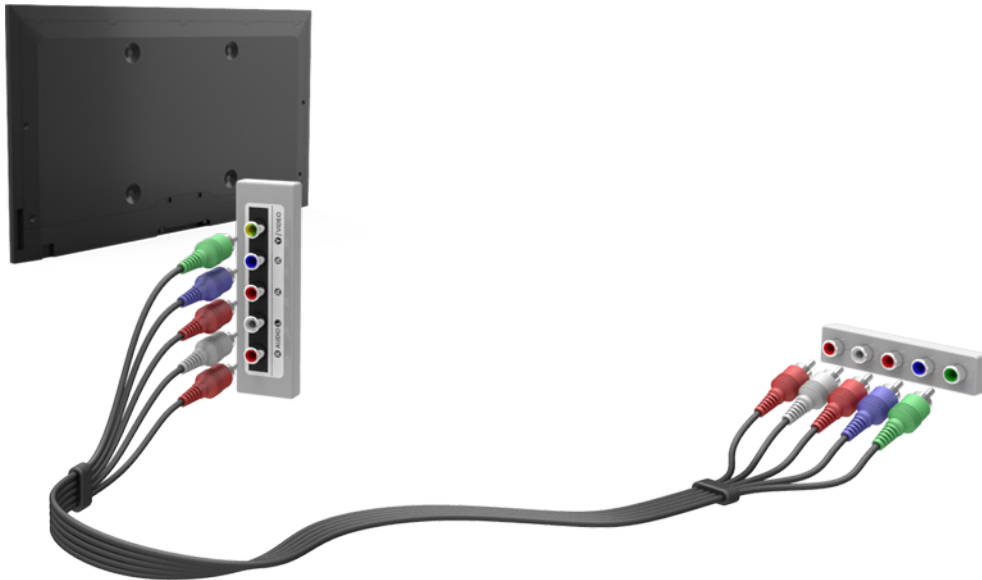

The displayed image may differ depending on the model.

AV Connection

Refer to the diagram and connect the AV cable to the TV's external input connectors and the device's AV output connectors. Certain models combine the external video input connector and the component Y connector into a single connector. If this is the case, connect the video cable to the Y connector.

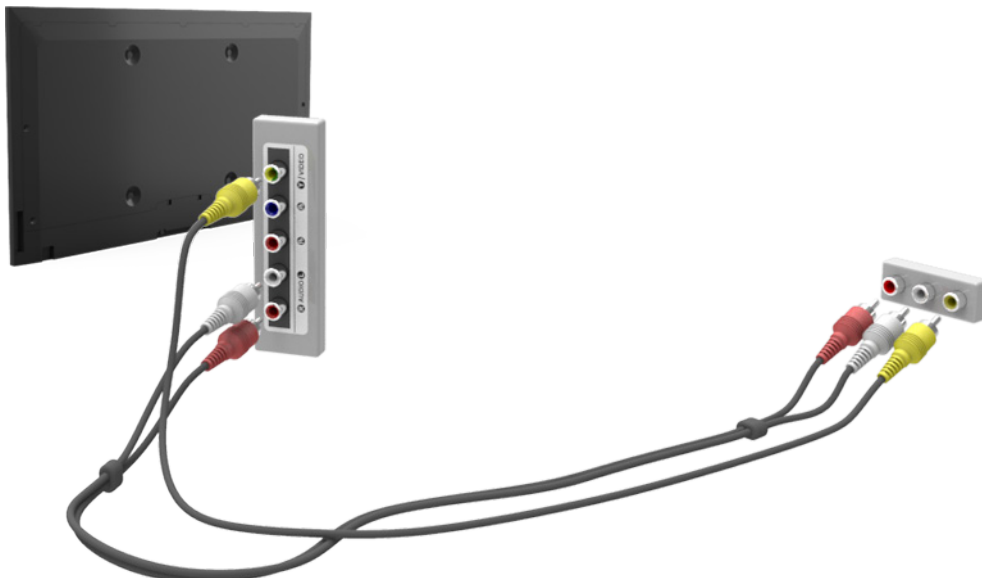

The displayed image may differ depending on the model.

Audio Device Connections

This TV has a wide range of connectors for audio input from devices such as amplifiers, Blu-ray players and DVD players. For better audio quality, it is a good idea to use an AV receiver.

- Digital Audio (Optical)
- Audio
- ARC (Audio Return Channel)

The number of connectors and their names and locations may vary depending on the model.

When connecting an external device, refer to the device's operating manual. The number of external device connectors and their names and locations may vary depending on the manufacturer.

Digital Audio (Optical) Connection


Refer to the diagram and connect the optical cable to the TV's digital audio output connector and the device's digital audio input connector.

Connecting the device using an optical cable does not automatically turn off the TV speakers. To turn off the TV speakers, open the **Speaker Select (Sound > Speaker Settings > Speaker Select)** menu, then set **External Speaker**.

Adjust the audio device's volume using its remote control.

An unusual noise coming from the audio device while it is being used may indicate a problem with the audio device itself. If this is the case, ask for assistance from the audio device manufacturer.


5.1-channel audio for digital channels is only available with broadcasts that support 5.1-channel audio.

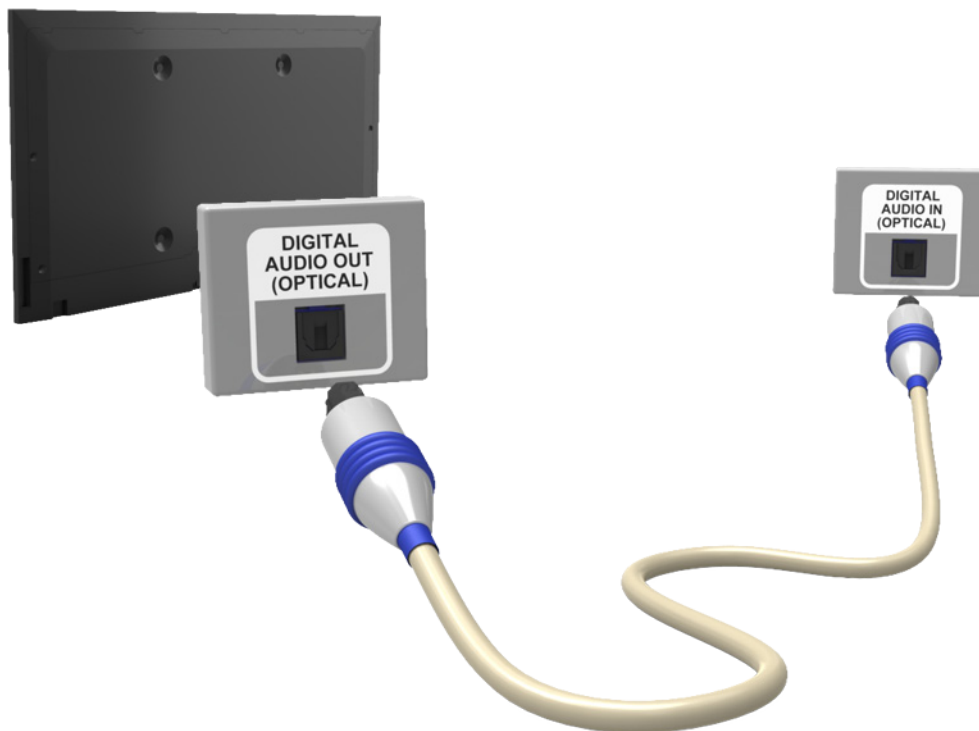

The displayed image may differ depending on the model.

Audio Output Connection

Refer to the diagram and connect the audio cable to the TV's audio output connector and the device's audio input connector.

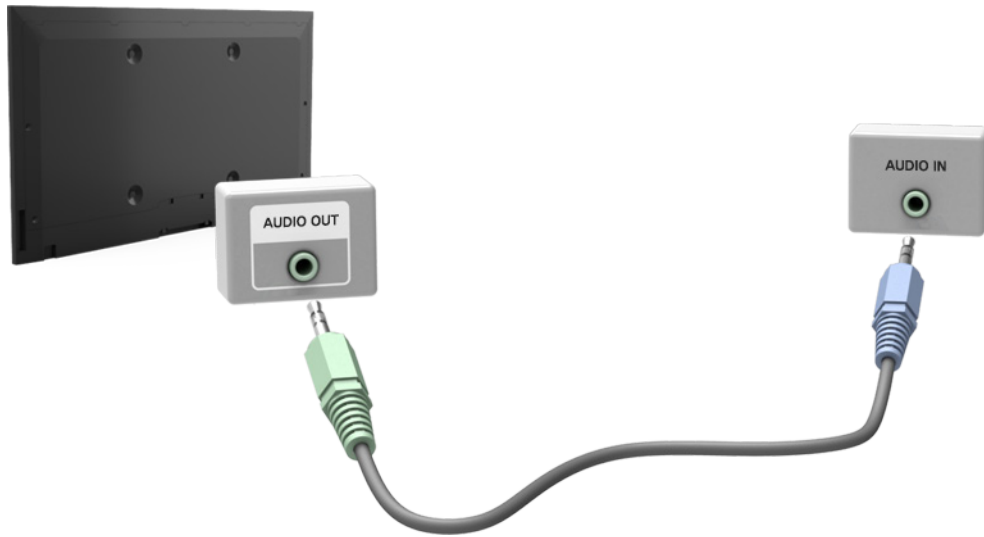


The displayed image may differ depending on the model.

ARC (Audio Return Channel)

The ARC function is not available for LED 4300 and 5500 series model.

This TV supports 3D and ARC (Audio Return Channel) functions via an HDMI cable. ARC enables digital sound to be output using just an HDMI cable. However, ARC is only available through the HDMI (ARC) port and only when the TV is connected to an ARC-enabled AV receiver. Connect the HDMI cable to the TV's HDMI (ARC) connector and the device's HDMI output connector.

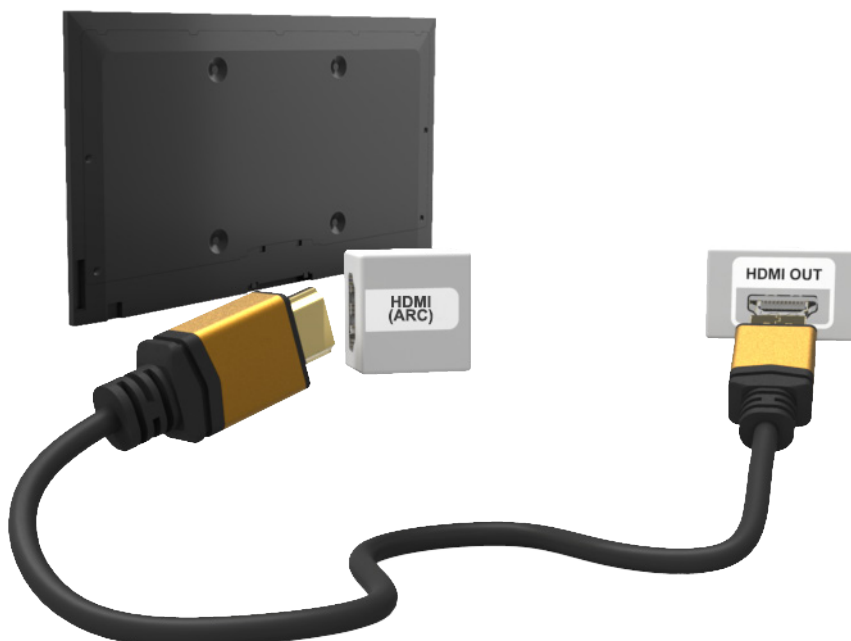

The displayed image may differ depending on the model.

Computer Connection

This TV supports the HDMI/DVI port for connect the computer. Not all computers are HDMI-enabled. In this case, use an HDMI-to-DVI cable to connect the computer to the TV. Refer to the "Display Resolution" for information on the resolution settings supported to the TV.

HDMI Connection

Refer to the diagram and connect the HDMI cable to the TV's HDMI input port and the computer's HDMI output port.




The displayed image may differ depending on the model.

HDMI-to-DVI Connection

Refer to the diagram and connect the HDMI-to-DVI cable to the TV's HDMI (DVI) port and the computer's DVI output port. The HDMI-to-DVI connection is available through the HDMI (DVI) port only.

DVI cannot carry audio. To listen to the computer sound, connect the external speaker to the computer's audio output connector.

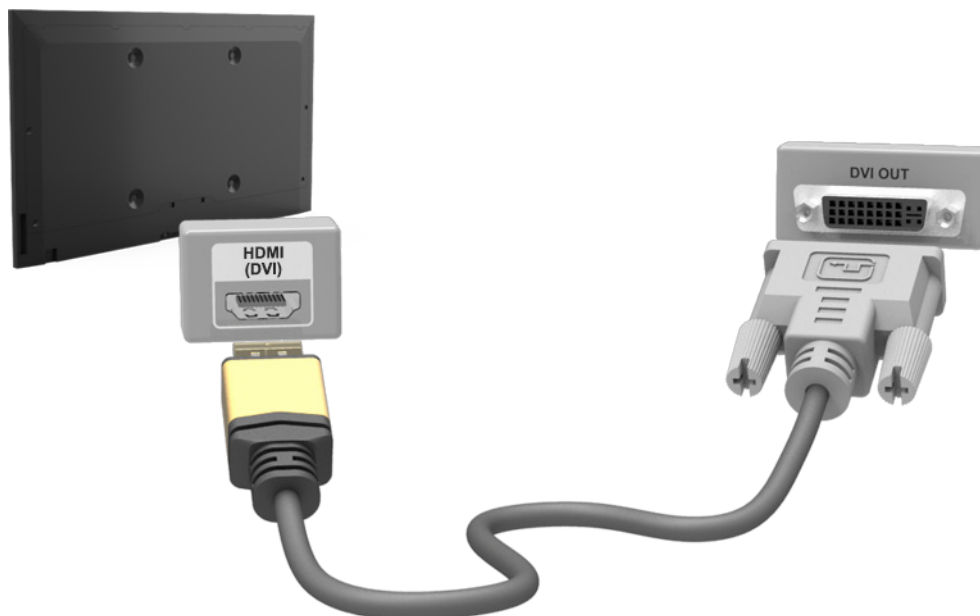

The displayed image may differ depending on the model.

Switching Between Video Sources

Press the **SOURCE** button to switch between devices connected to the TV.

For example, to switch to a game console connected to the second HDMI connector, press the **SOURCE** button. From the **Source** list, select **HDMI2**. The connector names may vary depending on the product.

Select **Tools** at the upper-right corner of the **Source** screen to access the following functions.

- **Edit Name:** You can rename devices connected to the TV to more easily identify external sources.

With a computer connected to the TV's HDMI (DVI) port via an HDMI cable, for example, you can change **Edit Name** to **PC**.

With a computer connected to the TV's HDMI (DVI) port via an HDMI-to-DVI cable, for example, you can change **Edit Name** to **DVI PC**.

With an AV device connected to the TV's HDMI (DVI) port via an HDMI-to-DVI cable, for example, you can change **Edit Name** to **DVI Devices**.


- **Information:** View detailed information about the connected devices.
- **Refresh:** Select this if a connected device does not appear in the list. If the list does not show the device after selecting **Refresh**, check the status of the TV-to-device connection.
- **Remove USB:** Remove the USB device from the list to safely. This function is only available when the USB device selected.


To add a new external device to control it with the Touch Remote Control, press the **SOURCE** button and select **Universal Remote Setup** on the top right of the screen. Using the universal remote control, users can control external devices connected to the TV, such as a set-top box, Blu-ray player, and AV receiver. For details, see "Universal Remote Setup".

 The **Universal Remote Setup** function is not available for LED 4300 series.

Programming

Scan and index available channels.

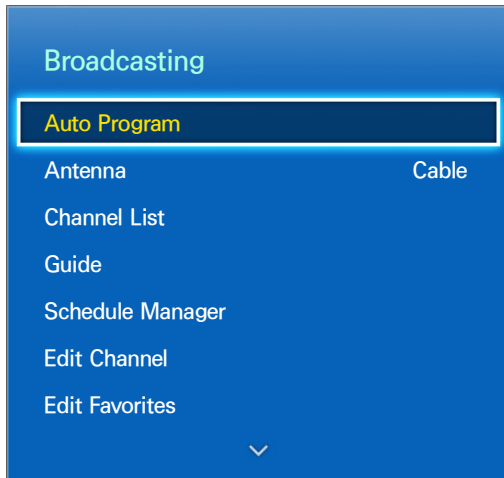

 The displayed image may differ depending on the model.

You can also remove channels from the index, restore removed channels and designate favorite channels for a more convenient TV viewing experience. Programming is not necessary if you are connected to a cable or satellite receiver.

Auto Program

Screen Menu > **Broadcasting** > **Auto Program** [Try Now](#)

Automatically scans and indexes all channels received through the TV's antenna input connector.

1. To start, navigate to **Broadcasting** and select **Auto Program**.
2. Select **Start** when prompted with a message. This initiates the Auto Program function. The process can take up to 30 minutes to complete. If starting the Auto Program function when there is an existing index of channels overwrites the previous index.


Remove Scrambled Channels


Screen Menu > **Broadcasting** > **Channel Settings** > **Clear Scrambled Channel** [Try Now](#)

Remove scrambled channels (ex: pay-per-view channels) from channel list. To remove scrambled channels, run this function. This function is enabled only for cable TVs when at least one digital channel is available.




Channel Management

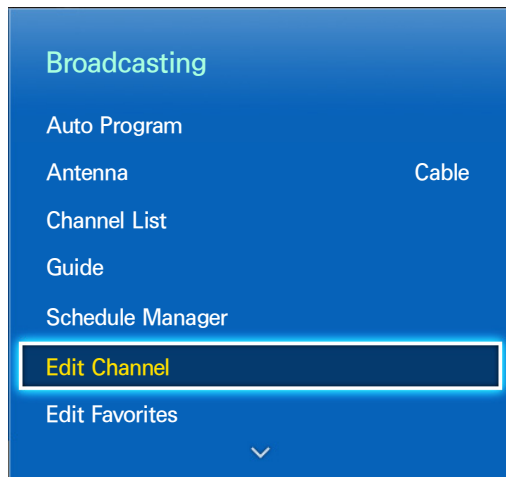Screen Menu > **Broadcasting** > **Edit Channel** [Try Now](#) [Try Now](#)



 The displayed image may differ depending on the model.

Remove channels from the index, restore removed channels, and rename analog channels. The **Edit Channel** screen icons indicate the following:



-  : An analog channel
-  : A favorite channel
-  : A locked channel

In the **Edit Channel** screen, select the virtual remote panel's or the regular remote's **TOOLS** button to access the following options:

- **Antenna**: Choose between **Cable** and **Air**.
- **Category**: The TV's channel index is divided into different categories such as **All**, **Added Ch.**, **Recently Viewed** and **Mostly Viewed**. Choose a category.
- **Edit Favorites**: You can designate frequently watched channels as favorites. For details, see "Favorite Channels".
- **Information**: View detailed information about the current program.



Remove Channels

Remove registered channels from the index. Removing channels appearing in the **Recently Viewed** or **Mostly Viewed** list clears the channels from the list only and does not remove them from the index.

1. From the screen, select the channels you wish to remove. Unselect channels by choosing them again.
2. Select the  button on the virtual remote panel or press the  button on regular remote control. The selected channel(s) will be deleted.

Restore Removed Channels

Restore removed channels. Removed channels are displayed in gray on the **All** list. In addition, the **Add** option is only available for removed channels.

1. From the screen, press **TOOLS** button. Select **Category** and then select **All**.
2. From the **All** list, select the channels you wish to restore. Unselect channels by choosing them again.
3. Select the  button on the virtual remote panel or press the  button on standard remote control. The selected channel(s) will be added.

Program Rating Lock

Screen Menu > **Broadcasting** > **Program Rating Lock**

The **Program Rating Lock** blocks programs with ratings higher than those desired. This is useful for controlling what children watch on TV. This will not function for programs originating from external sources, such as DVD players or USB files.

This PIN is required to watch a blocked program.

The **Program Rating Lock** is available only in TV mode.

Blocking Programs Using the TV Rating

To block content, select a rating entry to lock. All programs at that level and higher are blocked and require the PIN to watch. To unblock a category, select the lock icon. To unblock all the categories in a row, select the lock under **ALL**.

Categories on the left:

- **TV-Y:** Young children
- **TV-Y7:** Children 7 and over
- **TV-G:** General audience
- **TV-PG:** Parental guidance
- **TV-14:** Viewers 14 and over
- **TV-MA:** Mature audience

Categories on the top:

- **ALL:** Lock all TV ratings.
- **FV:** Fantasy violence
- **V:** Violence
- **S:** Sexual situations
- **L:** Adult Language
- **D:** Sexually Suggestive Dialog

Blocking based on Movie Rating (MPAA)

Block movies based on their MPAA rating. This applies to all material with supplied ratings in the USA.

From the MPAA:

“The Motion Picture Association of America (MPAA) has implemented a rating system that provides parents or guardians with advanced information on which films are appropriate for children.”

Select a lock beside one of the rating categories to block that category and all higher categories. To unblock a category, select the lock icon.

- **G**: General audience (no restrictions).
- **PG**: Parental guidance suggested.
- **PG-13**: Parents strongly cautioned.
- **R**: Restricted. Children under 17 should be accompanied by an adult.
- **NC-17**: No children under age 17.
- **X**: Adults only.
- **NR**: Not rated.

Blocking Based on Canadian English Rating

Block material based on its English Canadian rating. This applies to all rated material viewed on English-Canadian TV channels.

Select a lock beside one of the rating categories to block that category and all higher categories. To unblock a category, select the lock icon.

- **C**: Programming intended for children under age 8
- **C8+**: Programming generally considered acceptable for children 8 years and over to watch on their own
- **G**: General programming, suitable for all audiences.
- **PG**: Parental Guidance
- **14+**: Programming containing themes or content which may not be suitable for viewers under the age of 14
- **18+**: Adult programming

Blocking Based on Canadian French Rating

Block material based on its French Canadian rating. This applies to all rated material viewed on French-Canadian TV channels.

Select a lock beside one of the rating categories to block that category and all higher categories. To unblock a category, select the lock icon.

G: General

8 ans+: Programming acceptable for children 8 years and over to watch on their own

13 ans+: Programming that may not be suitable for children under the age of 13

16 ans+: Programming not suitable for children under the age of 16

18 ans+: Programming restricted to adults

Blocking Based on Downloadable U.S. Rating

Block material based on its **Downloadable U.S. Rating**. This rating system only applies to material originating from US DTV channels.

Parental restriction information is automatically downloaded while watching DTV channels. This download may take several seconds. If the information is unavailable from the broadcasting station, the **Downloadable U.S. Rating** menu is deactivated.

Parental restriction levels differ depending on the broadcasting station, and the default menu name and the Downloadable U.S. Rating name changes depending on the downloaded information.

Even when the on-screen display is set to another language, the **Downloadable U.S. Rating** menu appears only in English.

Select a lock beside one of the rating categories to block that category and all higher categories. To unblock a category, select the lock icon.

Watching Blocked / Restricted Programs

To watch a blocked program, enter the PIN when requested.

When initially showing a restricted program or movie, the screen is blank because the **Program Rating Lock** blocks it. Enter the PIN to unblock the program when a message appears requesting the code.


Rename Analog Channels


Select a channel you wish to rename from the **Edit Channel** screen, press **TOOLS** button, and then select **Rename Channel** from the list.


You can now rename the selected channel. The new name can be up to 5 characters long.

Favorite Channels

Screen Menu > [Broadcasting](#) > [Edit Favorites](#) [Try Now](#)

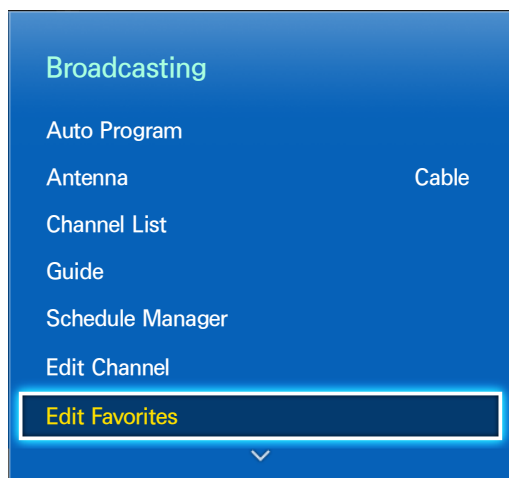

 The displayed image may differ depending on the model.

You can designate frequently watched channels as favorites. The channels assigned as a favorite are displayed with the  symbol on the [Edit Channel](#) and channel list screens. You can create up to 5 favorite channel lists. You can also rename and edit favorite channel lists.

From the [Edit Channel](#) screen, select the virtual remote panel's or the regular remote's [TOOLS](#) button to access the following options:

- [Antenna](#): Choose between [Cable](#) and [Air](#).
- [Edit Channel](#): You can manage the channels saved on the TV. For details, see "Channel Management".
- [Information](#): View detailed information about the current program.

Add Favorite Channels

Add a channel to a favorite channels list.

PDP 5500, LED 6400 series and above

1. Select the **A** button on the virtual remote panel to bring up the channel list containing the channels you wish to add and then select the channels. However, the **A** button is available only when the **Recently Viewed** or **Mostly Viewed** channel list has one or more channel entries.
2. Select the **B** button to bring up a favorite channels list and then select the **C** button to add the selected channels.

LED 4300 - 6300 series

1. Press the **A** button to bring up the channel list containing the channels you wish to add and then select the channels. However, the **A** button is available only when the **Recently Viewed** or **Mostly Viewed** channel list has one or more channel entries.
2. Press the **B** button to bring up a favorite channels list and then press the **C** button to add the selected channels.

Remove Favorite Channels

Remove channels from a favorite channels list.

PDP 5500, LED 6400 series and above

1. Select the **B** button on the virtual remote panel to bring up a favorite channels list and then select the channels you wish to remove.
2. Select the **C** button on the virtual remote panel to remove the channels from the list.

LED 4300 - 6300 series

1. Press the **B** button to bring up a favorite channels list and then select the channels you wish to remove.
2. Press the **C** button to remove the channels from the list.


Rearrange the Favorite Channels List

Rearrange the order of the channels in a Favorite Channels List.

PDP 5500, LED 6400 series and above

1. Select the **B** button on the virtual remote panel to bring up the favorite channels list and select the channel you wish to move.
2. Select the **A** button on the virtual remote panel to rearrange the order of the selected channel. Press the touch pad to finish.

LED 4300 - 6300 series

1. Press the **B** button to bring up the favorite channels list and select the channel you wish to move.
2. Press the **A** button to rearrange the order of the selected channel. Press  button to finish.

Rename a Favorite Channel List

Rename an existing favorite channels list.

1. Select the virtual remote panel's or the regular remote's **TOOLS** button to display the list. Select **Rename Favorites** from the list.
2. Rename the list in the popup window. The new name can be up to 20 characters long.

Copy a Favorite Channels List

Copy channels from one favorite channels list to another.

1. Select the **B** button on the virtual remote panel or press **B** button on regular remote control to bring up a Favorite Channels List and select the channels you wish to copy.
2. Select the virtual remote panel's or the regular remote's **TOOLS** button to display the list. Select **Copy to Favorites** from the list, and then select the Favorite Channels List(s) you wish to copy to. This copies over the channels to the selected Favorite Channels List(s).

Network Configuration

Connecting the TV to a network gives you access to online services such as the Smart Hub as well as software updates.


Wired Network

There are three ways to connect the TV to a Local Area Network (LAN).


- External Modem



- ① IP Router + ② External Modem

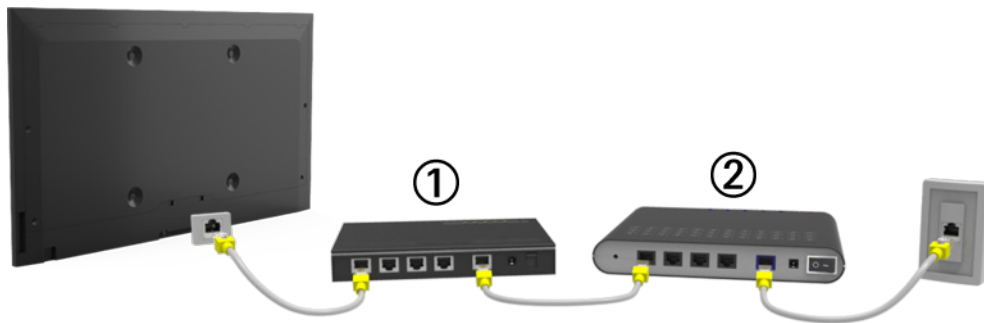

- Wall-mounted LAN Outlet

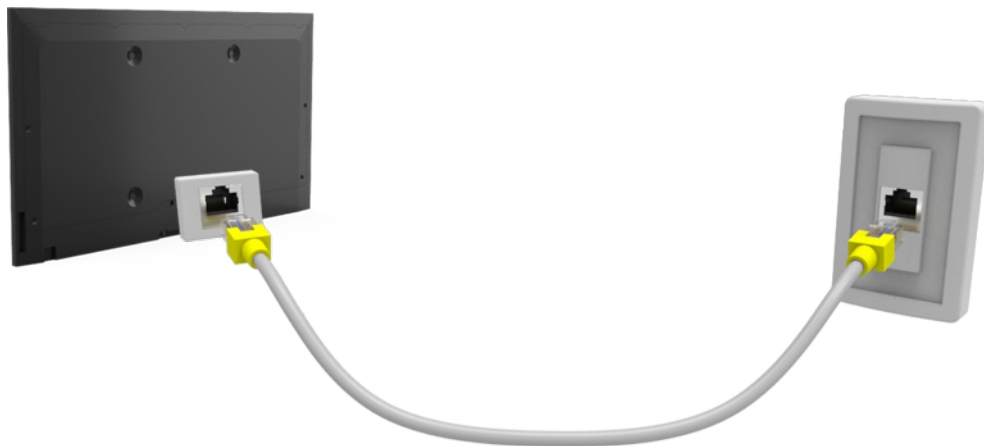

Wireless Network

PDP 5500, LED 5500 series and above

Connect the TV to the Internet using a standard router or modem.



LED 4300 Series models

Refer to the diagram and connect the Samsung Wireless LAN Adapter (WIS09ABGNX or WIS12ABGNX) to the USB port. To connect wirelessly, the TV should be attach a Samsung Wireless LAN Adapter on the TV. Then, connect the TV to the Internet using a standard router or modem. The Samsung Wireless LAN Adapter is sold separately.



The picture may appear corrupted or have static for some channels when the TV is connected to the Samsung Wireless LAN adapter. If this occurs, establish a connection using one of the following methods or connect the Samsung Wireless LAN adapter using a USB cable in a place that is not affected by radio interference.

- The USB right angle adapter: Connect the Samsung Wireless LAN Adapter using the USB right angle adapter.
- The USB extension cable: Connect the Samsung Wireless LAN Adapter using the USB extension cable. Attach the Samsung Wireless LAN adapter to the back of the TV near the top, using double-sided adhesive tape.

Wireless Network Precautions

PDP 5500, LED 5500 series and above

- This TV supports the IEEE 802.11a/b/g /n communication protocols. Samsung recommends using IEEE 802.11n. Otherwise when you play video over a network connection, the video may not play smoothly.
- To use a wireless network, the TV must be connected to a wireless router or modem. If the wireless router supports DHCP, the TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel that is not currently in use for the wireless router. If the channel set for the wireless router is currently being used by another device, the result is usually interference and/or a communications failure.
- Most wireless networks have an optional security system. To enable a wireless network's security system, you need to create a security key using characters and numbers. This security key is then needed to connect to the wireless network.

LED 4300 Series models

- Samsung Wireless LAN Adapter supports the IEEE 802.11 a/b/g/n communication protocols. Samsung recommends using IEEE 802.11n. Otherwise when you play video over a network connection, the video may not play smoothly.
- To use a wireless network, the TV must be connected to a wireless router or modem. If the wireless router supports DHCP, the TV can use a DHCP or static IP address to connect to the wireless network.
- Select a channel that is not currently in use for the wireless router. If the channel set for the wireless router is currently being used by another device, the result is usually interference and/or a communications failure.
- Most wireless networks have an optional security system. To enable a wireless network's security system, you need to create a security key using characters and numbers. This security key is then needed to connect to the wireless network.

Network Security Protocols

The TV only supports the following wireless network security protocols and is unable to connect to non-certified wireless routers:


- Authentication Modes: WEP, WPAPSK, WPA2PSK
- Encryption Types: WEP, TKIP, AES


If the wireless router has been set to Pure High-throughput (Greenfield) 802.11n mode and the Encryption Type to WEP or TKIP, Samsung TVs will not support the connection in compliance with the new Wi-Fi certification specifications.

If the wireless router supports WPS (Wi-Fi Protected Setup), it is possible to connect to the network using PBC (Push Button Configuration) or a PIN (Personal Identification Number). WPS automatically configures the SSID and WPA key settings.

Wired Network Setup

Screen Menu > Network > Network Settings [Try Now](#)

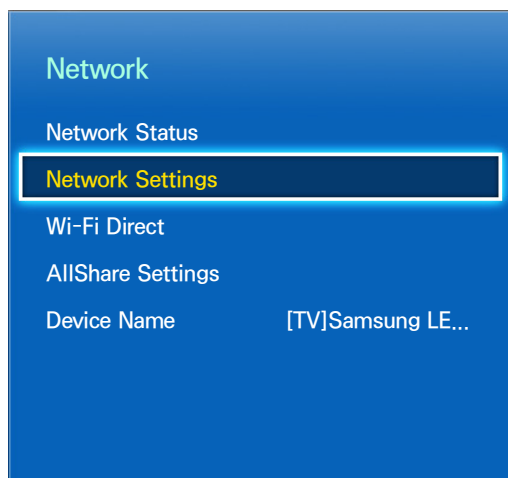

 The displayed image may differ depending on the model.

Automatic Wired Network Setup


The TV's wired network connection is automatically configured when it is connected to a network that supports DHCP.

1. Set **Network type** to **Wired** and then select **Connect**.
2. The TV attempts to connect to the network. A confirmation message is then shown once a connection is established. Select **OK** to proceed. If the attempt fails, try again or connect manually.


Manual Wired Network Setup

If the network requires a static IP address, enter the IP address, subnet mask, gateway and DNS values to connect to the network manually. To get the IP address, subnet mask, gateway and DNS values, contact your Internet Service Provider (ISP). Refer to the "Dynamic versus Static IP Addresses" for more information.


1. Set **Network type** to **Wired** and then select **Connect**.

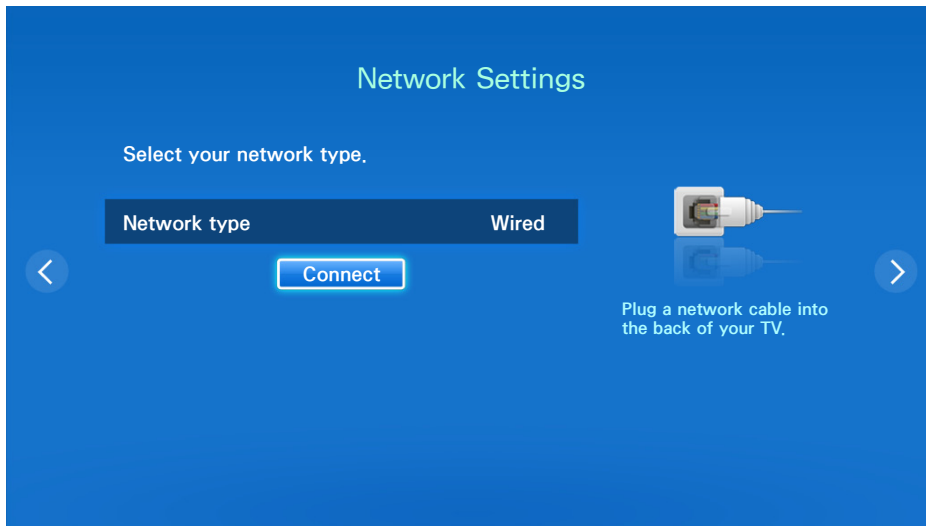

2. Select **Stop** when the TV attempts to connect to the network. Once the network connection has been interrupted, select **IP Settings**.

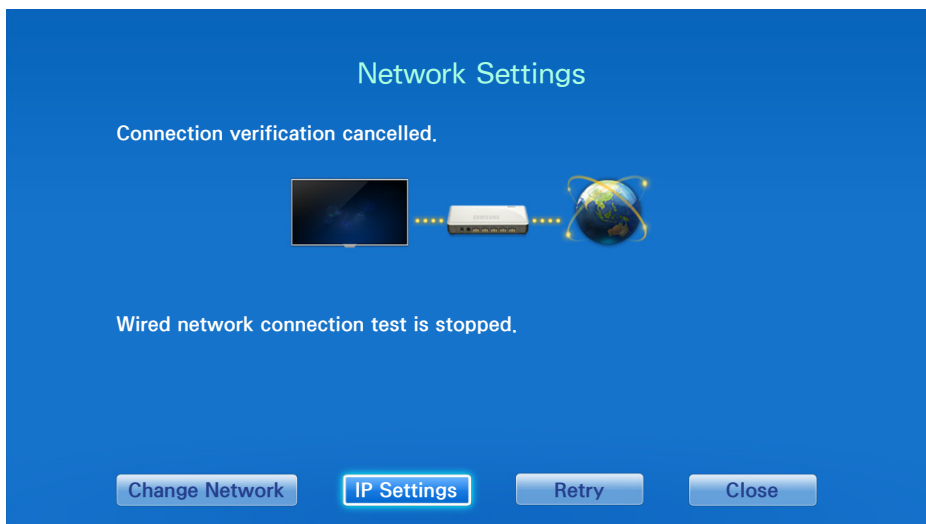

3. From the **IP Settings** screen, set **IP Setting** to **Enter manually**, enter **IP Address**, **Subnet Mask**, **Gateway**, and the **DNS Server** values, and then select **OK**.

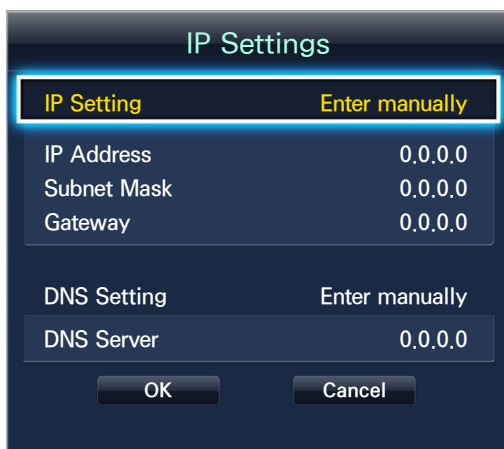

4. The TV attempts to connect to the network again using the specified settings. A confirmation message is then shown once a connection is established. Select **OK** to proceed.

Failed Wired Connection

No network cable found [Try Now](#) [Try Now](#)

Make sure the network cable is plugged in. If it is connected, make sure the router is turned on. If it is on, try turning it off and on again.

IP auto setting failed [Try Now](#)

Perform the following or set the IP address manually from [IP Settings](#).

1. Ensure that the DHCP server is enabled on the router and reset the router.
2. If this does not work, contact your Internet Service Provider for more information.

Unable to connect to the network [Try Now](#)

Check the following:

1. Check the [IP Settings](#) settings.
2. Ensure that the DHCP server is enabled on the router and unplug and then plug the router back in.
3. If this does not work, contact your Internet Service Provider for more information.

Connected to a local network, but not to the Internet [Try Now](#)


1. Make sure that the Internet LAN cable is connected to the router's external LAN port.
2. Check the DNS settings under [IP Settings](#).
3. If the problem persists, contact your Internet Service Provider.


Network setup complete, but unable to connect to the Internet [Try Now](#)

If the problem persists, contact your Internet Service Provider.

Wireless Network Setup

Screen Menu > **Network** > **Network Settings**

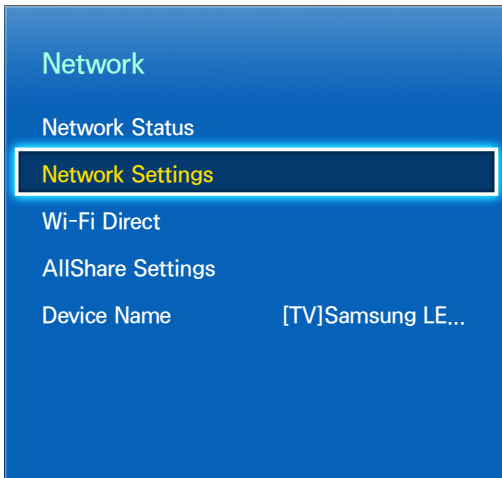

 The displayed image may differ depending on the model.

Automatic Wireless Network Setup


Connect the TV to the Internet via a wireless router. Check the wireless router's SSID and security key settings before attempting to connect. The security key can be found on the wireless router's configuration screen.

1. Setting **Network type** to **Wireless** automatically displays a list of available wireless networks.
2. Select the network (SSID) you wish to connect to. If the desired wireless router doesn't appear in the list, select **Add Network** and enter the network's SSID manually.
3. Enter the security key and select **Done**. If the selected network is not security-enabled, the TV will attempt a connection right away.
4. The TV attempts to connect to the network. A confirmation message is then shown once a connection is established. Select **OK** to proceed. If the attempt fails, try again or connect manually.

Manual Wireless Network Setup


If the network requires a static IP address, enter the IP address, subnet mask, gateway and DNS values to connect to the network manually. To get the IP address, subnet mask, gateway and DNS values, contact your Internet Service Provider (ISP). Refer to the "Dynamic versus Static IP Addresses" for more information.

1. Setting **Network type** to **Wireless** automatically displays a list of available wireless networks.

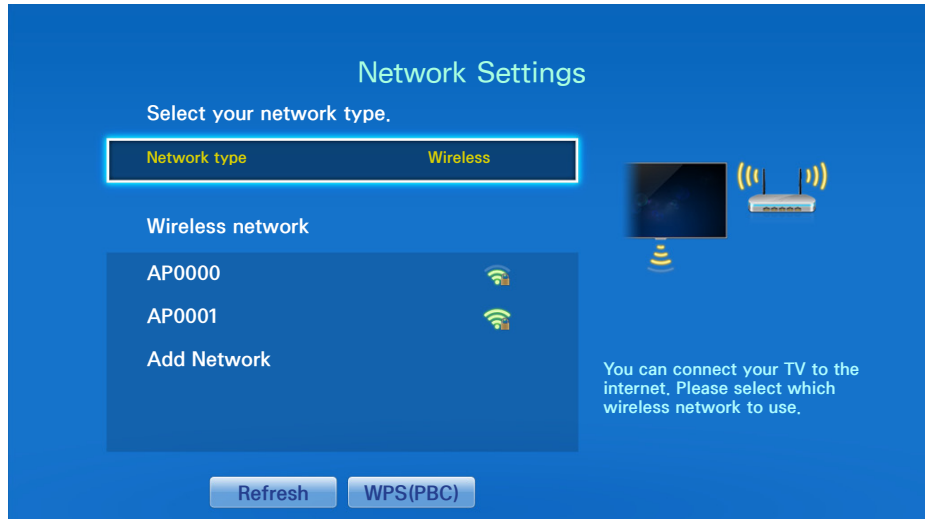


2. Select the network (SSID) you wish to connect to. If the desired wireless router doesn't appear in the list, select **Add Network** and enter the network's SSID manually.
3. Enter the security key and select **Done**. If the selected network is not security-enabled, the TV will attempt a connection right away.

4. Select **Stop** when the TV attempts to connect to the network. Once the network connection has been interrupted, select **IP Settings**.

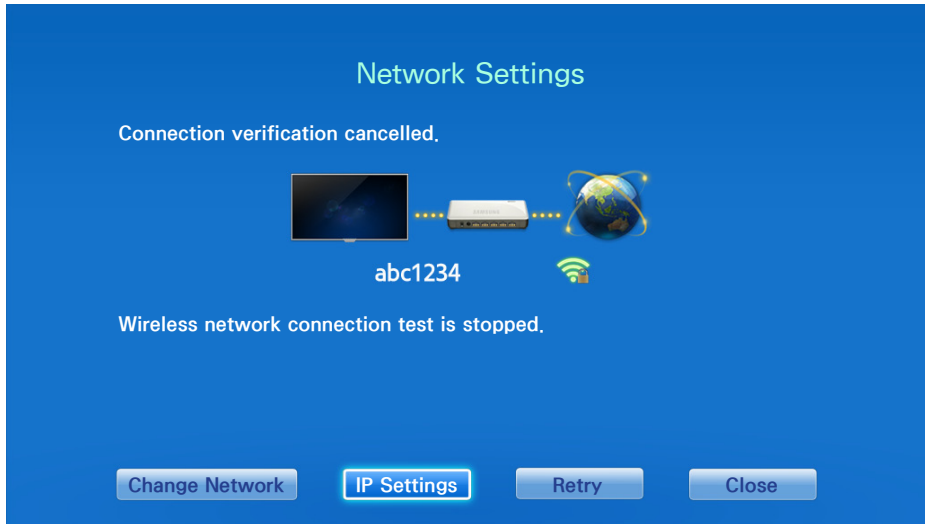

5. From the **IP Settings** screen, set **IP Setting** to **Enter manually**, enter **IP Address**, **Subnet Mask**, **Gateway**, and the **DNS Server** values, and then select **OK**.

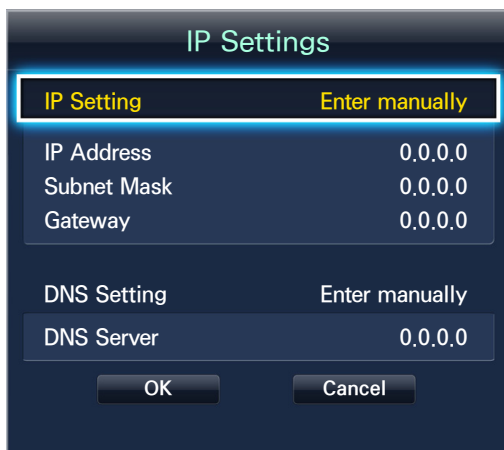

6. The TV attempts to connect to the network again using the specified settings. A confirmation message is then shown once a connection is established. Select **OK** to proceed.

Using the WPS Button

If the router has a WPS push button, you can use it to connect the TV to the router automatically. WPS automatically configures the SSID and WPA key settings.

1. Setting **Network type** to **Wireless** automatically displays a list of available wireless networks.
2. Select **WPS(PBC)** and then press the router's WPS button within two minutes.
3. The TV automatically acquires the SSID and security key settings and connects to the network. A confirmation message is then shown once a connection is established. Select **OK** to proceed.

Failed Wireless Connection

Wireless network connection failed, or no wireless router selected. [Try Now](#) [Try Now](#)

Go to **Network Settings** and select the correct router.

Unable to connect to a wireless router [Try Now](#) [Try Now](#)

Check the following:

1. Check that the router is turned on, and if it is, turn it off and on again.
2. Enter the correct security key if required.

IP auto setting failed [Try Now](#)

Perform the following or set the IP address manually from **IP Settings**.

1. Make sure that the DHCP server is enabled on the router and unplug and plug the router back in.
2. Enter the correct security key if required.
3. If this does not work, contact your Internet Service Provider for more information.

Unable to connect to the network [Try Now](#)

Check the following:

1. Check the [IP Settings](#) settings.
2. Enter the correct security key if required.
3. If this does not work, contact your Internet Service Provider for more information.

Connected to a local network, but not to the Internet [Try Now](#)

1. Make sure that the Internet LAN cable is connected to the router's external LAN port.
2. Check the DNS settings under [IP Settings](#).
3. If the problem persists, contact your Internet Service Provider.

Network setup complete, but unable to connect to the Internet [Try Now](#)

If the problem persists, contact your Internet Service Provider.

Dynamic versus Static IP Addresses


If the network requires a dynamic IP address, use an ADSL modem or router that supports the Dynamic Host Configuration Protocol (DHCP). Modems and routers that support DHCP automatically provide the IP address, subnet mask, gateway and DNS values the TV needs to access the Internet, so they do not have to be entered manually. Most home networks use a dynamic IP address.

If the network requires a static IP address, enter the IP address, subnet mask, gateway, and DNS values manually when setting up the network connection. To get the IP address, subnet mask, gateway and DNS values, contact your Internet Service Provider (ISP).

If the network requires a static IP address, use an ADSL modem that supports DHCP. ADSL modems that support DHCP also allow static IP addresses.

Checking the Network Status


Screen Menu > Network > Network Status [Try Now](#)

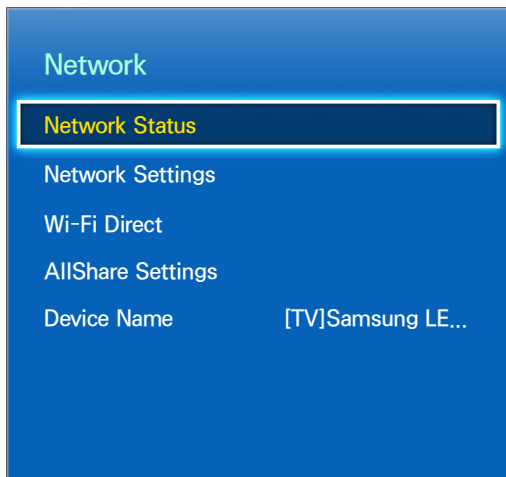


 The displayed image may differ depending on the model.

View the current network and Internet status.

Mobile Device Connection

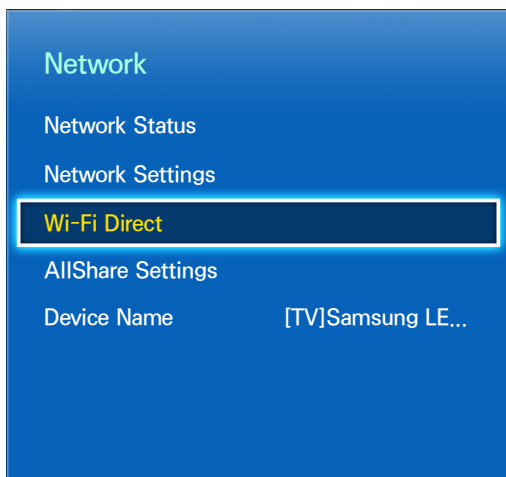

 The displayed image may differ depending on the model.

You can either directly connect a mobile device to the TV with no need for a wireless router or connect them on the same network to play media files from the mobile device on the TV.

Wi-Fi Direct

Screen Menu > [Network](#) > [Wi-Fi Direct](#) [Try Now](#)

Connect a mobile device that supports Wi-Fi Direct to the TV without using a wireless router.

1. Enable Wi-Fi Direct on the mobile device and then launch [Wi-Fi Direct](#). The TV automatically scans for and displays a list of available devices. The TV's name also appears on the mobile device.
2. Select the device from the list to initiate a connection. If a connection request is made by the TV, a permission message appears on the mobile device and vice versa. Accept the request to connect the mobile device to the TV.

AllShare Settings

Screen Menu > [Network](#) > [AllShare Settings](#)

This TV can play media files from computers or other DLNA-enabled devices connected to the TV via a network. For details, see "Using Networked External Storage Devices".

In addition, this TV can be used as a display for mobile devices, including smartphones and tablets. For details, see "Screen Mirroring".

Rename the TV

Screen Menu > [Network](#) > [Device Name](#) [Try Now](#)

Assign a unique name for your TV. The assigned name appears on the external devices connected to the TV via the network.

Smart Touch Control

Smart Touch Control is available only with PDP 5500 series and LED 6400 series or higher.

The Smart Touch Control makes it easier and more convenient to use the TV. For example, you can use the remote control's built-in touch pad to move the focus and make selections as you would on a computer using a mouse. In addition, you can use the virtual remote panel displayed on the screen to change channels, play media files, and access favorites.

Inserting the Batteries (AAA X 2)



1. Slightly lift the battery cover by pulling the strap or using a plastic card (e.g. a credit card). Next, pull on the cover's notch with a fingernail to remove the cover completely.
2. Insert 2 AAA batteries, making sure to align the positive and negative ends correctly.
3. Align the battery cover with the back of the remote control and press down along the edges until it is cleanly attached to the remote control.

Connecting to the TV

In order to operate the TV using a Smart Touch Control, you must first pair it to the TV via Bluetooth. However, the Smart Touch Control is only available for the paired Samsung TV.

1. To turn on the TV, point the Smart Touch Control at the remote control receiver of the TV and press the **TV** button. The remote control receiver's location may vary depending on the model.
2. A Bluetooth icon will appear at the bottom left of the screen as shown below. The TV will then attempt to connect to the Smart Touch Control automatically.



<Attempting to connect and completion icons>

Reconnecting the Smart Touch Control

If you need to reestablish the connection between the TV and the Smart Touch Control unit, press the pairing button at the back of the Smart Touch Control.



<The Smart Touch Control's pairing button>

The pairing button can be accessed by removing the Smart Touch Control's battery cover. Pressing the pairing button automatically reestablishes the connection between the control and the TV.

Battery Low Alarm

If the battery becomes low while using the Smart Touch Control, the following alarm window blinks and appears at the bottom of the left screen. If the alarm window pops up, replace the batteries of the Smart Touch Control. Use alkaline batteries for longer usage.



<Low battery alarm window>


Buttons and Descriptions

<For U.S.A. and Canada>



<For the other countries>



| Buttons | Descriptions |
|---|---|
| TV | Turns the TV on/off. |
| SOURCE | Changes the source. |
| STB | Turn on and off the satellite or cable set-top box connected to the TV. For this, the Smart Touch Control must be configured as a universal remote control. Refer to "Universal Remote Setup" for more information. |
| VOL | Adjusts the volume. |
| VOICE | Run Voice Recognition. To speak a voice command, press and hold the VOICE button and say a voice command. Refer to "Voice Recognition" for more information. |
| MUTE | Turns the TV sound on/off. |
| CH | Changes the channel. |
| MORE | Displays the virtual remote panel on the screen. The virtual remote panel consists of a number panel, a playback control panel, and a quick access panel. Use the touch pad to select numbers and buttons. Refer to "Virtual Remote Control" for more information. |
| Touch pad | Drag your finger on the touch pad as you would on the touch pad of a laptop to move the focus displayed on the screen. To select item, press the touch pad. Refer to "Using the touch pad" for more information. |
| RETURN / EXIT | Returns to the previous menu. |
| SMART HUB | Launch Smart Hub. While an application is running, pressing the SMART HUB button terminates the application. Refer to "Smart Hub" for more information. |
| GUIDE | Check the digital channel broadcasting schedule. Refer to "Guide" for more information. |
| LIGHT | (for U.S.A. and Canada) Turn on the backlight for the buttons. The backlight lasts for only a few seconds. Turns the remote control light on or off. When on, the buttons become illuminated for a moment when pressed. (Using the remote control with this button set to On will reduce the battery usage time.) |
| DVR | (for U.S.A. and Canada) This button is only available when the Smart Touch Control is configured to function as a universal remote control to control a set-top box. Run DVR (Digital Video Recording) in set-top box. |
| MENU | Opens the OSD. |
| 3D | Turns the 3D image on or off. Refer to "3D TV" for more information. |
|  | (for the other countries) Enable Sports Mode for the optimal sports viewing experience. |
| INFO | (for the other countries) Displays information on the TV screen. |

Special Functions

Press and hold the following Smart Touch Control buttons to access various special functions.


| Buttons | Descriptions |
|---------------|---|
| Touch pad | Press and hold the touch pad while watching TV to display CH List on the screen. In addition, you can press and hold the touch pad for 2 seconds or more while an application is running to access the application's hidden features. (Not available with all applications.) |
| RETURN | Press and hold this button to quit the current process or app. |
| MORE | Press and hold the touch pad to select a desired function (e.g. e-Manual , TOOLS , INFO , etc.) easily. |

Using the touch pad

Use the touch pad to perform various commands. Navigate to [Tutorial \(System > Device Manager > Smart Touch Control Settings > Tutorial\)](#) to view an on-screen guide to using the Smart Touch Control.

Dragging


Drag on the touch pad in the desired direction. Move the focus or the pointer in the direction the finger is dragging.

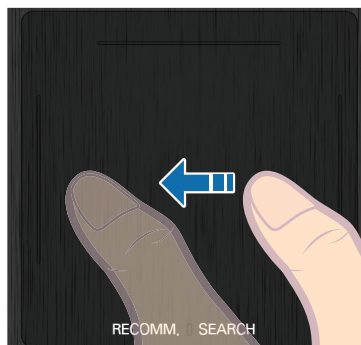

<The button's name may vary, depending on the country.>

Pressing


Press the touch pad. This selects the focused item.

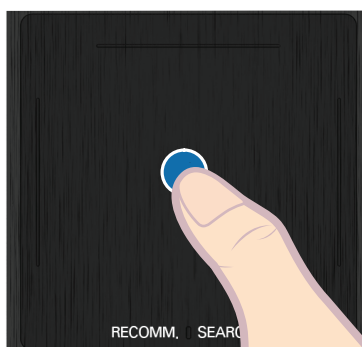

<The button's name may vary, depending on the country.>

Flicking


Flick on the touch pad in the desired direction. This moves the focus or scrolls the screen based on the direction and speed of the flick.

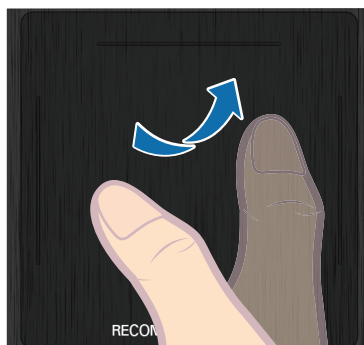

<The button's name may vary, depending on the country.>

Pressing and Holding


Press and hold the touch pad while watching TV to display **CH List** on the screen. In addition, you can press and hold the touch pad for 2 seconds or more while an application is running to access the application's hidden features. (Not available with all applications.)

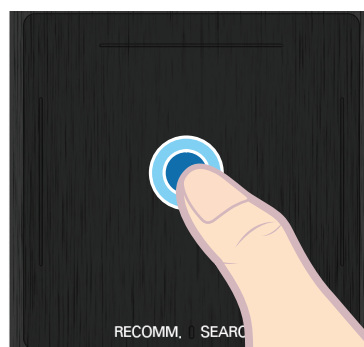

<The button's name may vary, depending on the country.>

Pressing and Dragging


Press on the touch pad, drag and release. This moves the selected web item in a webpage or your current location on a map.

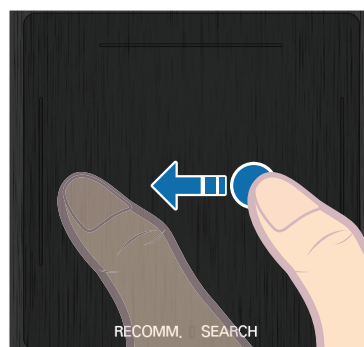

<The button's name may vary, depending on the country.>

Scrolling Up/Down


Scroll up/down the line on either the left or right edge of the touch pad. This scrolls a webpage or a list up/down. This scrolling feature easily accommodates both right-handed and left-handed users.

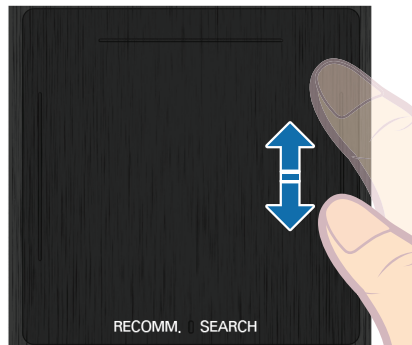

<The button's name may vary, depending on the country.>

Scrolling Left/Right


Scroll left/right on the line at the top or bottom edge of the touch pad. This scrolls a horizontal webpage or the Smart Hub panel to the left/right.

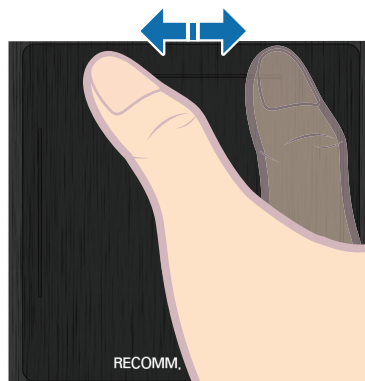

<The button's name may vary, depending on the country.>

Changing Channels by Entering Numbers


While watching TV, tap on the protruding line on the left or right edge of the touch pad to bring up the numerical input window on the screen. Use your finger to enter the number for the channel you want to watch. The recognized number is displayed on the screen and the TV switches to the corresponding channel. However, the number you have entered may not be recognized properly by the TV. Refer to the guide below to ensure that your numerical entries are recognized accurately.

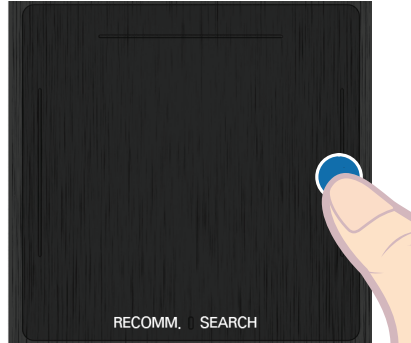

<The button's name may vary, depending on the country.>

Numerical Input Guide

Refer to the diagrams below when entering numerical values. The TV may not recognize your entries if you do not follow the sequences shown below.

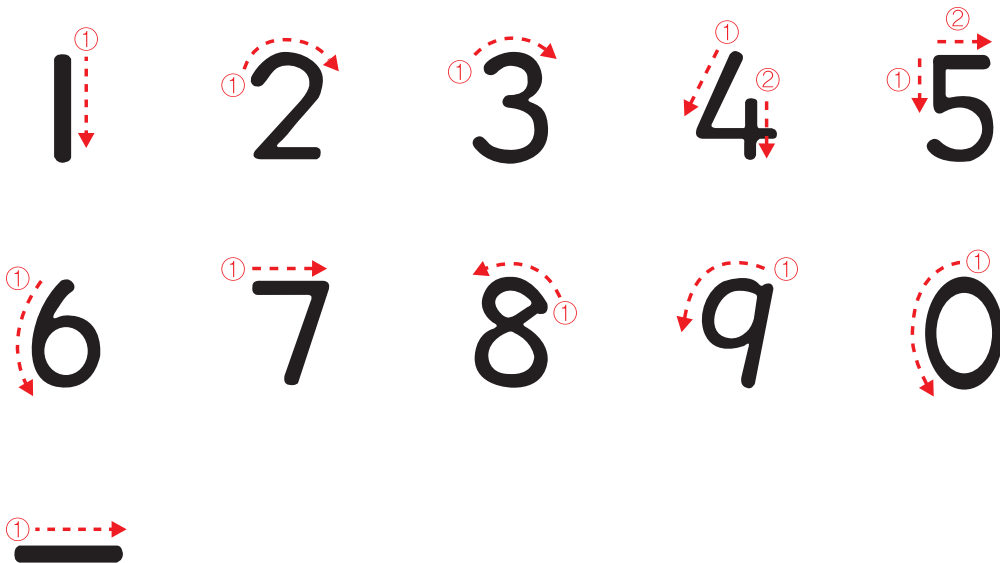

Adjusting the Touch pad

Screen Menu > [System](#) > [Device Manager](#) > [Smart Touch Control Settings](#) > [Touch Sensitivity](#)

Users can adjust the sensitivity of the Smart Touch Control's touch pad. Set [Touch Sensitivity](#) to adjust sensitivity and make it more convenient to use.

Show Status and Notification Banner

Press the **MORE** button on the Smart Touch Control and then select **STATUS** on the virtual remote panel to display the status and notification banner at the top of the screen. Refer to the "Status and Notification" for more information.

Recommended

This function is only available on U.S.A. and Canada.

Press the **RECOMM. / SEARCH** and then select **Recommended** from the list displayed at the bottom of the screen. This shows the current/scheduled program and application recommendations.

Select a program that is currently airing to jump to the corresponding channel or a program that is scheduled to air to set up a Schedule Viewing setting. Refer to the "Scheduled Recommended Program Info" for more information.

Select an application to launch. Samsung Apps will launch if the selected application is not installed on the TV. Refer to the "Samsung Apps" for more information.

History

For U.S.A. and Canada

Press the **RECOMM. / SEARCH** and then select **History** from the list displayed at the bottom of the screen. This displays an interactive list of recently accessed channels, media content and applications.

For the other countries

Press the **HISTORY / SEARCH** and then select **History** from the list displayed at the bottom of the screen. This displays an interactive list of recently accessed channels, media content and applications.

Deleting History Data

Screen Menu > **Smart Features** > **Remove viewing history** > **History**

You can delete the history information about recently viewed channels, content and applications.

Searching

For U.S.A. and Canada

Press the **RECOMM. / SEARCH** button on the Smart Touch Control. The list appears at the bottom of the screen. Press the **RECOMM. / SEARCH** button again. The keypad will appear on the screen. Enter search criteria to search not only many apps and their contents on the TV but also the Web. For more information, refer to "Searching".

For the other countries

Press the **HISTORY / SEARCH** button. The list appears at the bottom of the screen. Press the **HISTORY / SEARCH** button again. The keypad will appear on the screen. Enter search criteria to search not only many apps and their contents on the TV but also the Web. For more information, refer to "Searching".

Virtual Remote Control

Press the **MORE** button to display the virtual remote panel on the screen. The virtual remote panel consists of a number panel, a playback control panel, and a quick access panel. Use the touch pad to select numbers and buttons. Press and hold this button. A quick access panel of virtual remote panel appears. You can select screen buttons easily.

Changing the Virtual Remote Control Panel

Choose the number panel, playback control panel, or quick access panel as the panel to be shown on the screen.

Use the touch pad to keep moving the focus left or right. The panel changes when the focus is moved beyond the leftmost or rightmost edge.

Use left/right scroll function on the touch pad to change the panel easily.

Change a position of the Virtual Remote Panel

Press the **MORE** button on the Smart Touch Control. The virtual remote panel appears on the screen. Press and hold the touch pad for one second. Users can change a position of the virtual remote panel of the screen.

Using the Number Panel

Use the number panel to enter numbers on a keypad screen or webpage or to change the channel while watching TV. Changing the channel using the number pad leaves a record, allowing you to easily return to previous channels.

Using the Playback Control Panel

Use the playback control panel to pause, rewind, fast forward, skip to the next file, and much more while enjoying media content.

Using the Quick Access Panel

Quickly access the **INFO**, **TOOLS** and **e-Manual** buttons. However, the availability of buttons may vary depending on the operating mode of the Smart Touch Control (with the TV only, as a universal remote, etc.).

Adjusting the virtual remote control


Screen Menu > **System** > **Device Manager** > **Smart Touch Control Settings** > **Onscreen Remote Size**


You can resize the virtual remote control. If the virtual remote control buttons are too small, enlarge the remote control window before using the virtual remote control.

Universal Remote Setup

Screen Menu > [System](#) > [Device Manager](#) > [Universal Remote Setup](#) [Try Now](#)


This function is not available for LED 4300 series.

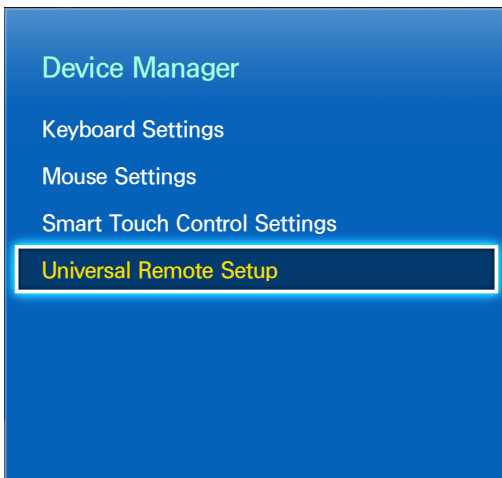

 The displayed image may differ depending on the model.

This TV has a universal remote control feature that lets you control cable boxes, Blu-ray players, home theaters, and other third-party external devices connected to the TV using the TV's remote control. You can also use the Anynet+ (HDMI-CEC) function to operate Samsung external devices with your TV's remote control without any additional setup. For more information, refer to "Anynet+ (HDMI-CEC)".

Connecting the IR Extender

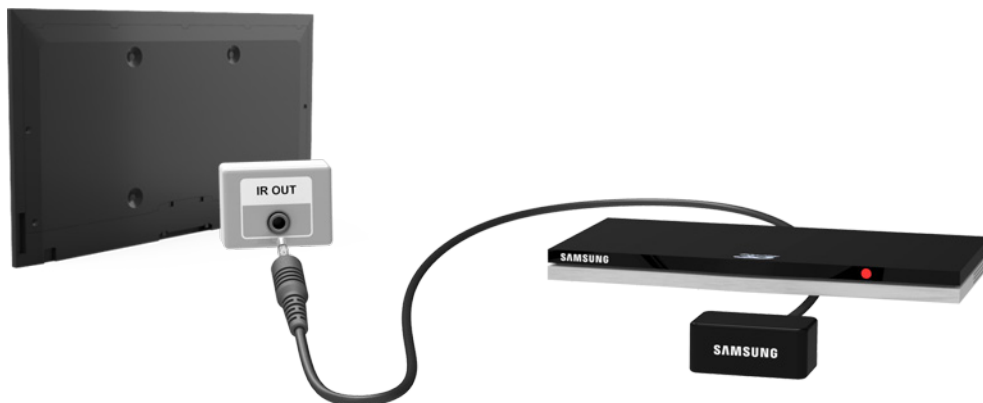

Keep a distance of 0.16 ft at least between the IR Extender and the external device, as the illustration shows. Face the IR Extender toward the external device's remote control signal receiver. Note that it should be no obstacle between IR Extender and external device. The presence of an obstacle will interfere with the transmission of the remote control signal.

 The color and design of the IR Extender may vary depending on the model.

Add the External Device

1. Turn on the external device you wish to set up universal remote function for and then press the **SOURCE** button to bring up the **Source** screen.
2. Select **Universal Remote Setup** from the top of the screen. This initiates the universal remote setup process.
3. Follow the on-screen instruction and set up the universal remote control. If it does not work, set up the remote control by entering the model number manually.

Using the Universal Remote Control

By configuring the universal remote control feature for a connector to which an external device is already connected, you can use the Smart Touch Control as a universal remote control simply by sending the input signals to the corresponding connector.

Registered External Device Management

Universal Remote Setup screen, select a registered external device.

- **Source Setup:** Change the TV's input connector that the external device is connected to.
- **Synced Power off:** Configure the external device to turn off when the TV is turned off.
- **Rename:** Rename the registered external device (up to 15 characters long).
- **Delete:** Remove the registered external device.


Entering Text using the Onscreen Keypad

An onscreen keypad appears when you need to enter text (entering the network password, logging into your Samsung account, etc.), allowing you to enter text using your remote control.

Entering Text using the QWERTY Keypad

Use the QWERTY keypad as you would a normal keyboard. Simply select the letters you want to enter them.

Additional Features

Select the  icon from the keypad to access the following features:

- **Language:** Select a language from the list.
- **Recommended text:** Enable/disable the Recommended Text feature. Enabling the Recommended Text feature displays word recommendations based on the entered characters. To enter the word "Internet", for example, all you have to do is enter "In" and select the word "Internet" from the list of recommended words.
- **Predict Next Letter:** Enable/disable the Text Prediction feature. Enabling the Text Prediction feature eliminates the need to find and select individual character keys. However, this feature is limited to words that have previously been added to the dictionary. To enter the word "Internet", for example, select "I". A predicted word will then appear next to the I key. Simply select the predicted word to enter "Internet".

SMART Interaction

This TV features SMART Interaction, which recognizes a user's voice, actions, and face to enable TV operations without the use of a remote control. The motion control and facial recognition features require a separately-sold camera installed on the TV. Make sure that the TV is connected to the Internet when installing the camera so that it can download the software required for motion control. SMART Interaction makes it possible to configure settings and access features with ease. It takes approximately 15 seconds for voice and motion recognition to come online after turning on the TV.

⚠ When connecting the TV camera to 2013 Samsung TV models, make sure to connect it to the specified USB port of the TV. Other USB ports are not supported for this purpose.

Precautions

Face Recognition

This product saves thumbnail images of users' faces for use during the Face Login. Logging into the Smart Hub via face recognition may be less secure than logging in using an ID and password.

TV Camera Use

Under some circumstances and under certain legal conditions, the use/misuse of the TV camera may result in legal liability. There may be obligations under local privacy laws regarding the protection of individuals concerning personal data and on the free movement of such data, and possibly other laws including criminal laws, regulating camera surveillance both in the workplace and elsewhere.

By using the TV camera, users agree that it will not be used (i) in locations where cameras are generally prohibited (such as bathrooms, locker rooms or changing rooms), (ii) in any manner that will result in an invasion of a person's privacy or (iii) in violation of any applicable laws, regulations or statutes.

If you are using a camera, first check the back for a sticker.

Remove the sticker cover before adjusting the TV camera angle.

When you are no longer using the camera, rotate the lens downward and secure it in place. This prevents any inadvertent or unintentional camera operation.

Motion Control

Motion Control works by using the camera, so the user must be within the camera's recognition range. The camera's recognition range varies depending on the ambient light level and other factors. Run [Motion Control Environment Test](#) before using Motion Control to determine the camera's recognition range. User may experience physical fatigue when using Motion Control for extended periods.

Voice Recognition

Voice Recognition is not available in all languages, dialects or regions. The performance varies depending on the language chosen, voice volume and ambient noise levels in the surrounding area.

Voice Text Input requires the user's agreement with any third-party app's voice privacy policy and to provide Samsung with the user's MAC address and other private information.

Voice Text Input lets users enter text using voice commands instead of a mouse, keyboard or remote control. This feature is particularly useful for searching, browsing the web, and using applications that require text input.


You must agree to the [Supplemental Privacy Notices](#) before using Interactive Voice Recognition.

Voice Recognition

Screen Menu > [Smart Features](#) > [Voice Recognition](#)

This function is available only with PDP 5500 series and LED 6400 series or higher.



 The displayed image may differ depending on the model.

Voice Recognition lets you access and control specific functions of the TV using voice commands. For the accurate recognition of voice commands, pronounce words and phrases clearly in the language selected in [Language](#). The TV's clock has to be set before you use Voice Recognition. Set the [Clock](#) ([System](#) > [Time](#) > [Clock](#)).

To use the [Voice Recognition](#), press the [VOICE](#) button and then say the command word/phrase 0.3ft to 0.4ft away from the microphone on the Smart Touch Control. Commands may not be recognized if you speak too softly or loudly. The optimal volume is approximately 75~80dB.

Operating Environment

The voice recognition rate varies depending on the volume/tone, pronunciation, and ambient environment (TV sound and ambient noise).

Enabling Voice Recognition

Press the **VOICE** button to run **Voice Recognition**. Say a command. You can use **Voice Recognition** to operate the TV.

If Voice Control is not working, check to see if **Voice Recognition (Smart Features > Voice Recognition)** has been enabled. To use Voice Recognition, **Voice Recognition** must be set to **On**.

When the **Voice Recognition** is running, the **Motion Control** is not available.

Voice Recognition Tutorial

Screen Menu > **Smart Features** > **Voice Recognition** > **Voice Recognition Tutorial**

This lets you familiarize yourself with the basics of using Voice Recognition. Run **Voice Recognition Tutorial** or activate Voice Recognition and then say "**Guide me**".

Basic Voice Recognition Use

You can use the following commands anytime while Voice Recognition is active:

- **Moving the Focus:** Say "**Focus Left**", "**Focus Right**", "**Focus Up**", or "**Focus Down**" to move the focus. However, these commands can only be used in situations when the focus can be moved.
- **Select Item:** Say "**Select**".
- **Available Voice Commands:** Say "**Guide me**". A list of basic voice commands available in the current state is shown.
- **All Voice Commands:** Say "**Guide me**" and then "**Show All**" to display a complete list of voice commands by category. Say the name of a category.

Only preset voice commands are recognized. Available voice commands may vary, depending on the software version.

Voice Recognition Settings

Screen Menu > **Smart Features** > **Voice Recognition**

- **Language:** Select a language for Voice Recognition.
- **TV Voice:** Enable/disable the TV's voice responses to your Voice Recognition commands and choose between a male and female voice. This function is not supported depending on the region.

Interactive Voice Recognition Commands

Interactive Voice Recognition allows you to set up a Schedule Viewing access VODs, search and launch applications, and execute various other commands without having to remember specific commands or keywords. Saying "Turn off the TV in 30 minutes," for example, instructs the TV to turn off after 30 minutes (Sleep Timer).

Activate Interactive Voice Recognition and say a command. See the examples below:


- When you don't know which channel a specific program is on:
"Play <program title>."
- When you need information about a specific genre:
"Which *(genre name) shows are on today?"
- When you want to watch a program featuring a specific actor or directed by a specific director:
"Please look up programs featuring *(cast member). / Find me works directed by *(director name)."
- When you want to find out more information about the program you are watching:
"Who are the cast members in this program?" / "What's the title of this program?"
- When you want program recommendations:
"Please recommend something to watch this evening." / "Are there any shows worth watching today?"
- When you want to operate the TV:
"Adjust the volume to ten." / "Change to channel **"


Deactivating Voice Recognition

To deactivate Voice Recognition, say "**Close Voice Recognition**".

Motion Control

Screen Menu > [Smart Features](#) > [Motion Control](#)

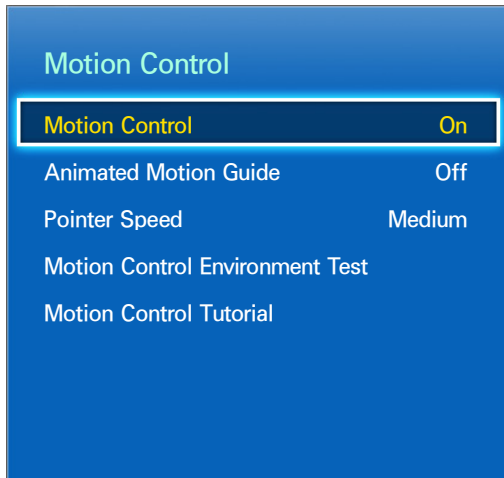


 The displayed image may differ depending on the model.

Use Motion Control to change the channel, adjust the volume, move the pointer, and control other TV functions.

Some applications may not support Motion Control.

The motion control features require a separately-sold camera installed on the TV. Make sure that the TV is connected to the Internet when installing the camera so that it can download the software required for motion control.

When the [Voice Recognition](#) is running, the [Motion Control](#) is not available.

 When connecting the TV camera to 2013 Samsung TV models, make sure to connect it to the specified USB port of the TV. Other USB ports are not supported for this purpose.

Operating Environment

Users should be located between 4.9ft and 13.1ft from the camera. The actual recognition range may vary depending on the camera angle and other factors.

Motion Control relies on the TV camera and therefore will not function if the camera is pointed up or down. Adjust the camera to the correct angle. Do not point the camera directly at the sun or any other light source or obstruct its view.

In order for the camera to recognize movement, the user has to stand out from the background.

The appropriate ambient brightness is between 50 to 500 lux. (ex: 100 Lux: bathroom, 400 Lux: living room)

Avoid direct sunlight when using Motion Control.

Run [Motion Control Environment Test](#) to assess the camera's recognition range before using Motion Control.

Motion Control Environment Test

Screen Menu > [Smart Features](#) > [Motion Control](#) > [Motion Control Environment Test](#)

Run this test before using Motion Control to ensure proper functionality.

1. Run [Motion Control Environment Test](#) and select Start within 4.9ft and 13.1ft of the TV. If light reflects on the TV screen, user can be difficult to use [Motion Control](#).
2. Adjust the camera angle so that you appear inside the square displayed on the screen. Once you have finished adjusting the camera angle, wave one hand slowly from left to right. Spread your hand out with the palm facing the TV. An arrow cursor appears on the screen when the TV recognizes the action. If recognition fails, try again.

Motion Control Tutorial


Screen Menu > [Smart Features](#) > [Motion Control](#) > [Motion Control Tutorial](#)

Run Motion Control and follow the instructions. This lets you familiarize yourself with the basics of using Motion Control.

Motion Control Activation

Screen Menu > [Smart Features](#) > [Motion Control](#) > [Motion Control](#)

Raise your hand with the palm facing the TV. Hold it for a moment and slowly wave your hand from side to side three or four times. When your hand is successfully recognized, the Motion Control is activated and a pointer is displayed on the screen.

-  Dropping your hand out of the range of the TV camera deactivates Motion Control. Raise your hand within 3 seconds to reactivate it.

Using the Basic Motion Controls

Available motion commands may vary, depending on what the TV is currently doing.

The following basic motion control commands are available:

- **Pointing Navigation:** This action moves the cursor to the desired position.
- **Run / Select:** Make a fist to select an option or execute a command. Keeping your fist clenched is like holding down a remote control button.
- **Return:** Make a circle with your hand in the counterclockwise direction to return to the previous menu.
- **Turning over screens:** Hold one palm vertical, and swing to the left or right to change the Smart Hub screens.
- **Scrolling a web page:** While viewing a web page, make a fist on the scroll bar, and then move it up/down to scroll the page up/down.

Motion Control Options


Screen Menu > [Smart Features](#) > [Motion Control](#)







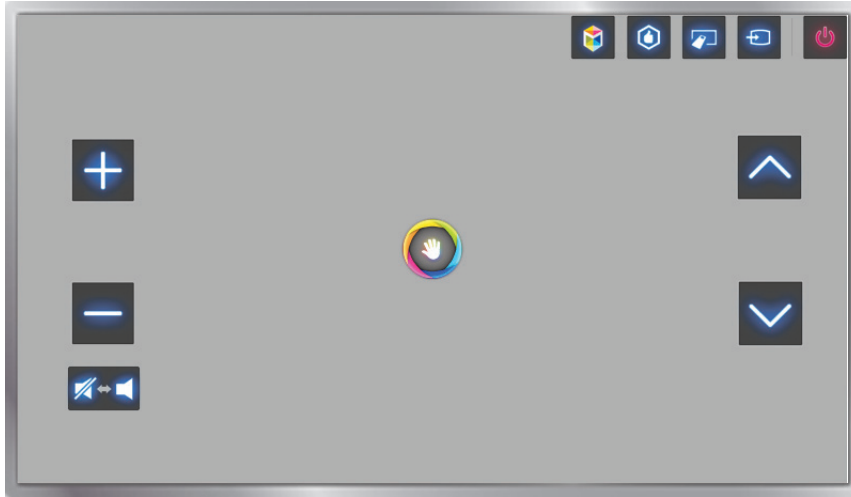

- **[Animated Motion Guide](#):** Displays an animated guide when user motion is detected.
- **[Pointer Speed](#):** Set the speed of the pointer used in [Motion Control](#).

Motion Control Screen

The Screen Composition while Viewing TV


Launching Motion Control while watching TV displays the following icons on the screen:









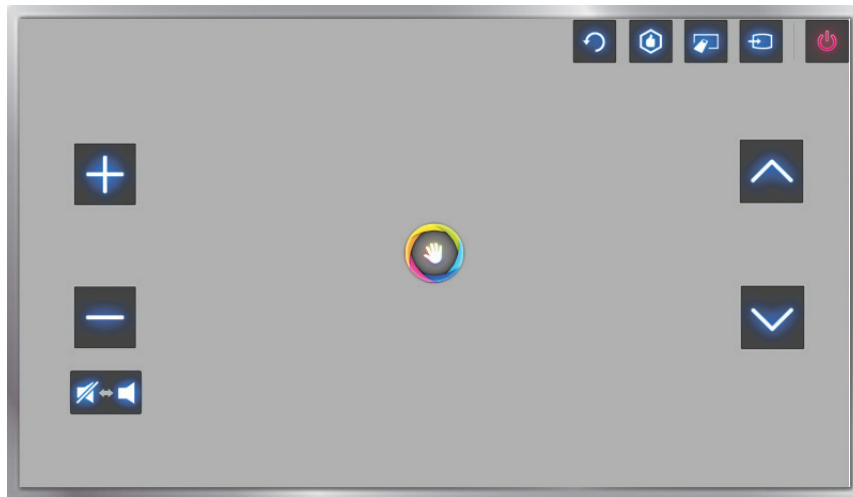

| Screen Icons | Explanation |
|---|---|
|  | Adjust the volume. |
|  | Turns the TV sound on/off. |
|  | Changes the channel. |
|  | Check the recommended program information and air times. Select a program from the list to view detailed information about that program. For more information, refer to "Scheduled Recommended Program Info". |
|  | Launch Smart Hub. |
|  | Enter a channel number using the number panel to jump to the channel. Use the playback control panel with the on-screen color buttons to control a media file that is currently playing. |
|  | Change the source. |
|  | Turn off the TV. |

The Smart Hub Screen Composition


Launching Motion Control while using Smart Hub displays the following icons on the screen:









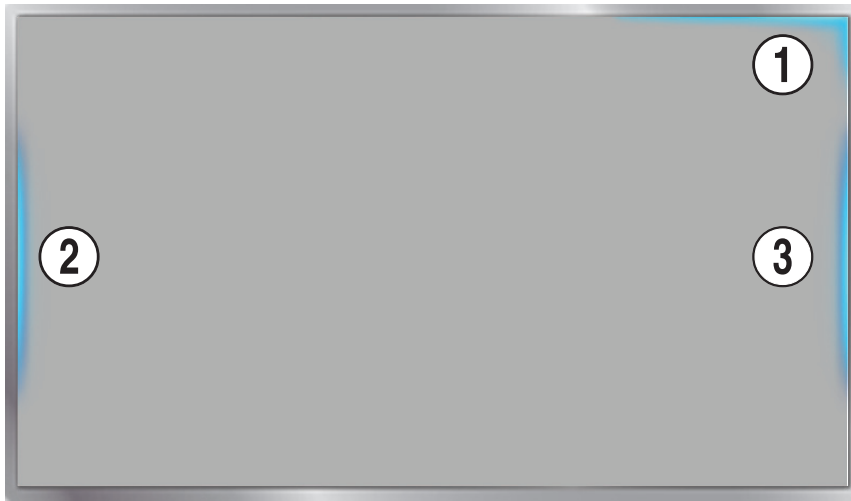



| Screen Icons | Explanation |
|---|---|
|  | Adjust the volume. This function is only available on the On TV . |
|  | Turns the TV sound on/off. This function is only available on the On TV . |
|  | Changes the channel. This function is only available on the On TV . |
|  | Returns to the previous menu. |
|  | Check the recommended program information and air times. Select a program from the list to view detailed information about that program. For more information, refer to "Scheduled Recommended Program Info". |
|  | Displays the virtual remote panel on screen. Refer to the "Virtual Remote Control" for more information. |
|  | Change the source. |
|  | Turn off the TV. |

Retrieving Icons on the Screen

When using Motion Control with Smart Hub, the icons will disappear automatically after two seconds of inactivity. To retrieve the icons, move the pointer to one of the three edges shown below (marked in blue) and then hold it there for 1 second. The icons will reappear on the screen.



| Screen Icons | Explanation |
|--------------|--|
| ① |  /  /  /  /  |
| ② |  /  /  |
| ③ |  /  |

Face Recognition

Users can register their faces and log into their Smart Hub accounts through Face Recognition. One face may be registered per account. Depending on the ambient brightness level and the user's skin tone, the TV may have difficulty recognizing the user's face.

The Face Recognition features require a separately-sold camera installed on the TV. Make sure that the TV is connected to the Internet when installing the camera so that it can download the software required for Face Recognition.

⚠ When connecting the TV camera to 2013 Samsung TV models, make sure to connect it to the specified USB port of the TV. Other USB ports are not supported for this purpose.

Operating Environment

Users should be located between 4.9ft and 13.1ft from the camera. The actual recognition range may vary depending on the camera angle and other factors.

The appropriate ambient brightness is between 50 to 500 lux. (ex: 100 Lux: bathroom, 400 Lux: living room)

Face Recognition can recognize up to 5 different users at a time.

The TV may have difficulty recognizing twins and people with similar faces as two different individuals.


Note the following when using Face Recognition:

- Do not cover your face with a hat, a pair of sunglasses, or your hair.
- The user's entire face must be visible to the camera. Avoid shadows over your face. Shadows prevent the camera from recognizing your face accurately.
- Keep your expression as neutral as possible. In addition, keep your mouth closed but at the same time as neutral as possible.
- User's facial expression when logging into your Samsung account must be the same as the facial expression during the registration process.


Face Registration


Users can register their faces to the Smart Hub accounts. Create a new account if you do not already have one. Refer to the "Creating a Samsung Account" section for details.


Face Registration from the Smart Hub account information screen

 Log into Smart Hub first.

1. Open the ([Smart Features](#) > [Samsung Account](#) > [Edit Profile](#)) menu, and select [Register Face](#).
2. Read the instruction, select [OK](#), and then enter the password for the Samsung account.
3. Select [Take Picture](#), and the user's face appears on the screen. Keep the face to be completely in the red dotted frame. The face is successfully registered when the frame turns green.




 The user's entire face must be visible to the camera. Avoid shadows over your face. Shadows prevent the camera from recognizing your face accurately.

 Keep your expression as neutral as possible. In addition, keep your mouth closed but at the same time as neutral as possible.

 It is better to select the checkbox beside [I want to enter password as well for increased security](#) for higher security. With the checkbox selected, the user must enter the password when logging in using face recognition.




4. Select [Save](#) to finish.

Face Registration for the Smart Hub account using face recognition


1. From the Smart Hub login window, select **Face recognition**, and then select **Start**. The TV automatically recognizes the user's face.
 2. Select a face to register from the list, and then select **Register Face** in the popup window.
 3. Read the instruction from the popup window, select **OK**, and then select the account from the list. However, a user account appears in the list if the TV has a record of the user's account and the user is logged in.
 4. Enter the password for the Samsung account. To make face recognition more accurate, scan the user's face again.
 5. Select **Take Picture**. The user's face appears on the screen. Keep the face completely within the red round. The face is successfully registered when the round turns green. Select **OK** to proceed.
-  The user's entire face must be visible to the camera. Avoid shadows over your face. Shadows prevent the camera from recognizing your face accurately.
 -  Keep your expression as neutral as possible. In addition, keep your mouth closed but at the same time as neutral as possible.
 -  It is better to select the checkbox beside **I want to enter password as well for increased security** for higher security. With the checkbox selected, the user must enter the password when logging in using face recognition.


Face Recognition Login

Select **Face recognition**, and then select **Start** from the login window. The TV automatically recognizes a user's face. If recognition fails, try again.

-  The user's entire face must be visible to the camera. Avoid shadows over your face. Shadows prevent the camera from recognizing your face accurately.
-  Keep your expression as neutral as possible. In addition, keep your mouth closed but at the same time as neutral as possible.
-  Once recognition succeeds, the TV logs into the Smart Hub automatically. If the TV recognizes two or more registered faces, a list of corresponding accounts appears. Select the appropriate account. Recognition of an unregistered face prompts a warning.

Using Peripheral Devices

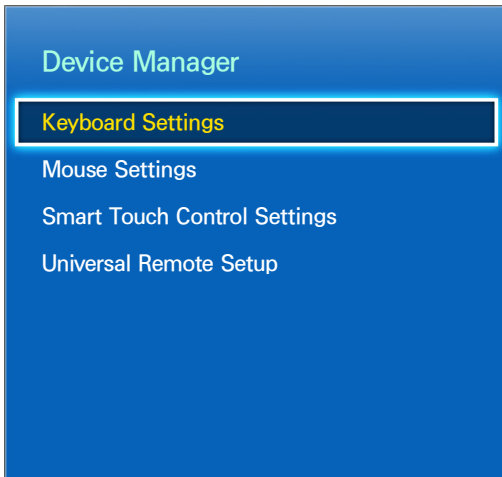

 The displayed image may differ depending on the model.

This TV can be controlled with a keyboard and a mouse instead of a remote control.

These peripheral devices make it easier and more convenient to use the TV.

Certain models do not support USB HID class keyboards and mice.

Keyboard Connection



Screen Menu > **System** > **Device Manager** > **Keyboard Settings** [Try Now](#)

Connect a keyboard to the TV for easier text entry. To use a USB keyboard, plug the keyboard cable into the TV's USB port. With a Bluetooth keyboard, pair it using the TV's Bluetooth function. The Bluetooth function is available only with PDP 5500 series and LED 6400 series or higher.

- **Select Keyboard:** Designate which keyboard to use. Only one keyboard can be used at a time. [Try Now](#)
- **Add Bluetooth Keyboard:** View a list of Bluetooth keyboards within range. Select the keyboard you wish to use. This function is available only with PDP 5500 series and LED 6400 series or higher.
- **Keyboard Options:** Configure the language, type and other basic keyboard settings. [Try Now](#)

Keyboard Use

Use the following keyboard keys to control the TV.

- Arrows key (Moves the focus), Windows () , Menu (**TOOLS**), Enter (Selects and activates), ESC (**RETURN**), Numbers (Numbers)
- F1 (**A**), F2 (**B**), F3 (**C**), F4 (**D**), F5 () , F6 (**SOURCE** button), F7 (**CH LIST** button), F8 (**MUTE** button), F9/F10 (**Volume** Control), F11/F12 (**Change** Channel)
- **Page Up / Page Down:** You can scroll up or down on web browser.

Mouse Connection

Screen Menu > [System](#) > [Device Manager](#) > [Mouse Settings](#) [Try Now](#)

Connect a mouse to the TV and right-click on the mouse to bring up the [Go To](#) screen. You can then use the screen menu, Smart Hub, and other TV functions using the mouse as you would on a computer.


To use a USB mouse, plug the mouse cord into the TV's USB port. To use a Bluetooth mouse, pair it using the TV's Bluetooth function. The Bluetooth function is available only with PDP 5500 series and LED 6400 series or higher.


- **Select Mouse:** Designate which mouse to use. Only one mouse may be used at a time. [Try Now](#)
- **Add Bluetooth Mouse:** View a list of Bluetooth mice within range. This function is available only with PDP 5500 series and LED 6400 series or higher.
- **Mouse Options:** Configure button assignments, pointer speed and other basic mouse settings. [Try Now](#)

Mouse Use

- **Left Button:** Selects
- **Right Button:** Brings up the Go To screen, which includes options such as Power Off, Screen Menu, Smart Hub, and Tools.
- **Page Up / Page Down on screen:** Move the mouse wheel up and down. You can scroll up or down on web browser or screen.

TV Viewing

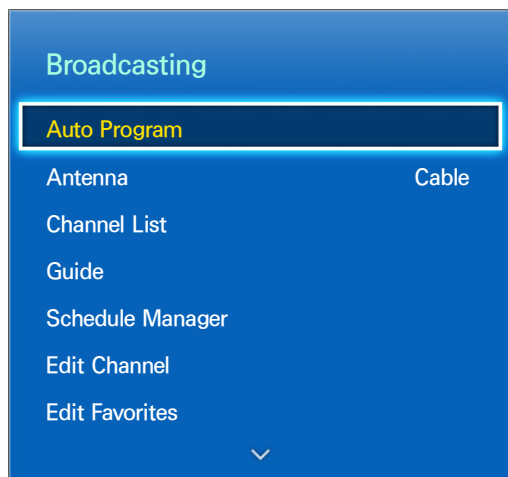

 The displayed image may differ depending on the model.

Use this feature to view the program guide and program information more easily. However, these features are not available when viewing TV using a cable box or satellite receiver.

Program Info

Select the virtual remote panel's **INFO** button while watching TV to view information about the current program.

However, Program Info is only available with digital channels. In order to use the Program Info, you must first set the TV's clock. To set the clock, navigate to **Clock (System > Time > Clock)**. The Program Info may vary depending on the type of incoming signal and may not be available at all for certain programs.

Drag left/right on the touch pad to check out other programs or press the touch pad to set up a **Schedule Viewing** setting for the selected program.

Refer to the "**Schedule Viewing**" section for more information about **Schedule Viewing** settings.

Change the Broadcast Signal

Screen Menu > **Broadcasting** > **Antenna** **Try Now**

Choose an antenna to receive digital broadcast signals from.

Guide

Screen Menu > **Broadcasting** > **Guide** **Try Now** **Try Now**

View each digital channel's programming schedule. Check the programming schedules and even setup a **Schedule Viewing**. Press the **GUIDE** button to launch the guide.

Change Channels

Select a channel from **Guide** to jump to that channel right away.

Change Category

PDP 5500, LED 6400 series and above

Select the **B** button on the virtual remote panel to change the desired category.

LED 4300 - 6300 series

Press the **B** button to change the desired category.

Quick Navigation

PDP 5500, LED 6400 series and above

Select the **A** button on the virtual remote panel. A popup window will open. Dragging left or right on the touch pad moves the focus two hours back or forward, enabling faster browsing of the programming schedule. However, the focus cannot be on a time prior to the current time.

LED 4300 - 6300 series

Press the **A** button. A popup window will open. Each press of the left or right arrow button moves the focus 2 hours back or forward, enabling faster browsing of the programming schedule. However, the focus cannot be on a time prior to the current time.

Schedule Viewing

Select a program that you wish to view, and then the virtual remote panel's or the regular remote's **INFO** button to display the detailed information screen. Select **Schedule Viewing** from the detailed information screen to set up a **Schedule Viewing**. **Schedule Viewing** is only available for programs that haven't aired yet.

PDP 5500, LED 6400 series and above

Select the **C** button on the virtual remote panel and navigate to the Schedule Manager screen to view a list of reserved programs.

LED 4300 - 6300 series

Press the **C** button and navigate to the **Schedule Manager** screen to view a list of reserved programs.

Checking the Program Info





Highlight a program and select the **INFO** button on the virtual remote panel or press the **INFO** button on regular remote control. This displays detailed information about the highlighted program. The Program Info may vary depending on the type of incoming signal and may not be available at all for certain programs.

Channel List

Screen Menu > **Broadcasting** > **Channel List** [Try Now](#)

Launch **CH List** while watching TV to change channels or to check what's on other channels. Press and hold the touch pad. This launches **CH List**. Alternatively, press the regular remote's **CH LIST** button to launch the **Channel List**.

The Channel List screen icons indicate the following:

-  : An analog channel
-  : A favorite channel
-  : A Schedule Viewing reserved channel
-  : A locked channel

Change Channels

Select a channel to jump to it right away. To quickly scroll through the list, use the channel up/down buttons. The focus moves up and down the list in one page.

Genre

PDP 5500, LED 6400 series and above

Drag left on the touch pad or press the left arrow button on the remote control and then select **Genre**. Select a desired TV channel genre.

On the **Added Ch.** list, it is possible to filter channels by genre, if the channels contain proper genre information.

LED 4300 - 6300 series

Press the left arrow button on the remote and select **Genre**. Select a desired TV channel genre.

On the **Added Ch.** list, it is possible to filter channels by genre, if the channels contain proper genre information.

Change the Broadcast Signal

PDP 5500, LED 6400 series and above

Drag right on the touch pad and then select [Air](#) or [Cable](#). This will change the signal source immediately.

LED 4300 - 6300 series

Press the right arrow button on the remote and select [Air](#) or [Cable](#). This will change the signal source immediately.

Change the Channel List

PDP 5500, LED 6400 series and above


Drag right on the touch pad and then switch to the [Added Ch.](#) or Favorites list. However, the Favorites list can only be selected if it contains at least one favorite channel. If no favorite channel was previously added, select [Edit Favorites](#) and add channels from the [Edit Favorites](#) screen.


LED 4300 - 6300 series

Press the right arrow button on the remote and switch to the [Added Ch.](#) or Favorites list. However, the Favorites list can only be selected if it contains at least one favorite channel. If no favorite channel was previously added, select [Edit Favorites](#) and add channels from the [Edit Favorites](#) screen.


Schedule Viewing

Screen Menu > [Broadcasting](#) > [Schedule Manager](#) [Try Now](#)

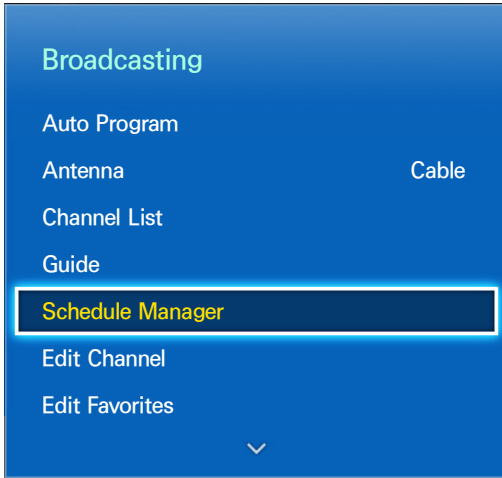

 The displayed image may differ depending on the model.

Configure the TV to show a specific channel or program at a specific time and date. Before scheduling TV watching, make sure that the date and time is set properly under the [System](#) > [Time](#) > [Clock](#) menu.

The  icon appears next to programs that have been configured for a Schedule Viewing.

Digital Channel Schedule Viewing

Schedule Viewing for programs on digital channels can be set up through the following two options:

- Guide
- Program Info

Guide

From **Guide**, select a program you wish to view.

Program Info

Select the virtual remote panel's or the regular remote's **INFO** button to display information about the current program. From the program information screen, drag left/right on the touch pad or press left/right button on the remote control to select a program that has not yet aired and set up a **Schedule Viewing** for it.

Analog Channel Schedule Viewing

The Schedule Viewing function for programs on analog channels can be set up by specifying the time and date.

1. Run **Schedule Manager** and then select **Schedule**.
2. Specify that program's **Antenna**, **Channel**, **Repeat**, and **Start Time** and then select, **OK** to finish.

Cancel a Schedule Viewing


To cancel a Schedule Viewing for a specific program, select the program from the **Schedule Manager** screen. A popup menu will appear. Select **Delete** to cancel.


Edit Schedule List

Select an entry from the **Schedule Manager** screen and then select **Edit** from the popup menu. Edit the settings of the selected entry.

3D TV

Screen Menu > **Picture** > **3D**

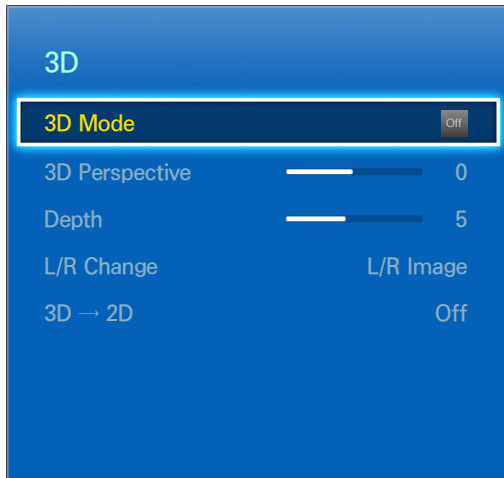

 The displayed image may differ depending on the model.

This function is available only with PDP 5500 series and LED 6400 series or higher.

This TV is 3D-enabled. For the best 3D viewing experience, users must wear Samsung's 3D Active Glasses.

The ideal viewing distance is three times or more the height of the screen. We also recommend sitting with your eyes level with the screen.

Precautions

Carefully read the health and safety information concerning 3D viewing before viewing the TV in 3D. Refer to the "3D Precautions", for more information.

Restrictions

There are several restrictions when using 3D TV:

- Running the Smart Hub automatically deactivates 3D viewing.
- **PIP** cannot be used.
- Certain **Picture** options are disabled.
- IR Type Samsung 3D Active Glasses and third-party 3D glasses are not supported.





Tips

- The left and right 3D images may initially overlap when the TV is turned on. It takes a moment for the display to optimize and the overlapping to go away.
- The 3D Active Glasses may not work properly if there is another 3D product or electronic device turned on near the glasses or TV. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses.
- Whether or not 3D video is displayed in true HD is usually determined by the quality of the content.

Activating 3D Mode

Screen Menu > **Picture** > **3D** > **3D Mode**





Choose a 3D mode according to the input signal. Available 3D modes may vary depending on the input signal. Some 3D contents may differ preferred 3D mode. In this case, change the desired 3D mode for watching. Select a 3D mode from the available 3D modes depending on the input signal. Available 3D modes may vary depending on the input signal.

-  Off: Deactivates 3D viewing.
-  Normal: Converts normal images to 3D images. Some formats do not support this mode.
-  L/R: Splits a single image into left and right overlapping images to create the 3D effect.
-  T/B: Splits a single image into top and bottom overlapping images to create the 3D effect.

Resolutions supported by the TV may vary, depending on the 3D mode. For details, see "Supported 3D Resolutions".


Setting 3D Effects


There are several adjustments that can be made to make 3D content more enjoyable.

- **3D Perspective**: Adjusts the 3D perspective.
- **Depth**: Adjusts the 3D depth. This option cannot be used if 3D mode is set to  (L/R) or  (T/B).
- **L/R Change**: Swaps the left and right pictures.
- **3D → 2D**: Converts 3D images to normal images. This function is not available if 3D mode is set to  (Normal) or  (Off).
- **3D Light control**: Adjust the brightness of 3D images. If the screen is too dark, select **High**. This function is only available on the LED 7050/7100 series, except 75-inch TVs.

PIP

Screen Menu > **Picture** > **PIP** [Try Now](#)

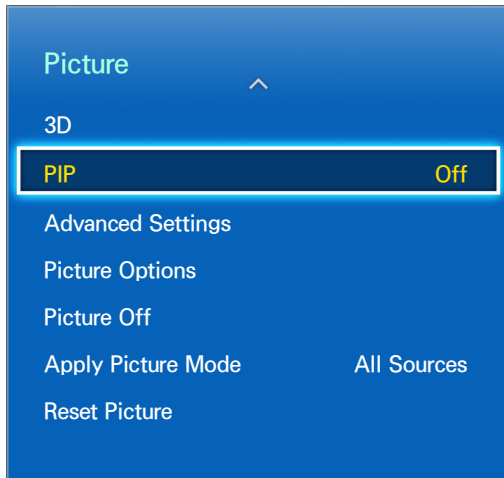


 The displayed image may differ depending on the model.


Display video from an external device on the main screen and the TV as a picture-in-picture. For example, you can display a Blu-ray movie on the main screen and simultaneously watch TV as a picture-in-picture. PIP is not available while the Smart Hub or 3D TV is active. Turning off the TV while PIP is active automatically deactivates PIP.


- **PIP:** Activates/deactivates PIP.
- **Antenna:** Select either **Air** or **Cable** as the input source for the sub-picture screen.
- **Channel:** Selects the PIP sub-picture channel.
- **Size:** Selects the PIP sub-picture size.
- **Position:** Selects the PIP sub-picture position.
- **Sound Select:** Selects the audio source.

 Playing a game or using the karaoke feature on the main screen can result in a lower PIP picture quality.

 To watch TV as a picture-in-picture, the main screen's source must be set to Component or HDMI. The PIP window supports TV signals only.

Analog Screen Calibration

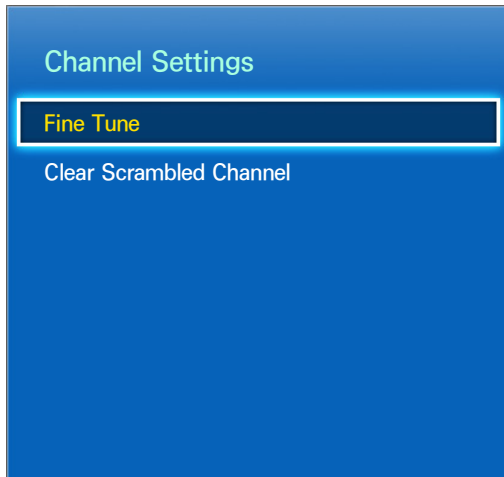

 The displayed image may differ depending on the model.

Analog pictures can become shaky and full of noise. If this happens, you can fine tune the signal and/or reduce noise to clear up the picture.

Fine Tune

Screen Menu > **Broadcasting** > **Channel Settings** > **Fine Tune** **Try Now**

Clear up shaky pictures. Fine tune the pictures until they are clear and then select **Save** or **Close**. Select **Reset** to reset the Fine Tune operation. This option is only available for analog broadcasts.

Broadcast Audio Options

Screen Menu > [Broadcasting](#) > [Audio Options](#) [Try Now](#)

Configure the program's audio language. Using this option is different for analog and digital channels.

Digital Broadcast Audio Options

- **Preferred Language:** Digital broadcasts are embedded with audio signals in multiple languages which users can choose from. You do not need to manually configure digital broadcasts that support the designated language. If the designated language is not supported, the default audio language chosen by the TV station will be heard. [Try Now](#)
- **Visual Impaired:** Activate the audio guide for the visually impaired. This is only available with broadcasts that provide this service. [Try Now](#)

Analog Broadcast Audio Options

- **Multi-Track Sound:** Configure the audio for the current broadcast. You can select a sound you want to listen from among the ones being broadcasted. **Multi-Track Sound** may differ depending on the program being broadcast or broadcast signal. Although user set this option to stereo, if the broadcast signal or program is not supported a stereo, this option will be set to mono automatically. [Try Now](#)

 Press **INFO** button to view the current broadcast's audio signal information.

 Press **TOOLS** button while watching TV to access and configure the **Multi-Track Sound** setting.

Sports Mode

Screen Menu > [Smart Features](#) > [Sports Mode](#)

This function is not available on U.S.A. and Canada.

Enable Sports Mode for the optimal sports viewing experience. However, enabling Sports Mode disables the **Picture**, **Sound** and **Broadcasting** menu options. Disabling Sports Mode restores the previous **Picture** and **Sound** settings.

Subtitles

Screen Menu > **Broadcasting** > **Caption** [Try Now](#)

View subtitles along with subtitle-enabled digital and analog broadcasts.

Show Subtitles

Screen Menu > **Broadcasting** > **Caption** > **Caption** [Try Now](#)

Show subtitles. Subtitles will be displayed when you choose a broadcast that supports subtitles.

 DVD Subtitles are only available when connected to an external input connector.

Subtitle Options

Screen Menu > **Broadcasting** > **Caption** > **Caption Mode** [Try Now](#)

Select a subtitle mode. The list of modes may vary depending on the broadcast.

- **Default / CC1 ~ CC4 / Text1 ~ Text4:** (analog channels only) The analog caption function operates in either analog TV channel mode or when a signal is supplied from an external device to the TV. (Depending on the broadcasting signal, the analog caption function may or may not work with digital channels.)
- **Default / CC1 ~ CC4 / Text1 ~ Text4 / Service1 ~ Service6:** (Digital channels only) The digital caption function works with digital channels. Service1 - Service6 may not be available in digital caption mode depending on the broadcast.

Subtitle Display Options

Screen Menu > **Broadcasting** > **Caption** > **Digital Caption Options** [Try Now](#)


Specify the foreground and background settings. This option is available for digital channels.


- **Size:** Choose the subtitle size from the list.
- **Font Style:** Choose the foreground style from the list.
- **Font Color:** Choose a foreground color from the list.
- **Background Color:** Choose a background color from the list.
- **Font Opacity:** Choose a foreground opacity level from the list.
- **Background Opacity:** Choose a background opacity level from the list.
- **Return to Default:** Restores all subtitle display options to the **Default** settings. **Default** applies settings chosen by the TV station.

 The foreground and background color and opacity settings cannot be the same.

Basic Picture Settings

Screen Menu > [Picture](#)

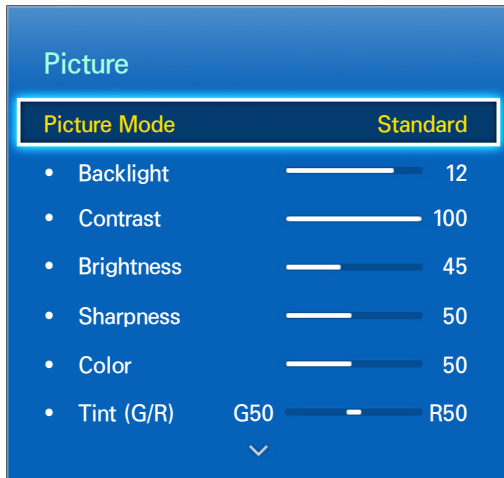

 The displayed image may differ depending on the model.

The basic image settings alter the look and feel of the image displayed on the TV screen.

Changing the Picture Mode

Screen Menu > [Picture](#) > [Picture Mode](#) [Try Now](#)

Choose the optimal picture mode for your TV viewing conditions. When connected to a PC via an HDMI-to-DVI cable, only the [Standard](#) and [Entertain](#) modes can be chosen.

- **Dynamic:** This increases the brightness of the screen. It is most suitable for bright environments.
- **Standard:** This is the default mode.
- **Natural:** This is useful for reducing eye strain. This mode is available for LED TVs only.
- **Movie:** Darkens the screen and reduces glare. Appropriate for darkened rooms, for watching movies, and when experiencing eye fatigue.
- **Entertain:** Sharpens images for a more dynamic viewing experience. This mode is only available when connected to a computer via an HDMI-to-DVI cable.
- **Stadium:** This is chosen automatically when [Sports Mode](#) is turned on under the [Smart Features](#) menu. This function is not available on U.S.A. and Canada.

Picture Quality

Screen Menu > [Picture](#)

PDP 5500, LED 6400 series and above

Choose a [Picture Mode](#) and then select the following options to display a slide bar that allows the corresponding setting to be adjusted. Adjust the value by dragging left/right on the touch pad and change the setting by dragging up/down on the touch pad. Adjusted values are applied to the current source and will remain in effect the next time the source is selected. When connected to a computer via an HDMI-to-DVI cable, only the [Color](#) and [Tint \(G/R\)](#) adjustment options can be chosen.

LED 4300 - 6300 series

Choose a [Picture Mode](#) and then select the following options to display a slide bar that allows the corresponding setting to be adjusted. Adjust the value by pressing the left/right arrow button on the remote and change the setting by pressing up/down arrow button on the remote. Adjusted values are applied to the current source and will remain in effect the next time the source is selected. When connected to a computer via an HDMI-to-DVI cable, only the [Color](#) and [Tint \(G/R\)](#) adjustment options can be chosen.

- [Backlight](#)

Adjusts the brightness of individual pixels. Decreasing the brightness reduces power consumption. This option is only available for LED TVs.

- [Cell Light](#)

Adjusts the brightness of the panel. Decreasing the brightness reduces power consumption. This option is only available for PDP TVs.

- [Contrast](#)

Adjusts the screen contrast. [Try Now](#)

- [Brightness](#)

Adjusts the overall brightness. [Try Now](#)

- [Sharpness](#)

Sharpens or dulls the edges of objects. [Try Now](#)

- [Color](#)

Adjusts the overall color saturation. [Try Now](#)

- [Tint \(G/R\)](#)

Adjusts the ratio of green to red. Increase the green value to saturate the greens and the red value to saturate the reds. [Try Now](#)

Applying the Current Picture Quality Setting to Another Input

Screen Menu > [Picture](#) > [Apply Picture Mode](#) [Try Now](#)

You can apply the picture quality setting that you configured for the TV to all external devices connected to the TV.

To apply the setting to all external devices connected to the TV, select [All Sources](#). To only apply the setting to the current input, select [Current Source](#).

Picture Size

Screen Menu > **Picture** > **Picture Size** > **Picture Size** [Try Now](#)

Most TV programs and videos are displayed in full screen, but some programs and videos don't fit the screen. Users can change the picture size for such programs and videos. However, the available size options may differ, depending on the video source. For details, see "Picture Size and Input Signal".

- **16:9**: Set the picture to the 16:9 wide-screen format.
- **Zoom1**: Magnifies the 16:9 screen size to up and down. A magnified picture can be moved up and down.
- **Zoom2**: Magnifies the Zoom1 screen size to up and down. A magnified picture can be moved up and down.
- **Wide Fit**: Enlarge the aspect ratio of the picture so it fits the entire screen. Enjoy 4:3 images as undistorted 16:9 images.
- **4:3**: Sets the picture to basic 4:3 mode.

⚠ Do not leave the TV in 4:3 mode for an extended period. The dark borders displayed on the left and right/top and bottom of the screen may cause image retention (screen burn). This is not covered by the warranty. This mode is available for PDP TVs only.

- **Screen Fit**: Displays the full image without any cutoff.
- **Smart View 1**: Reduces a 16:9 picture by 50%. This mode is only available for LED TVs and in HDMI mode.
- **Smart View 2**: Reduces a 16:9 picture by 25%. This mode is only available for LED TVs and in HDMI or DTV mode.

Screen Position

Screen Menu > **Picture** > **Picture Size** > **Position** [Try Now](#)

The screen position can be adjusted if **Picture Size** is set to **Zoom1**, **Zoom2**, **Wide Fit**, or **Screen Fit**. In DTV mode, the screen position cannot be adjusted if the **Picture Size** is set to **Screen Fit**.

PDP 5500, LED 6400 series and above

1. To adjust the screen position, select **Position** and then **Position** from the popup window.
2. Drag on the touch pad to move the screen. Once done, select **Position** and then **Close**. Select **Reset** to reset the screen position.

LED 4300 - 6300 series

1. To adjust the screen position, select **Position** and then **Position** from the popup window.
2. Press the arrow buttons on the remote to move the screen. Once done, select **Position** and then **Close**. Select **Reset** to reset the screen position.

Picture Off

Screen Menu > **Picture** > **Picture Off** [Try Now](#)

Turns off the screen and plays audio only. To turn the screen back on, press any button except TV and volume buttons.


Reset Image Settings


Screen Menu > **Picture** > **Reset Picture** [Try Now](#)

Reset all image settings for the current **Picture Mode** to the default settings. This does not affect other Picture Modes.

Advanced Settings

Screen Menu > **Picture** > **Advanced Settings** [Try Now](#)

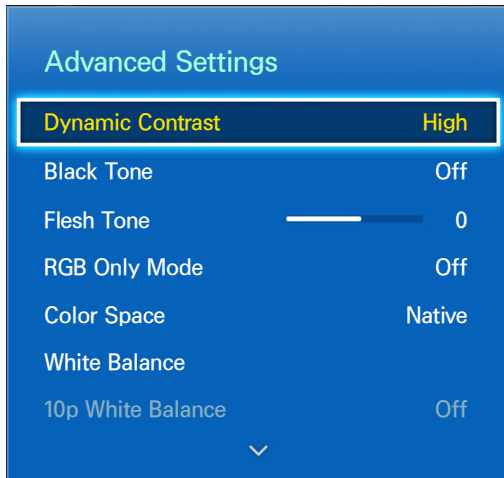

 The displayed image may differ depending on the model.

Use **Advanced Settings** to fine-tune how images are displayed on the TV screen. The **Advanced Settings** option is only available when **Picture Mode** is set to **Standard** or **Movie**. When the TV is connected to a computer via an HDMI-DVI cable, only **White Balance** and **Gamma** can be adjusted.

- **Dynamic Contrast**

Automatically adjusts the screen contrast. Use this option to achieve the optimal contrast setting. [Try Now](#)

- **Black Tone**

Adjusts the black color depth. [Try Now](#)

- **Flesh Tone**

Adjusts the amount of red in skin-color tones. [Try Now](#)

- **RGB Only Mode**

Adjusts the red, green, and blue levels individually. [Try Now](#)

- **Color Space**

Adjusts the range of colors that can be expressed on screen. **Auto** automatically adjusts the color space depending on the input signal, and **Native** applies a range that is wider than the input signal. **Custom** allow the user to manually adjust a range of the desired color in the colors of the input signal. [Try Now](#)

 **Custom** mode is only available with LED 6300 series and above.

- **White Balance**

Adjusts the color temperature of the picture to make white objects look white and the overall picture appear natural. Adjust each color's luminosity with the offset menu and the brightness with the gain menu. To restore the default values, select **Reset**. [Try Now](#)

- **10p White Balance**

This function is not available with LED 4300, 5500 series and PDP 5500 series.

Adjusts the white balance by adjusting the brightness of the red, green, and blue elements in 10-point intervals. This option is only available when **Picture Mode** is set to **Movie** and may not be supported by some external devices.

- **Gamma**

Adjusts the primary color intensity. [Try Now](#)

- **Expert Pattern**

This function is not available with LED 4300, 5500 series and PDP 5500 series.


Displays picture calibration patterns on the screen without using a separate pattern generator or filter. **Pattern1** is used to calibrate the contrast, and **Pattern2** is used for calibrating the color and color saturation. If the screen menu disappears or a different menu is activated while the screen is being calibrated, this option will save the changes up to that point and automatically deactivate that menu. This feature is enabled in Component and HDMI modes only.

- **Motion Lighting**

Adjusts the picture brightness depending on the on-screen movements for reduced power consumption. This feature is only available when **Picture Mode** is set to **Standard** and is not available in 3D mode. In addition, adjusting **Contrast** or **Brightness** automatically deactivates this feature. [Try Now](#)

Picture Options

Screen Menu > **Picture** > **Picture Options** [Try Now](#)

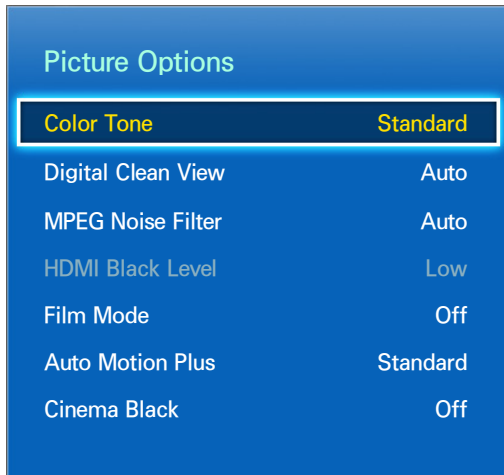

| Picture Options | |
|--------------------|-----------------|
| Color Tone | Standard |
| Digital Clean View | Auto |
| MPEG Noise Filter | Auto |
| HDMI Black Level | Low |
| Film Mode | Off |
| Auto Motion Plus | Standard |
| Cinema Black | Off |

 The displayed image may differ depending on the model.

Use **Picture Options** to further improve the picture quality. When connected to a computer via an HDMI-to-DVI cable, users can only change **Color Tone**.

- **Color Tone**

Adjusts the color tone. The setting is applied on an individual **Picture Mode** basis. When **Picture Mode** is changed, the corresponding setting will apply automatically. If **Picture Mode** is set to **Dynamic**, users can only choose between **Cool** and **Standard**. [Try Now](#)

- **Digital Clean View**

Reduces static and ghosting caused by weak signals. This feature is only available for ATV channels. Selecting **Auto Visualization** displays the signal strength on the screen. Green indicates the best possible signal. [Try Now](#)

- **MPEG Noise Filter**

Reduces MPEG noise and improves the video quality. [Try Now](#)

- **HDMI Black Level**

This is available only for video input via an HDMI cable. Use this to reduce image retention that may occur when watching video from an external device. Choose one of the black levels. [Try Now](#)

- **Film Mode**

Optimizes the picture quality for movies. Select the mode for watching movies. This feature is only available when watching TV or when the input signal is AV, Component (480i, 1080i), or HDMI (1080i). The **Cinema Smooth** option is only active when the TV inputs an HDMI 24Hz signal. The **Cinema Smooth** option is only available for PDP 5500 series. [Try Now](#)


- **Black optimizer**

This function is available only with PDP 5500 series and LED 6800 series.

Adjust overall black color depth to give a change to picture depth. This is not available when playing a media file or using the TV as a computer display.

- **Auto Motion Plus**

Use this to reduce blur and judder from scenes with rapid movement. If you select **Custom**, you can configure the afterimage and screen trembling removal ratio and you can view a sharper image through the **LED Clear Motion** function. This feature is only available for LED 6300 series and above.

 While **Auto Motion Plus** is running, select the virtual remote panel's or the regular remote's **INFO** button to display the resolution and frequency of the incoming video signal (60Hz). The displayed frequency is not the same as the frequency of the picture the TV is displaying when Auto Motion Plus is activated.

- **Cinema Black**


This function is only available on the LED 7050/7100 series, except 75-inch TVs. In Movie mode, this feature dims the top and bottom areas of the video image to provide a more immersive viewing experience.


- **LED Clear Motion**

Removes drag from fast scenes with a lot of movement to provide a clear picture. This function is only available for the LED 4300, 5500 series.

Basic Sound Settings

Screen Menu > [Sound](#)

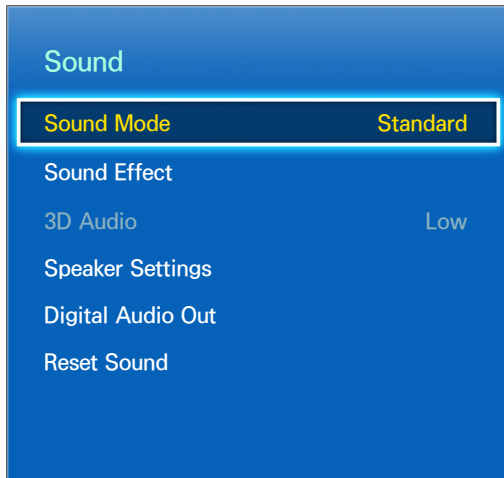

 The displayed image may differ depending on the model.

Use the Sound Settings to change the sound mode, enable/disable surround sound, adjust the equalizer, and optimize the TV's sound.

Changing the Sound Mode

Screen Menu > [Sound](#) > [Sound Mode](#) [Try Now](#)

Sound modes make adjustments to the sound output. However, Sound Modes are not available when using external speakers only.

- **Standard:** This is the normal sound mode.
- **Music:** This mode emphasizes normal music instead of voices.
- **Movie:** This mode is calibrated to provide the best sound for movies.
- **Clear Voice:** This mode emphasizes voices.
- **Amplify:** This increases the overall intensity of high-frequency sounds for a better listening experience. It is designed for hearing-impaired listeners.
- **Stadium:** This is chosen automatically when [Sports Mode](#) is turned on under the [Smart Features](#) menu. This function is not available on U.S.A. and Canada.

Adjusting the Sound Settings

Screen Menu > [Sound](#) > [Sound Effect](#) [Try Now](#)

Use sound effects to alter how the TV projects sound. These options are available only when **Speaker Select** is set to **TV Speaker** and **Sound Mode** is set to **Standard**.

- **DTS TruSurround**: Produces sound that will make you feel like you are sitting in a movie theater or concert hall. [Try Now](#)
- **DTS TruDialog**: Increases the voice intensity to make dialog clearer. [Try Now](#)
- **Equalizer**: Adjusts the speaker balance and makes bandwidth adjustments. Select **Reset** to reset the settings. [Try Now](#)

Auto Volume

Screen Menu > [Sound](#) > [Speaker Settings](#) > [Auto Volume](#) [Try Now](#)

Because each station has its own set of broadcasting conditions, the volume may fluctuate as the channel changes. The Auto Volume function automatically adjusts the volume of a channel by lowering or raising the sound output. **Normal** applies a normal level of volume adjustment, whereas **Night** applies a slightly lower volume level than **Normal** and is ideal for nighttime TV viewing. To use the volume control of a connected source device, deactivate the Auto Volume function. When using the Auto Volume function with a source device, the device's volume control may not function properly.

TV Installation Type

Screen Menu > [Sound](#) > [Speaker Settings](#) > [TV Installation Type](#) [Try Now](#)

Select the TV's installation type. Choose between **Wall Mount** and **Stand** to optimize the TV's sound automatically.


Resetting the Sound


Screen Menu > [Sound](#) > [Reset Sound](#) [Try Now](#)

This resets all sound settings to the factory defaults.

3D Audio

Screen Menu > Sound > 3D Audio

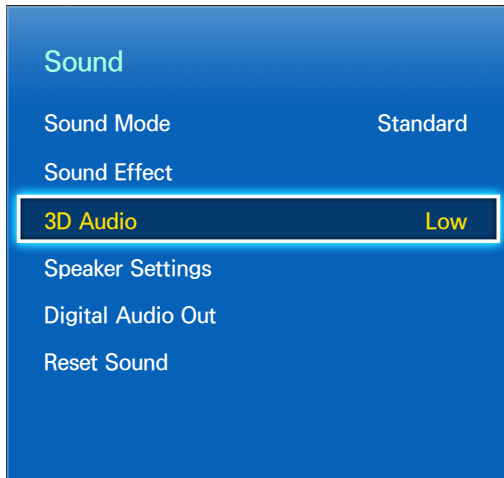



 The displayed image may differ depending on the model.

This function is only available with the PDP 5500 series and LED 6400 series and higher.

3D audio technology provides immersive sound that matches the pop-up effect of 3D video by using perspective in the audio depth control. 3D Audio is only available while viewing 3D content.

Speaker Settings

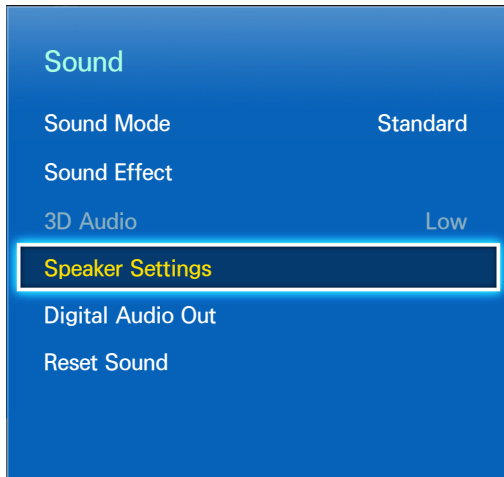

 The displayed image may differ depending on the model.

If the TV's audio is sent to an external device such as a home theater system, you can designate which speakers to use and make adjustments to eliminate decoding speed echoes.

Speaker Select

Screen Menu > [Sound](#) > [Speaker Settings](#) > [Speaker Select](#) [Try Now](#)

You can choose which speakers to use from among available several speakers. Choose one from the list of speakers. To use both the TV speakers and the AV receiver speakers simultaneously, set this option to [TV Speaker](#). If there is a delay between the two sounds, choose any other than [TV Speaker](#) to mute the TV speakers.

 Using the external speakers only disables the volume button and the mute function. In addition, certain [Sound](#) options will be disabled.

Digital Audio Output

Screen Menu > **Sound** > **Digital Audio Out** [Try Now](#)

This TV is SPDIF-enabled. The Sony Philips Digital Interface (SPDIF) provides digital audio output to speakers and various digital devices, including A/V Receivers and home theaters. This feature reduces interference and distortion.

- **Audio Format:** Selects the Digital Audio output (SPDIF) format. The available Digital Audio output (SPDIF) formats may vary depending on the input source. [Try Now](#)
- **Audio Delay:** This setting helps correct timing mismatches between the audio and video tracks when watching TV and listening to audio through a digital audio device. Enabling the feature displays a slide bar that you can use to adjust the delay by up to 250ms. [Try Now](#)

Samsung Audio Device Connection

Screen Menu > **Sound** > **Speaker Settings** > **SoundShare Settings**

This function is available only with PDP 5500 series and LED 6400 series or higher.

Connect the TV to a Samsung audio device for a richer, clearer sound. This function is available for Samsung Audio Device supported the SoundShare function.


Pair the Samsung audio device using the TV's Bluetooth function. Refer to the Samsung audio device's operating manual for more information on pairing.

- **Add New Device**


Enables/disables SoundShare. Connection signals from new devices are ignored if they are set to Off.

- **Samsung Audio Device List**

Displays a list of paired Samsung audio devices. Select a device to display its menu options. Activate/deactivate the audio device or remove it from the list.

 When using a Bluetooth audio device, a slight mismatch between the audio and video may occur, depending on the content.

Clock and Timer

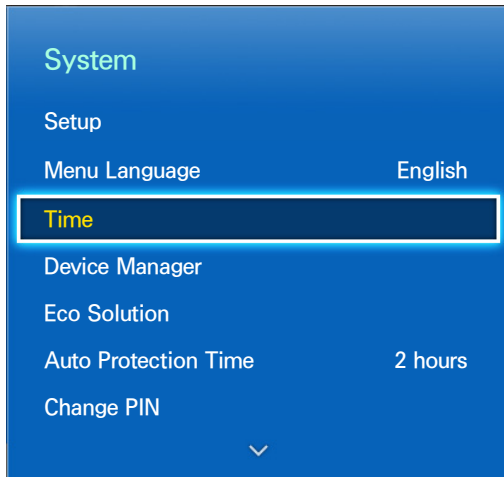

 The displayed image may differ depending on the model.

Use the clock and timer to make scheduled use of the TV easier and more efficient. Once the clock has been set, you can select the virtual remote panel's or the regular remote's **INFO** button to check the current time. The clock must be reset every time the power is disconnected.


Setting the Time

Screen Menu > **System** > **Time** > **Clock** [Try Now](#)

Set the clock manually or automatically.

Auto

Automatically download the correct time from a digital channel. To enable this option, an antenna cable has to be connected to the TV. The accuracy of the time information received may vary depending on the channel and signal. Set **Clock Mode** to **Auto**.

 Time Zone and DST may not be supported depending on the country.

- **DST**: Set the DST (Daylight Savings Time).
- **Time Zone**: Choose your time zone.

Time Offset

Screen Menu > **System** > **Time** > **Clock** > **Time Offset** [Try Now](#)

If the set time is not accurate, users can set the time offset to adjust the time difference hourly from -12 to +12 hour. Changing **Time Offset** is only available, when the **Time** is set to auto, and is set through a network.

The current time will be set through a network, if the TV fails to receive the time information including the broadcast signal from TV stations. (ex: Watching TV via set-top box, Satellite receiver, or etc)

Manual

Manually enter the time. Set **Clock Mode** to **Manual** and then select **Clock Set** to enter the current time and date.

Sleep Timer

Screen Menu > **System** > **Time** > **Sleep Timer** [Try Now](#)

This function automatically shuts off the TV after a preconfigured period of time. You can set the timer up to 180 minutes in 30 minute increments.

On Timer

Screen Menu > **System** > **Time** > **On Timer** [Try Now](#)


Set the On Timer so that the TV turns on automatically at a chosen time. Only three On Timer settings can run concurrently. The clock must be set for the On Timer to work.

- **Setup:** Specify the dates and duration. Use **Manual** to specify the days of the week.
- **Time:** Specifies the on time.
- **Volume:** Specifies the volume when the TV turns on.
- **Source:** Selects a signal source from the list. Specify a channel or source to be displayed when the TV turns on. To specify a USB device, a USB device must first be connected to the TV. To playback media from an HDMI or Component source such as a DVD player or Blu-ray player, the device must already be turned on and playing the media when the TV is turned on.
- **Antenna:** Set **Source** to **TV** to select a broadcast signal.
- **Channel:** Set **Source** to **TV** to select a channel.
- **Music / Photo:** Set **Source** to **USB** to specify a USB device folder containing music and image files. Selecting both music and image files plays the music files and displays the images at the same time.

 This feature will not function properly if the selected USB device does not contain media files or a folder has not been specified.

 The slideshow will not start if there is only one image file on the USB device.

 Folders with long names cannot be selected.

 Always use different folder names for multiple USB devices.

 Use a USB memory stick or multi-card reader. **On Timer** may not work with certain battery-powered USB devices, MP3 players, or PMPs because the TV may take too long to recognize the device.


Off Timer


Screen Menu > **System** > **Time** > **Off Timer** [Try Now](#)

Set the Off Timer to turn the TV off automatically at a specific time. Only three Off Timer settings can be entered concurrently. The clock must be set for the Off Timer to work.

- **Setup:** Specifies the date or period to run the function. Use **Manual** to specify the days of the week.
- **Time:** Sets the time for the TV to automatically turn off.

Screen Protection and Maintenance

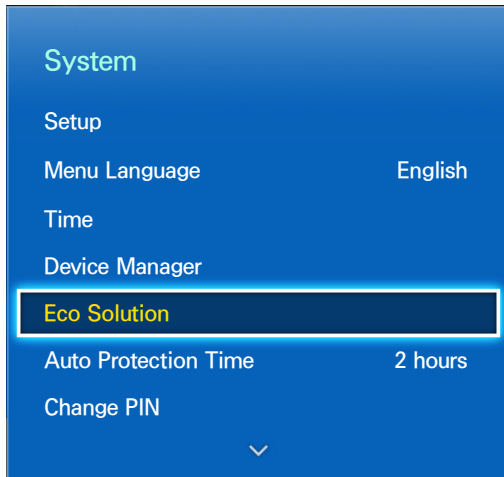

 The displayed image may differ depending on the model.

Several onboard functions exist that help maintain the TV beyond its useful lifespan and decrease power consumption.

Eco Solution

Screen Menu > [System](#) > [Eco Solution](#) [Try Now](#)

Eco Solution adjusts the TV's brightness level and prevents overheating to reduce overall power consumption.

- **Energy Saving**

Select a brightness setting from the list to reduce the TV's power consumption. [Try Now](#)

- **Eco Sensor**

Automatically adjusts the TV's brightness level based on the ambient light level to reduce the TV's power consumption. If the Eco Sensor has adjusted the screen's brightness level, you can manually adjust the screen's minimum brightness level by adjusting [Min. Backlight](#) or [Min Cell Light](#) (applicable models). If [Eco Sensor](#) is enabled and the [Picture](#) menu's [Backlight](#) or [Cell Light](#) (applicable models) value is changed, [Eco Sensor](#) is automatically disabled.

This function is not available LED 4300 series.

- **No Signal Power Off**

Select a time from the list. If no signal is received for the specified duration, the TV will automatically cut off the power to reduce power consumption. [Try Now](#)

- **Auto Power Off**

If the TV remains turned on for four hours without any user input, the TV will automatically turn off to prevent overheating. [Try Now](#)

Screen Burn Protection

Screen Menu > [System](#) > [Screen Burn Protection](#)

This feature is only available for PDP TVs.

To reduce the possibility of screen burn, the TV uses [Pixel Shift](#) screen burn prevention technology. [Pixel Shift](#) moves the picture slightly on the screen to avoid over-using some elements and under-using others. The [Pixel Shift](#) Time setting allows users to program the time between picture movements, in minutes.

The TV also has the following additional screen burn protection functions:

- [Pixel Shift](#)
- [Auto Protection Time](#)
- [Scrolling](#)
- [Side Gray](#)

Pixel Shift

Screen Menu > [System](#) > [Screen Burn Protection](#) > [Pixel Shift](#)

Set the TV to very slightly shift pixels on the PDP screen in a horizontal or vertical direction to minimize burned-in after-images.

The [Pixel Shift](#) value may differ depending on the monitor size and mode. It is not available in [Screen Fit](#) mode.

Settings:

- **Horizontal:** Available Settings: 0 - 4 (pixels), Optimum settings for TV/AV/Component/HDMI: 4
- **Vertical:** Available Settings: 0 - 4 (pixels), Optimum settings for TV/AV/Component/HDMI: 4
- **Time** (minutes): 1 - 4 min, Optimum settings for TV/AV/Component/HDMI: 4 min

Auto Protection Time

Screen Menu > [System](#) > [Screen Burn Protection](#) > [Auto Protection Time](#)

If the screen displays a still image for a certain period of, the TV activates the screen saver to prevent the formation of burnt-in ghost images.

Scrolling

Screen Menu > **System** > **Screen Burn Protection** > **Scrolling**

This removes after-images on the screen by illuminating all the pixels on the PDP according to a set pattern. Use this when there are after-images or symbols on the screen, especially when a still image was displayed on the screen for a long time.

The after-image removal function has to be executed for approximately 1 hour to effectively remove after-images. If the after-image is not removed the first time, repeat the process.

Press any button to cancel this process.

Side Gray

Screen Menu > **System** > **Screen Burn Protection** > **Side Gray**


This allows selection of colors for the sidebars the TV displays when the screen size is set to 4:3. The default color is gray.


Auto Protection Time

Screen Menu > **System** > **Auto Protection Time**

Select a time from the list. If a still image is shown on the screen for the specified duration of time, the TV will automatically activate the Screen Burn Protection function to prevent burnt-in ghost images. This feature is only available for LED TVs.

Password

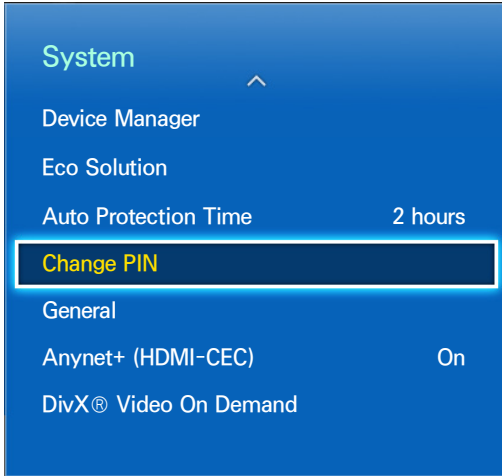

 The displayed image may differ depending on the model.

This TV requires a password to lock out channels and to reset its settings to the factory default.

Change Password

Screen Menu > **System** > **Change PIN** [Try Now](#)

Change the TV's password.

1. Run **Change PIN** and then enter the current password in the password field. The default password is 0000.
2. Enter a new password and then enter it again to confirm it. The password change is complete.

If you forget the PIN code, press the buttons in the following sequence which resets the PIN to “0-0-0-0”:


For Standard Remote Control:


In Standby mode: **MUTE** → 8 → 2 → 4 → **POWER** (on)

For Smart Touch Control:

When the TV turns on: **MUTE** → Volume up → **RETURN** → Volume down → **RETURN** → Volume up → **RETURN**

Additional Features

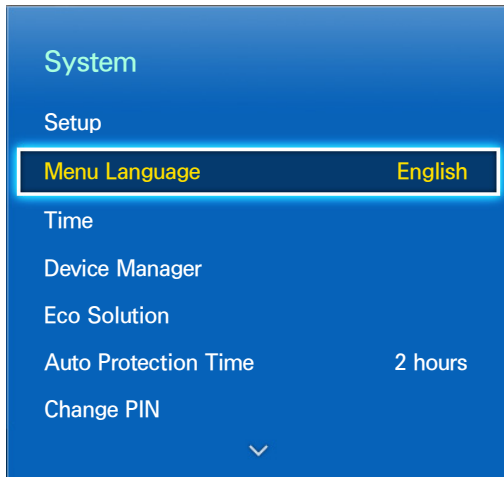

 The displayed image may differ depending on the model.

There are many elements available for customizing the TV for individual user preferences.

Changing the Menu Language

Screen Menu > **System** > **Menu Language** [Try Now](#)

Select a menu language from the list.

Game Mode

Screen Menu > **System** > **General** > **Game Mode** [Try Now](#)

Game Mode optimizes the TV's settings for playing video games on a gaming console such as PlayStation™ or Xbox™. Read the following information before using Game Mode.

Precautions and Restrictions

- Game Mode cannot be used for normal TV viewing.
- Connect the gaming console before enabling Game Mode. Otherwise, the picture quality may suffer.
- Game Mode can result in some images shaking.
- Enabling Game Mode automatically sets **Picture Mode** to **Standard** and **Sound Mode** to **Movie**.
- Once finished, disconnect the gaming console and disable Game Mode before plugging in a different external device.

BD Wise

Screen Menu > [System](#) > [General](#) > [BD Wise](#)

This function is available only with PDP 5500 series and LED 6300 series and above.

Connecting a Samsung DVD player, Blu-ray player, or home theater system that supports BD Wise enables you to enjoy the richest colors and picture quality possible. Enabling BD Wise automatically optimizes the TV's resolution. This feature is only available when the external device is connected via an HDMI cable.

Menu Transparency

Screen Menu > [System](#) > [General](#) > [Menu Transparency](#) [Try Now](#)

Adjust the menu screen's transparency.

Sound Feedback

Screen Menu > [System](#) > [General](#) > [Sound Feedback](#) [Try Now](#)

Adjust the sound feedback volume or disable it entirely. Sound feedback is an audio cue that plays when you move the focus or make a selection.

Panel Locking

Screen Menu > [System](#) > [General](#) > [Panel Lock](#) [Try Now](#)

Lock or unlock all the keys on the front panel. The panel keys are located at the back of the TV and can be used to select options, to change the channel, and to adjust the volume.

Booting Logo

Screen Menu > [System](#) > [General](#) > [Boot Logo](#) [Try Now](#)

Enable/disable displaying the logo while the TV starts up.

DivX® Video On Demand


Screen Menu > [System](#) > [DivX® Video On Demand](#) [Try Now](#)

Product registration is required to play back videos protected with DivX® DRM. Visit the DivX website and register the code displayed on the screen.



Smart Hub

Screen Menu > [Smart Features](#) > [Open Smart Hub](#) [Try Now](#)

This TV features Smart Hub, a multi-purpose entertainment and family center. With Smart Hub, users can surf the web, download applications, and stay in touch with family and friends through social networking services. In addition, you can enjoy photo, video & music files stored on external storage devices.

Press the  button to launch Smart Hub. Choose a service using the icons displayed in the top part of the screen.

- **Social:** Watch the latest YouTube videos and you and your friends' video posts on Facebook and Twitter. You can also make video calls to friends by connecting the TV to a camera (sold separately).
- **Apps:** Samsung Apps offers an extensive collection of free and paid news, sports, weather, and gaming content you can directly download to and enjoy on your TV.
- **On TV:** Check a listing of programs that are currently airing and are scheduled to air.
- **Movies & TV Shows:** Purchase and watch movies and TV shows without the need for a separate external device.
- **Photos, Videos & Music:** Play back photo, video, and music files from an external storage device.

Use  or  to change the Smart Hub screens.


Agreements Required to Use Smart Hub


Screen Menu > [Smart Features](#) > [Terms and Conditions, Privacy Policy](#)

Carefully read the terms and conditions to use Smart Hub, and determine whether or not to agree to them. Users cannot use Smart Hub fully unless they agree to them.

Samsung Account

Screen Menu > [Smart Features](#) > [Samsung Account](#)

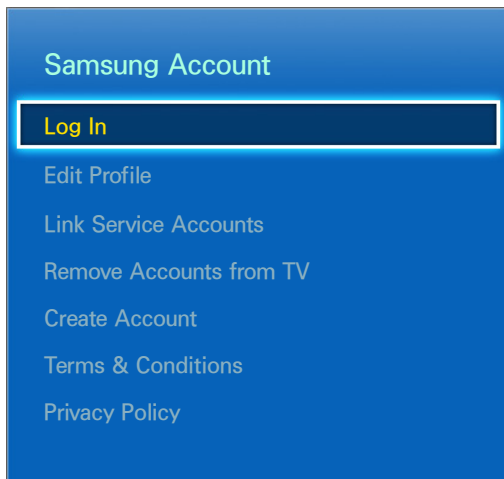


 The displayed image may differ depending on the model.

A Samsung account allows you to get even more out of Smart Hub. You can create a Samsung account using your email address.

Creating a Samsung Account

Screen Menu > [Smart Features](#) > [Samsung Account](#) > [Log In](#)

From the login screen, select [Create Account](#) and then follow the on-screen instructions.

 Once a Samsung account has been created, a confirmation email will be sent to the email address you entered as your ID. Open the confirmation email and click on the confirmation button to finalize the Samsung account setup process.

Creating a Samsung Account Using a Facebook Account

Screen Menu > [Smart Features](#) > [Samsung Account](#) > [Create Account](#) > [Create Samsung Account with Facebook](#)

A Facebook account makes it easier to create a Samsung account. When a Samsung account is created using a Facebook account, the Facebook account is also registered on the TV.

Logging In

Screen Menu > [Smart Features](#) > [Samsung Account](#) > [Log In](#)

Use your Samsung account to log into the Smart Hub. Enter your ID and password and then select [Log In](#).

The [Remember my password](#) option lets you login without having to enter your password each time. Check this option to enable it. Check the [Sign me in automatically](#) option if you want to log into Smart Hub automatically.

If you forgot your password, select [Reset password](#) to receive the password resetting instructions via email.

Terms and Conditions, Privacy Policy

Screen Menu > [Smart Features](#) > [Samsung Account](#) > [Terms & Conditions / Privacy Policy](#)

Carefully read the terms and conditions to use Samsung Account, and determine whether or not to agree to them. Users cannot use Samsung Account fully unless they agree to them. However, you can only view the entire terms and conditions after signing in with your Samsung account and you can use your Samsung Account after agreeing to the terms and conditions.

Linking a Samsung Account to Other Accounts

Screen Menu > [Smart Features](#) > [Samsung Account](#) > [Link Service Accounts](#)

Linking your Samsung account to other accounts lets you automatically log into your linked accounts when you log into your Samsung account. For example, you can download the Facebook application and link your Facebook account to your Samsung account. Logging into your Samsung account then automatically logs you into your Facebook account as well.

Log into your Samsung account and select [Link Service Accounts](#) to view a list of applications that require login information.

- **Register Service Account:** Select an application, select [Register](#), and then provide the ID and password.
- **Edit:** It is possible to change a registered account. Select an application, select [Edit](#), and enter the ID and password for the new account.
- **Remove:** Select an application to which an account has been registered and then select [Deregister](#).

Managing Accounts

Screen Menu > [Smart Features](#) > [Samsung Account](#)

Using the Samsung Account menu, you can manage your Samsung account. You can only use this function after signing in with your Samsung account.

- **Edit Profile:** You can change the basic user information and register your photo and credit card information.
- **Remove Accounts from TV:** The Samsung account used to sign into the Smart Hub is automatically saved on the TV. You can delete your account information from among the saved accounts on the TV.

Resetting Smart Hub

Screen Menu > [Smart Features](#) > [Smart Hub Reset](#)

It is possible to remove Samsung accounts and everything linked to them, including apps, from the TV. Enter the password when accessing this menu. To use Smart Hub fully again after resetting it, users are required to agree to the terms of conditions. Open the [System](#) menu, choose [Setup](#), and then follow the initial setup process.

Searching

Users can search many apps and their contents on the TV as well as the Web.

Keyword Search


For U.S.A. and Canada

Press the [RECOMM. / SEARCH](#) button. The list appears at the bottom of the screen. Press the [RECOMM. / SEARCH](#) button again. Enter search criteria using the on-screen keyboard that appears, and then select [Done](#). A list of search results appears. Select a desired item from a list of search results. The selected item's page appears.

For the other countries

Press the [HISTORY / SEARCH](#) button. The list appears at the bottom of the screen. Press the [HISTORY / SEARCH](#) button again. Enter search criteria using the on-screen keyboard that appears, and then select [Done](#). A list of search results appears. Select a desired item from a list of search results. The selected item's page appears.

Setting Search Scope

Select  icon on the Search result screen. User can set up the desired search range in the scope list.

Status and Notification

A notification message window appears at the top of the screen when important messages concerning application updates and Samsung account logins are available. This message window notifies the user of the TV's operating status.

Show Status and Notification Banner

PDP 5500, LED 6400 series and above

Press the **MORE** button on the Smart Touch Control and then select **STATUS** on the virtual remote panel that appears on the screen. The status and notification banner is shown at the top of the screen.

LED 4300 - 6300 series

Press the **STATUS** button. The status and notification banner is shown at the top of the screen.

Voice Recognition & Motion Control Configuration

Enable/disable the status and notification banner's Voice Recognition and Motion Control functions. It's also possible to perform the **Motion Control Environment Test**.

Samsung Account Configuration

Select **My Account** from the status and notification banner to manage your Samsung account. For more information, refer to "Managing Accounts".

Network Configuration

Select **Network Settings** from the status and notification banner to configure the network.

For details on how to connect to a wired network, see "Wired Network Setup".

For details on how to connect to a wireless network, see "Wireless Network Setup".


Check Notifications


If you were not able to check the notification message, you can see a list of unread notification messages in the status and notifications banner. You can also check notifications from **Notifications** (**Smart Features** > **Notifications**). **Try Now**

Selecting a notification from the list allows you to perform corresponding actions with ease. To delete all notifications, select **Delete All**.

Selecting **Service Notice** launches WebBrowser to display the notification webpage of the Samsung website.

Social

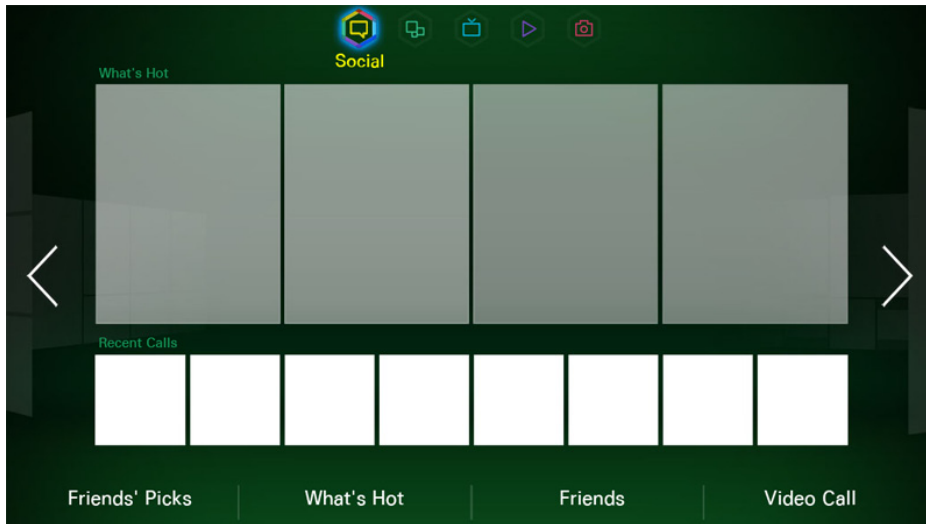

 The displayed image may differ depending on the model.

Watch the latest YouTube videos and you and your friends' video posts on Facebook and Twitter. You can also make video calls to friends by connecting the TV Camera (sold separately).

Social Settings

Screen Menu > [Smart Features](#) > [Social Settings](#) [Try Now](#)

Checking the Application

Certain applications need to be installed on the TV in order to use the Social feature. If a selected application has not been installed on your TV, you will need to install it first. For more information on installing applications, refer to "Samsung Apps".

Connecting a Service to a Samsung Account

Social service accounts need to be linked to a user's Samsung account first. If you do not have a social service account, create one by visiting the website of that service. For more information on connecting to a social service, refer to "Linking a Samsung Account to Other Accounts".

Watching Videos

Select **Friends' Picks** or **What's Hot** at the bottom of the **Social** screen to display a list of videos. Select a video from the list to view its information and then select **Play**.

Friend Profile

Select **Friends** at the bottom of the **Social** screen to display a list of Facebook and Twitter friends. Select a friend from the list. The selected friend's profile containing his/her basic information and posts is displayed

Video Calling a Friend


Select **Video Call** at the bottom of the **Social** screen. This launches Skype and displays a list of friends. Select a friend to call.


Filters

Log in to a Samsung account to use this function.

Select either **Friends' Picks** or **Friends** and **Video Call** on the **Social** screen. Use the filter option at the top of the screen to rearrange the list. Select an item. However, this option cannot be used in the **What's Hot** list.

Apps

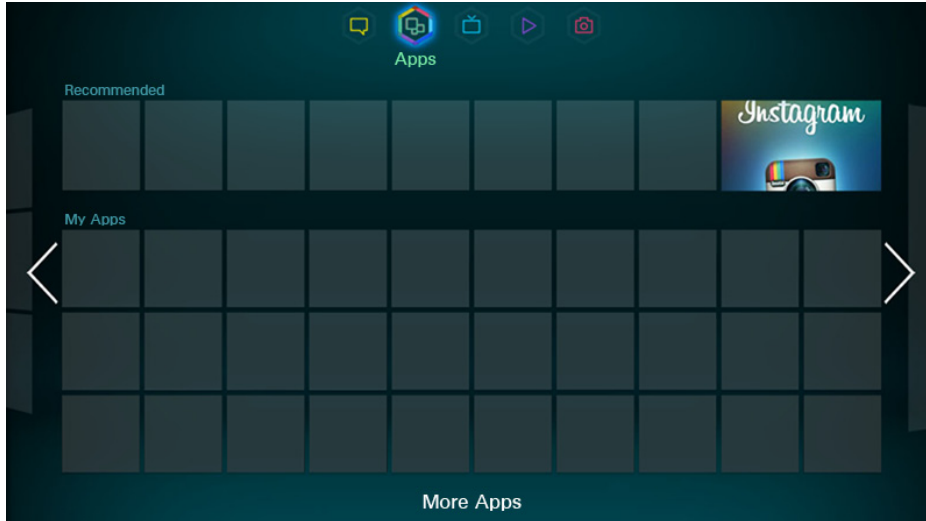

 The displayed image may differ depending on the model.

Samsung Apps offers an extensive collection of free and paid news, sports, weather, and gaming content you can directly download to and enjoy on your TV. First, check the network and make sure the TV is connected to the Internet. Your TV needs to be connected to the Internet in order to use Apps.

Precautions

- Due to the product characteristics featured on the Samsung Smart Hub, as well as limitations in available content, certain features, applications, and services may not be available on all devices or in all territories. Some Smart Hub features may also require additional peripheral devices or membership fees. Visit <http://www.samsung.com> for more information on specific device information and content availability. Services and content availability are subject to change without prior notice.
- Samsung Electronics takes no legal responsibility for any interruption of the Smart Hub service caused by the service provider for any reason.
- Application services may be provided in English only and available content may vary, depending on the area.
- For more information about applications, visit the applicable service provider's website.
- An unstable Internet connection may cause delays or interruptions. In addition, applications may terminate automatically depending on the network environment. If this occurs, check your Internet connection and try again.
- Application services and updates may become unavailable.
- Application content is subject to change by the service provider without prior notice.
- The service details may vary depending on the user's firmware version.
- The application usage method may vary with future versions of the application. If this is the case, run the application's tutorial or visit the service provider's website.

Installing Standard Applications

Launching Smart Hub for the first time and loading the [Apps](#) screen. The TV is automatically downloads and installs the basic applications that correspond to the network your TV is connected to. The types of basic applications may vary depending on your location.

Launching an Application

Navigate to the Smart Hub's Apps screen and then select [More Apps](#) located at the bottom of the screen. The list of applications currently installed on your TV is displayed. From this list, select the application you want to launch. Select [View](#) (top of the screen) to rearrange the list of downloaded applications by the installation date, launch date, or title.

Samsung Apps

Samsung Apps offers various free and paid news, sports, weather, and gaming applications. Samsung Apps lets you search for applications and install them directly on your TV. Read and agree to the terms and conditions of use and then browse through the categories or directly search for applications.

[Try Now](#)

Searching for Apps

Search for applications by name. On the [Samsung Apps](#) screen, select the [Search Samsung Apps](#) to bring up the keypad. Enter the application's name and then select [Done](#).

Installing Applications

Select the application you wish to install to bring up a screen with detailed information about that application. Select [Download](#) to install the selected application. Paid applications, however, must be purchased before you can install them. Visit the Samsung Apps TV website at <http://tv.samsungapps.com> and recharge your account with App Cash before purchasing paid applications.


Apps Management

You can customize the My Apps screen. You can also manage installed applications and configure application update settings

Edit My Apps

Navigate to **More Apps** screen, select **Options**, and then select **Edit My Apps**. You can customize the My Apps screen.

Change Order

From the **Edit My Apps** screen, select the applications you wish to rearrange, change the order, and then press the touch pad or press the  button on regular remote control.

Removing Applications

Remove unused applications from the My Apps' application list. Removed applications are moved to the More Apps list.

From the **Edit My Apps** screen, select the applications you wish to remove and then move them to the first or last row of the My Apps list. An 'X' will appear at the top or bottom of the icons of the selected applications. Move the applications in the direction of the 'X'. A popup window will appear. Select **Yes** from the popup window to remove the selected applications from the My Apps list.

From the **Edit My Apps** screen, select **Delete All** to remove all applications from the My Apps list.

Adding Applications

Applications that have been installed on the TV but do not show up in the My Apps list can be added to the list.

Select the applications you wish to add from the More Apps list at the top of the **Edit My Apps** screen. Selected apps are added to the My Apps list.

Deleting Applications

Delete applications installed on your TV. Deleting an application deletes all data associated with that application.

Navigate to **More Apps** screen, select **Options**, and then select **Delete**. A check box appears on the application icons. Select all the applications you wish to delete and then select **Delete**. A popup window appears. select **Yes**. Applications in gray cannot be deleted.

 You can reinstall deleted applications for free from Samsung Apps.

Managing Application Folders

Create folders and manage applications by group. Navigate to **More Apps** screen, select **Options**, and then **Create Folder**. Enter a name for the new folder.

Select **Options** to rename the folder or move applications to that folder.

Application Lock/Unlock

Lock/unlock applications. Navigate to **More Apps** screen, select **Options**, and then select **Lock / Unlock**. Enter the password and then select the applications you wish to lock. A lock symbol appears on the selected applications. To unlock, simply select the application again.

Application Update

When the application require to update to the latest version, select **Apps** and then select **More Apps**. On the **More Apps** screen, select **Update Apps**, and then select application from the list. The application starts updating to the latest version. However, **Update Apps** appears on the screen only when the update is required.

Fitness

Fitness is an application that helps you stay fit. Create a profile, set up an exercise plan, and start exercising according to a structured regimen. Read and agree to the terms and conditions before using Fitness. [Try Now](#)

⚠ Do a warm-up or some stretches before exercising. Users must stop exercising immediately if they experience pain, or become dizzy, exhausted or short of breath.

Creating a Profile

Follow the on-screen instructions and enter your information to create a profile.

Kids

This is a quick launcher and recommended list for applications and content that is suitable for children and even provides services not currently installed on your TV. Using Kids, you can download applications and content for your children to your TV. Certain services, however, are fee-based. [Try Now](#)

On the **Kids** screen, select the **TOOLS** button on the virtual remote panel or press the **TOOLS** button on regular remote control. The list screen appears. Select Tutorial Video from the list, user can view the introductory video for more information about Kids anytime.

WebBrowser

WebBrowser is a web-browsing application. Using WebBrowser, you can browse the Internet on your TV as you would on your computer and even watch TV while you surf the web. The browsing experience, however, may not be the same as it is on your computer. Use a keyboard and mouse for a more convenient web browsing experience. [Try Now](#)

Social Networks

Share your thoughts and comments about a program on the air through social networking services. Social Networks displays social network services such as Twitter, Facebook, Google Talk, on a single screen. You can even post messages and comments in the same manner as you would using a computer. You must first link your Samsung account to the respective SNS accounts before you can access them using Social Networks.

For more information about using the service, visit the application's website.

Linking Service Accounts

Link your SNS (Twitter, Facebook, Google Talk, etc.) to your Samsung account. Launch Social Networks, select an SNS, and then register the account you have with that SNS.

Once linked, you can use the buttons at the bottom of the screen to access the registered SNS. You can update your feed, post comments, and even change the viewing mode.

Apps Settings

Screen Menu > [Smart Features](#) > [Apps Settings](#) [Try Now](#)

Configure the apps installed on your TV.

Auto Ticker

Configure selected tickers to display automatically when the TV is turned on. A ticker is a service that displays stock values, news, and weather updates on the screen in real-time. Enabling the Ticker service brings you up-to-the-minute information while you watch TV. From the [Auto Ticker](#) list, select the applications to run. If a selected application has not been installed on your TV, you will need to install it first.

Push Notification Settings

Enable/disable push notifications from applications. Push notifications are displayed on the screen as you watch TV. You can then select these notifications to get more information.


Channel-Bound Apps

Channel-Bound Apps can be used when watching a channel that supports applications for the current program's data services.

Properties

You can view the Apps version, the TV's serial number, and the Netflix ESN. In addition, you can check the TV's total and available memory capacity.

On TV

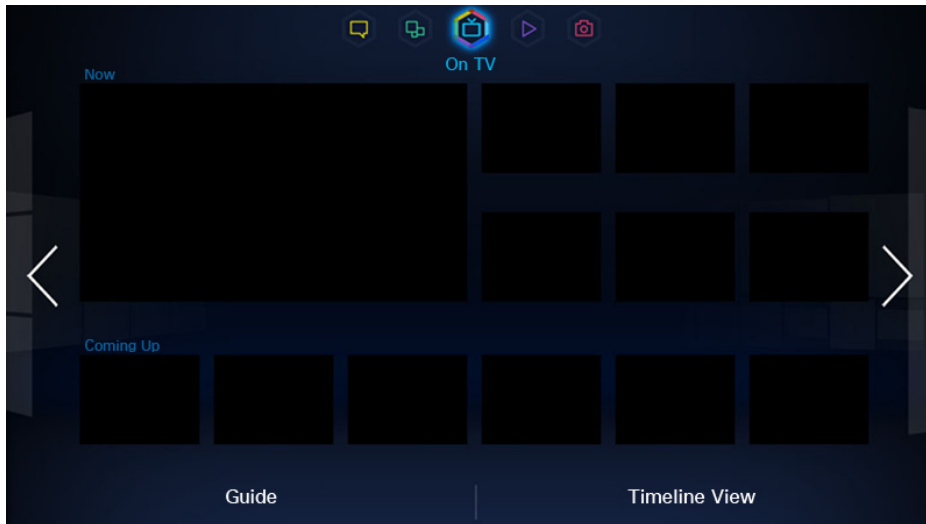



 The displayed image may differ depending on the model.

This function is only available on U.S.A. and Canada.

While you watch TV, a list of recommended programs on other channels appears on the screen. You can use this list to change the channel and find out more information about the recommended programs including how much time is left until they air.

Branded content is only available on models for sale in the U.S.A.

-  Certain features within SMART Hub require internet access and may not be available based on service provider, language, dialect and region.
-  **On TV's** program and channel information recommendations may differ from actual information depending on service providers and broadcasts.

On TV Settings

Screen Menu > [Smart Features](#) > [On TV Settings](#) [Try Now](#)

Customize the On TV screen.

On TV Setup

Set a broadcast media type and TV stations for the On TV screen, following the on-screen instructions.

Recommendation Notice

With this enabled, when one of popular TV programs that the user has often watched is currently on the air, the TV notifies the user.

Auto Start

You can configure On TV to automatically launch when the TV is turned on.

Recommendation Method

Determine whether to display upcoming TV programs by user preference or general popularity.

Adult Contents Block

With this enabled, adult TV programs are not listed on the On TV screen.

Watching an On-Air Recommended Program

Select a program from the right side of the screen. This changes the channel to the selected program.

Scheduled Recommended Program Info

The following list displays the information and viewing times of recommended programs that have not yet aired. Select a program from the list to see more information about the program and to access the following options:

- **Jump to Channel:** Jump to the selected program's channel.
- **Timer:** Set up a Schedule Viewing.
- **Related Contents:** Displays the related contents list of the selected program. Select a desired contents in the list. User can view the information screen of the selected contents.
- **Share:** Like/dislike the selected program or share information about the selected program via an SNS.


Activating the Guide

Select **Guide** at the bottom of the screen to launch the **Guide**. For more information, refer to "Guide".

Program Recommendations by Time

Select **Timeline View** at the bottom of the screen to display program recommendations for different times of the day.

Movies & TV Shows

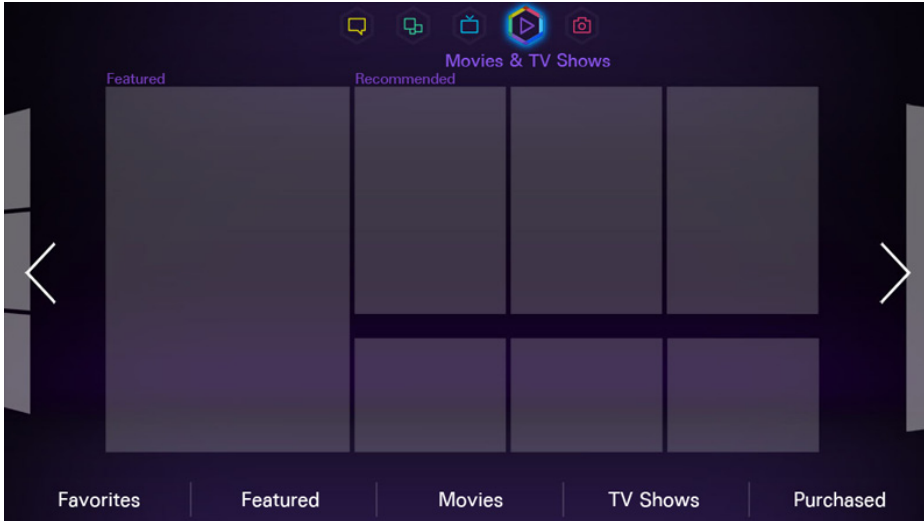

 The displayed image may differ depending on the model.

This function is not supported depending on the region.

Movies & TV Shows recommends you Movies and TV Shows video on demand content. This aggregates multiple local VOD content local to help you browse and watch all you want in one place.

Open **Smart Hub** and move to **Movies & TV Shows**. You can have recommendations and purchase VOD on TV. Enjoy Premium VOD on TV simply.

This service or some of functions of it may be not available in some countries or region.

Buying Movies

To browse movies and TV shows, select one of the following on the bottom of the screen.

- **Favorites:** View the user's preferred movies and TV shows.
- **Featured:** View the most outstanding movies and TV shows.
- **Movies:** View the latest movies.
- **TV Shows:** View the latest TV shows.

Playing Movies

Select **Purchased** at the lower-right corner of the screen. Select one of purchased movies and TV shows to play it.

Parental Control


Screen Menu > **Smart Features** > **VOD Rating Lock**

Lock movies and TV shows rated a certain class or higher to prevent children from watching them.


Open the **Smart Features** menu, choose **VOD Rating Lock**, and enter the passcode.

Turn on **VOD Rating Lock** and set any necessary options.

Photos, Videos & Music

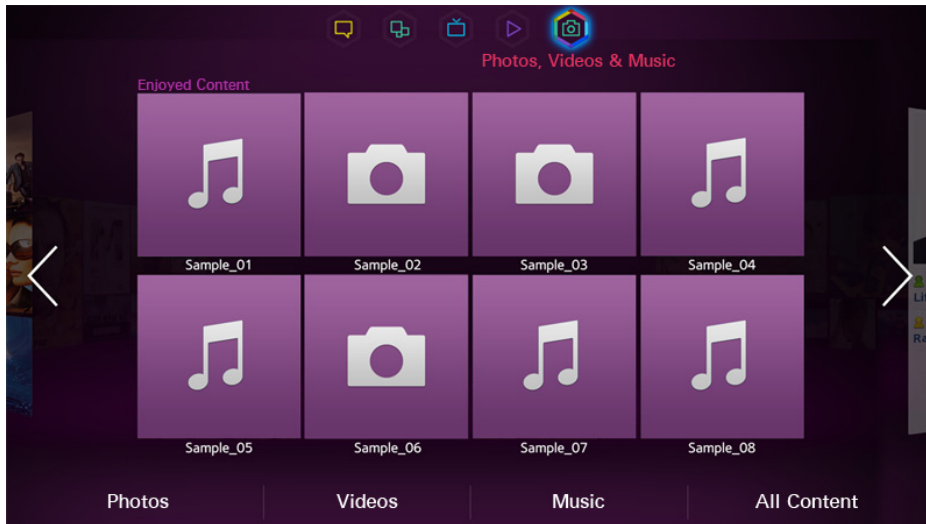

 The displayed image may differ depending on the model.

 On the **Photos, Videos & Music** screen, the **Enjoyed Content** panel only shows recently-played media files from either removable storage devices connected to the TV via USB, or DLNA-enabled devices connected to the TV via network.

Enjoy photo, video and music files from an external storage device directly on your TV. Back up important files before connecting an external storage device to the TV. Samsung will not be held responsible for damaged or lost files.

Restrictions

- Supports MSC (Mass Storage Class) USB devices only. MSC is a class designation for mass storage devices. Types of MSC devices include external hard drives, flash card readers, and digital cameras. (USB hubs are not supported.) these kinds of devices must be connected directly to the TV's USB port. The TV may not be able to recognize the USB device or read the files on the device if it is connected to the TV via a USB extension cable. Do not disconnect the USB device while transferring files.
- When connecting an external hard drive, use the USB (HDD) port. We recommend that you use an external hard drive with its own power adapter.
- Certain digital cameras and audio devices may not be compatible with the TV.
- If there are multiple USB devices connected to the TV, the TV might not be able to recognize some or all the devices. USB devices that use high-power input (500mA or 5V) may not be supported.
- Supported file systems are FAT, exFAT, and NTFS.
- Sorting the files in Folder view mode can display up to 1,000 files per folder. If the USB device contains more than 8,000 files and folders, however, some files and folders might not be accessible.
- PTP connection mode is fully available only with digital cameras. When connecting a smartphone or tablet to the TV using PTP mode, it may not be recognized.

Supported File Formats

This TV is capable of playing back the following types of files. For more information, refer to the "Subtitle and Media Contents file formats, and Codec" section.

- **Photos:** .bmp, .jpg, .mpo, .png
- **Music:** .aac, .flac, .m4a, .mpa, .mp3, .ogg, .wma
- **Video:** .3gp, .avi, .asf, .flv, .m2ts, .mkv, .mov, .mp4, .mpg, .mts, .svi, .ts, .tp, .trp, .vob, .vro, .webm, .wmv
- **Subtitles:** .ass, .psb, .smi, .srt, .ssa, .sub, .ttx, .txt

With .avi, .mkv, and .mp4 files, the TV supports embedded subtitles.

 Certain files, depending on how they were encoded, may not play on the TV.

USB Device Connection

Plug the USB device into the TV's USB port. Play back stored media files as follows:

- Connecting a USB device while the TV is turned on displays a popup window. Select the type of media you want to play.
- Move to **Photos, Videos & Music** at the top of the Smart Hub screen. Select the type of media you want to play and then the USB device that contains the files.
- Select the USB device from the **Source** screen. A popup window appears. Select the type of media you want to play.

USB Device Removal

Press the **SOURCE** button to access the Source screen. Select the USB device you want to remove and then select **Tools** at the top of the screen.

Select **Remove USB** from the list to safely remove the selected USB device.

Playing all the Content on a Storage Device

Select the **All Content** on the **Photos, Videos & Music** screen, you can play all the content saved on a storage device regardless of the type of content (videos, photos, music). [Try Now](#)

Clearing the Recent Playlist

Screen Menu > **Smart Features** > **Remove viewing history** > **Photos, Videos & Music**


The **Photos, Videos & Music** screen displays thumbnails of recently-played media files. Selecting a thumbnail plays the media file.

Using Networked External Storage Devices

This TV can directly display media files from web storage devices and computers and DLNA-enabled devices connected to the TV over a network. To display the media files on an external storage device, the device must support DLNA and be connected to the same network as the TV. For more information, refer to the manual of the external storage device.

For example, you can display the media files on your Smartphone or web storage in the following ways:

- Send a media playback request to the TV from a Smartphone or computer.
- Establish a link between the TV and a computer/Smartphone/web storage and play the media files.
- Use a Smartphone to send a request to the TV to play the media files stored on a computer or use a computer to request playing the media files stored on a Smartphone.
- Log into your Samsung account and play the media files stored on your web storage.

 Certain media files stored on a networked external storage device may not play on the TV, depending on their resolution and format. In addition, certain functions may not be available.

 Certain files may not play smoothly. If this is the case, use a USB storage device.

Move to **Photos, Videos & Music** at the top of the Smart Hub screen. Select the media type and then the device where the media file is located. The folder and file list of the selected external storage device are shown.

Allowing DLNA Device Connections

Screen Menu > **Network** > **AllShare Settings**

Selecting **AllShare Settings** screen **Content Sharing** displays a list of external storage devices connected to the same network as the TV. Select a device to allow it to connect to the TV. You can only play media files from devices that have been allowed to connect to the TV. This function is available for all DLNA DMC devices. Alternatively, you can send a media playback request from an external device that has not yet been allowed to connect to the TV and then accept the connection when prompted.

AllShare

AllShare makes it easy to retrieve and enjoy media files from computers and DLNA-enabled devices. However, computers need to be installed with AllShare PC and mobile devices need to support AllShare. For more information, visit the Samsung Content & Service portal (<http://content.samsung.com>).

 You may experience compatibility issues when attempting to play media files via a third-party DLNA server.

Exporting Contents


From the **Options** list located at the top of the screen, select **Send**. Select all the contents files you wish to export and then select **Send**. This exports the selected files to a different storage device. Possible file export pairings are as follows:

| Source Device | Target Device |
|--------------------|--|
| USB Device | DLNA Device, SugarSync, Dropbox, Mobile Device |
| Camera | DLNA Device |
| DLNA Device | USB Device |
| SugarSync, Dropbox | USB Device |
| Mobile Device | USB Device |

Videos

PDP 5500, LED 6400 series and above


Select the video file from the list or select the ► button on the virtual remote panel to play video. Use the Smart Touch Control or the on-screen buttons to control the video playback.

Press the touch pad to bring up the on-screen buttons and press the RETURN button to hide them. To stop playing the file, select the ■ button on the virtual remote panel or press the RETURN button. 

 Now

LED 4300 - 6300 series

Select the video file from the list or select the ► button on the remote control to play video. Use the remote control or the on-screen buttons to control the video playback.

Press the  button to bring up the on-screen buttons and press the RETURN button to hide them. To stop playing the file, press the ■ button on remote control or press the RETURN button.



Changing the view mode

On the file list screen, select **View** on the top right of the screen and choose a category. The file list is sorted by the chosen category.

Playlist Creation







From the **Options** list at the top of the screen, select **Play Selected**, specify all the video files you wish to play, and then select **Play**. This creates a playlist. This creates a playlist. If the list is displayed in Folder view mode, only the files contained in the current folder can be selected. To select files from other folders, change the view mode.

Opening a Different File







- Select the  on-screen button.
- Select the  on-screen button and then [Search Titles](#).

Video Scanning

PDP 5500, LED 6400 series and above

- Drag left/right on the touch pad. Scan 10 seconds backward or forward.
- Select the  button on the virtual remote panel. This changes the playback speed by up to 300%. To restore normal playback speed, select  button. Alternatively, select the  button while paused to reduce the playback speed (1/8, 1/4, 1/2). Slow playback doesn't support audio and is available in the forward direction only.
- Select the  button on the virtual remote panel to pause the screen and then select the  button to scan through the paused video in 1-frame increments. Audio is not supported while the video is paused.
- Select the [Search](#) on-screen button and then select the [Search Scene](#). This will take you to a scene in the video. If the index information is damaged or unsupported, user will not be able to use the [Search Scene](#) function.
- Select the [Search](#) on-screen button and then select the [Search Time bar](#). This will take you to a time frame in the video.
- Select the  on-screen button. This plays the video from the beginning.

LED 4300 - 6300 series

- Press the left/right arrow buttons on the remote control. Scan 10 seconds backward or forward.
- Press the  button. This changes the playback speed by up to 300%. To restore normal playback speed, press  button. Alternatively, press the  button while paused to reduce the playback speed (1/8, 1/4, 1/2). Slow playback doesn't support audio and is available in the forward direction only.
- Press the  button to pause the screen and then press the  button to scan through the paused video in 1-frame increments. Audio is not supported while the video is paused.
- Select the [Search](#) on-screen button and then select the [Search Scene](#). This will take you to a scene in the video. If the index information is damaged or unsupported, user will not be able to use the [Search Scene](#) function.
- Select the [Search](#) on-screen button and then select the [Search Time bar](#). This will take you to a time frame in the video.
- Select the  on-screen button. This plays the video from the beginning.

Show Subtitles

If the external storage device contains a subtitle file with the same name as the video file being played, you can choose to display subtitles on the screen. Select the **Settings** on-screen button and then select **Subtitle Settings** to show subtitles.

If the subtitles appear corrupted, try changing the encoding setting. If the subtitles do not match the video, adjust the sync.

If the subtitles are too small, increase the font size.

Additional Video Playback Settings

- **Repeat:** Select the **Repeat Mode** on-screen button. This changes the repeat mode. **Repeat One** repeats the current file only, whereas **Repeat All** repeats all files contained in the folder.
- **Picture Size:** Select the **Picture Size** on-screen button and then select the picture size.
- **Rotate:** Select the **Rotate** on-screen button to rotate the current video 90 degrees clockwise.
- **Receiver:** Select the **Receiver** on-screen button and then power on the receiver.
- **Picture Mode:** Select the **Settings** on-screen button and then select **Picture Mode**. Select a picture mode.
- **Sound Mode:** Select the **Settings** on-screen button and then select **Sound Mode**. Select a sound mode.
- **Audio Language:** Select the **Settings** on-screen button and then select **Audio Language**. Select an audio language. However, this option is only available with streaming videos that support multiple audio formats.
- **Information:** Select the **Settings** on-screen button and then select **Information** to view detailed information about the current video.

Music

PDP 5500, LED 6400 series and above

To exit, select **■** button on the virtual remote panel or press the **RETURN** button.

Select the music file from the list or press the **▶** button on the virtual remote panel to play music. To exit, select **■** button on the virtual remote panel or press the **RETURN** button. **Try Now**

LED 4300 - 6300 series

Select the music file from the list or press **▶** to play music. To exit, press **■** or **RETURN**.

Changing the view mode

On the file list screen, select **View** on the top right of the screen and choose a category. The file list is sorted by the chosen category.

Playlist Creation

From the **Options** list at the top of the screen, select **Play Selected**, specify all the music files you want to play, and then select **Play**.

This creates a playlist. If the list is displayed in Folder view mode, only the files contained in the current folder can be selected. To select files from other folders, change the view mode.

Music Scanning

PDP 5500, LED 6400 series and above

- Select the ◀/▶ button on the virtual remote panel. Scan 10 seconds backward or forward.
- Select the ⏸ button on the virtual remote panel. This pauses the currently playing music file.

LED 4300 - 6300 series

- Press the ◀/▶ button. Scan 10 seconds backward or forward.
- Press the ⏸ button. This pauses the currently playing music file.


Opening a Different File

- Select the ⏮/⏭ on-screen button.
- Select a file from the playlist.

Additional Music Playback Settings

- **Repeat:** Select the **Repeat** on-screen button. This changes the repeat mode. **One Song** repeats the current file only, whereas **All** repeats all files contained in the playlist.
- **Shuffle:** Select the **Shuffle** on-screen button. Choose between normal and random play.
- **Receiver:** Select the **Receiver** on-screen button and then power on the receiver.
- **Sound Mode:** Select the **Sound Mode** on-screen button. Select a sound mode.
- **Information:** Select the virtual remote panel's **INFO** button from the playlist to view detailed information about the selected file.

Photos

Select a photo from the list to display it on the screen. Press the touch pad or press the regular remote's  button to display the screen control buttons. Press **RETURN** to hide them.

PDP 5500, LED 6400 series and above

To exit, press the  or **RETURN**. [Try Now](#)



LED 4300 - 6300 series

To exit, press the  button or **RETURN** button.


Changing the view mode

On the file list screen, select **View** on the top right of the screen and choose a category. The file list is sorted by the chosen category.

Slide Show

- From the **Options** list located at the top of the screen, select **Slide Show**. You can view all photos in the list as a slideshow.
- Press  from the list.
- Press  or select the **Start Slide Show** on-screen button to begin the slideshow.

Slide Show Settings

- **Speed:** Press the  button or select the **Slideshow Settings** on-screen button and then select **Speed**.
- **Effect:** Select the **Slideshow Settings** on-screen button and then select **Effects**.

Playlist Creation

From the **Options** list at the top of the screen, select **Play Selected**. specify all the photos you want to play, and then select **Play**. This creates a playlist. If the list is displayed in Folder view mode, only the files contained in the current folder can be selected. To select files from other folders, change the view mode.

Opening a Different File

- Drag left/right on the touch pad.
- Select the **Previous** / **Next** on-screen button.

Background Music

Enable music to play in the background during a slide show. However, all music files must be located on the same storage device.

Select the **Background Music** on-screen button while a photo is displayed on the screen or a slide show is in progress. Select the music files you want to listen to and then **Play**. To play the files in a random order, select **Shuffle**.

Mini Player


When viewing photos with background music, you can control the music. Select **Background Music** from among the on-screen control buttons and select **Mini Player**. You can pause playback or skip to the previous or next song.

Additional Photo Playback Settings

- **Zoom:** Select the **Zoom** on-screen button. Zoom in by up to a factor of 4.
- **Rotate:** Select the **Rotate** on-screen button. This rotates the current photo 90 degrees clockwise.
- **Receiver:** Select the **Receiver** on-screen button and then power on the receiver.
- **Picture Mode:** Select the **Settings** on-screen button and then select **Picture Mode**. Select a picture mode.
- **Sound Mode:** Select the **Settings** on-screen button and then select **Sound Mode**. Select a sound mode. However, this option is not available while background music is playing.
- **Information:** Select the **Settings** on-screen button and then select **Information** to view detailed information about the current video.

Anynet+ (HDMI-CEC)

This SMART TV is enabled with Anynet+ (HDMI-CEC), a feature that makes it possible to control Samsung external devices connected to the TV with ease. With Anynet+ (HDMI-CEC), you can use the TV remote control to operate all compatible Samsung devices that are connected to the TV. However, Anynet+ (HDMI-CEC) only works with the remote control and not with the panel keys.

 Use the TV's remote control to operate third-party cable boxes, Blu-ray players, and home theaters connected to the TV. For more information, refer to "Universal Remote Setup".

Precautions

- This feature does not support other manufacturer's products.
- Anynet+ devices must be connected to the TV using an HDMI cable. Some HDMI cables may not support Anynet+ (HDMI-CEC). In this case, you will need to replace the HDMI cable.
- The TV remote control may not function under certain circumstances. In this case, select the Anynet+ device again.
- Anynet+ (HDMI-CEC) only works with external devices that support Anynet+ (HDMI-CEC) and only when those devices are either in standby mode or turned on.
- Anynet+ (HDMI-CEC) can control up to 12 compatible external devices (up to 3 of the same type). With home theater systems, however, the number of systems that can be controlled is limited to one.
- A home theater system that has been connected to the TV using an HDMI cable and an optical cable supports 2-channel audio only. However, the home theater is capable of supporting 5.1-channel audio from digital broadcasts.
- To listen to 5.1-channel audio from an external device, connect the device to the TV via an HDMI cable and the device's digital audio output connector directly to the home theater system.

Anynet+ (HDMI-CEC) Setup

Screen Menu > **System** > **Anynet+ (HDMI-CEC)** [Try Now](#)

Enable/disable Anynet+ (HDMI-CEC).


- **Anynet+ (HDMI-CEC)**: Enables/disables Anynet+ (HDMI-CEC). Disabling this turns off all Anynet+-related features. [Try Now](#)
- **Auto Turn Off**: Turns off external devices when the TV is turned off. Some devices do not support this option. [Try Now](#)
- **Receiver**: Listen to audio through an AV receiver instead of the TV speakers. This option is only available when there is an AV receiver connected to the TV. [Try Now](#)

Using the Anynet+ (HDMI-CEC)

You can operate external devices using just the TV remote control.

Switching between Anynet+ Devices

1. Select the virtual remote panel's or the regular remote's **TOOLS** button to display the list. Select **Anynet+ (HDMI-CEC)** from the list. A device selection screen will appear.
2. Select a device and wait for the switch to take place. This process may take up to 2 minutes to complete and cannot be cancelled when started.

 Alternatively, switch to a different Anynet+ (HDMI-CEC) device by selecting its name from the **Source** list. However, Anynet+ (HDMI-CEC) cannot be used if a connected input connector is selected.

Anynet+ (HDMI-CEC) Device Menu

Once the TV has switched over to the selected device, you can access the device's menu using the TV's remote control. Select the virtual remote panel's or the regular remote's **TOOLS** button to display the list. Select **Anynet+ (HDMI-CEC)** from the list. The following Anynet+ device options will appear. The displayed Anynet+ device options may vary depending on the external device.

- **View TV**: Select this to switch the remote control mode to the TV.
- **Device List**: Displays a list of Anynet+ (HDMI-CEC) devices connected to the TV. To change a device, select a desired device in the list.
- (Connected Device) **MENU**: Display the menu of the connected device. If the target device is a DVD player, the DVD menu is shown.
- (Connected Device) **Tools**: Display a list of frequently-used functions that are available for the device. If the target device is a DVD player, the DVD playback menu is shown. Some external devices may not support this option.
- (Connected Device) **Title Menu**: Display the connected device's title menu. If the target device is a DVD player, the DVD title menu is shown. Some external devices may not support this option.
- **Receiver**: Listen to audio from the connected external device through an AV receiver, such as a home theater system, instead of the TV speakers. This option is only available when there is an AV receiver connected to the TV. The menu may not be shown with receivers that support audio only.

ARC

ARC enables digital sound to be output using just an HDMI cable. However, ARC is only available with AV receivers that support ARC.

To use ARC, enable it from the Anynet+ (HDMI-CEC) device menu [Receiver](#).

Sharing Mobile Device Screens on the TV

The [Screen Mirroring](#) function is not available for LED 4300 series.


This TV is capable of displaying mobile device screens. You can use the following features to enjoy video, photo, and music files from mobile devices directly on your TV.

- Use the [Screen Mirroring](#) menu to display a mobile device's screen on the TV.

Screen Mirroring

Screen Menu > [Network](#) > [AllShare Settings](#) > [Screen Mirroring](#)


Displays mobile device screens on your TV wirelessly. However, [Screen Mirroring](#) is only available with mobile devices that support AllShare Cast. For more information, visit the mobile device manufacturer's website.


 Depending on the network condition, screen or voice dropouts may occur when the [Screen Mirroring](#) function is running.

Mobile Device Connection

Run [Screen Mirroring](#) ([Network](#) > [AllShare Settings](#) > [Screen Mirroring](#)) function. Alternatively, press the [SOURCE](#) button and select [Screen Mirroring](#) from the source list. After running the [Screen Mirroring](#), run Mirroring function on the mobile device. The TV will connect with the mobile device, and user can view the connected mobile device's screen on the TV.

Support

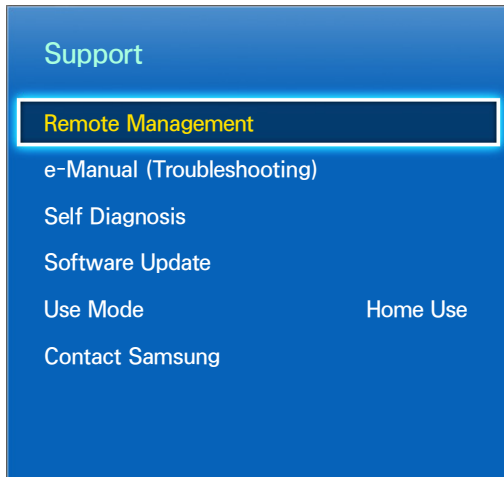

 The displayed image may differ depending on the model.

The TV has several built-in systems designed for user and TV system support.

Remote Management

Screen Menu > [Support](#) > [Remote Management](#) [Try Now](#)

If you need assistance with your TV, you can use this feature to let Samsung Electronics diagnose your TV remotely. You will need to read and agree to the service agreement before using this feature. A Samsung Electronics technician will then diagnose, repair, and update your TV remotely. However, these features are only available when your TV is connected to the Internet.

What is Remote Support?

Samsung Remote Support service offers you one-on-one support with a Samsung Technician who can remotely.

- **Diagnose** your TV
- **Adjust the TV settings** for you
- **Perform a factory reset** your TV
- Install recommended **firmware updates**

How Does it Work?

Having a Samsung Tech remotely service your TV is really pretty simple



Call Samsung Contact Center and ask for remote support.



Open the menu on your TV and go to the **Support section**.



Select Remote Management and **Provide the Pin#** to the agent.



The agent will then **access your TV**. That's it!

e-Manual

Screen Menu > [Support](#) > [e-Manual \(Troubleshooting\)](#)

This TV features a built-in electronic user manual. It is a comprehensive guide for using your Samsung TV. Refer to the "e-Manual" for more information.

Self Diagnosis

Screen Menu > [Support](#) > [Self Diagnosis](#) [Try Now](#)

Your TV is capable of diagnosing itself for picture-, sound-, and signal-related issues. The self-diagnosis function consists of the following options:

- Picture Test
- Sound Test
- Motion Control Environment Check
- Signal Information
- Reset

Picture Test

Screen Menu > [Support](#) > [Self Diagnosis](#) > [Picture Test](#) [Try Now](#)

The Picture Test displays a high definition picture to examine it for flaws or faults.

If the test picture does not appear or there is noise or distortion, the TV may have a problem. Contact Samsung's Call Center for assistance. If the test picture is displayed properly, there may be a problem with the external device. Please check the connections. If the problem persists, check the signal strength or refer to the external device's user manual.

Sound Test

Screen Menu > [Support](#) > [Self Diagnosis](#) > [Sound Test](#) [Try Now](#)

Use the built-in melody to check for sound problems.

If no melody is played by the TV's speakers, make sure [Speaker Select](#) is set to [TV Speaker](#) and then try again. If the problem persists, there may be a problem with the TV. Contact Samsung's Call Center for assistance. If the melody is played, there may be a problem with the external device. Please check the connections. If the problem persists, refer to the external device's user manual.

Motion Control Environment Check

Screen Menu > [Support](#) > [Self Diagnosis](#) > [Motion Control Environment Check](#)

Test the ambient noise and brightness levels to see if they are suitable for SMART Interaction use.

Signal Information

Screen Menu > [Support](#) > [Self Diagnosis](#) > [Signal Information](#) [Try Now](#)

The signal Information displays the digital channel signal information and strength. Users can then adjust the antenna to increase the signal strength and receive HD channels. This option is only available for digital channels.

Reset

Screen Menu > [Support](#) > [Self Diagnosis](#) > [Reset](#) [Try Now](#)

This resets all settings to the factory default settings except for the network settings. Select [Reset](#), enter the PIN code when requested, and then select [Yes](#). All settings are then reset. The TV turns off and on again automatically and then displays the [Setup](#) screen. For more information on resetting the TV, refer to the user manual that came with the TV.

Updating the Software

Screen Menu > [Support](#) > [Software Update](#) [Try Now](#)

Check your TV's software version and upgrade it if necessary.

⚠ DO NOT turn off the TV's power until the upgrade is complete. The TV will turn off and on automatically after completing the software upgrade. All video and audio settings return to the default settings after a software upgrade.

Update now

Screen Menu > [Support](#) > [Software Update](#) > [Update now](#) [Try Now](#)

An online upgrade downloads and installs the upgrade software directly from the Internet. Configure the TV to connect to a network and make sure it can access the Internet. Select Online.

Manual Update

Download the latest update file from the Samsung website. Decompress the file and copy it into the root directory of a flash drive. Insert the flash drive one of the TV's USB ports to install the update.

Auto Update

Screen Menu > [Support](#) > [Software Update](#) > [Auto Update](#) [Try Now](#)

This option upgrades the TV while it is in Standby Mode. In Standby Mode, the TV appears to be turned off but still has access to the Internet. This allows the TV to upgrade itself automatically while it is not in use. Because the TV's internal processes are operating, the screen may emit a faint glow, and this may continue for more than 1 hour until the software download is complete. Check the network configuration and internet connectivity and then enable this option.

Standby Mode Upgrade Settings

Specify when you want the upgrade to take place. This TV can be set to periodically check and install updates.

Usage Mode

Screen Menu > [Support](#) > [Use Mode](#) [Try Now](#)


Select the TV's usage mode. If your TV has been unintentionally set to **Store Demo**, you can change the mode with this option. **Store Demo** should be used in retail environments only. With **Store Demo**, certain functions are disabled and the TV automatically resets itself after a certain amount of time.

Support Info

Screen Menu > [Support](#) > [Contact Samsung](#) [Try Now](#)

Check the information below if your TV is not working properly or you need information on upgrading the software. The section below contains useful information about the product and instruction on obtaining the latest software.

Kensington Security Lock

A Kensington Security Lock is a physical device that can be used to protect the TV against theft. Look for the Kensington slot on the back of the TV. The slot has a  icon next to it. Wrap the lock around an object that is too heavy to carry and then thread it through the TV's Kensington slot. The lock, however, has to be purchased separately.

The method of using a Kensington Security Lock may differ for each TV model. Refer to the Kensington Security Lock manual for more information.

Display Resolution

PDP 5500, LED 5500 series and above

Connect a computer to the TV and then configure the computer's resolution by referencing the table below. The optimal resolution is 1920 x 1080 @ 60Hz. Choosing an output signal not included in the table can result in a blank screen or just the power indicator being turned on. Refer to the user manual of the graphics card and configure the resolution as indicated below.

IBM

| Resolution (Dots x Lines) | Standard Frequency | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Clock Frequency (MHz) | Polarity (Horizontal / Vertical) |
|---------------------------|--------------------|----------------------------|-------------------------|-----------------------|----------------------------------|
| 720 x 400 | 70Hz | 31.469 | 70.087 | 28.322 | -/+ |

MAC

| Resolution (Dots x Lines) | Standard Frequency | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Clock Frequency (MHz) | Polarity (Horizontal / Vertical) |
|---------------------------|--------------------|----------------------------|-------------------------|-----------------------|----------------------------------|
| 640 x 480 | 67Hz | 35.000 | 66.667 | 30.240 | -/- |
| 832 x 624 | 75Hz | 49.726 | 74.551 | 57.284 | -/- |
| 1152 x 870 | 75Hz | 68.681 | 75.062 | 100.000 | -/- |

VESA DMT

| Resolution (Dots x Lines) | Standard Frequency | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Clock Frequency (MHz) | Polarity (Horizontal / Vertical) |
|------------------------------|-----------------------|----------------------------------|-------------------------------|--------------------------|--|
| 640 x 480 | 60Hz | 31.469 | 59.940 | 25.175 | -/- |
| 640 x 480 | 72Hz | 37.861 | 72.809 | 31.500 | -/- |
| 640 x 480 | 75Hz | 37.500 | 75.000 | 31.500 | -/- |
| 800 x 600 | 60Hz | 37.879 | 60.317 | 40.000 | +/+ |
| 800 x 600 | 72Hz | 48.077 | 72.188 | 50.000 | +/+ |
| 800 x 600 | 75Hz | 46.875 | 75.000 | 49.500 | +/+ |
| 1024 x 768 | 60Hz | 48.363 | 60.004 | 65.000 | -/- |
| 1024 x 768 | 70Hz | 56.476 | 70.069 | 75.000 | -/- |
| 1024 x 768 | 75Hz | 60.023 | 75.029 | 78.750 | +/+ |
| 1152 x 864 | 75Hz | 67.500 | 75.000 | 108.000 | +/+ |
| 1280 x 720 | 60Hz | 45.000 | 60.000 | 74.250 | +/+ |
| 1280 x 800 | 60Hz | 49.702 | 59.810 | 83.500 | -/+ |
| 1280 x 1024 | 60Hz | 63.981 | 60.020 | 108.000 | +/+ |
| 1280 x 1024 | 75Hz | 79.976 | 75.025 | 135.000 | +/+ |
| 1366 x 768 | 60Hz | 47.712 | 59.790 | 85.500 | +/+ |
| 1440 x 900 | 60Hz | 55.935 | 59.887 | 106.500 | -/+ |
| 1600 x 900RB | 60Hz | 60.000 | 60.000 | 108.000 | +/+ |
| 1680 x 1050 | 60Hz | 65.290 | 59.954 | 146.250 | -/+ |
| 1920 x 1080 | 60Hz | 67.500 | 60.000 | 148.500 | +/+ |

LED 4300 series models

Connect a computer to the TV and then configure the computer's resolution by referencing the table below. The optimal resolution is 1366 x 768 @ 60Hz. Choosing an output signal not included in the table can result in a blank screen or just the power indicator being turned on. Refer to the user manual of the graphics card and configure the resolution as indicated below.

IBM

| Resolution | Standard frequency | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Pixel Clock Frequency (MHz) | Sync Polarity (H / V) |
|------------|--------------------|----------------------------|-------------------------|-----------------------------|-----------------------|
| 720 x 400 | 70Hz | 31.469 | 70.087 | 28.322 | -/+ |

MAC

| Resolution | Standard frequency | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Pixel Clock Frequency (MHz) | Sync Polarity (H / V) |
|------------|--------------------|----------------------------|-------------------------|-----------------------------|-----------------------|
| 640 x 480 | 67Hz | 35.000 | 66.667 | 30.240 | -/- |
| 832 x 624 | 75Hz | 49.726 | 74.551 | 57.284 | -/- |

VESA DMT

| Resolution | Standard frequency | Horizontal Frequency (KHz) | Vertical Frequency (Hz) | Pixel Clock Frequency (MHz) | Sync Polarity (H / V) |
|------------|--------------------|----------------------------|-------------------------|-----------------------------|-----------------------|
| 640 x 480 | 60Hz | 31.469 | 59.940 | 25.175 | -/- |
| 640 x 480 | 72Hz | 37.861 | 72.809 | 31.500 | -/- |
| 640 x 480 | 75Hz | 37.500 | 75.000 | 31.500 | -/- |
| 800 x 600 | 60Hz | 37.879 | 60.317 | 40.000 | +/+ |
| 800 x 600 | 72Hz | 48.077 | 72.188 | 50.000 | +/+ |
| 800 x 600 | 75Hz | 46.875 | 75.000 | 49.500 | +/+ |
| 1024 x 768 | 60Hz | 48.363 | 60.004 | 65.000 | -/- |
| 1024 x 768 | 70Hz | 56.476 | 70.069 | 75.000 | -/- |
| 1024 x 768 | 75Hz | 60.023 | 75.029 | 78.750 | +/+ |
| 1280 x 720 | 60Hz | 45.000 | 60.000 | 74.250 | +/+ |
| 1366 x 768 | 60Hz | 47.712 | 59.790 | 85.500 | +/+ |

Picture Size and Input Signal

| Input Signal | Picture Size |
|---------------------------|---|
| ATV, AV | 16:9, Zoom1, Zoom2, 4:3 |
| Component (480i, 480p) | 16:9, Zoom1, Zoom2, 4:3 |
| DTV (720p) | 16:9, Wide Fit, 4:3, Smart View 2 |
| DTV (1080i, 1080p) | 16:9, Wide Fit, 4:3, Screen Fit, Smart View 2 |
| Component (720p) | 16:9, Wide Fit, 4:3 |
| Component (1080i, 1080p) | 16:9, Wide Fit, 4:3, Screen Fit |
| HDMI (720p, 1080i, 1080p) | 16:9, Wide Fit, 4:3, Screen Fit, Smart View 1 (for LED TV), Smart View 2 (for LED TV) |

The **Picture Size** setting is applied to the current source and the applied **Picture Size** will remain in effect the next time the source is selected.

Supported 3D Resolutions

These specifications apply to a display ratio of 16:9 only.

HDMI

3D Format: L/R, T/B

| Resolution | Frequency (Hz) |
|--------------|--------------------------------------|
| 1280 x 720p | 59.94 / 60 |
| 1920 x 1080i | 59.94 / 60 |
| 1920 x 1080p | 23.98 / 24 / 29.97 / 30 / 59.94 / 60 |

3D Format: Frame Packing

| Resolution | Frequency (Hz) |
|--------------|-------------------------|
| 1280 x 720p | 59.94 / 60 |
| 1920 x 1080i | 59.94 / 60 |
| 1920 x 1080p | 23.98 / 24 / 29.97 / 30 |

Component

| Resolution | Frequency (Hz) |
|--------------|--------------------------------------|
| 1280 x 720p | 59.94 / 60 |
| 1920 x 1080i | 59.94 / 60 |
| 1920 x 1080p | 23.98 / 24 / 29.97 / 30 / 59.94 / 60 |

Digital Channel

| Resolution | Frequency (Hz) |
|--------------|----------------|
| 1280 x 720p | 59.94 / 60 |
| 1920 x 1080i | 59.94 / 60 |

Videos/Photos

Refer to the "Subtitle and Media Contents file formats, and Codec".

HDMI PC Mode

Supported 3D resolutions for HDMI PC mode apply to LED TVs only.

The optimal resolution for HDMI PC mode is 1920 x 1080. The TV may not display 3D images properly and full screen view may not be available if set to a different resolution.

Subtitle and Media Contents file formats, and Codec

Subtitle

External

| Name | File Extension |
|---------------------------|----------------|
| MPEG-4 Timed text | .ttxt |
| SAMI | .smi |
| SubRip | .srt |
| SubViewer | .sub |
| Micro DVD | .sub or .txt |
| SubStation Alpha | .ssa |
| Advanced SubStation Alpha | .ass |
| Powerdivx | .psb |

Internal

| Name | Container |
|---------------------------|-----------|
| Xsub | AVI |
| SubStation Alpha | MKV |
| Advanced SubStation Alpha | MKV |
| SubRip | MKV |
| MPEG-4 Timed text | MP4 |

Supported image resolutions

| File Extension | Type | Resolution |
|-----------------|------|------------|
| *.jpg *.jpeg | JPEG | 15360x8640 |
| *.png | PNG | 4096x4096 |
| *.bmp | BMP | 4096x4096 |
| *.mpo | MPO | 15360x8640 |

Supported music file formats

| File Extension | Type | Codec | Comments |
|-------------------------|-------|---------------------|---|
| *.mp3 | MPEG | MPEG1 Audio Layer 3 | |
| *.m4a *.mpa *.aac | MPEG4 | AAC | |
| *.flac | FLAC | FLAC | Supports up to 2 channel |
| *.ogg | OGG | Vorbis | Supports up to 2 channel |
| *.wma | WMA | WMA | WMA 10 Pro supports up to 5.1 channel. WMA lossless audio is not supported. Supports up to M2 profile (except LBR mode) |
| *.wav | wav | wav | |
| *.mid *.midi | midi | midi | type 0, type 1 are supported. |
| *.ape | ape | ape | |

Video Codec

| File Extension | Container | Video Codec | Resolution | Frame rate (fps) | Bit rate (Mbps) | Audio Codec |
|----------------|--|-----------------------------|--|------------------|-----------------|---|
| *.avi | AVI MKV ASF MP4 3GP MOV FLV VRO TS SVAF | Divx 3.11 / 4 / 5 / 6 | 1920x1080 | 6~30 | 30 | AC3 LPCM ADPCM(IMA, MS) AAC HE-AAC WMA DD+ MPEG(MP3) |
| *.mkv | | MPEG4 SP/ASP | | | | |
| *.asf | | H.264 BP/MP/HP | | | | |
| *.wmv | | Motion JPEG | 640x480 | | | |
| *.mp4 | | Microsoft MPEG-4 v3 | 1920x1080 (WMV v7,v8, MSMPEG4 v3: 1280x720) | | | |
| *.3gp | | Window Media Video v7,v8,v9 | | | | |
| *.vro | | MPEG2 | | | | |
| *.mpg | | MPEG1 | | | | |
| *.mpeg | | MVC | | | 24/25/30 | |
| *.ts | | VP6 | 640x480 | | 4 | |
| *.tp | | | | | | |
| *.flv | | | | | | |
| *.vob | | | | | | |
| *.svi | | | | | | |
| *.m2ts | | | | | | |
| *.mts | | | | | | |
| *.divx | | | | | | |
| *.webm | WebM | VP8 | 1920x1080 | 6~30 | 20 | Vorbis |

Other Restrictions

Codecs may not function properly if there is a problem with the content data.

Video content does not play or does not play correctly if there is an error in the content or container.

Sound or video may not work if they have standard bit rates/frame rates above the TV's compatibility ratings.

If the Index Table is wrong, the Seek (Jump) function does not work.

When playing video over a network connection, the video may not play smoothly because of data transmission speeds.

Some USB/digital camera devices may not be compatible with the player.

Video Decoders

- Supports up to H,264, Level 4.1 (does not support FMO/ASO/RS)
- VC1 AP L4 is not supported.
- All video codecs excluding WMV v7, v8, MSMPEG4 v3, MVC, and VP6:
Below 1280 x 720: 60 frame max
Above 1280 x 720: 30 frame max
- GMC is not supported.
- Supports SVAF top/bottom and left/right only.
- Supports Blu-ray/DVD MVC specs only.

Audio Decoders

- WMA 10 Pro supports up to 5.1 channels. Supports up to M2 profile. (Excluding M0 LBR mode)
- WMA lossless audio is not supported.
- Vorbis is supported for up to 2 channels.
- DD+ is supported for up to 5.1 channels.

3D Precautions

CAUTION!

IMPORTANT HEALTH AND SAFETY INFORMATION FOR 3D IMAGES. READ THE FOLLOWING CAUTIONS BEFORE YOU OR YOUR CHILD USE THE 3D FUNCTION.

- Adults should frequently check on children who are using the 3D function. If there are any complaints of tired eyes, headaches, dizziness or nausea, stop the child from viewing the 3D TV and ensure that they rest.
- Do not use the 3D glasses for other purposes such as general wear, sunglasses, protective goggles, etc.
- Some viewers may experience discomfort such as dizziness, nausea and headaches while viewing 3D TV. If you experience any of these symptoms, stop viewing the 3D TV, remove the 3D glasses and rest for awhile.
- Watching 3D pictures for an extended period of time may cause eye strain. If you experience any eye strain, stop viewing the 3D TV, remove the 3D glasses and rest for awhile.
- Do not use the 3D function or 3D glasses while walking or moving around. Using the 3D function or 3D Active Glasses while moving around may result in injury from running into objects, tripping, and/or falling.

SAFETY PRECAUTIONS

The following safety instructions are to ensure your personal safety and prevent property damage. Please read them to ensure the proper use of the product.

- Do not place the product in a location exposed to direct sunlight, heat, fire, or water. Exposure may result in a product malfunction or fire.
- Do not apply force to the lenses of the 3D glasses. Do not drop or bend the product. Applying force, dropping, or bending may result in a product malfunction.
- Use only the specified standard batteries. When replacing the battery, insert the battery so that its polarity (+, -) is correct. Failing to do so may damage the battery or result in fire, personal injury or environmental damage caused by liquid leaking from the battery.
- Keep the used battery out of the reach of children so that they do not accidentally swallow the battery. If your child has swallowed the battery, consult your doctor immediately.
- When cleaning the product, do not spray water or cleaner directly onto the surface of the product. Spraying water or cleaner directly onto the glasses may result in fire or electric shock, damage to the product's surface, or cause the indicator labels on the product's surface to come loose.
- Do not use chemicals containing alcohol, solvents, or surfactants, or chemicals such as wax, benzene, thinner, mosquito repellent, lubricant or cleaners. These may cause a discoloration of or cracks in the product surface and cause the indicator labels on the product's surface to come loose.
- Since the product surface and lens are easily scratched, make sure to use a clean soft cloth (the cleaning cloth supplied with the product, a cloth consisting of superfine fibers or cotton flannel) when cleaning to avoid scratching either the surface or the lens. As the product may become scratched if there are any foreign items on the cloth, make sure to shake off any dust before using it.
- Never disassemble, repair, or modify the 3D glasses yourself. Do not use the glasses when they are out of order or broken.
- Take care that you do not injure your eyes with the edges of the frame of the 3D glasses when wearing them.
- Use your hands to put on or remove the 3D glasses.

WARRANTY

This Samsung product is warranted for the period of twelve (12) months from the original date of purchase, against defective materials and workmanship. In the event that warranty service is required, you should first return the product to the retailer from whom it was purchased. However, Samsung Authorized Service Centers will comply with this warranty during the Warranty Period. To obtain details, please contact your nearest Authorized Service Center.

PROCEDURE FOR MAKING A WARRANTY CLAIM

To make a claim under the warranty, you must contact the Samsung Contact Center (see details above) during the Warranty Period to discuss the problems you are having with the product. If a repair or replacement is required, you will be provided with a Warranty Claim Number and address of an Authorised Service Center.

If you are provided with a Warranty Claim Number, to obtain a repair or replacement of the product, you must send the product to the Authorised Service Center advised together with:

- a copy of your completed warranty card or, if you have already provided this to Samsung, your name, address and contact telephone number;
- your original receipt, invoice or sales slip for the purchase of the product as new;
- your Warranty Claim Number.
- Samsung will then repair or replace the product and return it to you using the contact details provided.

WARRANTY CONDITIONS

1. The warranty is only valid if the above procedure for making a warranty claim is followed.
2. Samsung's obligations are limited to the repair or, at its discretion, replacement of the product or the defective part.
3. Warranty repairs must be carried out by Samsung Authorised Service Centers. No reimbursement will be made for repairs carried out by service centers or dealers that are not authorised by Samsung and any such repair work and damage to the products caused by such repair work will not be covered by this warranty.
4. This product is not considered to be defective in materials nor workmanship by reason that it requires adaptation in order to conform to national or local technical or safety standards in force in any country other than the one for which the product was originally designed and manufactured. This warranty will not cover, and no re-imbursalment will be made for such adaptation, nor any damage which may result.

5. The warranty does not apply to any product that has been damaged or rendered defective as a result of any of the following excluded reasons, namely:
 - as a result of accident, misuse, or abuse;
 - through the failure to use this product for its normal purposes;
 - by the use of parts not manufactured or sold by Samsung;
 - by modification without the written permission of Samsung;
 - by damage resulting from transit, neglect, power surge or failure;
 - by damage resulting from lightning, water, fire, or acts of God;
 - as a result of normal wear and tear; or
 - difference in broadcasting methods or product standards between countries.
6. This warranty is valid for any person who legally acquired possession of the product during the warranty period.
7. NOTHING IN THESE WARRANTY CONDITIONS SHALL EXCLUDE OR LIMIT SAMSUNG'S LIABILITY FOR DEATH OR PERSONAL INJURY CAUSED BY THE PROVEN NEGLIGENCE OF SAMSUNG, UNLESS SUCH LIMITATION OR EXCLUSION IS PERMITTED BY APPLICABLE LAW.
8. WITH THE EXCEPTION OF SAMSUNG'S LIABILITY WHICH CANNOT BE EXCLUDED OR LIMITED BY LAW, SAMSUNG SHALL NOT BE LIABLE FOR: ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES LOSSES OR EXPENSES; OR LOST PROFITS; OR LOSS OF USE OR LOSS OF DATA; OR DAMAGE TO GOODWILL, REPUTATION OR LOST BUSINESS, ARISING DIRECTLY OR INDIRECTLY, FROM THE PURCHASE, USE OR SALE OF THE PRODUCT, WHETHER OR NOT SAMSUNG WAS ADVISED OR AWARE OF THE POSSIBILITY OF SUCH DAMAGES, LOSSES OR EXPENSES.
9. WITH THE EXCEPTION OF SAMSUNG'S LIABILITY WHICH CANNOT BE EXCLUDED OR LIMITED BY LAW, SAMSUNG'S LIABILITY UNDER OR IN CONNECTION WITH THIS WARRANTY OR THE PURCHASE, USE OR SALE OF THE PRODUCT SHALL NOT EXCEED THE PRICE PAID FOR THE PRODUCT AS NEW.
10. UNLESS PROVIDED FOR IN THIS WARRANTY, ALL CONDITIONS, WARRANTIES AND TERMS IMPLIED BY STATUTE OR OTHERWISE ARE HEREBY EXCLUDED TO THE MAXIMUM EXTENT PERMISSIBLE BY LAW.
11. The above warranty conditions do not affect your statutory rights as a consumer or otherwise.

Licenses



DivX Certified® to play DivX® video up to HD 1080p, including premium content.

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu. Go to vod.divx.com for more information on how to complete your registration.

Covered by one or more of the following U.S. patents: 7,295,673; 7,460,668; 7,515,710; 7,519,274



Premium Sound | 5.1

Manufactured under a license from U.S. Patent No's: 5,956,674, 5,974,380, 5,978,762, 6,487,535, 6,226,616, 7,212,872, 7,003,467, 7,272,567, 7,668,723, 7,392,195, 7,930,184, 7,333,929 and 7,548,853. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Premium Sound | 5.1 is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.



Studio Sound

Manufactured under a license from U.S. Patent No's: 6,285,767, 8,027,477, 5,319,713, 5,333,201, 5,638,452, 5,771,295, 5,970,152, 5,912,976, 7,200,236, 7,492,907, 8,050,434, 7,720,240, 7,031,474, 7,907,736 and 7,764,802. DTS, the Symbol, and DTS and the Symbol together are registered trademarks & DTS Studio Sound is a trademark of DTS, Inc. ©2012 DTS, Inc. All Rights Reserved.



Manufactured under license from Dolby Laboratories.
Dolby and the double-D symbol are trademarks of Dolby Laboratories.

HDMI

The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.



This license is not available for LED 4300 series.

Open Source License Notice

In the case of using open source software, Open Source Licenses are available on the product menu.
Open Source License Notice is written only English.

If the TV appears to have a problem, first review this list of possible problems and solutions. If none of the troubleshooting tips apply, visit www.samsung.com/support or contact Samsung Customer Service.

Screen

If there is a problem with the screen, run [Picture Test \(Support > Self Diagnosis > Picture Test\)](#) to diagnose the issue. If the test fails to identify a problem, there may be a problem with an external device or the signal strength.

| There is something wrong with the TV. | Try this! |
|---------------------------------------|--|
| Flickering and Dimming | If your Samsung Television is flickering or dimming sporadically, you may need to disable some of the energy efficiency features. Disable Energy Saving (System > Eco Solution > Eco Sensor) and/or Energy Saving (System > Eco Solution > Energy Saving) and check again. |
| Component Connections/Screen Color | If you find that the color on your Samsung television screen is not correct or the black and white colors are off, run Self Diagnosis (Support > Self Diagnosis > Picture Test) . If the test results are negative, check the following: Are the TV's video input connectors connected to the correct external device video output connectors? Check other connections as well. If the TV is connected to an external device via a component cable, check that the Pb, Pr, and Y jacks are plugged into their proper connectors. |
| Screen Brightness | If you find that the colors on your Samsung TV are correct but just a little too dark or bright, try adjusting the following settings first. Navigate to Picture and adjust Backlight/Cell Light (applicable models), Contrast , Brightness , Sharpness , Color , Tint (G/R) and other picture quality adjustment settings. |
| Auto Motion Plus/Blur | If you find that there is a blur or "ghost" shadow to the images on your television screen, you might be able to correct the issue using Auto Motion Plus (Picture > Picture Options > Auto Motion Plus) . |
| Unwanted Powering Off | If your Samsung TV appears to turn off by itself, try disabling some of the TV's energy efficiency features. Check if Sleep Timer (System > Time > Sleep Timer) has been enabled. Sleep Timer automatically turns off the TV to save energy after a specified period of inactivity. If the Sleep Timer has not been enabled, see if No Signal Power Off (System > Eco Solution > No Signal Power Off) or Auto Power Off (System > Eco Solution > Auto Power Off) has been enabled. |
| Problems Powering On | When the TV is turned on, the remote control receiver flashes 5 times before the screen turns on. If you find that you are having problems powering on your Samsung television, there are a number of things to check before calling the service department. If the power cord is connected properly and the remote control is operating normally, the problem might be with the antenna cable connection or the cable/satellite box not being turned on. Check the antenna connection or turn on the cable/satellite box. |

| There is something wrong with the TV. | Try this! |
|--|--|
| Unable to find a Channel | Run Setup (System > Setup) or Auto Program (Broadcasting > Auto Program). |
| The TV image does not look as good as it did in the store. | <p>Store displays are all tuned to digital, HD (high definition) channels. If you have an analog cable/set top box, upgrade to a digital set top box. Use HDMI or Component cables to deliver HD (high definition) picture quality. Many HD channels are upscaled from SD (Standard Definition) content. Look for a channel that is broadcasting true HD content.</p> <p>Cable/Satellite Subscribers: Try HD channels from the channel lineup. Air/Cable Antenna Connection: Try HD channels after performing the Auto Program operation.</p> <p>Adjust the cable/satellite box's video output resolution to 1080i or 720p.</p> |
| The picture is distorted. | <p>The compression of video content may cause picture distortions, especially in fast moving pictures such as sports and action movies.</p> <p>A weak or bad quality signal can cause picture distortions. This is not an issue with the TV.</p> <p>Mobile phones used close to the TV (within 1m) may cause noise in analog and digital channels.</p> |
| The color is wrong or missing. | If you're using a Component connection, make sure that the component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or a blank screen. |
| The color is poor or the picture is not bright enough. | <p>Navigate to Picture and adjust Picture Mode, Brightness, Sharpness, Color, and other picture adjustment settings.</p> <p>See if Energy Saving (System > Eco Solution > Energy Saving) has been enabled. Try resetting the picture. (Picture > Reset Picture)</p> |
| There is a dotted line on the edge of the screen. | <p>If Picture Size is set to Screen Fit, change it to 16:9.</p> <p>Change the cable/satellite box resolution.</p> |
| The picture is black and white. | If you are using AV composite input, connect the video cable (yellow) to the TV's green component jack. |
| The color is wrong or missing. | If you are using a Component connection, make sure that the component cables are connected to the correct jacks. Incorrect or loose connections may cause color problems or a blank screen. |

Sound

If you find that there is a problem with the TV's speakers, run [Sound Test](#) ([Support](#) > [Self Diagnosis](#) > [Sound Test](#)) to diagnose the issue. If the audio is OK, the sound problem may be caused by the source or signal.

| There is something wrong with the TV. | Try this! |
|--|---|
| There is no sound or the sound is too low at maximum volume. | Please check the volume of the device (cable/satellite box, DVD, Blu-ray, etc.) connected to your TV. |
| The picture is good but there is no sound. | Navigate to Sound and set Speaker Select to TV Speaker . If you are using an external device, check the device's audio output option. (For example, you may need to change your cable box's audio option to HDMI if the box connected to your TV is using an HDMI cable.) If you are using a DVI to HDMI cable, a separate audio cable is required. If your TV has a headphone jack, make sure there is nothing plugged into it. Reboot the connected device by disconnecting and then reconnecting the device's power cable. |
| The speakers are making an odd sound. | Make sure that the audio cable is connected to the correct audio output connector on the external device. For antenna or cable connections, check the signal information. A low signal level may cause sound distortions. Run Self Diagnosis (Support > Self Diagnosis > Sound Test). |

3D TV

| There is something wrong with the TV. | Try this! |
|--|---|
| The 3D Active Glasses are not working correctly. | Make sure the glasses are turned on. The 3D Active Glasses may not work properly if there is another 3D product or electronic device turned on near the glasses or TV. If there is a problem, keep other electronic devices as far away as possible from the 3D Active Glasses. |
| The 3D images don't look quite right. | The ideal viewing distance is three times or more the height of the screen. We also recommend sitting with your eyes level with the screen. |
| The batteries in the 3D glasses don't last. | Turn off the 3D glasses when you are not using them. If you leave the 3D glasses on, the battery lifespan is shortened. |

Antenna (Air/Cable) Connection

| There is something wrong with the TV. | Try this! |
|--|--|
| The TV is not receiving all channels. | Make sure the coaxial cable is connected securely. Run Auto Program (Broadcasting > Auto Program) to add all available channels to the channel list. Verify that the antenna is positioned correctly. |
| There are no captions on digital channels. | Navigate to Caption (Broadcasting > Caption) and change the Caption Mode setting. Some channels may not have caption data. |
| The picture is distorted. | The compression of video content may cause picture distortions. This is especially true with fast moving pictures such as sports and action movies. A weak signal can cause picture distortions. This is not a problem with the TV. |

PC Connection

| There is something wrong with the TV. | Try this! |
|---|--|
| The "Mode Not Supported" message appears. | Set your PC's output resolution so it matches a resolution supported by the TV. |
| The video is OK but there is no audio. | If you are using an HDMI connection, check the audio output setting on your PC. If you are using a DVI to HDMI cable, a separate audio cable is required. |

Networking

| There is something wrong with the TV. | Try this! |
|--|---|
| The wireless network connection failed. | Make sure the TV is connected to a wireless IP router. |
| The Software Update over the network has failed. | Check the network connection status. If the TV is not connected to a network, connect to a network. The upgrade will not proceed if you already have the latest software version. |

Miscellaneous

| There is something wrong with the TV. | Try this! |
|---|--|
| The TV is hot. | Watching TV for an extended period of time causes the panel to generate heat. The heat from the panel is dissipated through internal vents running along the top part of the TV. The bottom portion, however, may feel hot to the touch after extended use. Children watching TV need constant adult supervision to prevent them from touching the TV. This heat, however, is not a defect and does not affect the TV's functionality. |
| The picture won't display in full screen. | HD channels will have black bars on either side of the screen when displaying upscaled SD (4:3) content. Black bars will appear at the top and bottom of the screen when you watch movies that have aspect ratios different from your TV. Adjust the picture size options on your external device or set the TV to full screen. |
| The "Mode Not Supported" message appears. | Check the supported resolutions of the TV and adjust the external device's output resolution accordingly. |
| The Captions item in the TV menu is grayed out. | You cannot select the Caption menu if you have selected a source connected to the TV via HDMI or Component. The external device's caption function must also be activated. |
| The TV smells of plastic. | This smell is normal and will dissipate over time. |
| The TV's Signal Information option is not activated in the Self Diagnosis . | Verify that the current channel is a digital channel. Signal Information is only available with digital channels. |
| The TV is tilted to the side. | Remove the base stand from the TV and reassemble it. |
| Broadcasting is grayed out. | The Broadcasting menu is only available when Source is set to TV . The Broadcasting menu cannot be accessed while watching TV using a cable box or satellite receiver. |

| There is something wrong with the TV. | Try this! |
|--|---|
| The settings are lost after 30 minutes or every time the TV is turned off. | If Use Mode is set to Store Demo , the TV's audio and video settings are automatically reset every 30 minutes. Change Use Mode (Support > Use Mode) to Home Use . |
| There is an intermittent loss of audio or video. | Check the cable connections and reconnect them. Loss of audio or video can be caused by using overly rigid or thick cables. Make sure the cables are flexible enough for long term use. If you are mounting the TV to a wall, we recommend using cables with 90-degree connectors. |
| There are small particles on the TV's bezel. | This is part of the product's design and is not a defect. |
| The PIP menu is not available. | PIP functionality is only available when you are using an HDMI or Component source. |
| A POP (TV's internal banner ad) appears on the screen. | Change Use Mode (Support > Use Mode) to Home Use . |
| The TV is making a popping noise. | The expansion and contraction of the TV's outer casing may cause a popping noise. This does not indicate a product malfunction. The TV is safe to use. |
| The TV is making a humming noise. | Your TV utilizes high-speed switching circuits and high levels of electrical current, and depending on the brightness level being used may seem slightly noisier than a conventional TV. Your TV has undergone strict quality control procedures that meet our demanding performance and reliability requirements. Some noise coming from the TV is considered normal and is not an acceptable cause for an exchange or refund. |
| Image Retention (Burn In) Issue | This issue affects PDP TVs only. Watching TV for an extended period of time or using the 4:3 screen ratio only may result in burn-ins. PDP TVs are equipped with Pixel Shift screen burn reduction technology. Pixel Shift technology reduces screen burn-ins in PDP TVs. It does this by moving the picture slightly vertically or horizontally. Use Screen Burn Protection (System > Screen Burn Protection) to prevent screen burn-ins. |

Anynet+ (HDMI-CEC)

| There is something wrong with the TV. | Try this! |
|---|--|
| Anynet+ does not work. | <p>Check if the device is an Anynet+ device. The Anynet+ system supports Anynet+ devices only.</p> <p>Only one external device may be connected to Receiver.</p> <p>Check if the power cord of the Anynet+ device is properly connected.</p> <p>Check the cable connections of the Anynet+ device.</p> <p>Navigate to the System menu and verify that Anynet+ (HDMI-CEC) is set to On.</p> <p>Check whether the TV remote control is in TV mode.</p> <p>Check whether the remote control is Anynet+ compatible.</p> <p>Anynet+ may not function under certain circumstances. (Searching channels, operating Smart Hub or Setup, etc.)</p> <p>If you have disconnected and then reconnected the HDMI cable, scan for devices again or turn your TV off and on.</p> |
| I want to start Anynet+. | <p>Check if the Anynet+ device is properly connected to the TV and then navigate to the System menu to see if Anynet+ (HDMI-CEC) is set to On.</p> <p>After checking, press TOOLS button, select Anynet+ (HDMI-CEC) and then choose a device.</p> |
| I want to exit Anynet+. | <p>Select View TV from the Anynet+ menu.</p> <p>Select a non-Anynet+ device from Source.</p> |
| The message "Connecting to Anynet+ device..." or "Disconnecting from Anynet+ device" appears on the screen. | <p>You cannot use the remote control when you are configuring Anynet+ or switching to a viewing mode. Use the remote control after the TV has completed the Anynet+ configuration or has switched to a viewing mode.</p> |
| The Anynet+ device won't play. | <p>You cannot use the play function when Setup is progress.</p> |
| The connected device is not displayed. | <p>Check whether the device supports Anynet+.</p> <p>Check whether the HDMI cable is properly connected.</p> <p>Navigate to the System menu and verify that Anynet+ (HDMI-CEC) is set to On.</p> <p>Scan for Anynet+ devices again.</p> <p>Anynet+ devices must be connected to the TV using an HDMI cable. Make sure the device is connected to your TV with an HDMI cable. Some HDMI cables may not support Anynet+.</p> <p>If the connection is terminated because there has been a power failure or the HDMI cable has been disconnected, please scan for the device again.</p> |
| The TV audio is not being played through the receiver. | <p>Connect an optical cable to the TV and the receiver.</p> <p>ARC enables digital sound to be output via the HDMI (ARC) port.</p> <p>However, ARC is only available when the TV is connected to an audio receiver that supports ARC.</p> |

Apps

| There is something wrong with the TV. | Try this! |
|--|---|
| Some application content only appears in English. How can I change the language? | The application content language may be different from the user interface language. The ability to change the language depends on the service provider. |
| Some application services do not work. | Check with the service provider. Refer to the help section on the application service provider's website. |

Photos, Videos & Music

| There is something wrong with the TV. | Try this! |
|---------------------------------------|---|
| Some files can't be played back. | This problem may occur with high-bitrate files. Most files can be played back, but you might experience problems with high-bitrate files. |

Reset the Personal Info and TV settings

| Reset Type | Navigation | Description |
|-------------------|--|--|
| TV settings Reset | Screen Menu > Support > Self Diagnosis > Reset | Reset all the settings (Picture , Sound , Broadcasting and Smart Hub , etc), excluding the network settings, to factory defaults. |
| Smart Hub Reset | Screen Menu > Smart Features > Smart Hub Reset | Reset all saved information relating to Samsung accounts and linked service accounts, as well as Smart Hub service agreements and applications. |

Web Browser

1. Select **Web Browser**. The browsing screen may differ from the one on your computer.
2. The web browser is not compatible with Java applications.
3. You cannot download files. If you attempt to download a file, you will receive an error message instead.
4. The web browser may not be able to access certain websites.
5. Playing Flash videos may be restricted.
6. E-commerce for online purchases is not supported.
7. With websites that have scrollable windows, scrolling through such a window can result in corrupted characters.
8. ActiveX is not supported.
9. Certain options are not accessible in Link Browsing mode. (Switch to Pointer Browsing to activate this.)
10. Only a limited number of fonts are supported. Certain symbols and characters may not be displayed properly.
11. The response to remote commands and the resulting on-screen display may be delayed while a webpage is loading.
12. Loading a webpage may be delayed or suspended completely with certain operating systems.
13. The copy and paste operations are not supported.
14. When composing an email or a simple message, certain functions such as the font size and color selection may not be available.
15. There is a limit to the number of bookmarks and the size of the log file that can be saved.
16. The number of windows that can be opened concurrently varies depending on the search conditions and the TV model.
17. The web browsing speed will vary depending on the network environment.

18. Playing embedded video automatically disables PIP. Video playback may not commence after PIP is disabled. In this case, you will have to reload the page.
19. The web browser supports .mp3 audio files only.
20. The web browser supports a specific file format for importing and exporting bookmarks. (Compatible Format: Netscape-bookmarkfile- 1)
21. The folder tree information is not included when importing and exporting bookmarks.
22. Exporting bookmarks to a USB device connected to the TV saves the bookmarks under a folder named "Samsung SmartTV Bookmark".
23. If **Clock (System > Time > Clock)** has not been enabled, the browsing history will not be saved.
24. The browsing history is saved in the order of latest to oldest, with the oldest entries being overwritten first.
25. Depending on the types of video/audio codecs supported, it might not be possible to play back certain video and audio files during Flash playback.
26. A sudden change in the picture brightness inside a video window may affect the brightness of the screen. This problem applies to PDP TVs only.
27. Video sources from PC-optimized streaming service providers may not play properly on our proprietary web browser.
28. Using the on-screen QWERTY keyboard automatically disables PIP. (Except when entering a URL.)