

# WOLF SEALED BURNER RANGETOP RISER KIT INSTALLATION INSTRUCTIONS

## Riser Kit Model Numbers:

### 30" Sealed Burner Rangetop Riser:

808520 - 5" Stainless Steel Riser Kit  
808521 - 10" Stainless Steel Riser Kit  
808522 - 20" Stainless Steel Riser  
with Shelf Kit

### 36" Sealed Burner Rangetop Riser:

808523 - 5" Stainless Steel Riser Kit  
808524 - 10" Stainless Steel Riser Kit  
808525 - 20" Stainless Steel Riser  
with Shelf Kit

### 48" Sealed Burner Rangetop Riser:

808526 - 5" Stainless Steel Riser Kit  
808527 - 10" Stainless Steel Riser Kit  
808528 - 20" Stainless Steel Riser  
with Shelf Kit

## Riser Kit Contents:

QTY	PART NO./DESCRIPTION
1	Center Support Bracket
1	Riser Front Panel
1	Riser Back Panel
2	Riser Supports
25	(730239) Finishing screws (#8 x 3/8" Modified Truss Screws)
4	(801099) 10-16 x 1/2" Screws
4	(802332) Shoulder Screws 20" Shelf only

**NOTE: Depending on which kit is being installed, some screws may not be used and may be discarded.**

## PROCEDURE

### Assembling Riser:

1. Lay front panel on work surface cosmetic side down. Remove protective covering from back side of riser front panel.
2. Attach side support legs inside of riser front panel, using supplied finishing screws (See Fig. 1 & 2).
3. Remove backing from double sided tape on center support bracket flanges (See Fig. 3).
4. Align center support bracket with alignment holes on bottom of front panel. Verify that center support bracket aligns vertically prior to adhering VHB tape to rear of front panel.

**NOTE: Proper alignment is important prior to securing tape. Firmly press tape to back side of front panel.**

5. Slide back panel inside of front panel mounting flanges (See Fig. 3). Align back panel mounting

holes with center support bracket mounting hole.

6. Continue installing finishing screws along center support bracket and front panel mounting flanges.

### Attaching Riser Assembly to Sealed Burner Rangetop:

#### ⚠ WARNING

**Be sure to disconnect power to sealed burner rangetop before installing riser assembly.**

1. Verify all packing material has been removed from riser assembly and all packaging residues has been cleaned from stainless steel surface.
2. Remove island trim from sealed burner rangetop by removing the top screw on each side panel.
3. Slide riser side support legs inside rangetop outer side panels until bottom of riser assembly is flush with side panel (See Fig. 4). Verify that center support legs align with mounting holes.
4. Attach riser support legs and center support to rangetop (See Fig. 5).

### 20" Riser Shelf Installation:

#### ⚠ WARNING

**Riser component parts may have sharp edges which could inflict serious personal injury. Use care when handling.**

1. Once riser assembly is installed onto rangetop, attach 4 (2 on each side) shoulder screws in front panel assembly.
2. Remove protective packaging material from shelf. Align keyhole slots on back side of shelf assembly with two shoulder screws on

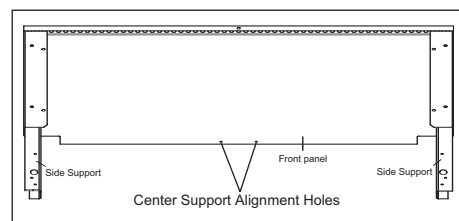


Figure 1

right side of front panel and two shoulder screws on left side of front panel assembly.

3. Slide shelf assembly into place and tighten shoulder screws if necessary (See Fig. 6).

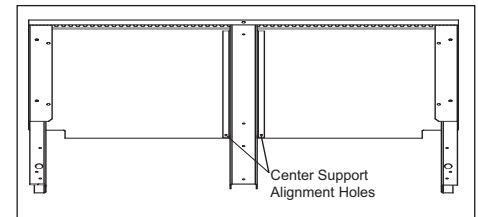


Figure 2

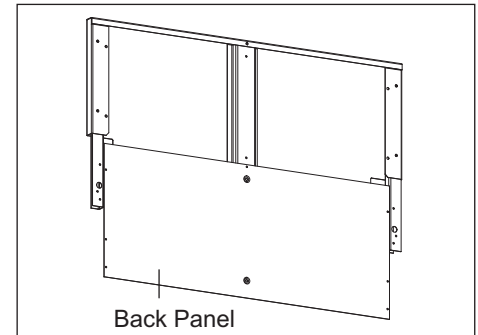


Figure 3

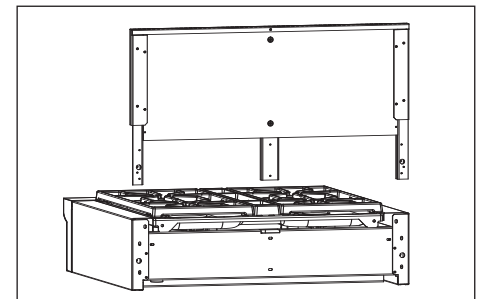


Figure 4

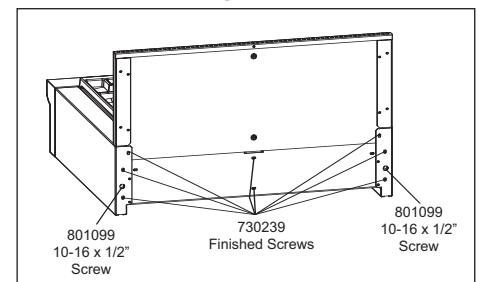


Figure 5

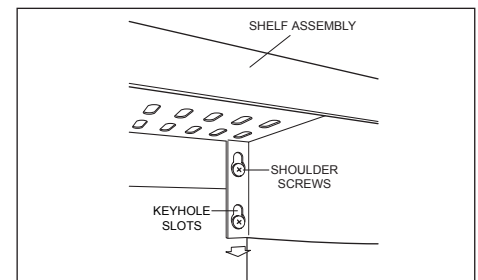


Figure 6