


RANGE HOOD MOUNTING BRACKETS

Installation Instructions

CONTENTS

- 1 - pair of mounting brackets (L & R)

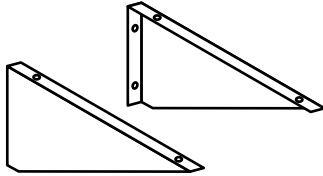

- 4 - #10-24 x 3/8" bolts




- 4 - washers




- 4 - #10-24 nuts




- 4 - #10 x 1 1/2" screws




- 4 - plastic anchors

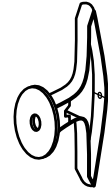


- 1 - plastic anchor setting key




INSTALLATION

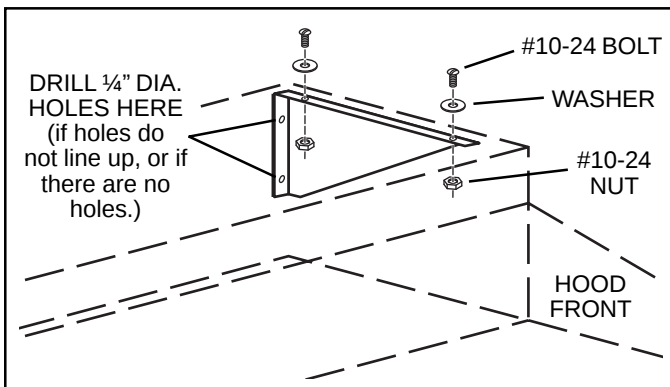


1. Fasten each bracket to inside, top of hood.
2. If the holes in the back of your hood do not line up with the holes in the brackets: Drill 1/4" diameter holes through the back of your hood, using the holes in the brackets as a guide.
3. Hold hood in place against the wall. *Note: For best capture of cooking impurities, your range hood should be mounted 18"-24" above the cooking surface.* Make sure hood is level, then mark the wall through the holes in the back of the hood.
4. Drill 1/8" diameter pilot holes into wall at marked locations. Use #10 x 1 1/2" screws to attach hood directly to wall framing.
5. For pilot holes with no wall framing behind: Enlarge holes in wall material to 5/16" and follow Steps 6 through 8.

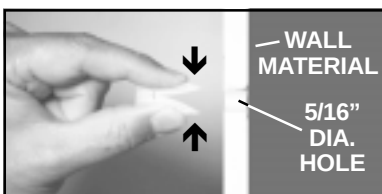

6. Fold anchor, insert anchor into hole, and tap anchor flush with wall.

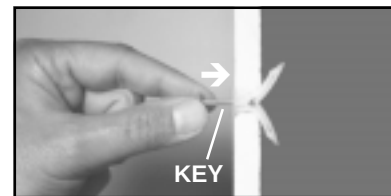

7. Push key into anchor to toggle anchor open behind wall. **Do not hammer key!**

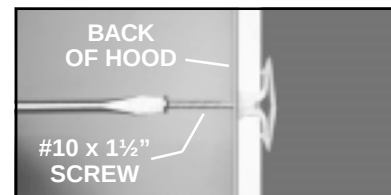

8. Hold hood in place against wall. Insert #10 x 1 1/2" screw and tighten until screw is flush with hood. **Do not overtighten!**

Note: If necessary, brackets may be installed upside-down on top of hood.

