
# Integrated Model 700TF(I) All Freezer

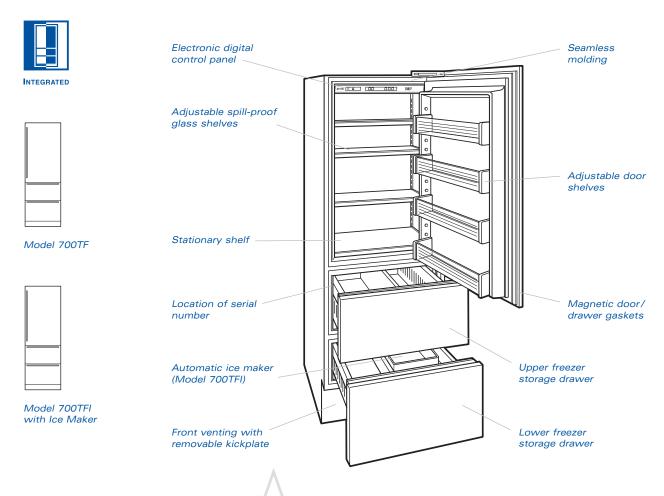

With the installation of a harness kit, these appliances are Star-K compliant to meet strict religious regulations in conjunction with specific instructions found on star-k.org. You may purchase this harness kit through your Sub-Zero dealer. To obtain local dealer information, visit the Locator section of our website, subzero.com.

► The Sub-Zero Model 700TF and 700TFl integrated design accepts custom wood or stainless steel door and drawer panels. Stainless steel panels and handles are available as sales accessories in three finishes—classic, platinum and carbon. rgonomically, this unit works—doors above the counter and drawers below counter level. The shallow depth enables you to view everything quickly and you can grab those items and be out of the unit quickly. The drawers have full extension and are a nice way to bring the items to you and not have to bend down and look inside for your package.

As with the two drawer freezer, this tall cousin can be ordered with or without the automatic ice maker.


The door swing must be specified when ordering this unit.


### **FEATURES**

- ▶ Tall freezer unit with upper cabinet freezer and freezer storage drawers
- Model 700TFI has automatic ice maker
- Integrated design for "point-of-use" refrigeration anywhere in the home
- ▶ Refrigeration system ensures the best food storage and energy efficiency
- Electronic digital controls are up front and easy to use
- Flat to the ceiling bright lighting in cabinet and drawers
- Adjustable, spill-proof glass shelves

- ▶ Door alarm will let you know with an audible beeping if a door or drawer is left open
- Top storage drawer has a removable divider
- The exclusive dual-action hinge has a built-in 90° door stop
- Meets strict Department of Energy requirements
- UL approved for US and Canada
- Two, five and twelve year residential warranty - exclusions apply; warranty information can be found on our website, subzero.com

### **OVERALL DIMENSIONS**

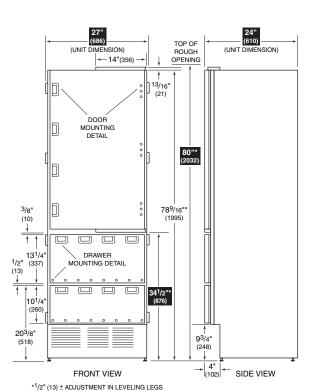

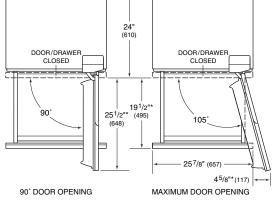

TOP VIEW \*DOOR/DRAWER PANEL THICKNESS NOT INCLUDED - DIMENSION WILL VARY WITH INSTALLATION

Dimensions may vary by  $\pm 1/8$ " (3).

INTEGRATED



### MODEL OPTIONS

Tall Freezer Unit	700TF
Tall Freezer Unit	
with Automatic Ice Maker	700TFI

# PANEL OPTIONS

Integrated (custom panels)	
Classic Stainless Steel Finish	/S
Platinum Stainless Steel Finish	/P
Carbon Stainless Steel Finish	/B

Stainless steel door and drawer front panels are ordered and shipped as sales accessories and include tubular handles.

### ACCESSORIES

- Door and drawer front panels with tubular handles in classic, platinum and carbon stainless steel
- ► Tubular handles in classic, platinum and carbon stainless steel and polished chrome
- ▶ Dual installation heater kit


Accessories are available through your Sub-Zero dealer. To obtain local dealer information, visit the Locator section of our website, subzero.com.

### **SPECIFICATIONS**

SPECIFICATI	ONS	•
Model 700TF(I)		Upper Cabinet Freezer with Freezer Drawers
Overall Width		27" (686)
Overall Height		80" (2032)
Overall Depth		24" (610)
Freezer Capacity		15.3 cu ft (433 L)
Minimum Height	(levelers in)	79 <sup>1</sup> / <sub>2</sub> " (2019)
Door Clearance		25 <sup>1</sup> /2" (648)
Drawer Clearance	Э	19 <sup>1</sup> /2" (495)
Electrical Require	ments 115 V AC	, 60 Hz, 15 amp circuit
Plumbing Require	ements	<sup>1</sup> /4" copper line
Water Supply		20-100 psi
Annual Energy U (based on 9.06 c	sage ents per kilowatt ho	652 kWh / \$60 our)
Shipping Weight		360 lbs (163 kg)
Special Note		panels and handles are stainless steel finishes

Specifications are subject to change without notice.

### INSTALLATION SPECIFICATIONS

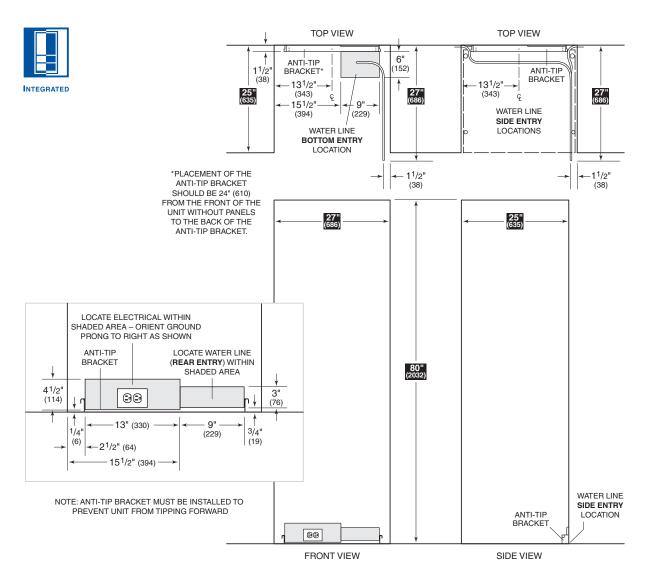

DIMENSIONS	
Finished Rough Opening Width	27" (686)
Finished Rough Opening Height	80" (2032)
Finished Rough Opening Depth	25" (635)*
Location of Electrical	Within shaded area
Location of Plumbing (Model 700TFI only)	Within shaded area

<sup>\*</sup>The depth of the Model 700TF(I) is 24" (610) from the front of the unit to its back. Your design may necessitate moving the unit back, or cabinets forward to achieve a flush fit. This will require a minimum rough opening depth of 25" (635).

See Installation Instructions shipped with unit for detailed specifications.



#### **INSTALLATION NOTES**

▶ Refer to the illustrations and specifications for overall dimensions, finished rough opening dimensions and installation specifics.

IMPORTANT NOTE: The depth of Model 700TF(I) is 24" (610) from the front of the unit to its back. Your design may necessitate moving the unit back, or cabinets forward to achieve a flush fit. This will require a minimum rough opening depth of 25" (635). Refer to the installation illustration on page 4.

- ► The anti-tip bracket must be installed to prevent the unit from tipping forward.
- ▶ Integrated units are compatible with virtually any style of cabinetry. They can be used with framed as well as frameless cabinets.
- Refer to the full-scale illustrations at the end of this section for specifics on panels and door openings.
- ▶ Door panels can grow beyond 45³/8"(1153) and exceed the 80" (2032) height to accommodate any size of door as long as you stay below the recommended door panel weight limit of 40 lbs (18 kg). Door panels must be a minimum of <sup>5</sup>/8" (16) thick.
- ► The weight of each drawer panel cannot exceed 12 lbs (5 kg). Drawer panels must be a minimum of <sup>5</sup>/8" (16) thick.
- ▶ For the bottom drawer, the maximum panel height is 16<sup>11</sup>/<sub>16</sub>" (424). You must keep a minimum space of 4" (102) clear below the bottom edge of the lower drawer panel, so the unit can be properly vented. Any decorative base molding must be removable for possible servicing and cleaning of the condenser.
- ▶ We recommend using D-style handles, which should be located on the opposite side from the hinge, centered on the cabinet door and the top, center area of the drawer panel.
- ► Two Integrated units may be installed next to one another. Refer to page 11 for additional information.
- ▶ For Integrated models with an automatic ice maker, rough in the water supply line. Connect a ¹/₄" OD copper line to the house supply, being sure to use an easily accessible shut-off valve between the supply and the unit. This shut-off valve should not be installed behind the unit.

- ▶ Do not use self-piercing valves. A saddle valve kit (4200880) is available from your Sub-Zero dealer. To obtain local dealer information, visit the Locator section of our website, subzero.com.
- ▶ A line filter is required when water conditions have a high sediment content. The ice maker operates on water pressure of 20 psi (1.4 bar) to 100 psi (6.9 bar). In some cases a reverse osmosis water filter system may not be able to maintain the minimum water pressure consistently.
- ▶ When routing the water through the side walls, you must place the water line within ¹/2" (13) of the floor and as close as possible to the back wall. The line must be routed around the anti-tip bracket so it clears the bracket and leveling feet of the unit. Refer to the installation illustration on page 4 for placement of the water line.
- ▶ Do not route water supply line in front of the compressor tray. The tray must be slid forward for service.
- ▶ Regardless of the routing, allow for 27" (686) of excess copper tubing to remain outside the wall or floor for easy connection to the unit, as shown in the installation illustration on page 4.
- ▶ A 115 volt, 60Hz, 15 amp circuit breaker and electrical supply are required. A separate circuit, servicing only this appliance is necessary.
- ▶ All Integrated models are equipped with a power supply cord with a 3-prong grounding plug, which must be plugged into a mating 3-prong grounding type wall receptacle. The electrical outlet must be placed so the grounding prong is to the right of the thinner blades. The outlet must be flush with the back wall. Locate electrical within the shaded area shown in the installation illustration on page 4.
- ▶ Do not use an extension cord or two prong adapter. Electrical ground is required.
- ▶ You must follow all National Electrical Code regulations. In addition, be aware of local codes and ordinances when installing your service.
- ▶ The Integrated Refrigeration Installation Instructions packed with the appliance will give you step-by-step procedures for making sure the unit is installed properly.





### **A** CAUTION

As the reveal between cabinets and the Integrated unit decreases, the potential exists for severe finger pinching or crushing if a hand or fingers are placed in the opening when the door is closing.

#### CABINETRY APPLICATIONS

Integrated refrigeration is compatible with virtually any style and look of cabinetry. The models can be used with framed as well as frameless cabinets. Because of the precise application and the look you may want to achieve, there are important questions you need to answer before ordering panels for the doors and/or drawers. As you look at styles of cabinets, keep some important facts in mind:

**IMPORTANT NOTE:** The depth of each Integrated unit is 24" (610) from the front of the unit to its back. You **must** allow for the thickness of the panel you are applying when planning for the finished rough opening depth if you want the front panel to be flush with surrounding cabinetry. You may have to move the unit back into drywall or bring the cabinets forward to achieve a flush fit.

Weight Limitations - The door panel cannot exceed 40 lbs (18 kg) and each drawer panel must not exceed 12 lbs (5 kg).

**Panel Thickness** – Door and drawer panels must be a minimum of  $\frac{5}{8}$ " (16) thick.

The height of the door panel can grow beyond 45<sup>3</sup>/s" (1153) and exceed the 80" (2032) overall height as long as you stay below the recommended door panel weight limit.


The toe kick clearance can vary with the height of the lower drawer panel; the maximum panel height is 16 <sup>11</sup>/<sub>16</sub>" (424). You must keep a minimum space of 4" (102) clear below the bottom edge of the lower drawer panel so the unit can be properly vented.

**IMPORTANT NOTE:** The inside edges of the rough opening, as well as the sides and a portion of the backside of the decorative panels will need to be finished, as they will be exposed when the door or drawers are open.


We recommend using D-style handles. For the cabinet door, handles must be located near the edge of the panel opposite the hinge, centered top to bottom. Locate handles in the top center area of the drawer panels.




### FRAMED CABINETRY

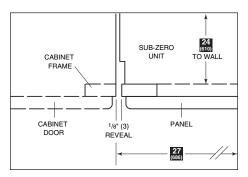

Traditional Frame - full overlay (top view).

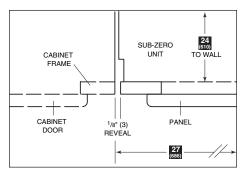

Traditional Frame – standard overlay (top view).

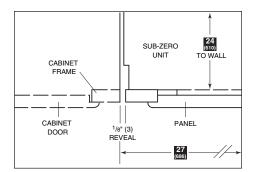

Traditional Frame – 3/8" (10) offset (top view).

### FRAMED CABINETRY APPLICATIONS


Framed cabinetry applications present you with different questions to address. The illustrations on this page show common applications of framed cabinetry. These are not meant to be the only alternatives, but are suggestions from designers around the country. Also refer to the full-scale illustrations at the end of this section for specifics on door openings.

**IMPORTANT NOTE:** The depth of each Integrated unit is 24" (610) from the front of the unit to its back. You **must** allow for the thickness of the panel you are applying when planning for the finished rough opening depth if you want the front panel to be flush with surrounding cabinetry. You may have to move the unit back into drywall or bring the cabinets forward to achieve a flush fit. Refer to the illustrations.

Illustrations on the following pages give dimensions for an Integrated 27" (686) wide tall unit installed within a framed cabinetry beaded inset application. Review the illustrations, giving particular attention to the overall panel specifications. Also refer to the full-scale illustrations at the end of this section for specifics on door openings.




### FRAMED CABINETRY - BEADED INSET APPLICATION

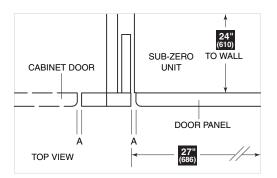

The illustration shows an Integrated 27" (686) wide tall unit installed within a framed cabinetry beaded inset application.

**IMPORTANT NOTE:** Dimensions are based on a <sup>1</sup>/<sub>8</sub>" (3) reveal. A reveal of up to <sup>1</sup>/<sub>4</sub>" (6) is possible, but panel dimensions need to be adjusted accordingly.

- A) ALL REVEALS ARE 1/8" (3)
- B) DRAWER RAILS ARE ATTACHED TO DRAWER FRONTS
- C) BOTTOM RAIL MUST BE REMOVABLE

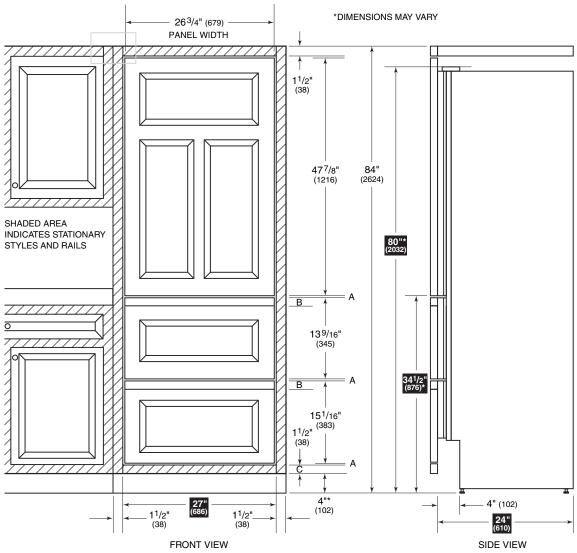

Installation of an Integrated 27" (686) wide tall unit within framed cabinetry.

<sup>\*</sup>Dimensions may vary.




### FRAMELESS CABINETRY ▼

### FRAMELESS CABINETRY APPLICATIONS

The illustration below shows a hypothetical installation of an Integrated 27" (686) wide tall unit within frameless cabinetry. Review the illustration, giving particular attention to the overall panel specifications. Also refer to the full-scale illustrations at the end of this section for specifics on door openings.

**IMPORTANT NOTE:** Dimensions are based on a <sup>1</sup>/<sub>8</sub>" (3) reveal. A reveal of up to <sup>1</sup>/<sub>4</sub>" (6) is possible, but panel dimensions need to be adjusted accordingly.

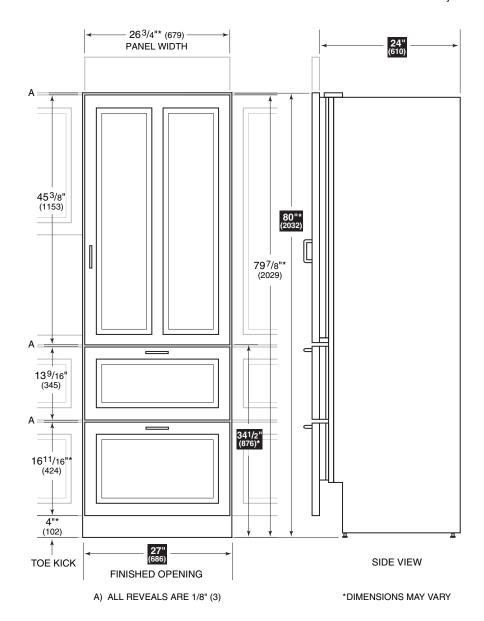

Installation of an Integrated 27" (686) wide tall unit within frameless cabinetry.

\*Dimensions may vary.

Dimensions in parentheses are in millimeters unless otherwise specified.


### PANEL CONSIDERATIONS

The illustrations below provide panel width dimensions for installation of a 27" (686) wide tall unit and for installing two 27" (686) wide tall units side by side.

**IMPORTANT NOTE:** Dimensions are based on a <sup>1</sup>/<sub>8</sub>" (3) reveal. A reveal of up to <sup>1</sup>/<sub>4</sub>" (6) is possible, but panel dimensions need to be adjusted accordingly.


### **A** CAUTION

When  $^3/_4$ " (19) or thicker panels are used and a reveal less than  $^1/_4$ " (6) is maintained, the door panels may cause damage to the Sub-Zero unit when the door is open at the maximum  $105^\circ$  door stop. You should use the built-in  $90^\circ$  door stop to prevent damage.

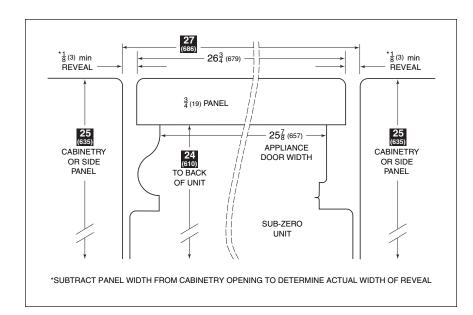


Panel width dimensions for installation of a 27" (686) wide tall unit.


Panel width dimensions for installation of two 27" (686) wide tall units side by side.

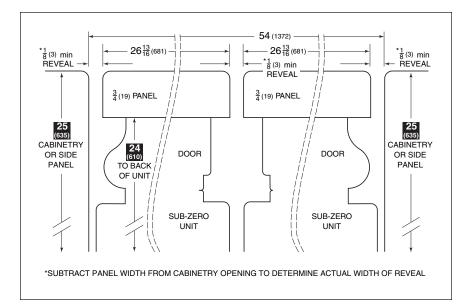




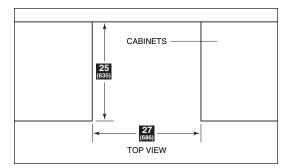


Installation without side panels.

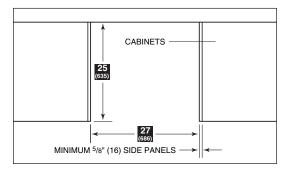

Installation with side panels.

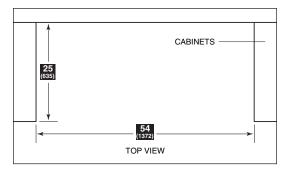

Installation of two units side by side.

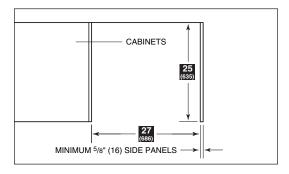

Installation at end of run.



### INSTALLATION OPTIONS

The illustrations on this page show some typical installations and their dimension considerations. The depth dimension in the illustrations may vary depending on cabinet styles, treatment of countertops or other design options.

**IMPORTANT NOTE:** The depth of each Integrated unit is 24" (610) from the front of the unit to its back. Your design may necessitate moving the unit back, or cabinets forward to achieve a flush fit. This will require a minimum rough opening depth of 25" (635). Refer to the illustrations.

### **DUAL INSTALLATIONS**

If two or more Integrated models are installed side by side where there is 2" (51) or less of space between the units, a heater kit is recommended—TTDUAL for two tall units installed side by side and BBDUAL for a tall unit and a drawer unit installed side by side. These optional components are available through your Sub-Zero dealer. To obtain local dealer information, visit the Locator section of our website, subzero.com.



### DOOR PANEL HEIGHT


The height of the door panel can grow beyond  $45^3/8$ " (1153) and exceed the 80" (2032) overall height, as long as you stay below the recommended door panel weight limit of 40 lbs (18 kg).

The illustration below shows how the panel may grow and what you need to consider doing to finish the area in back of the door panel.

**IMPORTANT NOTE:** The valance you use to finish the area behind the door panel must stay behind the front plane of the finished molding as shown in the illustration.

**IMPORTANT NOTE:** The depth of each Integrated unit is 24" (610) from the front of the unit to its back. Your design may necessitate moving the unit back, or cabinets forward to achieve a flush fit. This will require a minimum rough opening depth of 25" (635). Refer to the illustration.

### UPPER VALENCE DETAIL ▼

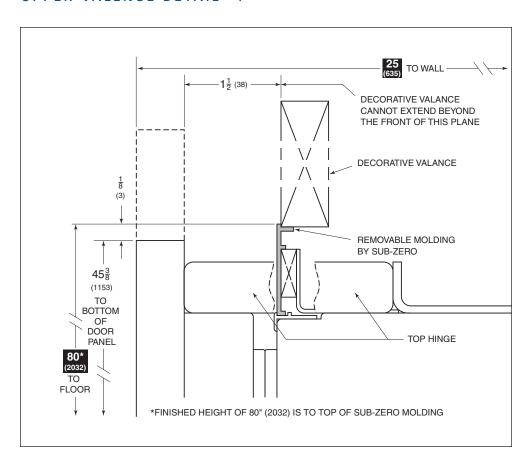



### TOE KICK CLEARANCE


The toe kick clearance can vary with the height of the lower drawer panel; the maximum panel height is  $16^{11}/16$ " (424).

**IMPORTANT NOTE:** You must keep a minimum space of 4" (102) clear below the bottom edge of the lower drawer panel so the unit can be properly vented. In addition, any decorative base molding must be removable for possible servicing and cleaning of the condenser.

The illustration below shows the area below the lower drawer where the operating mechanical equipment of the Integrated unit is housed.

**IMPORTANT NOTE:** The depth of each Integrated unit is 24" (610) from the front of the unit to its back. Your design may necessitate moving the unit back, or cabinets forward to achieve a flush fit. This will require a minimum rough opening depth of 25" (635). Refer to the illustration.


### TOE KICK AREA DETAIL .

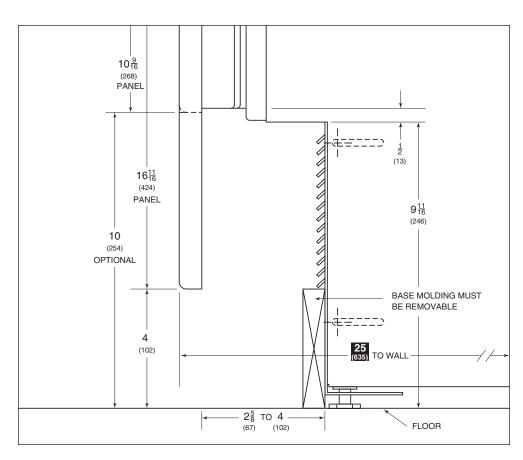




### FRAMED CABINETRY

**IMPORTANT NOTE:** The depth of each Integrated unit is 24" (610) from the front of the unit to its back. Your design may necessitate moving the unit back, or cabinets forward to achieve a flush fit.

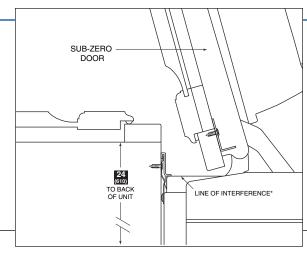

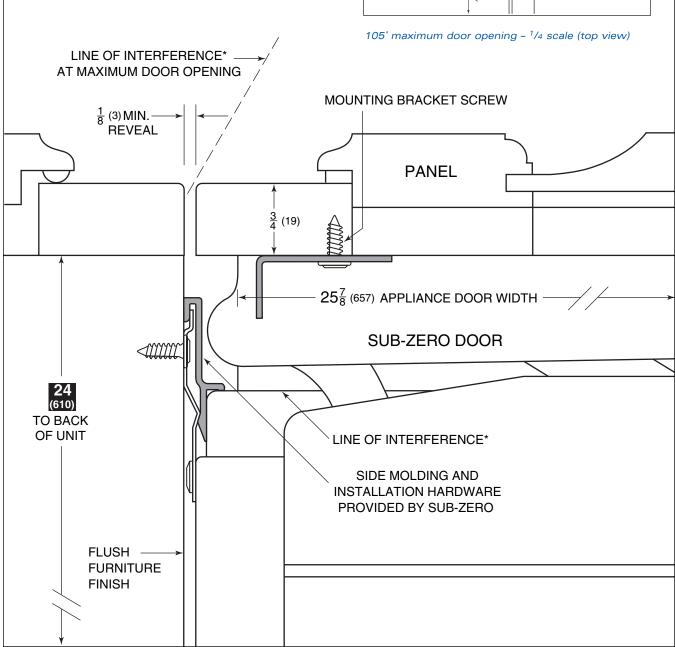


Door closed - full scale (top view)


\*If the panel is thicker than <sup>3</sup>/<sub>4</sub>" (19), it is recommended that you utilize the built-in 90° door stop to prevent damage to the panel and face frame.



### FRAMELESS CABINETRY

**IMPORTANT NOTE:** The depth of each Integrated unit is 24" (610) from the front of the unit to its back. Your design may necessitate moving the unit back, or cabinets forward to achieve a flush fit.

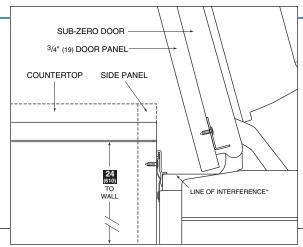

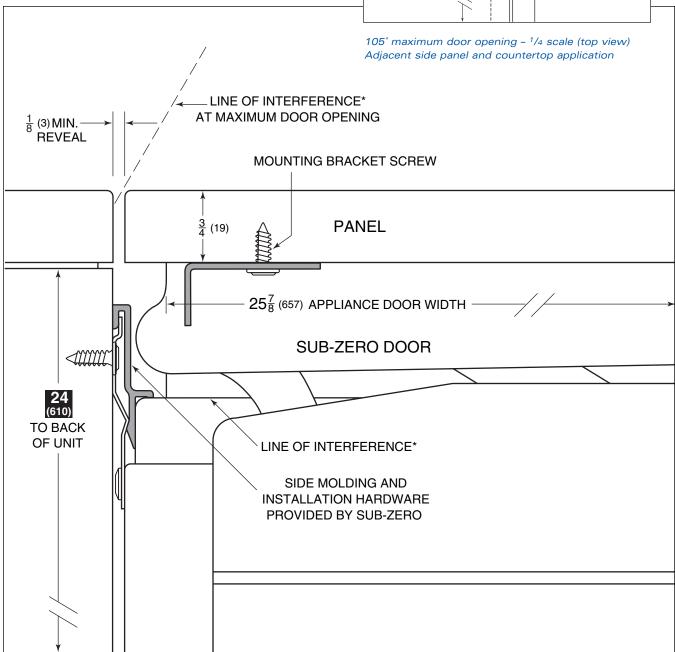

Door closed - full scale (top view)

\*If the panel is thicker than 3/4" (19), it is recommended that you utilize the built-in 90° door stop to prevent damage to the panel and face frame.