

FULGOR

MILANO

EXCLUSIVE METAL KIT



BEZEL REPLACEMENT VIDEO




BADGE COVER REPLACEMENT VIDEO



KNOB LAYOUT MODEL BY MODEL



SOFIA METAL COLLECTION PARTS

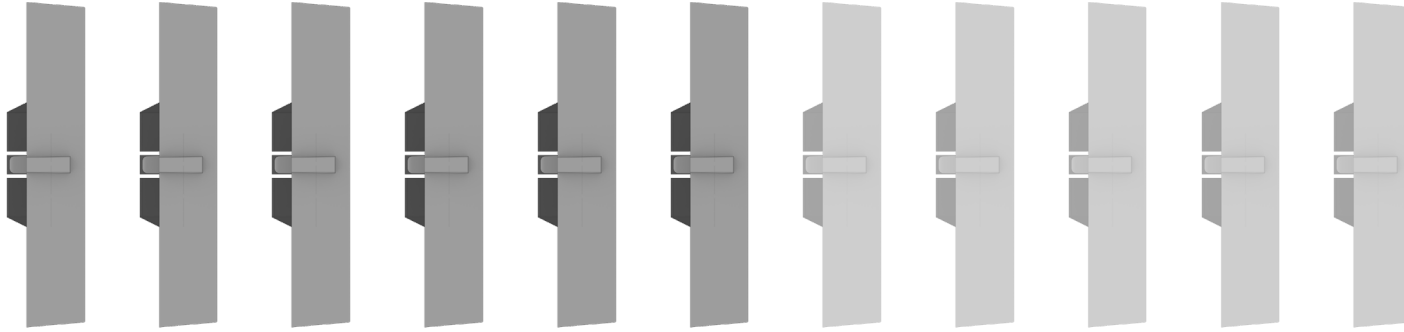

1


— NUMBER OF BEZELS REQUIRED VARY —

1 BADGE COVER

2 ALIGNMENT TOOL

3 ALLEN WRENCH

4 LONGER COVER SCREWS X 2

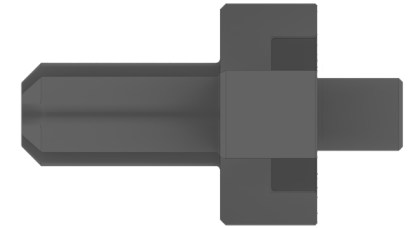

2




3



4


DECORATIVE BEZEL REPLACEMENT

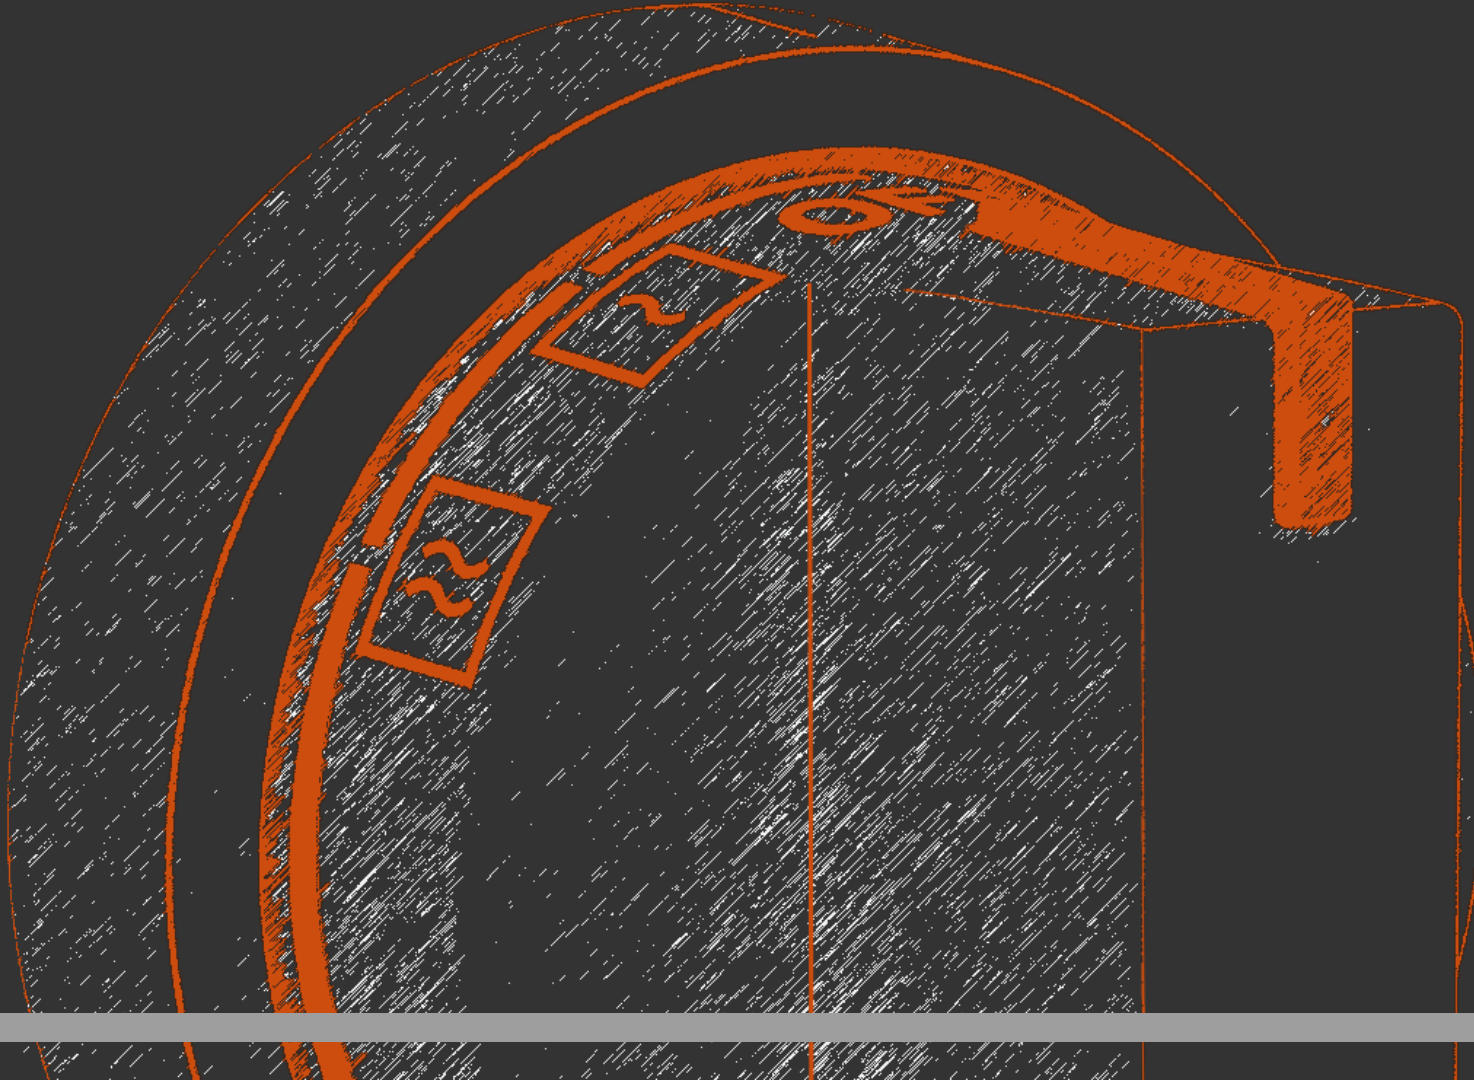

 KEEP CHILDREN AWAY DURING ASSEMBLY KEEP CHILDREN AWAY FROM SMALL COMPONENTS (SCREWS) TURN OFF THE GAS OR ELECTRICITY BEFORE STARTING REMOVE KNOBS AND REPLACE BEZELS ONE AT A TIME SUGGEST REPLACING BEZELS FROM LEFT TO RIGHT PHILLIPS SCREWDRIVER REQUIRED


2

REMOVE KNOB BY PULLING STRAIGHT FORWARD

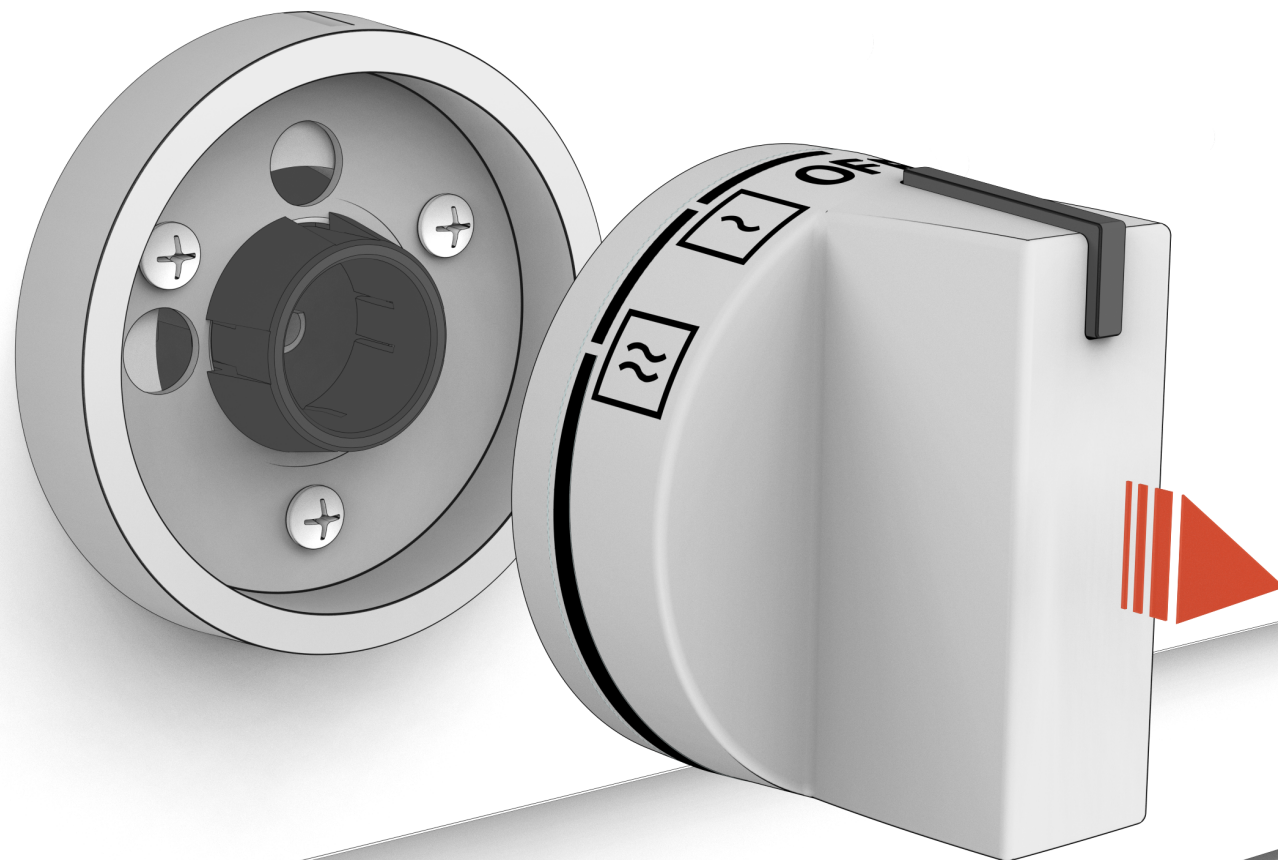

3


REMOVE THE THREE SCREWS

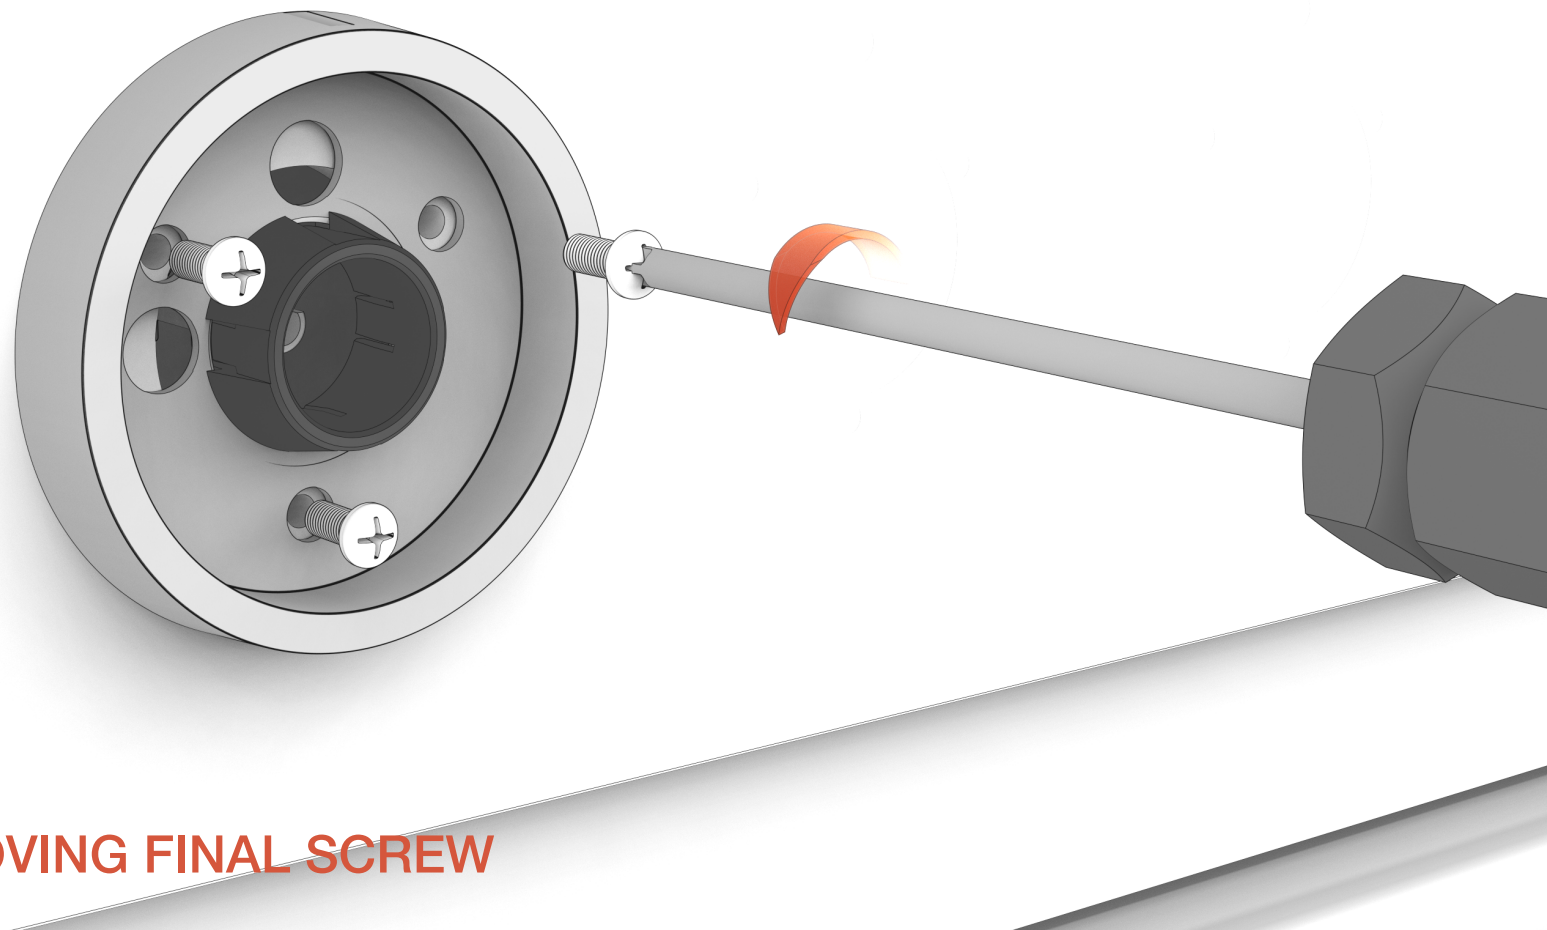

HOLD BEZEL WHEN REMOVING FINAL SCREW


4

REMOVE EXISTING BEZEL

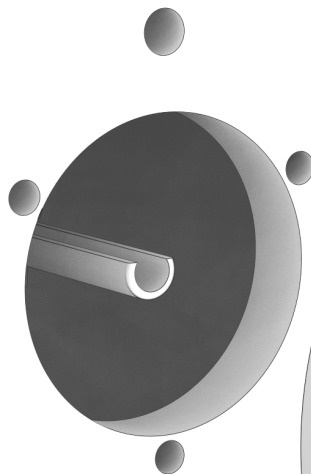

5



SPECIAL FLANGE CORRECT POSITION

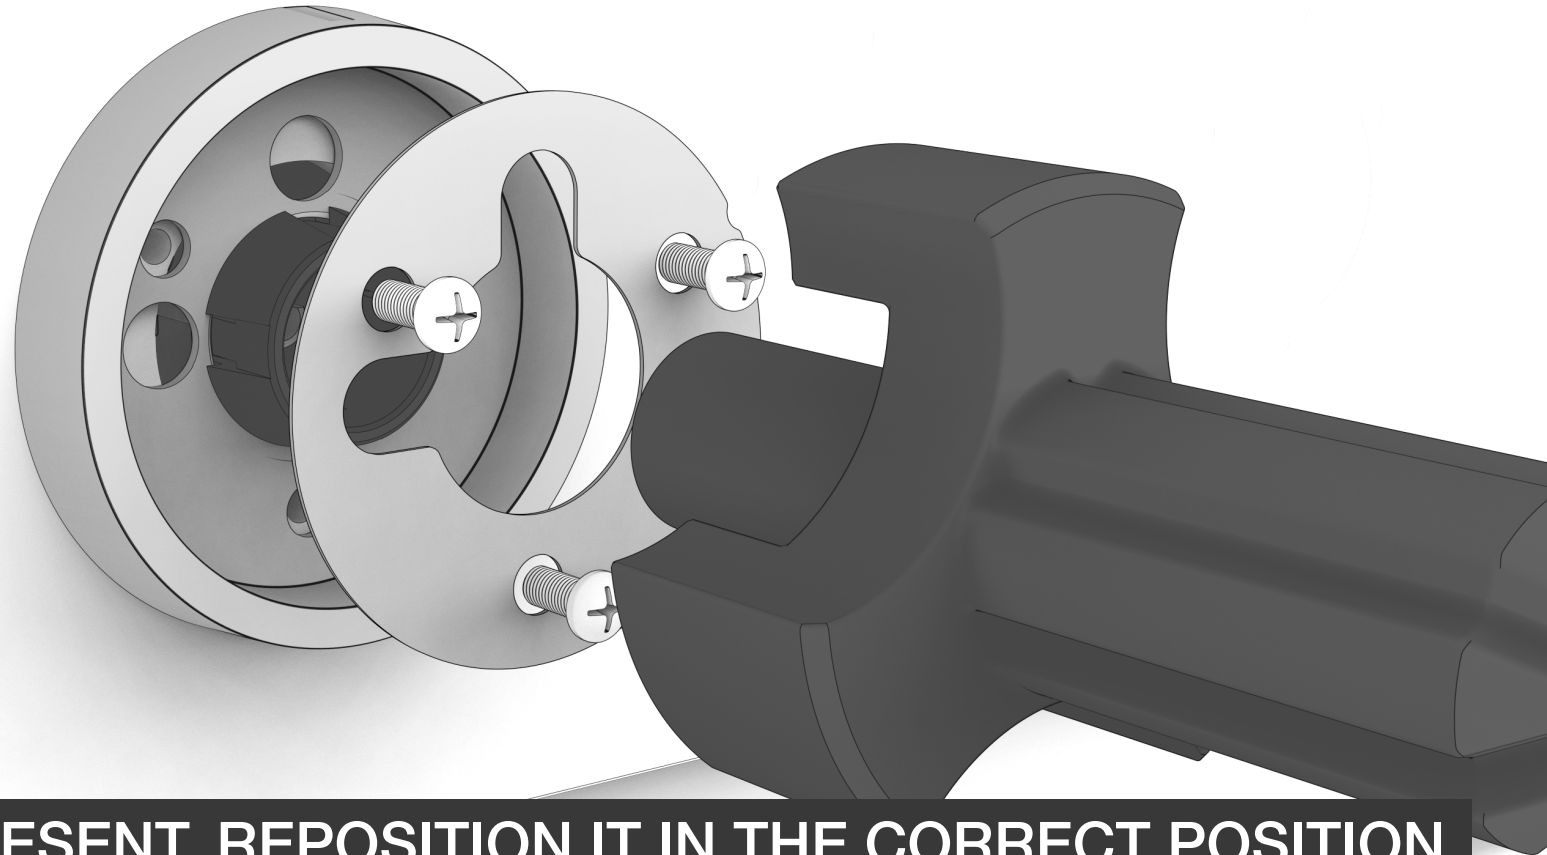

IF THE FLANGE IS PRESENT, REPOSITION IT IN THE CORRECT POSITION


6

INSERT THE ALIGNMENT TOOL INTO NEW BEZEL

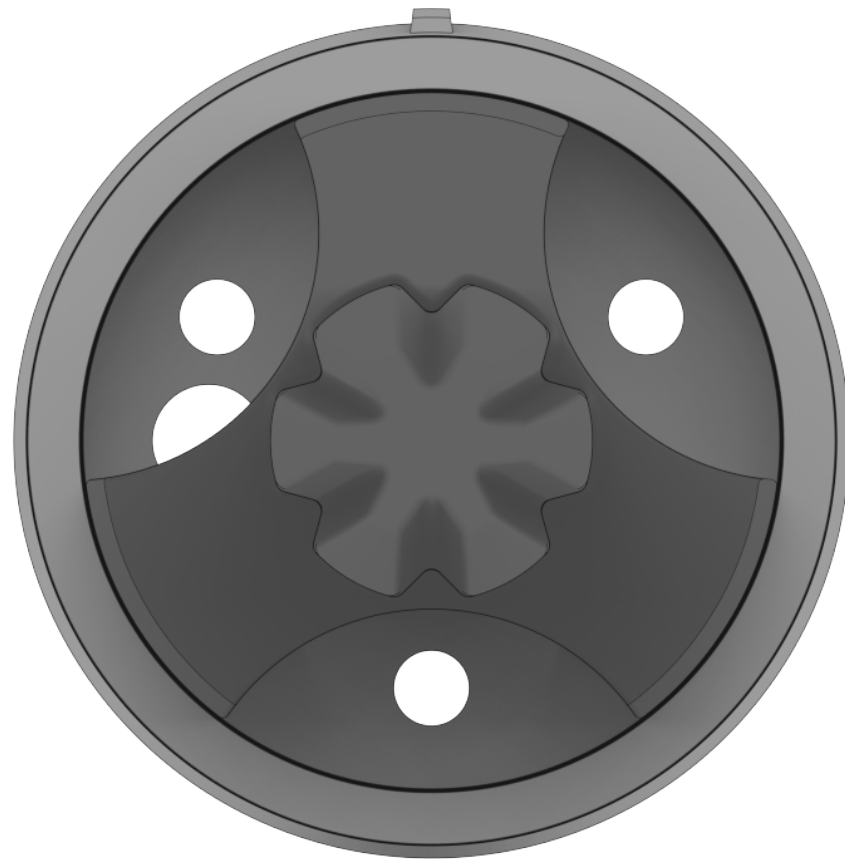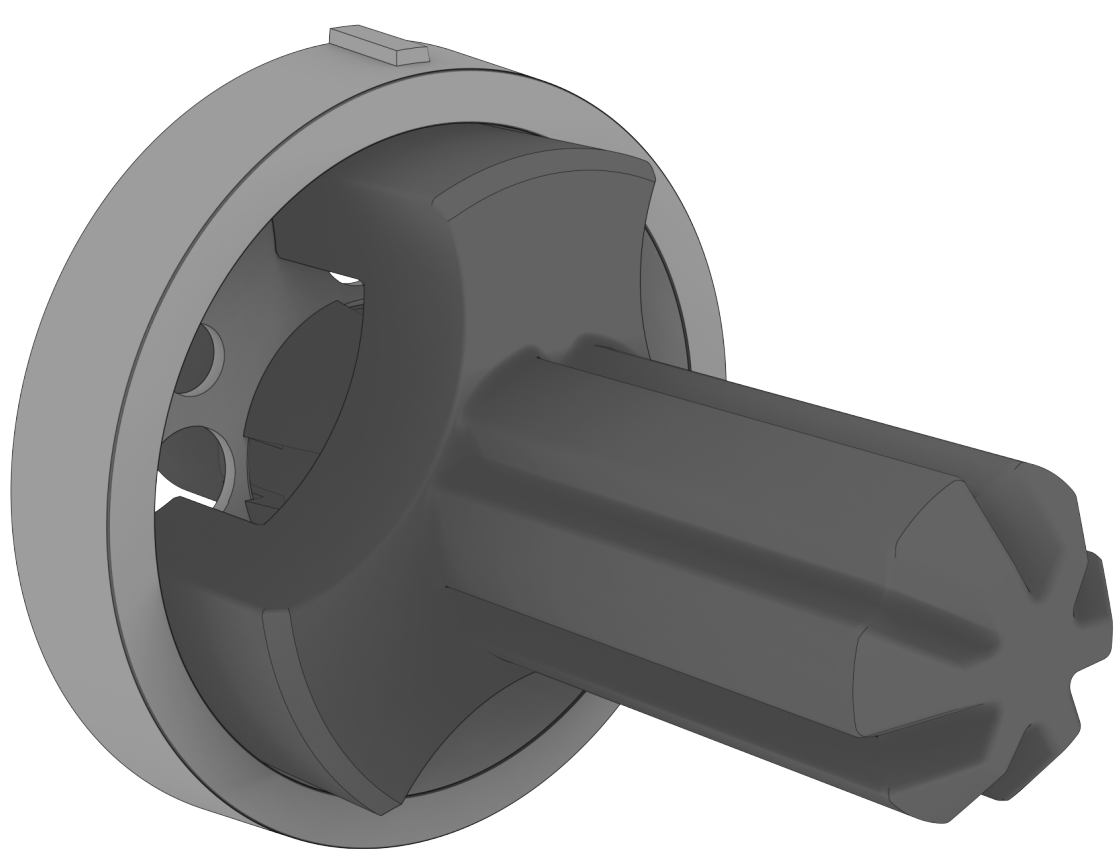

7


CENTER BEZEL IN CORRECT POSITION AND REINSTALL SCREWS

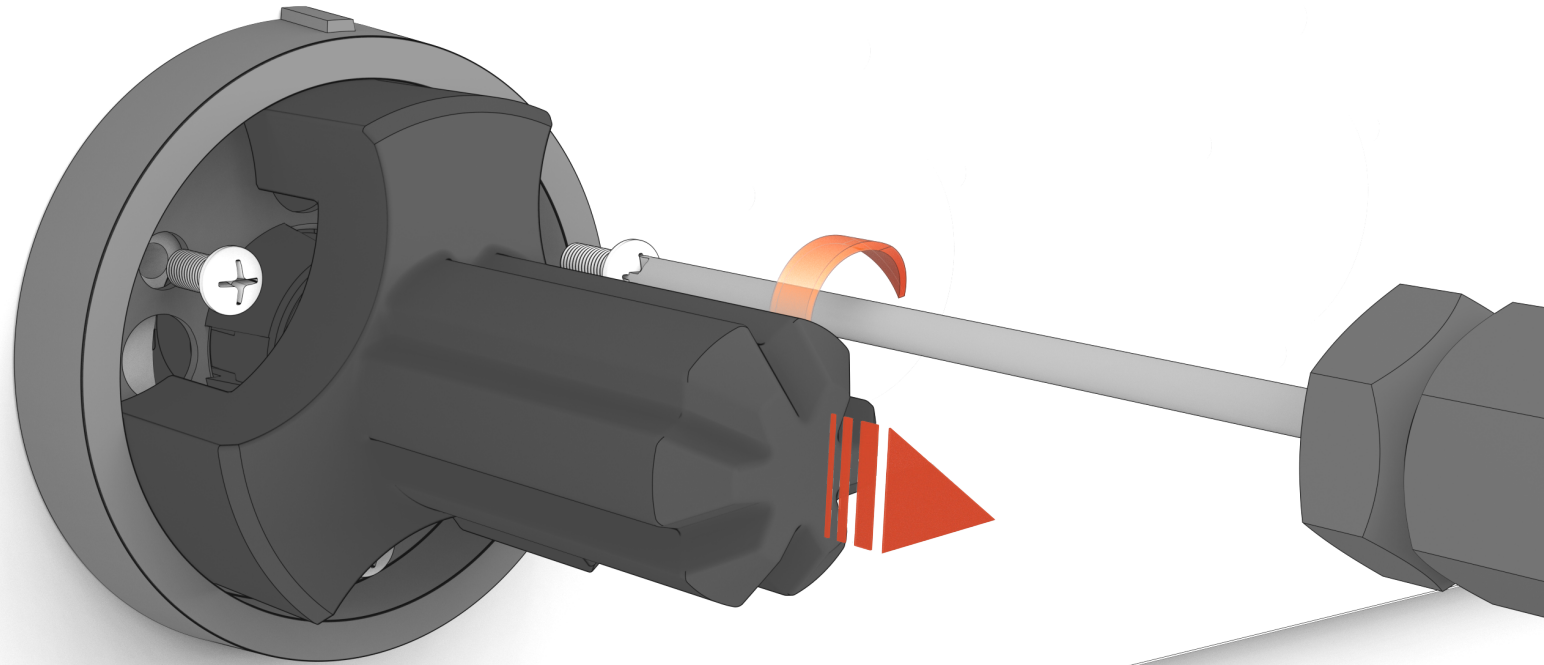

AFTER REMOVE ALIGNMENT TOOL


8

ENSURE MATCHING ORIENTATION

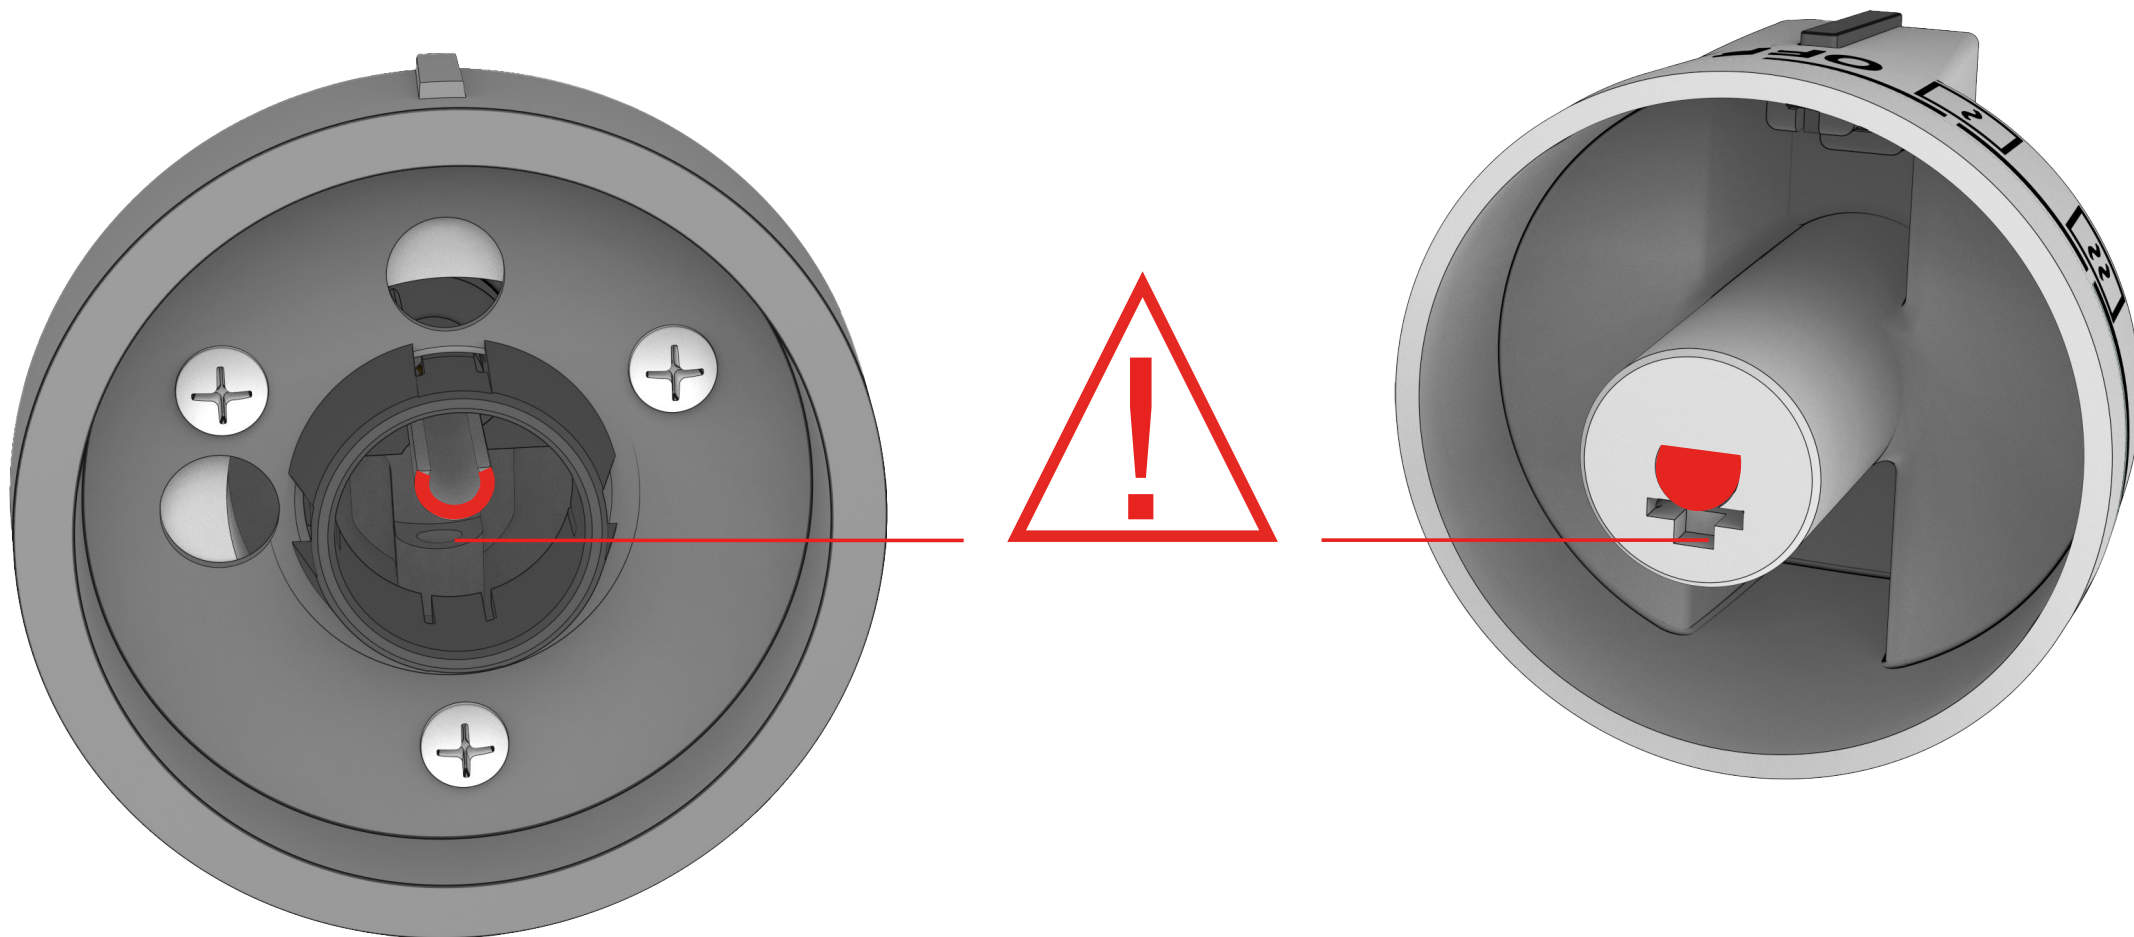

9

REINSTALL KNOB IN CORRECT POSITION

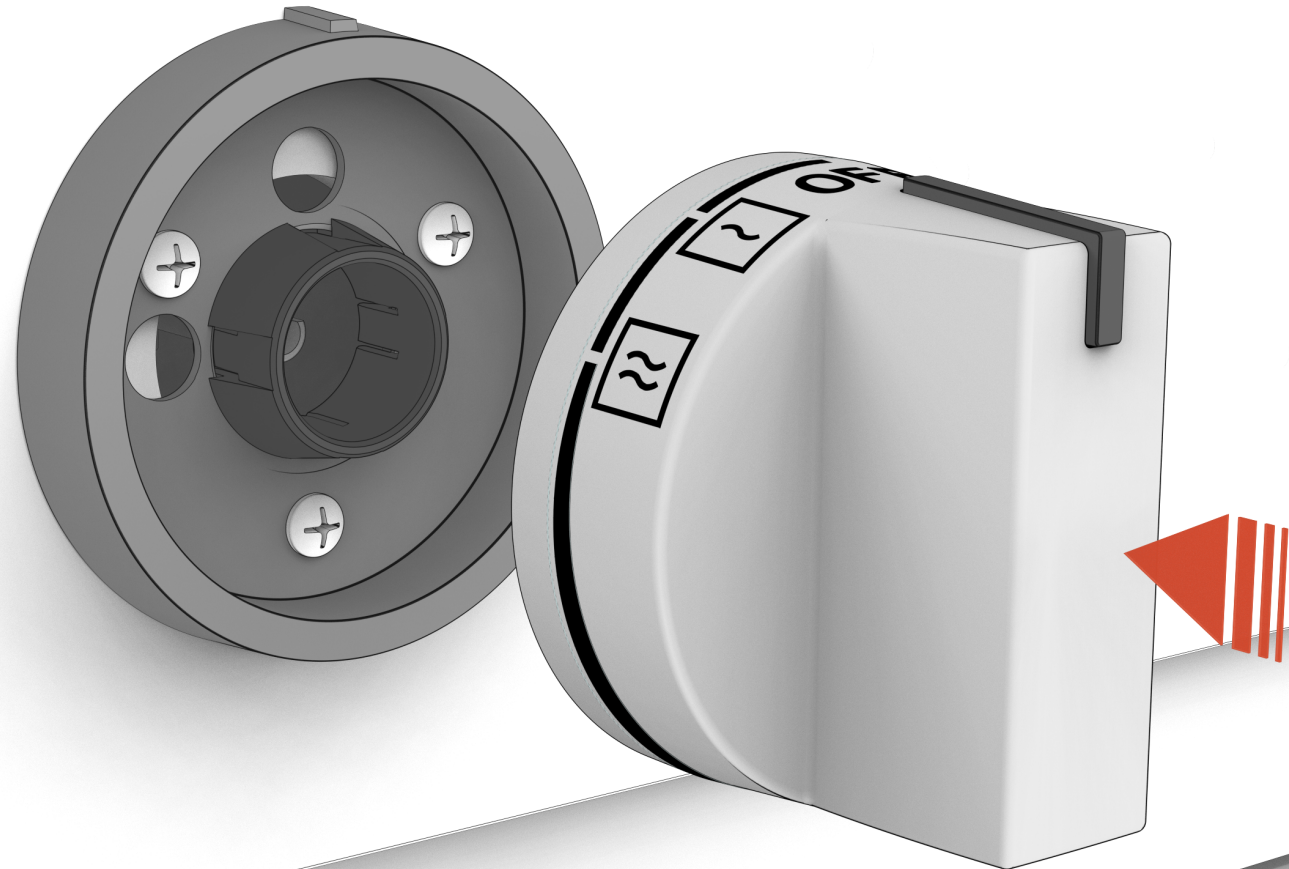

10

BEZEL REPLACEMENT COMPLETE




CHECK THAT THE ROTATION MOVEMENT, LEFT AND RIGHT, IS SMOOTH

DECORATIVE BADGE COVER ACCESSORY



2

REMOVE BOLTS WITH ALLEN WRENCH

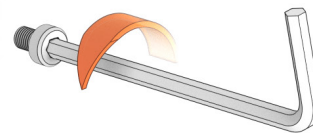

3

REMOVE THE NAMEPLATE



4

INSTALL DECORATIVE BADGE OVER THE EXISTING BADGE



5

REPOSITION THE NAMEPLATE



6

USE LONGER SCREWS PROVIDED TO SECURE THE NAMEPLATE



7

DECORATIVE BADGE COVER INSTALL COMPLETE



FULGOR

MILANO



[FULGOR-MILANO.COM](https://fulgor-milano.com)

FOR MORE INFORMATION