



Frigidaire

Factory Parts Catalog

Product No.	FEB30S5EQA	FEB30S5EQB
	38254331E5041	38254331E5042
Series	30" single	30" single
Color	bisque	bisque
Market	North America	North America
Wiring Diagram	318046227	318046237
Owner's Guide	318200924	318200924
Installation Instructions	318201514	318201514
Service Data Sheet	318047413	318047413
Timer Guide	318200189	318200189

 **Electrolux**

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995438990
05/06/09
(EN/SERVICE/ECL)
377

**SINGLE ELECTRIC
WALL OVEN**

Model No.
FEB30S5E

Copyright © 2005 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

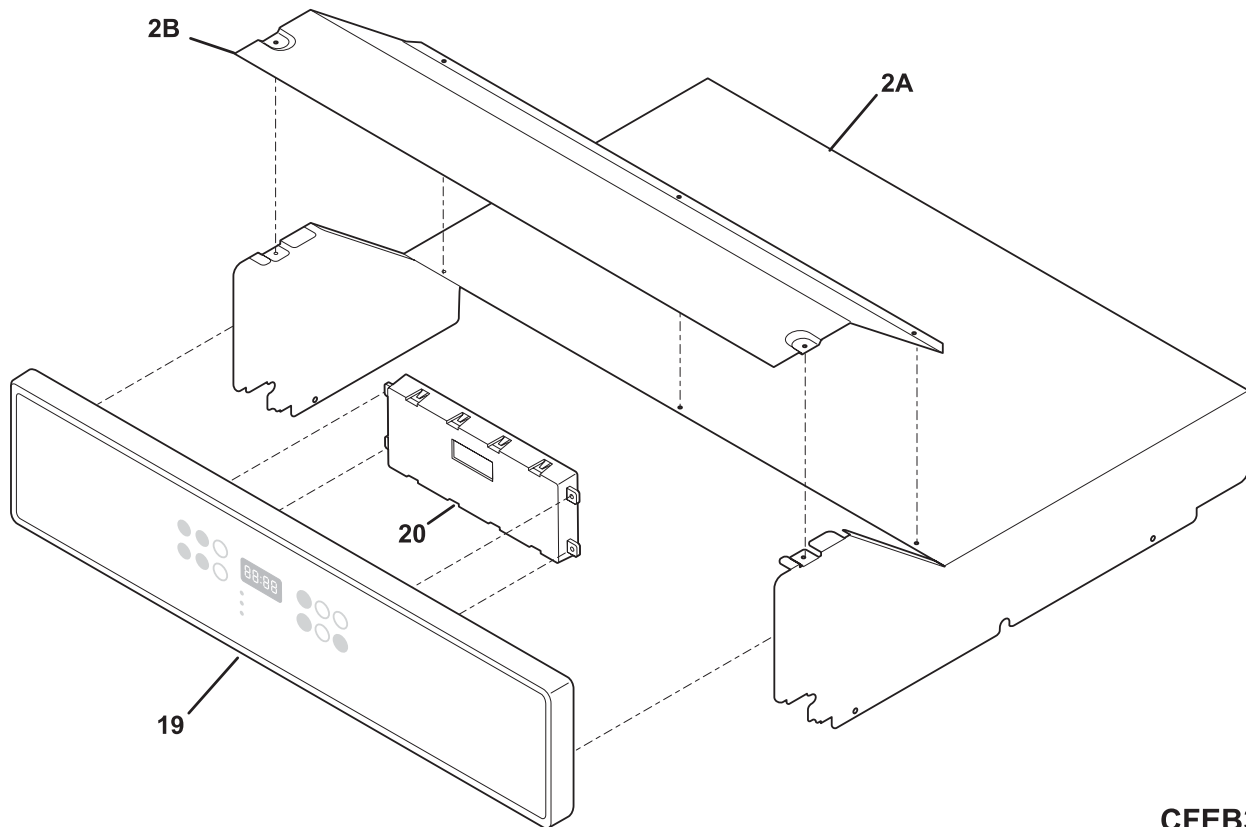


CFEB30S5DSA

CONTROL PANEL

Model Index: A FEB30S5E (FEB30S5EQA)
 B FEB30S5E (FEB30S5EQB)

POS. NO	PART NO.		DESCRIPTION
2A	318257300	A B	Shield, oven top
2B	318260100	A B	Cover, box
19	318274602	A B	Control Panel Assembly, glass, bisque, w/touch pad
20 #	316418522	A B	Clock/Timer, electronic, ES350W1
*	316021107	A B	Screw, hex head, 8-32, silver
*	5303211311	A B	Screw, 8 x 0.500

BODY

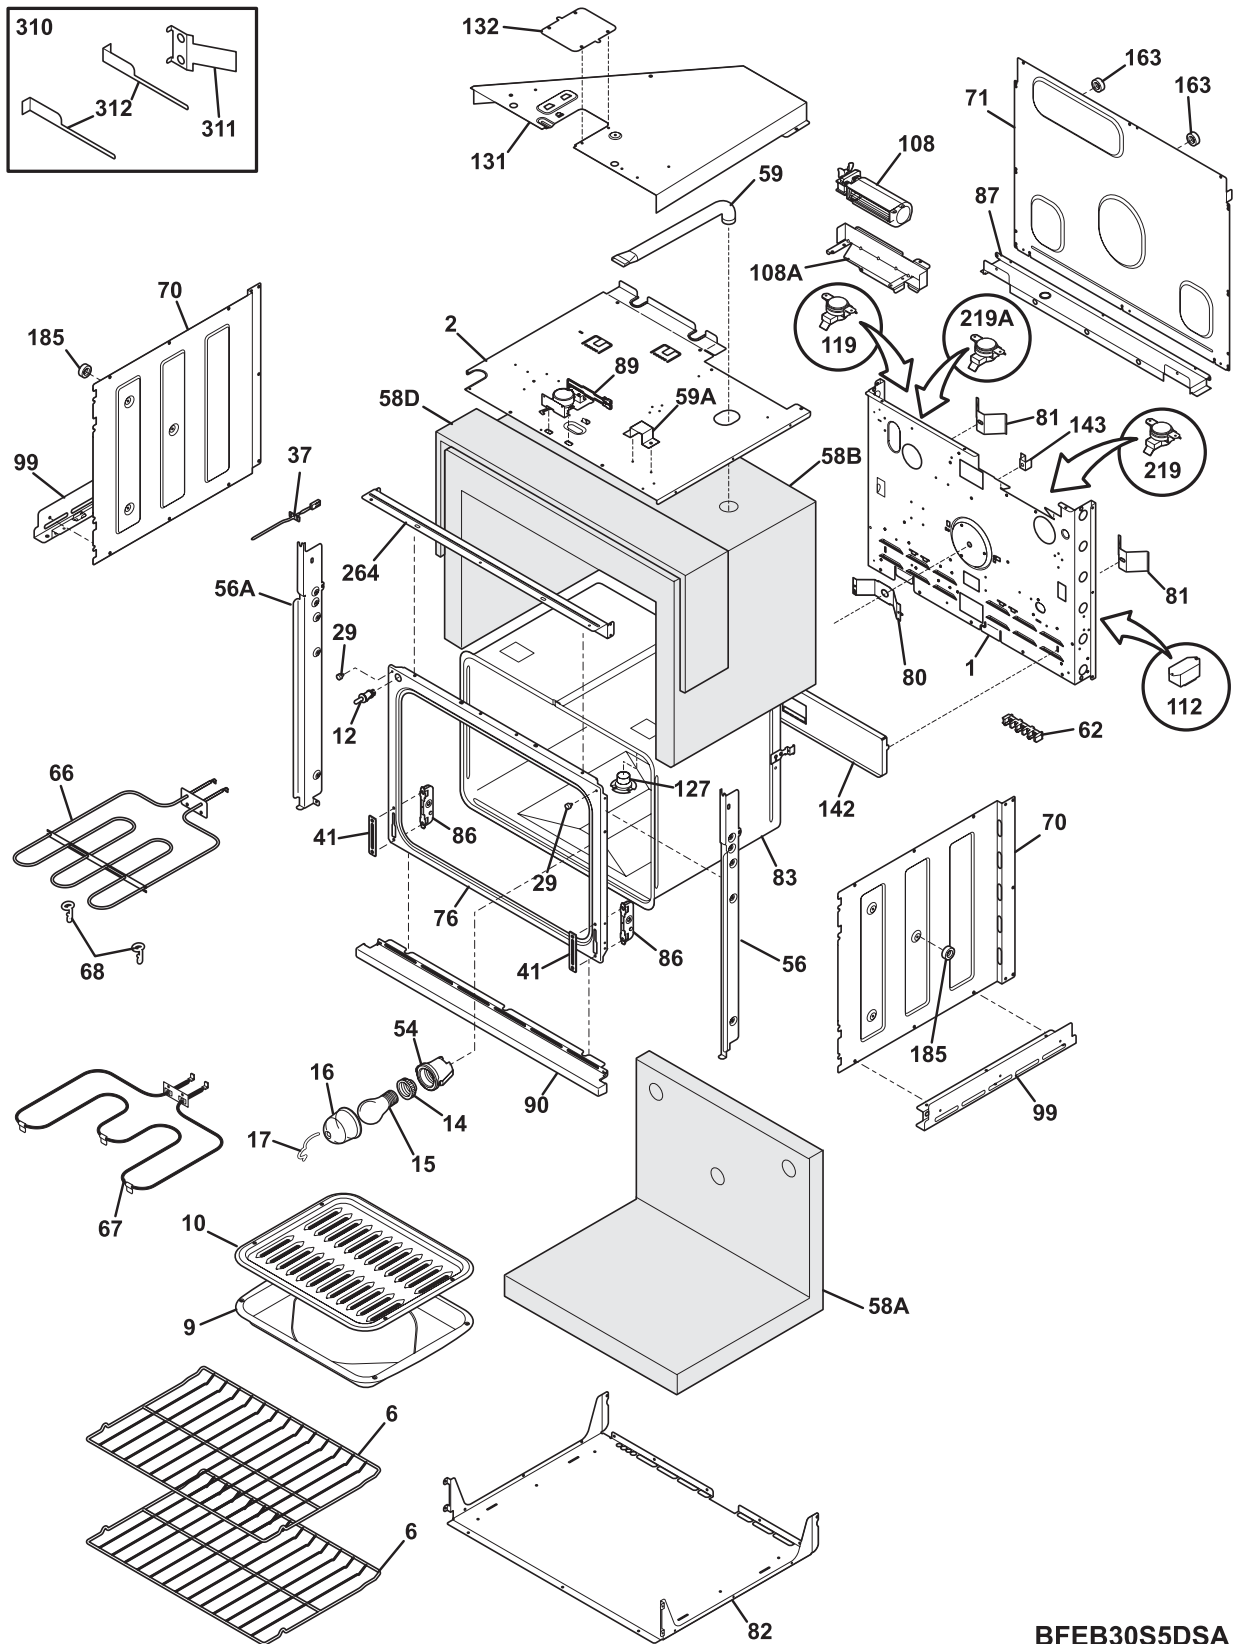


BFEB30S5DSA

BODY

Model Index: A FEB30S5E (FEB30S5EQA)
 B FEB30S5E (FEB30S5EQB)

POS. NO	PART NO.		DESCRIPTION
1	318259200	A B	Back, main
2	318258900	A B	Shield, insulation, upper
6	318262502	A B	Rack, oven
9	5303317977	A B	Pan, broiler
10	5303317976	A B	Insert, broiler pan
12 #	318089917	A B	Switch, light
14	318224000	A B	Receptacle, oven light
14*	318268099	A B	Insulation, oven light
15	5303013071	A B	Bulb/Lamp, oven light
16	3201911	A B	Cover, oven light, glass
17	5304400195	A B	Retainer, light cover
29	318147411	A B	Bumper, (2)
37 #	316217002	A B	Probe, oven temp
41	5303310526	A B	Cover, hinge cutout
54	318222400	A B	Housing, oven light
56	318259906	A B	Trim, side filler, bisque, RH
56A	318259907	A B	Trim, side filler, bisque, LH
58A	318285055	A B	Insulation, oven wrapper
58B	318285056	A B	Insulation, oven back
58D	318285058	A B	Insulation, 1/2" thick, 43 x 9.5
59	318072560	A B	Duct, oven vent
59A	318261600	A B	Bracket, vent tube
62	316056000	A B	Terminal Block
62*	5303323144	A B	Nut, 10-32
66 #	318255600	A B	Element, broil, 2750W
67 #	318255401	A B	Element, bake, 3400W
68	5304403015	A B	Support, hanger, (2), broil element
70	318259100	A B	Shield, insulation, sides, (2)
71	318260004	A B	Panel, rear box
76	318056217	A B	Front, oven
80	5303320846	A B	Plate, oven mtg
81	318192400	A B	Spring, oven
82	318258700	A -	Shield, insulation, lower
82	318258707	- B	Shield, insulation, lower
83	318261403	A B	Liner, oven assy
86	5303310524	A B	Receptacle, hinge
87	318260600	A B	Bracket, cable mtg.
89 #	318261201	A -	Motor, latch assy
89 #	318261202	- B	Motor, latch assy
90	318259702	A B	Trim, oven front, bisque, bottom
99	318256200	A B	Bracket, side, bottom, (2)
108#	318073018	A B	Motor, blower
*	08016432	A B	Screw, truss head, 8-18 x 0.375
108A	318251300	A B	Bracket, fan support
112#	318112701	A B	Relay
119#	318004900	A B	Switch, thermal
127	318317100	A B	Adapter Assembly, vent tube, w/converter
131	318272900	A B	Box, vent
132	318003000	A B	Plate, shield

BODY

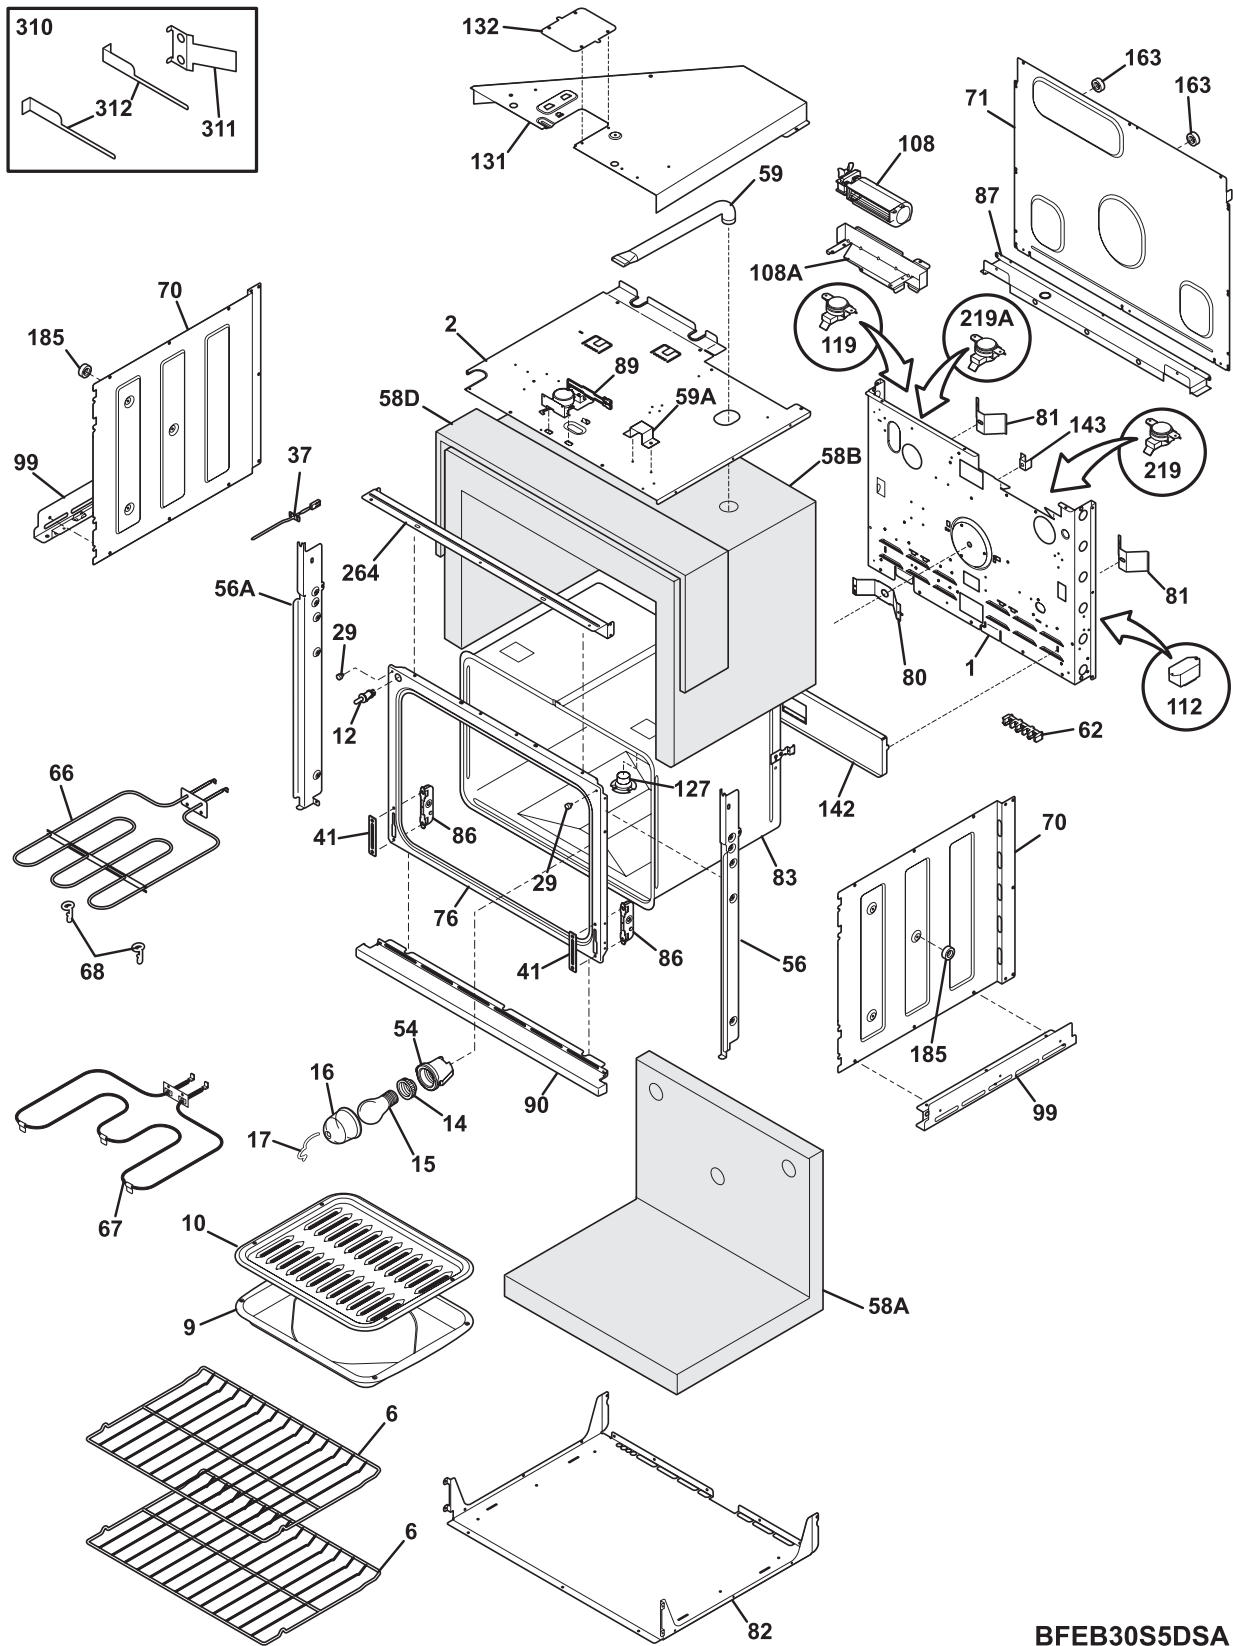


BFEB30S5DSA

BODY

Model Index: A FEB30S5E (FEB30S5EQA)
B FEB30S5E (FEB30S5EQB)

POS. NO	PART NO.		DESCRIPTION
142	318123910	A B	Deflector
*	5303324184	A B	Screw, 8-18 x 5/16, black, (4)
143	318172904	A B	Support, wire/glass
163	318014111	A B	Spacer
185	318014700	A B	Spacer, oven shield, (4)
219#	318003606	A -	Thermostat, safety
219#	318003614	- B	Thermostat, safety
219A	318003613	A B	Thermostat, safety
264	318257701	A B	Trim, oven, black, front
310	5304440067	A B	Cabinet Mounting Kit
311	318246010	A B	Bracket, cabinet mtg, (2)
311*	5304438005	A B	Screw, 6 x 1, black
312	318246702	A B	Tool, cabinet bracket, RH
312	318246703	A B	Tool, cabinet bracket, LH
* #	318078542	A B	Box & wires assy
*	318231719	A -	Harness, wiring, main
*	318231735	- B	Harness, wiring, main
*	5303211311	A B	Screw, 8 x 0.500
*	5303323136	A B	Screw ground
*	5303323139	A B	Screw, 10-24 x 0.906
*	5303323277	A B	Screw, 8-18 X 13/32
*	5304436875	A B	Screw, 8-18 X 1/2, black

DOOR

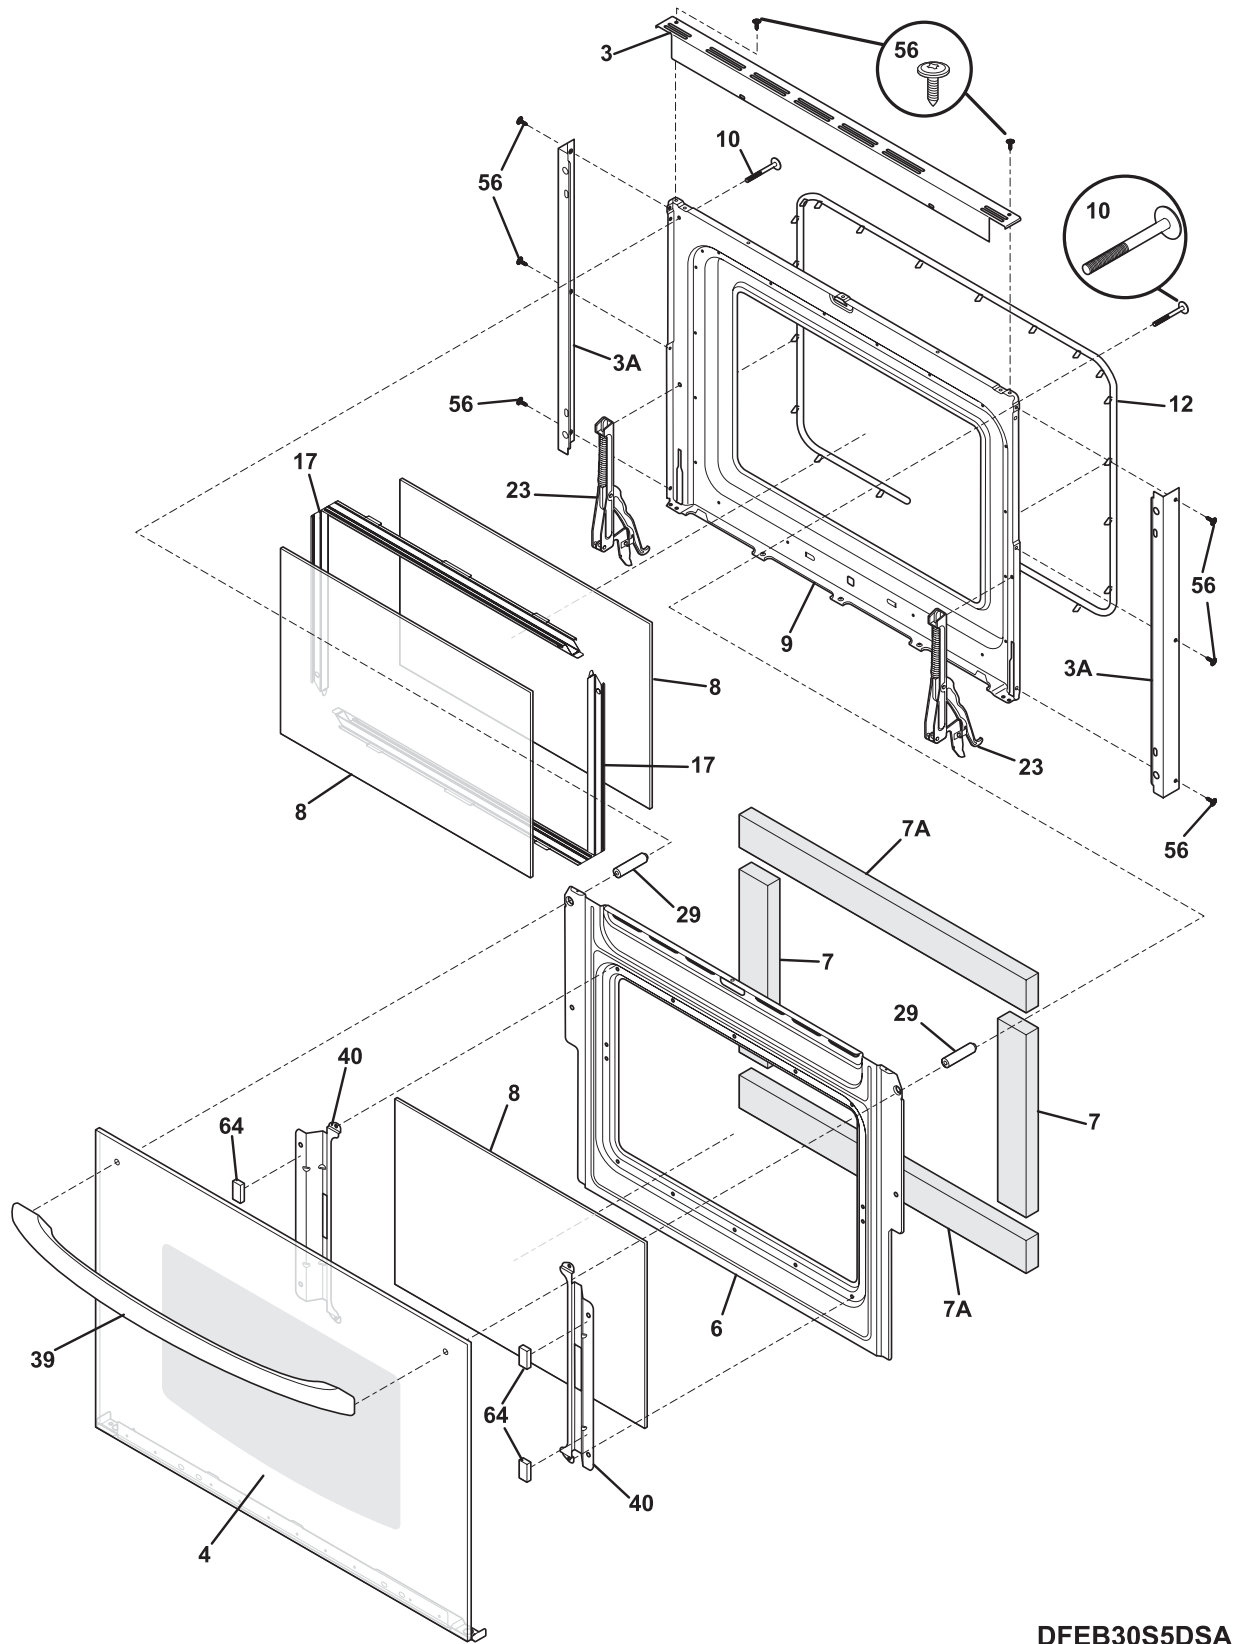


DFEB30S5DSA

DOOR

Model Index: A FEB30S5E (FEB30S5EQA)
 B FEB30S5E (FEB30S5EQB)

POS. NO	PART NO.		DESCRIPTION
3	318260201	A B	Trim, oven door, black, upper
3A	318260401	A B	Trim, oven door, side, (2)
4	318261302	A B	Glass Assy., oven door, bisque, outer, w/trim
6	318260500	A B	Baffle, door
7	318285057	A B	Insulation, oven door
7A	318285062	A B	Insulation, oven door
8	316117500	A B	Glass, oven door, heat barrier
9	318259601	A B	Liner, oven door
10	5304416408	A B	Screw, 10-24 x 1.750, handle mtg
12	318053130	A B	Seal, oven door
17	316402403	A B	Spacer, door glass, (2)
23	5303310828	A B	Hinge, oven door, (2)
29	318014402	A B	Spacer, door
39	316203003	A B	Handle, door, bisque
40	318242700	A B	Bracket, glass holder, (2)
56	5304436875	A B	Screw, 8-18 X 1/2, black
64	318165800	A B	Spacer, (2)
*	08016432	A B	Screw, truss head, 8-18 x 0.375
*	5303211311	A B	Screw, 8 x 0.500
*	5303300265	A B	Screw, 8-18 x 0.500, chrome, (3)
*	5303323277	A B	Screw, 8-18 X 13/32

WIRING DIAGRAM - FEB30S5EQA

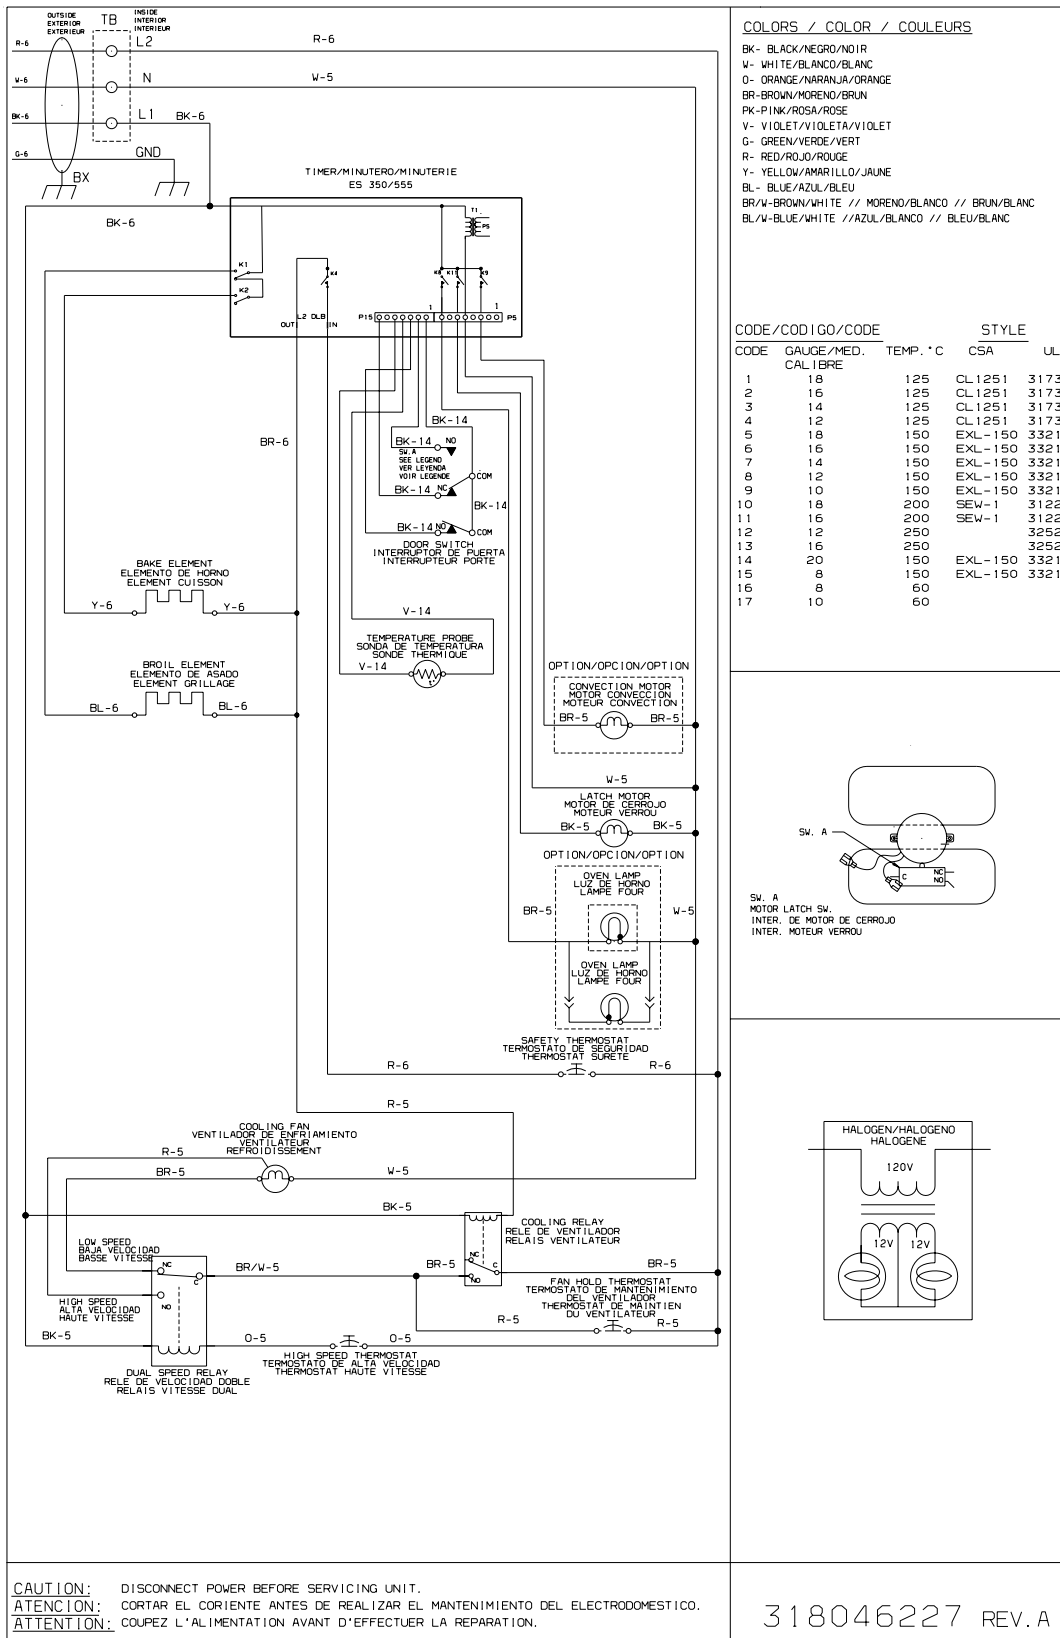

WIRING DIAGRAM - FEB30S5EQB

