


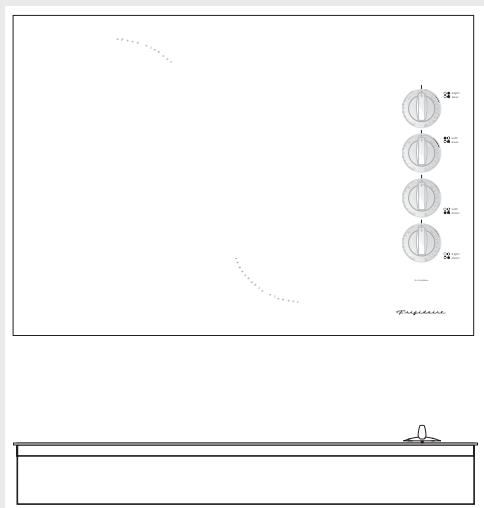

Frigidaire

Factory Parts Catalog

Product No.	FEC30S7EBA	FEC30S7ECA	FEC30S7ESA
	3805422365061	38054223650S1	3805423365011
Series	30" elec	30" elec	30" elec
Color	black	stainless	white
Market	North America	North America	North America
Wiring Diagram	318046807	318046807	318046807
Owner's Guide	318200628	318200628	318200628
Installation Instructions	318201426	318201426	318201426

Electrolux

Electrolux Major Appliances
North & Latin America
P.O. BOX 212378
AUGUSTA, GA 30917


Publication No.
5995451407
05/10/14
(EN/SERVICE/ECL)
377

ELECTRIC COOK-TOP RANGE

Model No.
FEC30S7E

Copyright © 2005 Electrolux Home Products, Inc.
All rights reserved.

CONTROL PANEL

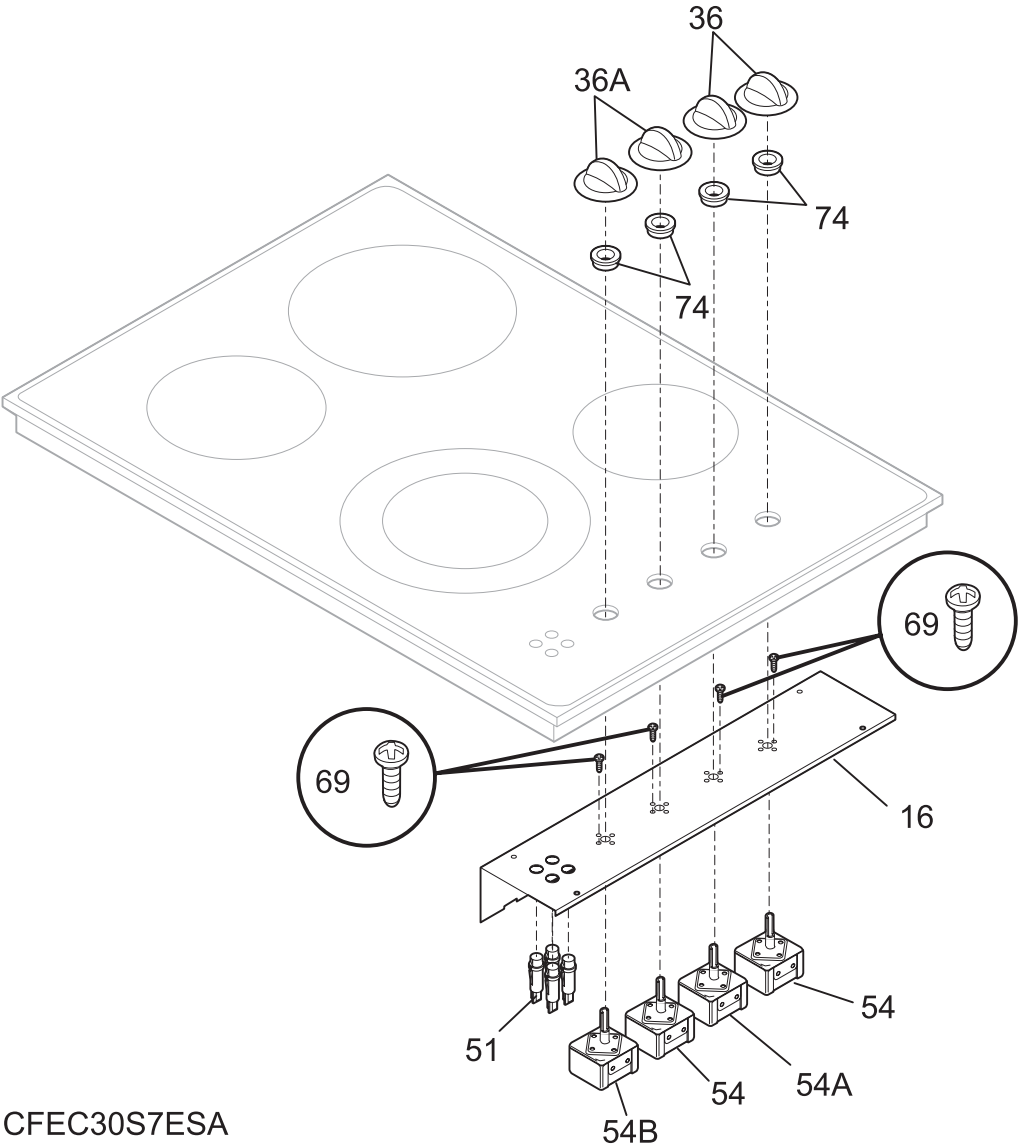


CFEC30S7ESA

CONTROL PANEL

Model Index: **A** FEC30S7E (FEC30S7ESA)
 B FEC30S7E (FEC30S7EBA)
 C FEC30S7E (FEC30S7ECA)

POS. NO	PART NO.		DESCRIPTION
16	318096327	A B C	Box, instrument mtg
36	318196633	A - -	Knob, control, white
36	318196634	- B C	Knob, control, black
36A	318196630	A - -	Knob, dual control, white
36A	318196631	- B C	Knob, dual control, black
51 #	318044820	A - -	Light, indicator, red
51 #	318044822	- B C	Light, indicator, clear
54 #	318220071	A B C	Switch, surface unit, small
54A#	318293817	A B C	Switch, surface element, 3000W
54B#	318191000	A B C	Switch, infinite, dual
69	5303323134	A B C	Screw, 8-32 x 0.188
74	318148900	A B C	Bushing, switch
*	318163602	- - C	Cleaner, stainless steel
*	5303323140	A B C	Screw, ground, 10-32 x 0.375

MAIN TOP/SURFACE UNITS

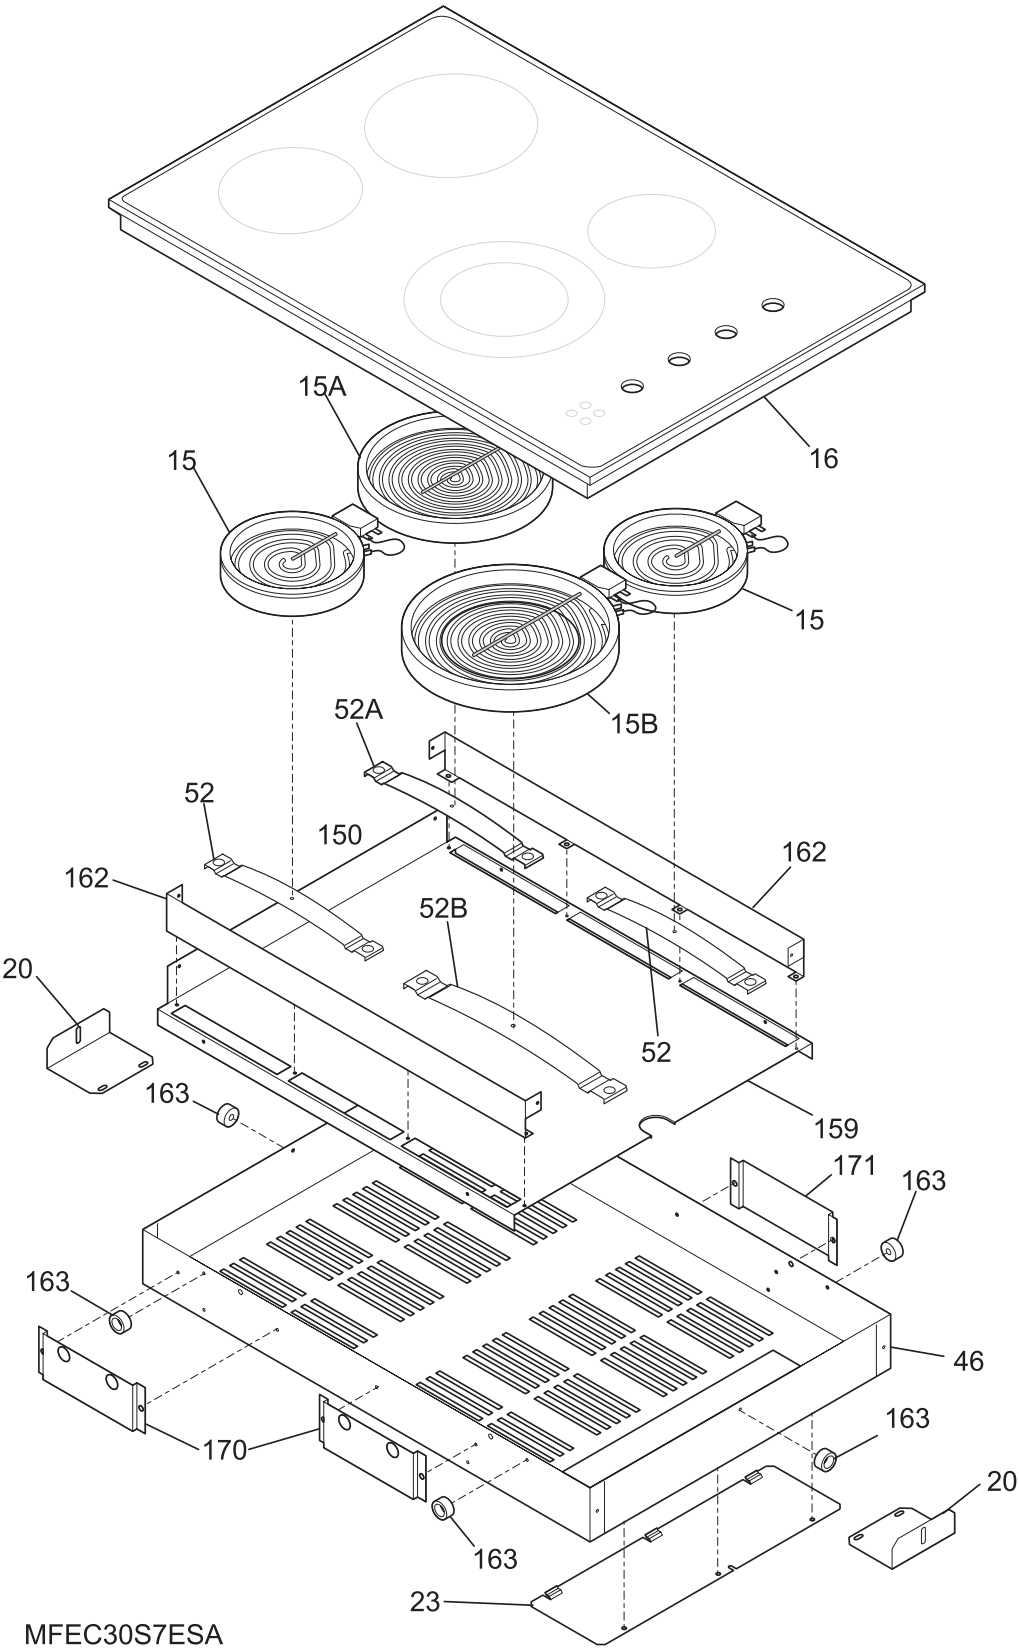


MAIN TOP/SURFACE UNITS


Model Index: **A** FEC30S7E (FEC30S7ESA)
 B FEC30S7E (FEC30S7EBA)
 C FEC30S7E (FEC30S7ECA)

POS. NO	PART NO.		DESCRIPTION
15 #	318198817	A B C	Element, surface, 6", 1200 W, (2)
15A#	318198823	A B C	Element, surface, 9", large, 2700 W
15B#	318198925	A B C	Element, surface, 6/9, 1200/2500W, dual radiant
16	318079422	A - -	Main Top, white
16	318079423	- B -	Main Top, black
16	318079424	- - C	Main Top, black/stainless, w/front trim
20	318121902	A B C	Bracket, retainer
23	318194703	A B C	Panel, service, black
46	318077232	A B C	Burner Box
52	318122006	A B C	Spring, element mtg, small
52A	318122007	A B C	Spring, element mtg, large
52B	318122010	A B C	Spring, element mtg, 1000W/2500W
159	318125113	A B C	Deflector
162	318161401	A B C	Deflector
163	318014110	A B C	Spacer, (6)
170	318124911	A B C	Screen, thermal
171	318124912	A B C	Screen, thermal, (9)
* #	318078529	A B C	Box & wires assy
*	318199429	A B C	Harness, wiring
*	5303323129	A B C	Screw, 8 X 0.750
*	5303323140	A B C	Screw, ground, 10-32 x 0.375



WIRING DIAGRAM

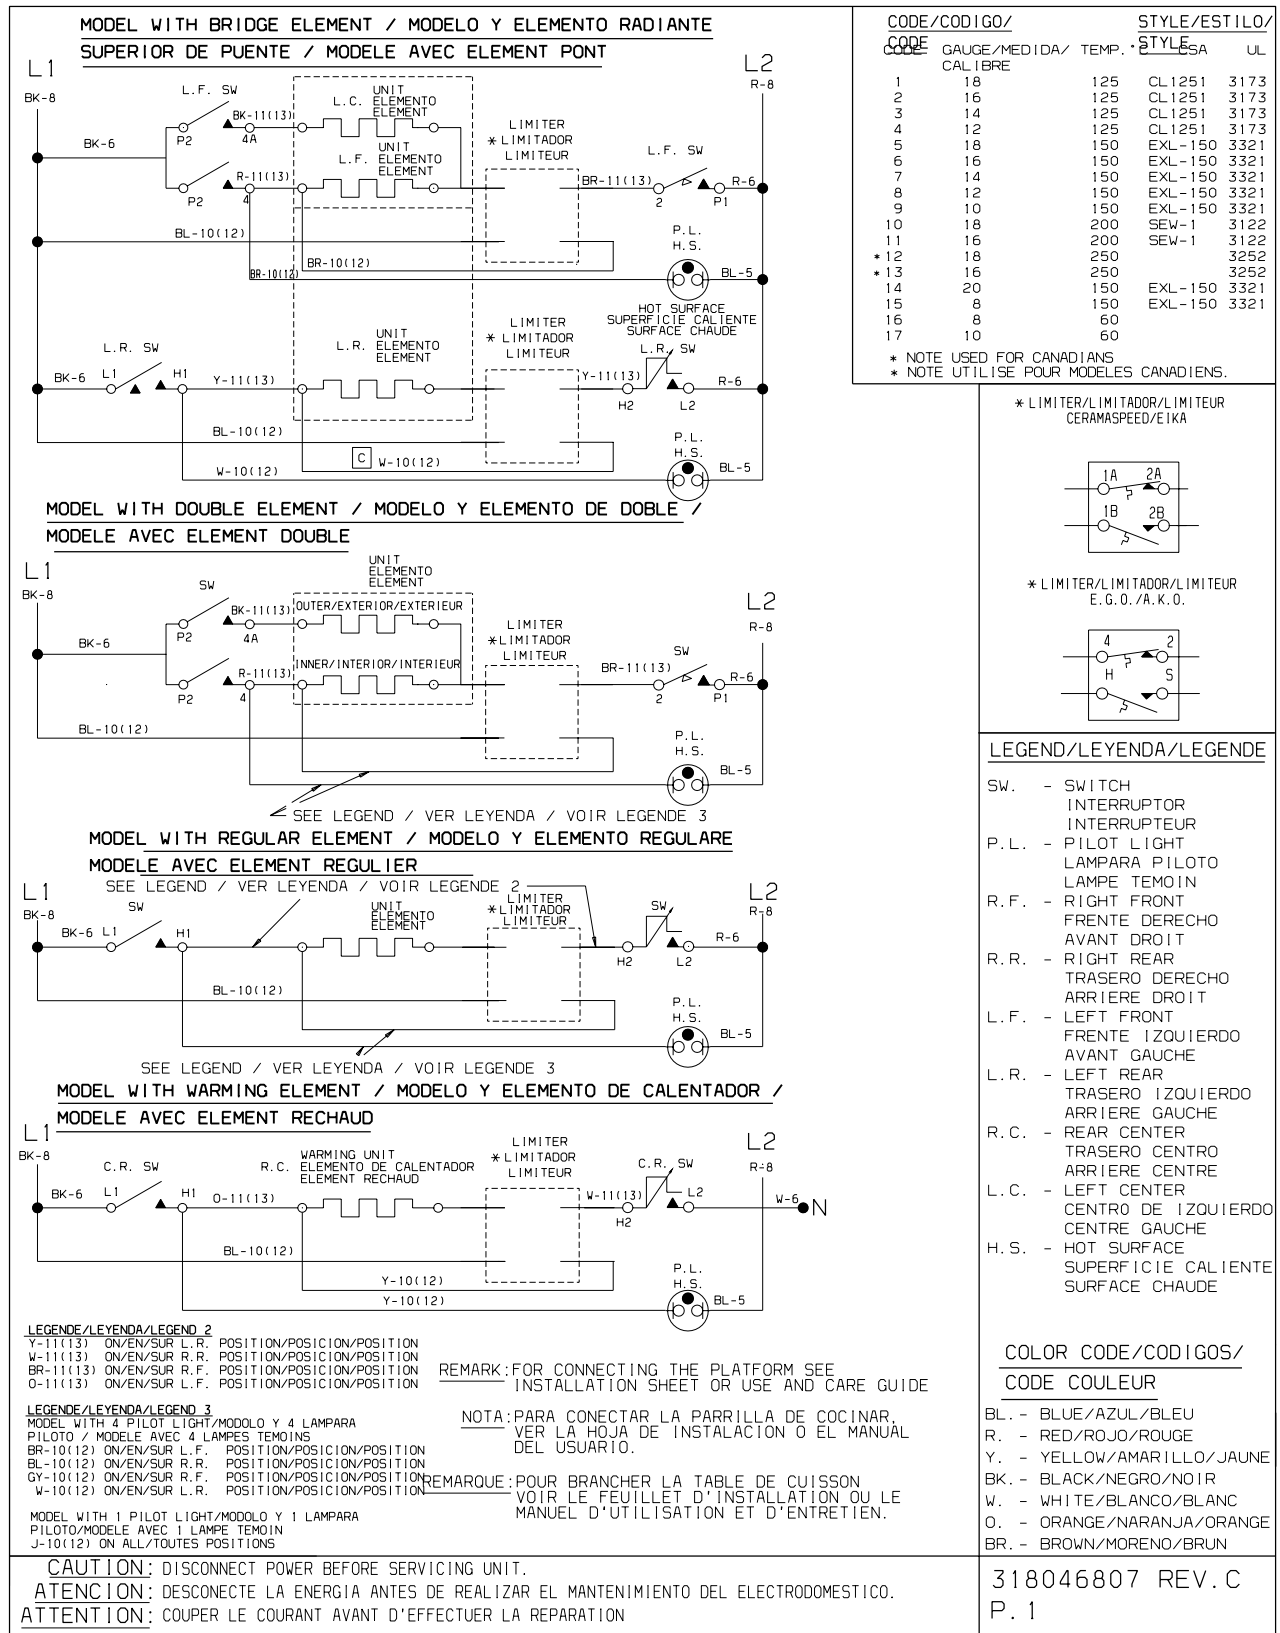



MODEL WITH REGULAR ELEMENT AND SELECTOR / MODELO Y ELEMENTO Y SELECTOR /
MODELE AVEC ELEMENT REGULIER ET SELECTEUR

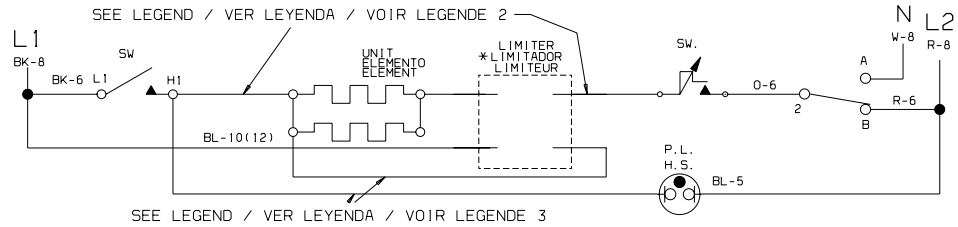

MODEL WITH 4 REGULAR UNITS / MODELO Y QUATRO ELEMENTOS
REGULARES / MODELE AVEC ELEMENT REGULIER

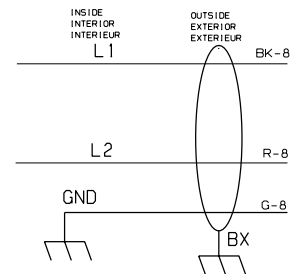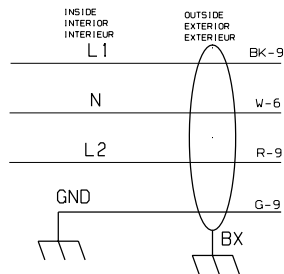

MODEL WITH SIMMER SELECT / LOS MODELOS CON SELECTOR DE HIRVE A FUEGO LENTO / MODELE AVEC SELECTEUR MIJOTANT

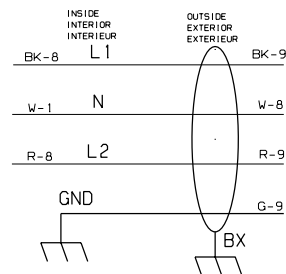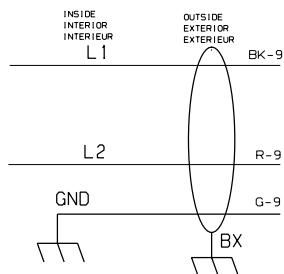

318046807 REV.C
P.2