




Frigidaire

Factory Parts Catalog

Product No.	GLWS1749AS4
Series	Frig Gallery
Market	North America
Color	white
Volts	120
Wiring Diagram	134286800
Owner's Guide	131843000
Installation Instructions	131964000
Operating Instructions	134317500
Energy Guide	134352700

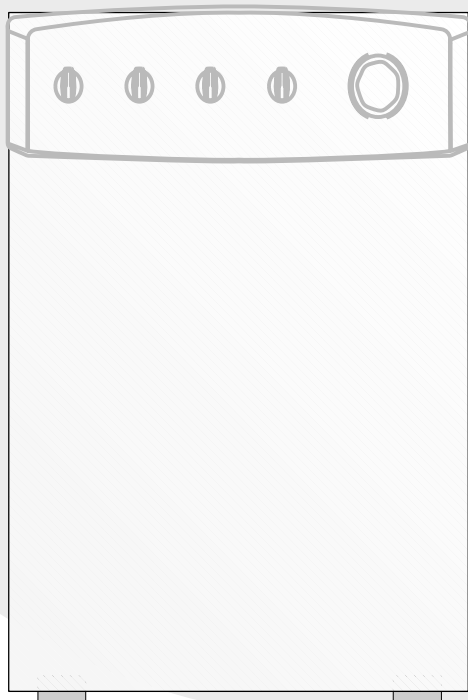

ELECTROLUX HOME PRODUCTS, INC.
P.O. Box 212378, Augusta, GA 30917


Publication No.
5995406229
04/03/25
(EN/SERVICE/KC)
361

TOP-LOAD WASHING MACHINE

Model No.
GLWS1749A

Copyright © 2004 Electrolux Home Products, Inc.
All rights reserved.

CABINET/TOP

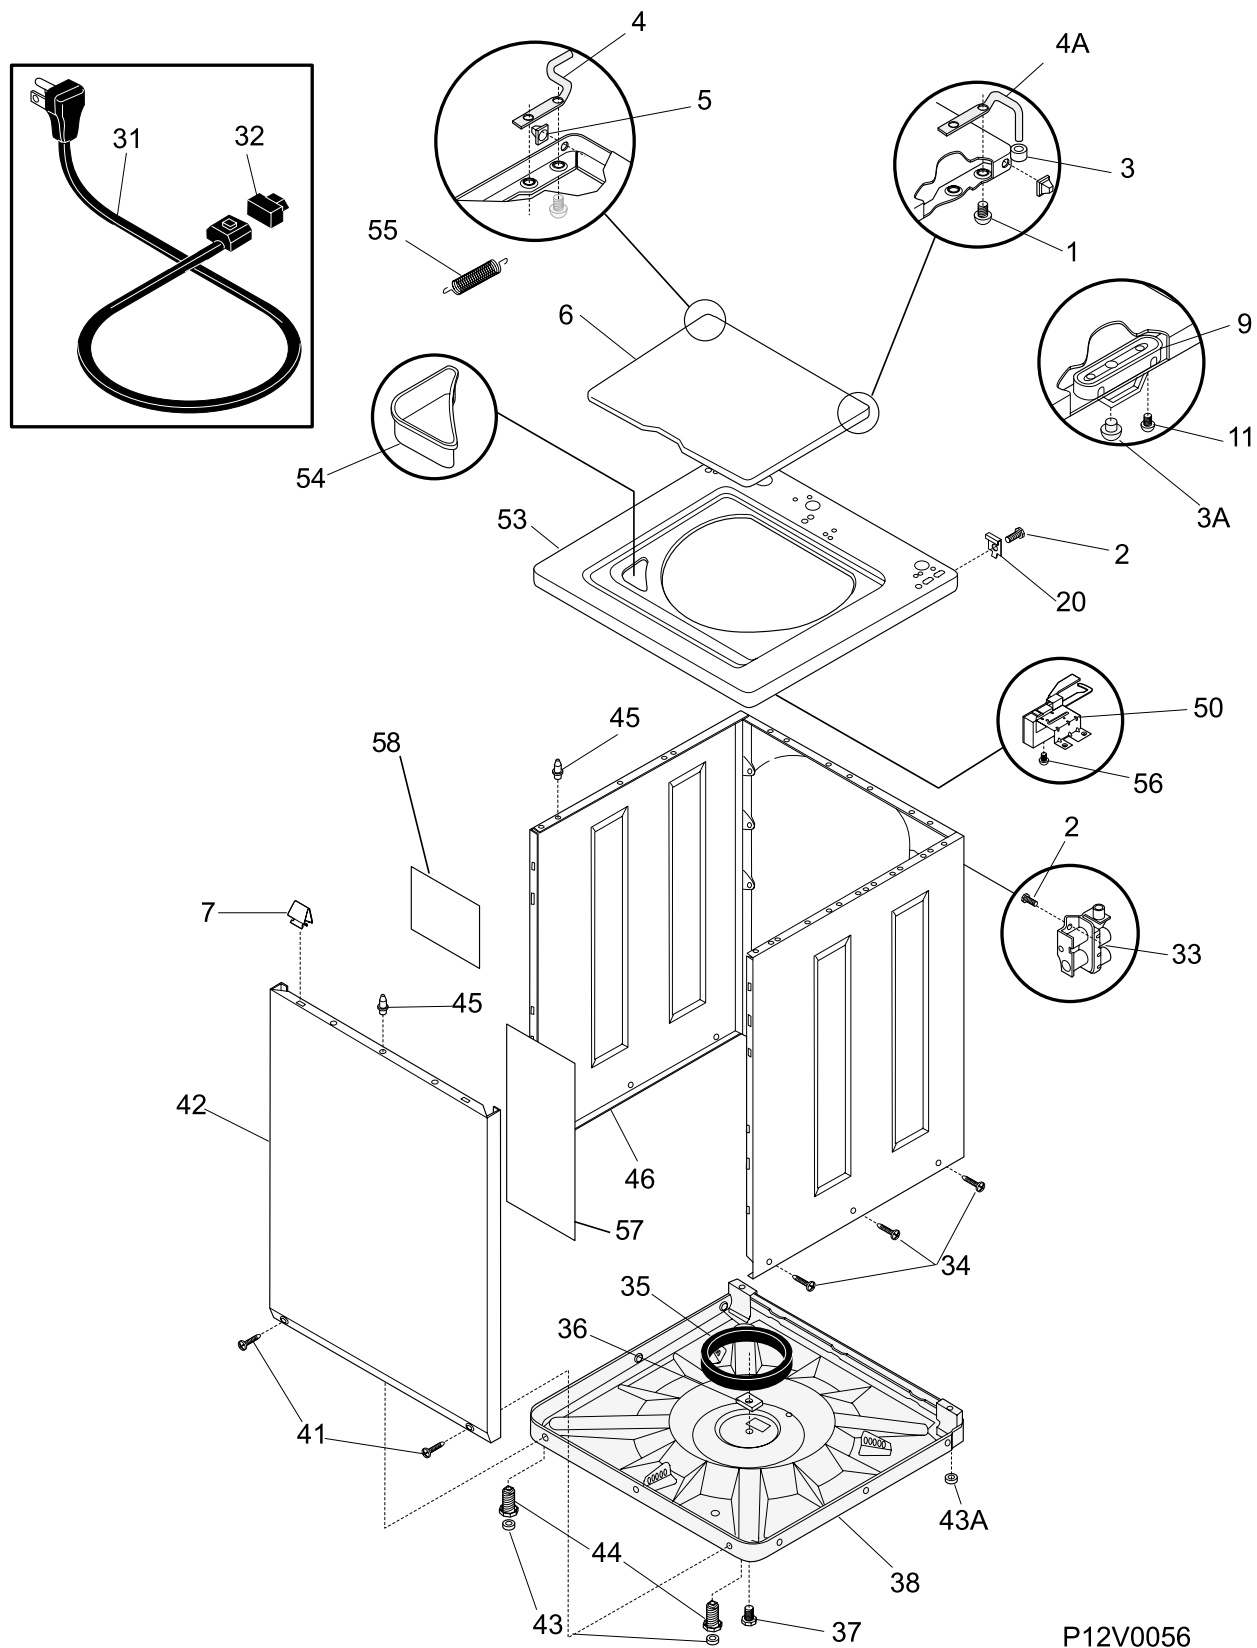


P12V0056

CABINET/TOP

POS. NO	PART NO.	DESCRIPTION
1	134203900	Screw, pan hd phillips, 6-32 x 0.337, dog point
2	131168200	Screw, pan head, 8-18B x 0.31
3	131433300	Bumper, lid hinge
3A	134075500	Bumper, lid, front
4	131385910	Hinge Bar, LH
4A	131374220	Hinge Bar, RH
5	5303208743	Grommet, hinge
6	131374401	Lid, white
7	3205821	Clip, top-to-front
9	131390000	Lid Strike
11	3204368	Screw, lid strike mtg, 6-20B X 0.375
20	5303208751	Hinge, top panel, cabinet rear
31 #	134100800	Power Cord, electric svce
32	5303209428	Bushing, power cord
33 #	134211400	Valve, water, 115 V
34	131205500	Screw, cab body, 1/4-14 x 0.625, side-to-base
35	5308002385	Snubber Ring
36	3204380	Shipping Block
37	131658900	Screw, shipping, 1/4-20 x 1.001, yellow, unit base, thread forming
38	5303311213	Base Assembly
41	131258400	Screw, 10-16AB x 0.500
42	131104303	Panel, front, white
43	131422100	Pad, leveling leg, front
43A	131422200	Pad, self lvlg leg, rear
44	5303309673	Screw, leveling leg, with pad
45	131346400	Pin, panel locator, side
46	134046600	Cabinet Assy, white, back and sides
50 #	134101800	Lock, lid, w/ext switch
53	131452692	Panel, white, top
54	5303208778	Dispenser, bleach
55	5303212876	Spring, lid assist
56	131243700	Screw, pan head, 8-18AB x 0.375, cr/sq drive
57	131800405	Noise Absorber
58	131744202	Damper, vibration



MOTOR/TUB

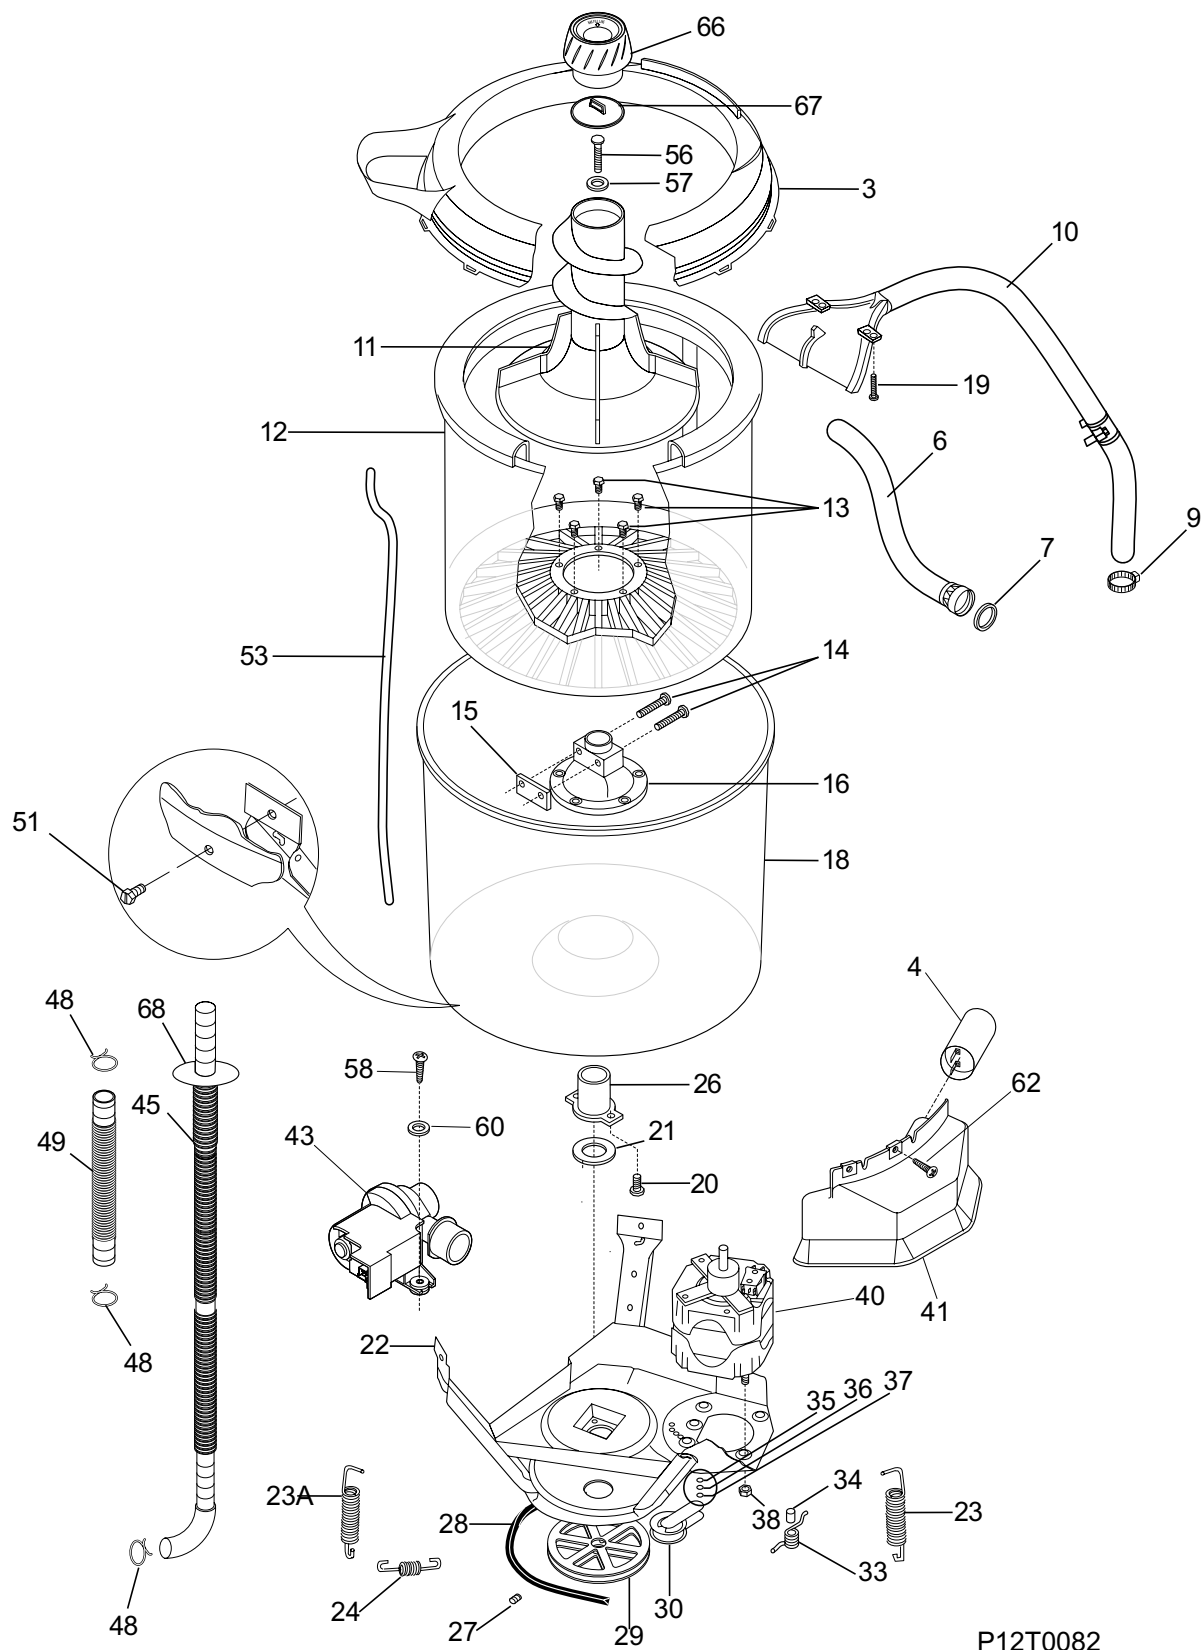

MOTOR/TUB

POS. NO	PART NO.	DESCRIPTION
3	131551103	Cover, splash tub, with seal
3*	131901400	• Seal, splash cover
4 #	131212301	Capacitor, motor
6	131454100	Hose, water inlet, 4 ft., hose & washer
7	5303161296	Washer, inlet hose
9	5303304824	Clamp
10	131726303	Hose Assy, ATC sensor type, w/nozzle, clamp
11 #	131605901	Agitator Assy, dual action
12	131221300	Tub, spin
13	5303283293	Screw, trunion, 5/16-18 x 0.625, (5)
14	131192800	Screw, lockplate, 5/16-18 x 1.625
15	5308001923	Plate, lock
16	131545101	Trunnion
18	131557201	Tub, splash, w/air dome, brg
19	131205300	Screw, 10-16 x 0.750
20	3205150	Screw, tub bearing, 8-12B x 0.750
21	5308002401	Washer, spin bearing, upper
22	131373610	Leg & Dome Assy
23	5303208858	Spring, vertical, short
23*	5303212877	Insert, spring adjuster, vertical
23A	5303208860	Spring, vertical
24	131373900	Spring, horizontal
26 #	3204405	Bearing, outer tub
27	5303304825	Screw, set, hex hd cup, 5/16-18 x 0.85, xmsn pulley, hex head cup pt
28 #	134161100	V-Belt, washer drive, standard 4L
29 #	131498301	Pulley, xmsn drive
30 #	131862900	Idler Arm Assy, VAW, with pulley
33	3204425	Spring, torsional
34	3204426	Sleeve, idler pivot
35	3161433	Ring, retaining
36	5303261031	Washer, pivot shaft
37	5303161306	Washer, spring type
38	5303318708	Nut, hex flange, motor mounting
40 #	134159500	Motor, 3/4 hp, 2 speed, with pulley
41 #	131715800	Shield, motor assy, w/capacitor, nut
41	131513300	• Shield, motor assy, w/speed nuts
41	5303283052	• Speed Nut, motor shield, steel clip
43 #	134051200	Pump, drain
45	134049200	Hose, drain
45*	131506500	Clip, drain hose, back sheet, (2)
45*	131453000	Bushing, snap-in, drain hose
45*	131462500	Clip, drain hose, base
45*	131663500	Cushion, drain hose, base
48	131306234	Clamp, pump to trap
49 #	131494800	Hose, pump to tub
51	134164400	Screw, hex washer head, 5/16-18 x 0.625
53	5300771996	Tube, pressure, vinyl
56	131468900	Screw, agitator mtg, 5/16-18 x 1.250
57	131339600	Spacer, agitator mtg, rubber
58	134160900	Screw, quadrex, 10-16AB X 0.750
60	131304300	Washer, 0.21 x 0.71, 0.06 thick
62	131258400	Screw, 10-16AB x 0.500
66	131624500	Agitator Cap Assy, dispenser cup, dual action
67	131606210	Mechanism, disp cap assy, dual action
68	131707800	Ring, drain hose
68*	5303309503	Clip, drain hose, back sheet

TRANSMISSION

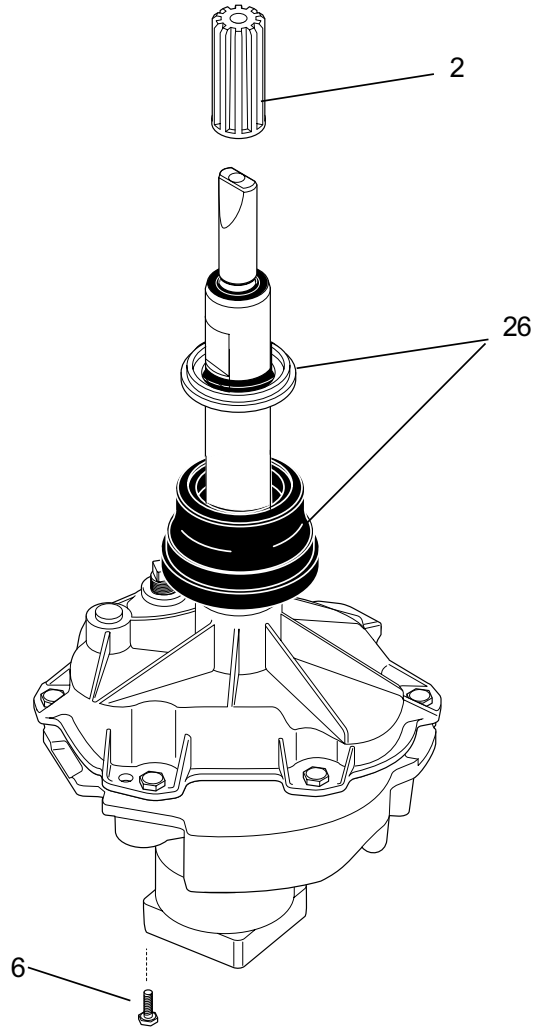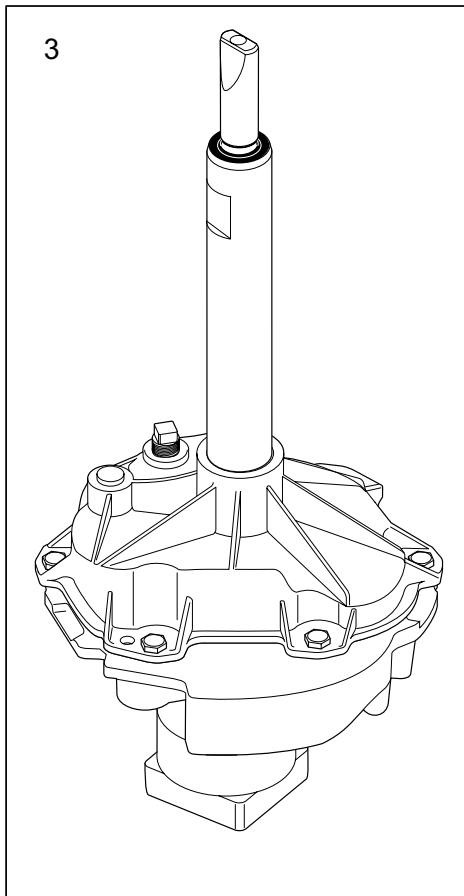


P12M0014

TRANSMISSION

POS. NO	PART NO.	DESCRIPTION
2 #	131475100	Hub, drive, agitator
3 #	131878402	Transmission Assy, H+helical gear
6	134197900	Screw, hex washer head, 1/4-20 x 0.437
26 #	5303279394	Seal Assy, tub, transmission

CONTROL/PANEL

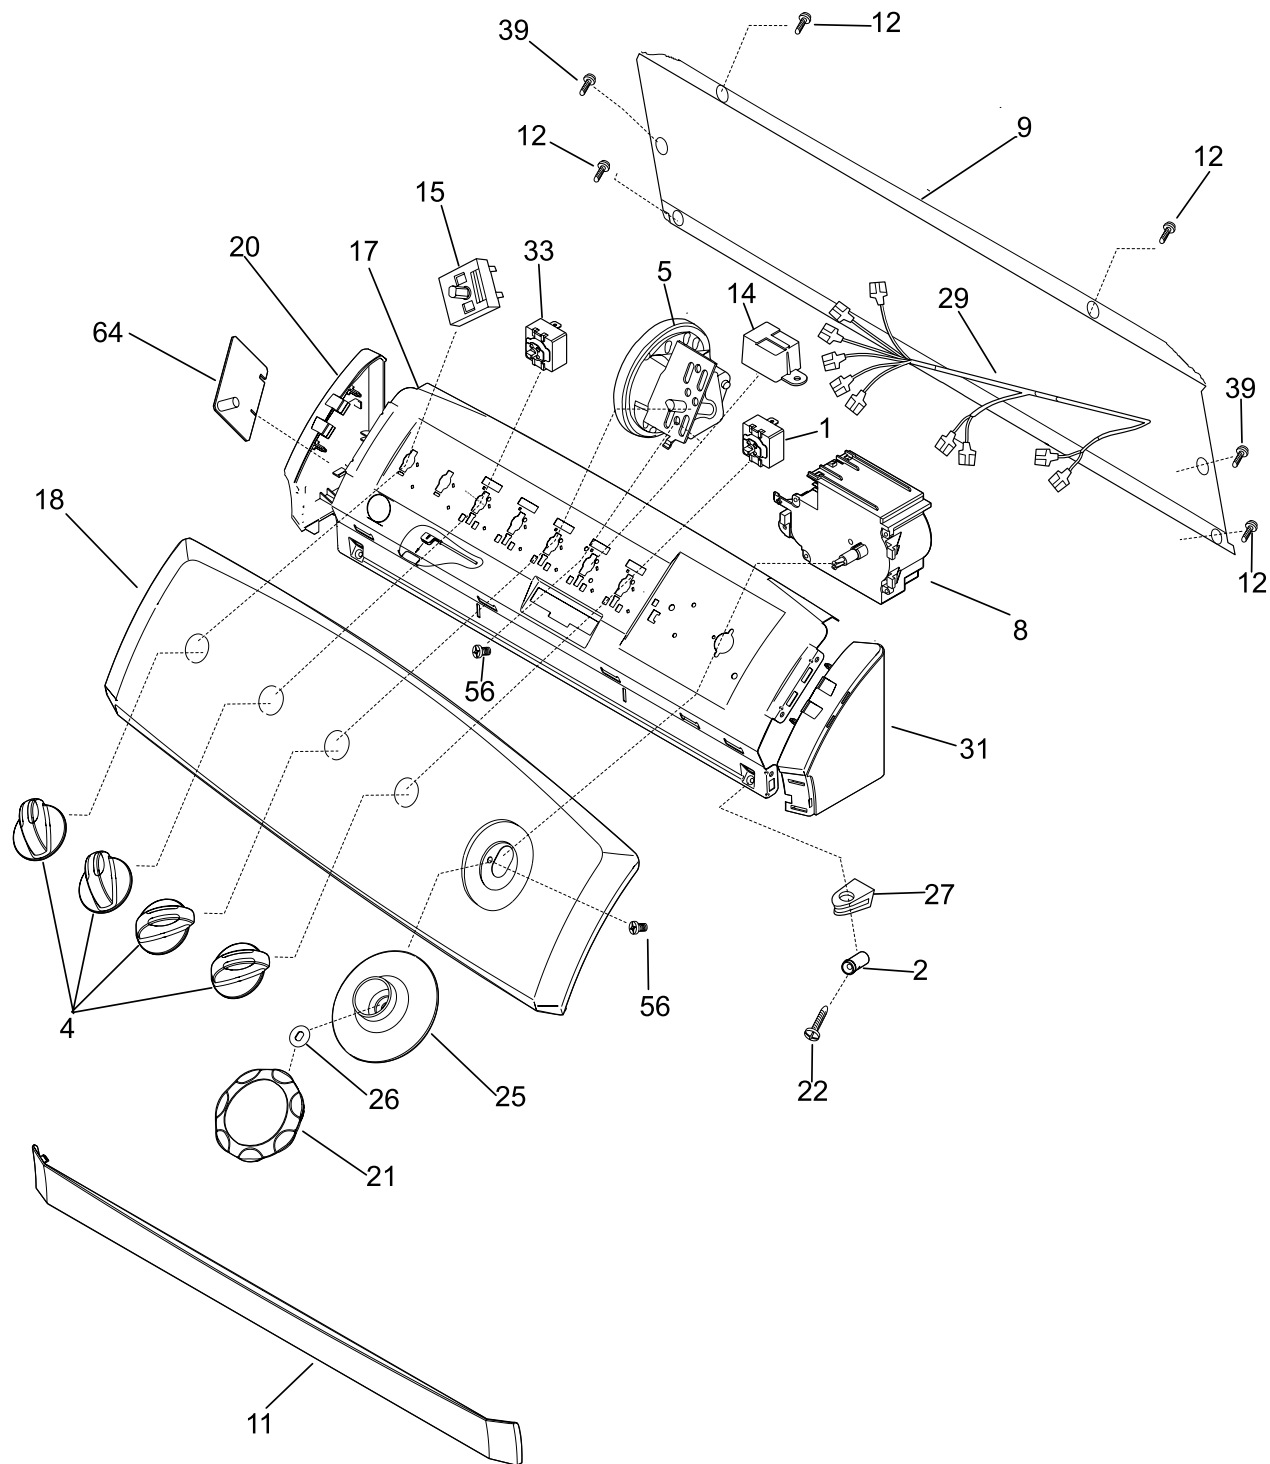


P12C0311

CONTROL/PANEL



POS. NO	PART NO.	DESCRIPTION
1 #	131120400	Switch, speed control, 4 posn rotary
2	134096100	Spacer, console mtg
4	134034900	Knob, rotary, white
5 #	134218500	Switch, pressure, infinite
8 #	134173100	Timer
9	131992910	Panel, backsheet, console
11	134019900	Closure, console trim, white, front
12	131168200	Screw, pan head, 8-18B x 0.31
14 #	134086900	Buzzer, non adjustable
15 #	134057700	Switch, temp selector, 4 posn rotary
17	131993010	Bracket, control mtg.
18	134074000	Panel, trimplate, console front
20	134019610	End Cap, white, LH
21	134034800	Knob, timer, white, assy
22	131266330	Screw, 8-18 x 1.250
25	134034700	Pointer, timer
26	5308015493	Spacer, timer shaft
27	131197000	Clip, console mtg
29 #	134286900	Wiring Harness
31	134019600	End Cap, white, RH
33 #	134048300	Switch, option selector
39	131205100	Screw, #8 pan head, 10-10B x 0.500, cr/sq drive
56	131243800	Screw, pan hd locking, 8-32CA x 0.375, cup point
64 #	134224300	Control Board, temperature, automatic
*	134352700	Energy Guide

WIRING DIAGRAM

CAUTION: DISCONNECT ELECTRIC
CURRENT BEFORE SERVICING

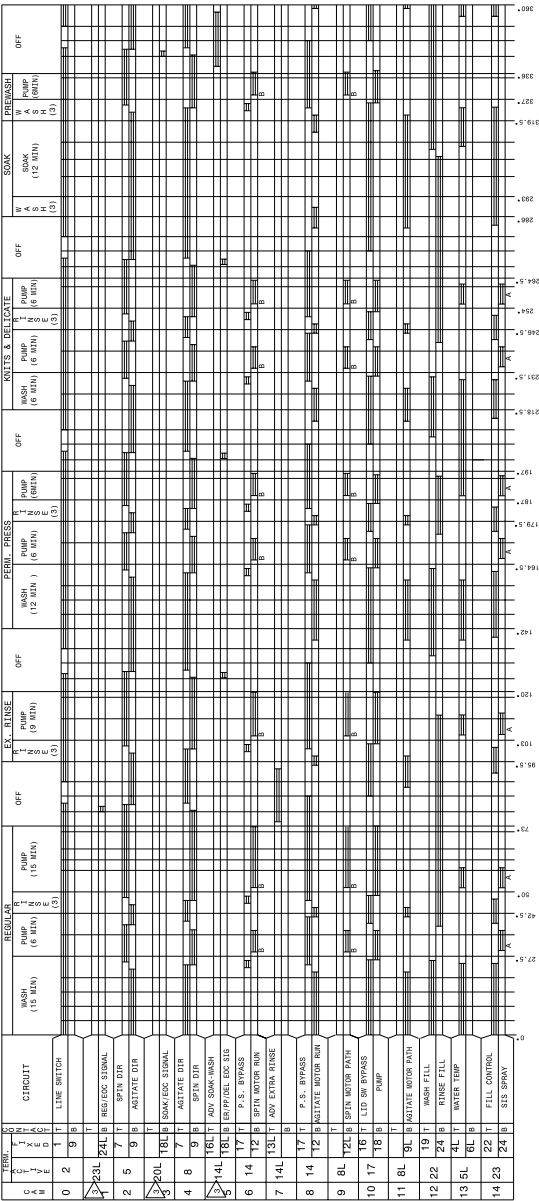

CAUTION: DISCONNECT ELECTRIC
CURRENT BEFORE SERVICING

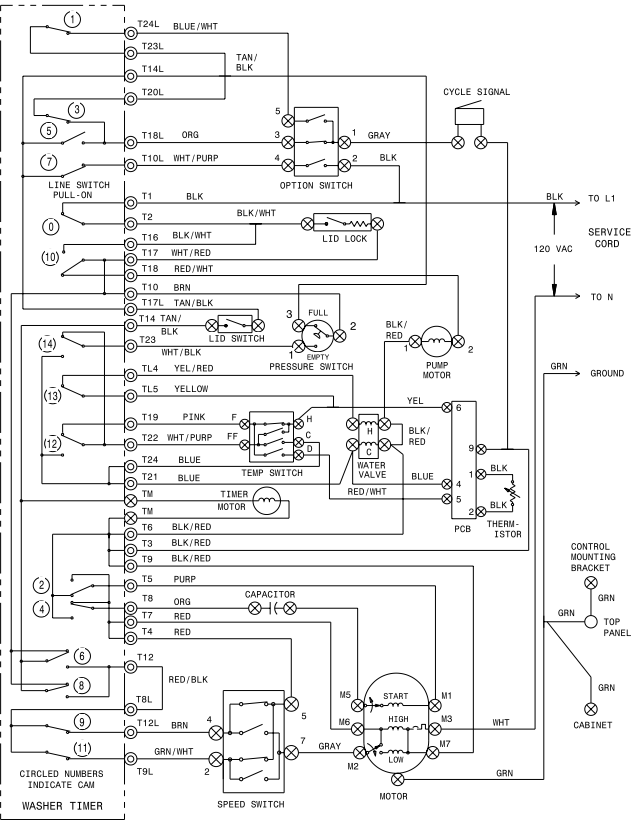

WIRING DIAGRAM
PART NO. 134286800