

Drop-In Cooktops

FFEC3025L S/W/B

30" Electric



Product Dimensions

Height	2-5/8"
Width	30-3/4"
Depth	21-1/2"

More Easy-To-Use Features

Color-Coordinated Control Knobs

White and Black cooktops come with matching knobs — while Stainless Steel models feature our neutral black knobs.

Surface "On" Indicator

Alerts you when your cooktop is on.

Available in:



Elements	Size	Watts
Right Front	9"	2,500
Right Rear	7"	1,500
Left Front	12"	2,700
Left Rear	6"	1,200

Signature Features

Ready-Select™ Controls

Select options or control cooking temperature with our easy-to-use controls.

Extra-Large Element

Our extra-large 12" element gives you space for larger pots and pans.

Approved Over Frigidaire® Electric Wall Ovens

Cooktops are approved for installation above any of our Electric Single Wall Ovens.


Ceramic Glass Cooktop

For a more beautiful cooktop that's easy to clean.

Features	
Controls	Ready-Select™
Surface Type	Ceramic Glass
Right Front Element (Watts)	9" - 2,500
Right Rear Element (Watts)	7" - 1,500
Left Front Element (Watts)	12" - 2,700
Left Rear Element (Watts)	6" - 1,200
Hot-Surface Indicator Light	Yes
Control Location	Right Side
Knob Color	Black (S), Color-Coordinated (W/B)
Knob Type	Plastic
Specifications	
Power Supply Connection Location	Right Rear
Voltage Rating	240V/208V/60Hz
Connected Load (kW Rating) @ 240/208 Volts ¹	7.9/5.9
Amps @ 240/208 Volts	33.0/28.0
Minimum Circuit Required (Amps)	30
Approved for Electric Single Wall Oven Combination Installation ²	Yes
Shipping Weight (Approx.)	45 Lbs.

¹Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.

²Cooktops are approved for installation above any of our Electric Single Wall Ovens.

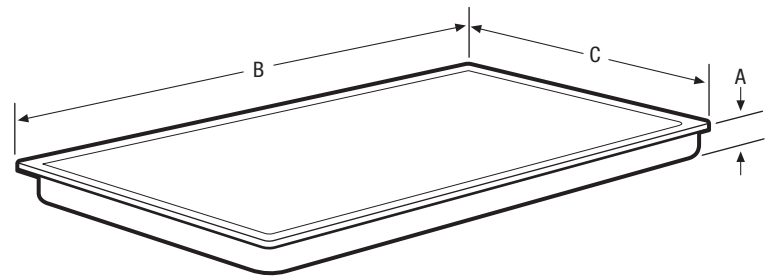


NOTE: Always consult local and national electric codes. Refer to Product Installation Guide for detailed installation instructions on the web at frigidaire.com.



Product Dimensions	
A - Height	2-5/8"
B - Width	30-3/4"
C - Depth	21-1/2"

Cutout Dimensions	
Height	5"
Width (Min.)	29-5/8"
Width (Max.)	29-3/4"
Depth (Min.)	20-1/4"
Depth (Max.)	20-1/2"

Granite Countertop
Installation Kit available.

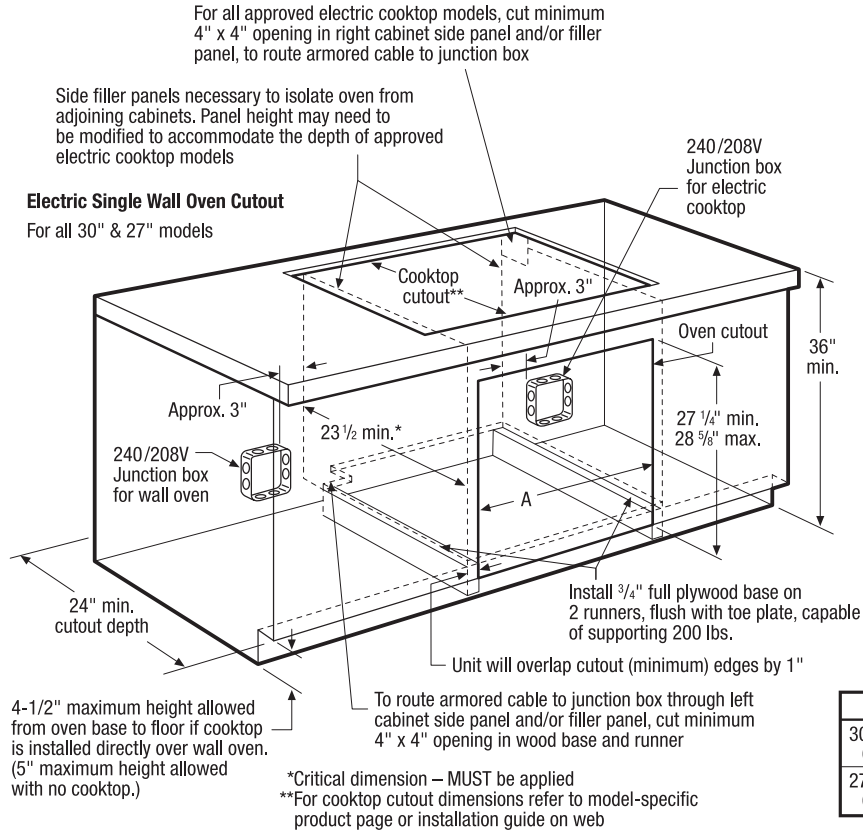

30"/27" Electric Single Wall Oven Under-Counter Installation Specifications

- Single phase 3- or 4-wire cable, 120/240 or 120/208 Volt, 60 Hertz AC only electrical supply with ground required on separate circuit fused on both sides of line.
- For detailed electrical requirements, refer to model-specific product page and installation guide on web.
- Always consult local and national electric codes.
- Minimum 21" clearance for oven door depth when open.
- Minimum 23-1/2" deep cutout dimension is critical for proper installation, to ensure that oven's faceplate will fit flush against cabinet front.
- Full oven base of solid plywood or similar material required, capable of supporting 200 Lbs. Install over two runners and flush with toe plate.
- Base must be level and cabinet front must be square.
- Allow 5" maximum height from oven base to floor, if NO cooktop is installed directly over wall oven.

Electric Cooktop Installation Over 30"/27" Electric Single Wall Oven Specifications

- All Frigidaire® Electric Single Wall Ovens are approved to be used beneath any approved Frigidaire® Electric Cooktop.
- For detailed Electric Cooktop installation, refer to model-specific product page and installation guide on web.
- Side filler panels necessary to isolate oven from adjoining cabinets. Panel height may need to be modified to accommodate the depth of approved electric cooktop models.
 - To route armored cable to junction box, cut minimum 4" x 4" opening in right cabinet side panel.
 - Allow 4-1/2" maximum height from oven base to floor, if cooktop is installed directly over wall oven.

Note: For planning purposes only. Refer to Product Installation Guide on the web at frigidaire.com for detailed instructions.