## **JVM3150DF**

## GE Spacemaker® 1.5 cu. ft. Over-the-Range Microwave Oven

#### Dimensions and Installation Information (in inches)


**Note:** Requires 120V grounded outlet. Electrical receptacle must be located in cabinet above Spacemaker microwave oven. No additional wiring, venting or cabinet rebuilding necessary in many cases. Complete detailed, easy-to-follow installation instructions and convenient full-size templates are packed with the Spacemaker microwave oven.

**Important Information:** When installing the Spacemaker microwave oven over a range, allow minimum of 2" from bottom of Spacemaker microwave oven to top of range backguard to allow for removal of light covers.

**Ventilation Options:** The Spacemaker microwave ovens are designed for adaptation to the following three types of ventilation:

- Outside exhaust (vertical as shown)
- Outside exhaust (horizontal)
- Recirculating (non-vented ductless see Filter Kit drawing)

**Installation Information:** This information is not intended to be used for installing unit described. Before installing, consult installation instructions packed with product/kit for current dimensional data.

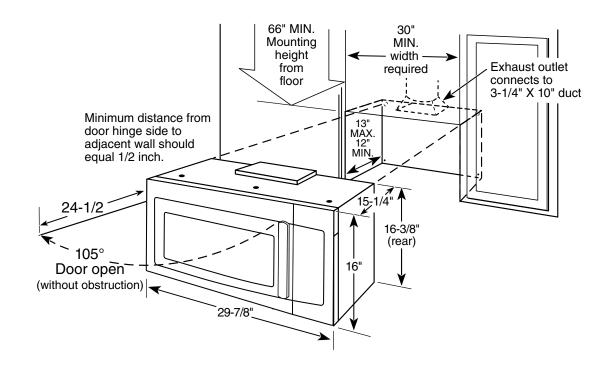





### JVM3150DF

## GE Spacemaker® 1.5 cu. ft. Over-the-Range Microwave Oven

#### Dimensions and Installation Information (in inches)

Hood Exhaust Duct: Outside ventilation requires a HOOD EXHAUST DUCT. Read the following carefully.

Exhaust Connection: The hood exhaust has been designed to mate with a standard 3-1/4" x 10" rectangular duct. If a round duct is required, a rectangular-to-round transition adaptor must be used. Do not use less than a 6" diameter duct


**Rear Exhaust:** If a rear or horizontal exhaust is to be used, care should be taken to align exhaust with space between studs, or wall should be prepared at the time it is constructed by leaving enough space between the wall studs to accommodate exhaust.

Maximum Duct Length: For satisfactory air movement, the total duct length of 3-1/4" x 10" rectangular or 6" diameter round duct should not exceed 120 equivalent feet.

Elbows, Transitions, Wall and Roof Caps, etc., present additional resistance to airflow and are equivalent to a section of straight duct which is longer than their actual physical size. When calculating the total duct length, add the equivalent length of all transitions and adaptors plus the lengths of all straight duct sections. The chart below shows the approximate feet of equivalent length of some typical ducts.

Duct	Equivalent Feet
<b>A.</b> Rectangular-To-round Transition Adaptor	5 ft.
B. Wall Cap	40 ft.
C. 90° Elbow	10 ft.
<b>D.</b> 45° Elbow	5 ft.
<b>E.</b> 90° Elbow	25 ft.
<b>F.</b> 45° Elbow	5 ft.
<b>G.</b> Roof Cap	24 ft.

#### Optional Accessories (Available at additional cost)

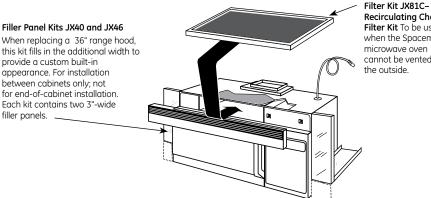

Recirculating Charcoal Filter Kit To be used when the Spacemaker microwave oven cannot be vented to the outside.





### **JVM3150DF**

# GE Spacemaker® 1.5 cu. ft. Over-the-Range Microwave Oven

### **Features and Benefits**

- 1.5 cu. ft. capacity 950 watts (IEC-705 test procedure)
- Convenience cooking controls Operating made quick and easy
- Auto and time defrost Defrosting times and power levels are programmed automatically or manually for optimal results
- Turntable on/off Controls turntable operation
- Two-speed, 300-CFM venting system Removes smoke, steam and odors
- Add 30 seconds Add 30 seconds of microwave cooking time
- Model JVM3150DFBB Black
- Model JVM3150DFWW White

