


6 Step Quick Install Guide

Instant **Hot Water** Dispensers

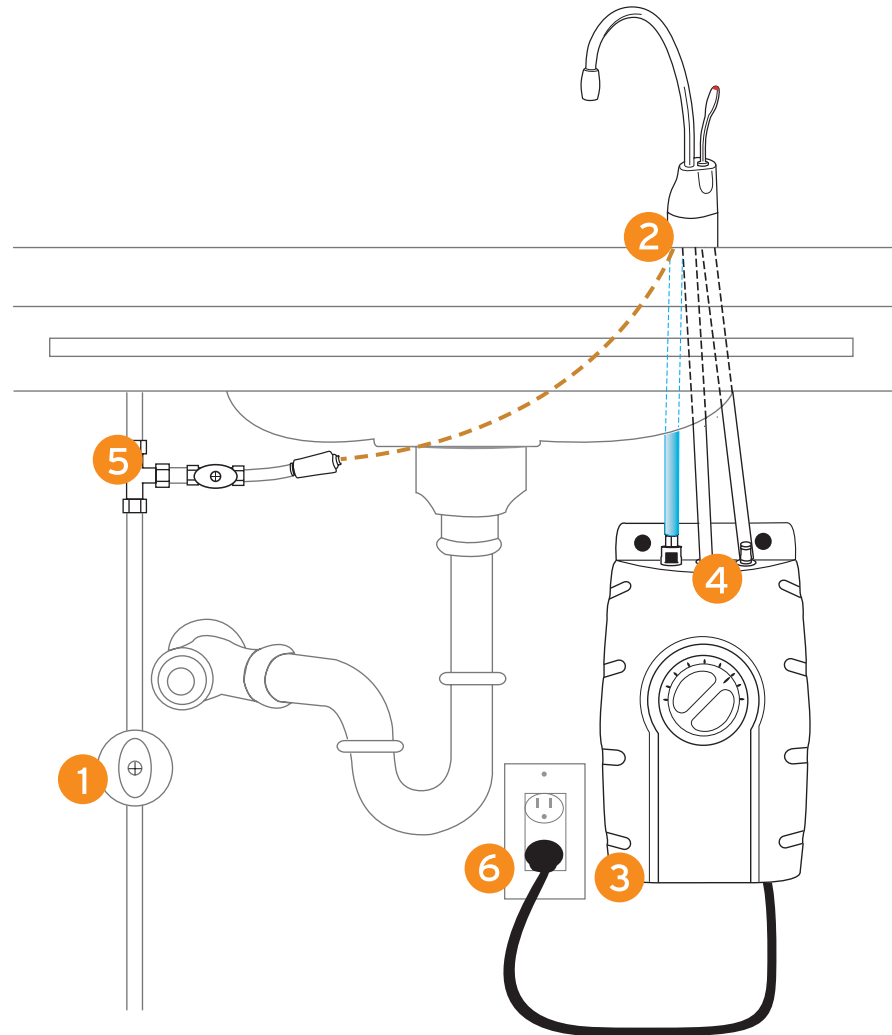

What You Should Know Before Beginning

This is a quick reference guide. Please refer to the complete Installation, Care & Use Manual for specifics including warnings, cautions and dangers. If after reading the troubleshooting section, you still have questions about parts, installation or warranty, please visit www.insinkerator.com/foodservice or call 1-800-845-8345.

Please have the model and serial number of your tank and faucet available when calling. Visit www.insinkerator.com/foodservice for assistance on many common questions.

Starting the Installation Process

- A continuous electrical power source (not controlled by a wall switch) is required to power the unit.
- Ensure that there is sufficient space to fit the unit under the sink and around existing plumbing.
- For both the C1300 and H778 faucets, a 1-1/4" - 1-1/2" sink hole is required.

⚠ WARNING

BEFORE INSTALLING REPLACEMENT DISPENSER


Personal Injury: Unplug the tank. Depress the dispenser handle for about one minute so cold water can flow through the unit. This cools the water for safer removal of existing tank and dispenser. Remove the drain plug on the tank bottom to empty all remaining water.

6 Quick & Easy Steps to Instant Hot Water

See *Installation, Care & Use Manual* for important cautions, warnings and dangers



PREPARATION

STEP 1 2 3 4 5 6

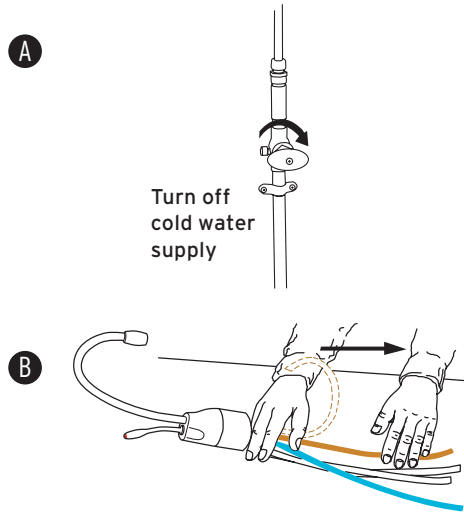


INSTALLING THE FAUCET

STEP 1 2 3 4 5 6

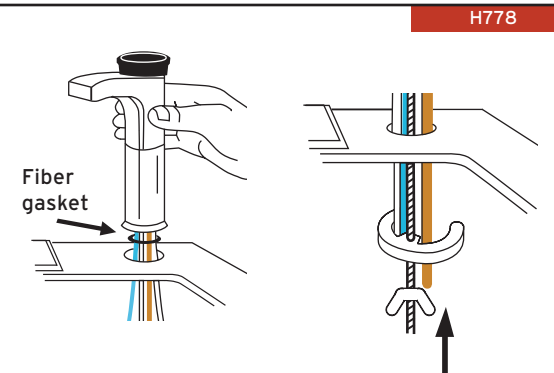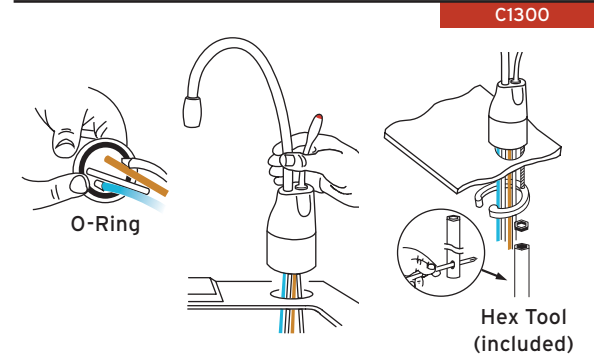

DO NOT overtighten

Typical Complete Installation

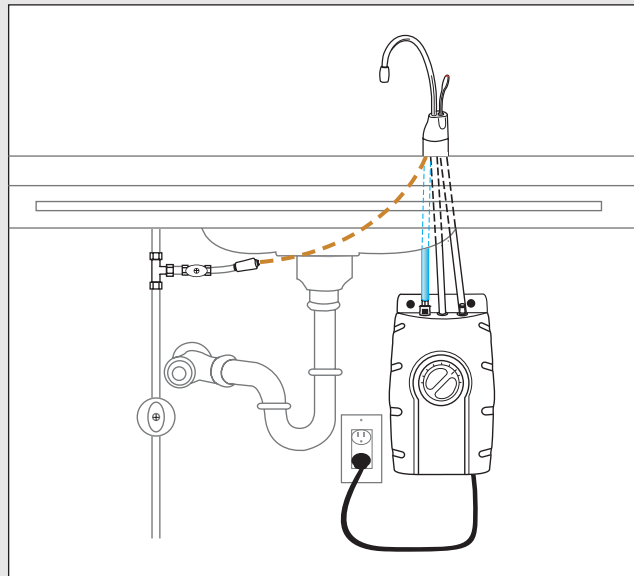




⚠ CAUTION

Property Damage: Make sure bends in all water lines are smooth and unknicked, with no pinching, twisting or blockage. Pinched or blocked water lines may cause damage to the dispenser tank.

For Technical Assistance
1-800-845-8345

MOUNTING THE TANK


STEP 1 2 3 4 5 6

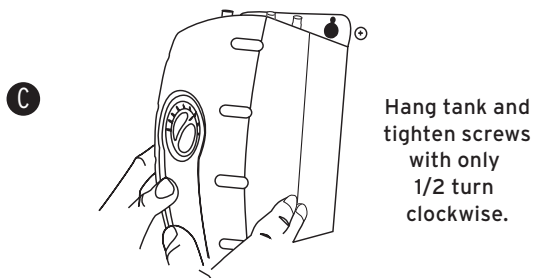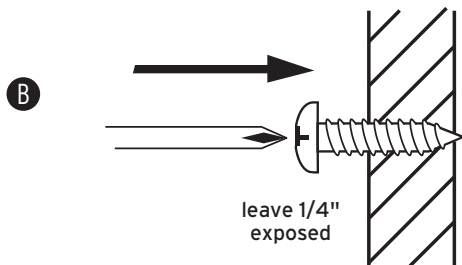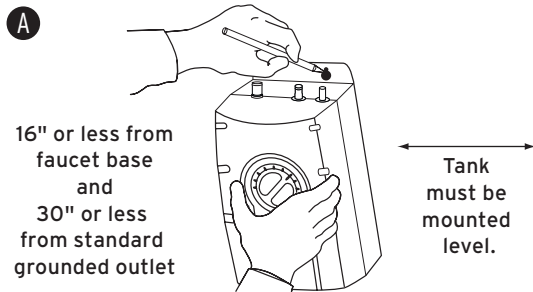

DO NOT extend plumbing or electrical lines


CONNECTING FAUCET TO TANK

STEP 1 2 3 4 5 6

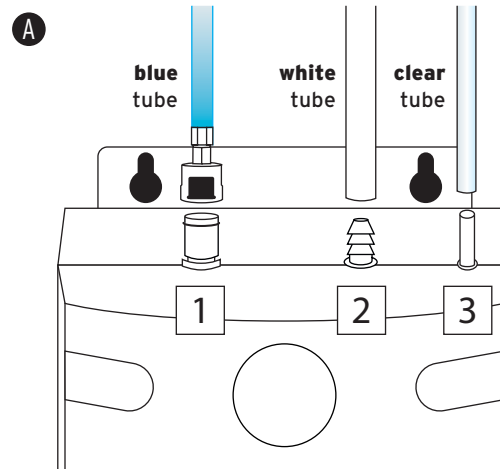

FINAL WATER CONNECTION


STEP 1 2 3 4 5 6

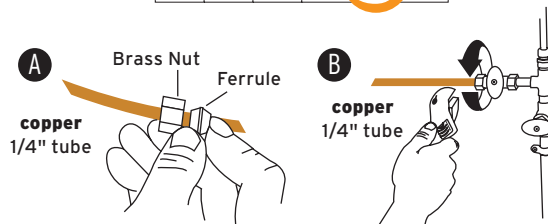


Press **ALL** tubes in once again to ensure secure fit.

FILL TANK & THEN CONNECT POWER

STEP 1 2 3 4 5 6

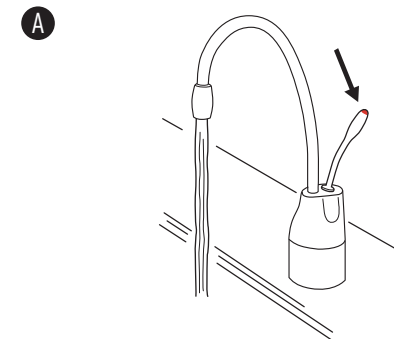

Run the water for at least 2 minutes to flush lines.

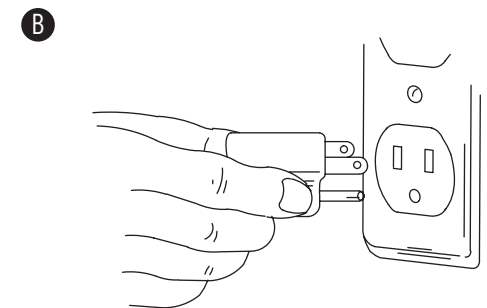

DO NOT plug in unit until water flows from faucet

⚠ WARNING

Electric Shock Hazard: This appliance **MUST** be grounded. Using an ungrounded appliance can result in serious injury or death from electric shock. Improper connection of the equipment grounding conductor can result in the risk of shock by electricity.



Please read Troubleshooting Guide and/or visit www.insinkerator.com before calling 1-800-845-8345

WARRANTY INFORMATION

An instant hot water dispenser, like any water heater, has a limited life and will eventually fail. To avoid possible property damage and personal injury, this instant hot water dispenser should be regularly examined for leakage and/or corrosion and replaced when necessary. A drain pan, plumbed to an appropriate drain or outfitted with a leak detector, should be used in those applications where any leakage could cause property damage. To check for corrosion, examine the appearance of the dispensed water in a clear glass once every three (3) months. If there is any discoloration or rusty appearance, unplug and drain unit as described in the Seasonal Storage/Drainage section of the Owner's Manual. If the water discoloration remains after draining and refilling unit, discontinue use and contact an authorized InSinkErator service agent.

WARRANTY

Dispenser: 1-year warranty
Stainless Steel Tank: 1-year warranty

Covers all replacement parts and labor to correct defects in material or workmanship in the dispenser system for the full warranty period from the date of installation. The warranty includes parts and labor, provided the service is performed by an InSinkErator® Factory Authorized Service Center. If the dispenser is replaced rather than repaired, the warranty on the new unit shall be for the duration of the remaining portion of the original dispenser's warranty. Note: Warranty is determined by unit serial number and/or date of installation. Purchase or installation receipt may be required to verify warranty status. When service is required, and for the location of your nearest factory authorized service center, call toll free 1-800-845-8345.

The foregoing warranty does not apply to damage or inoperation resulting from accident, alteration, misuse, abuse, improper installation, installation not in accordance with these instructions or local electrical and/or plumbing codes. We do not assume any responsibility for consequential damage. Install using genuine InSinkErator manufactured components only. Use of non InSinkErator components will void the warranty.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitations of incidental or consequential damages, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Water and steam spits forcefully from spout without turning on the dispenser faucet.	<ul style="list-style-type: none"> Unit is boiling. <p><i>May be normal during initial setup.</i></p>	<ul style="list-style-type: none"> Activate faucet lever to release some water from the tank. Adjust water temperature using dial on tank front. <p><i>Remember that at higher altitudes, water boils at lower temperatures. See Installation, Care & Use manual.</i></p>
Water is not hot.	<ul style="list-style-type: none"> The unit is unplugged. The electric outlet is inoperative. 	<ul style="list-style-type: none"> Make sure the unit is connected to a properly grounded electric outlet. Make sure the circuit breaker or fuses are functioning properly. Check that the outlet is not switched off.
Water is too hot or not hot enough.	<ul style="list-style-type: none"> Thermostat is not adjusted to your needs. 	<ul style="list-style-type: none"> Adjust the thermostat slowly, then activate faucet handle for 20 seconds to bring in fresh water at the new setting. Allow 5-7 minutes for water to reach new temperature.
Water comes out the vent instead of spout.	<ul style="list-style-type: none"> Outlet tube is blocked. 	<ul style="list-style-type: none"> Check that outlet tube is not kinked, twisted or pinched. Unscrew spout end piece and clean out any debris.
Water is dripping from the spout/vent intermittently.	<ul style="list-style-type: none"> The expansion chamber isn't draining properly due to low water pressure. The spout is blocked. 	<ul style="list-style-type: none"> Unplug the unit. If the dripping doesn't stop after a few minutes, check the supply valve to ensure that it is fully open and there are no obstructions in the water line reducing the pressure below 30 psi (i.e., a poorly mounted saddle valve, a clogged water filter, or a partially opened shut-off valve). Unscrew spout end piece and clean out any debris.
Water is dripping from the spout/vent constantly.	<ul style="list-style-type: none"> Debris in the water line may be in the faucet valve seat causing a slow water leak. 	<ul style="list-style-type: none"> Unscrew spout end piece and clean out any debris. Activate faucet lever 7-10 times to flush faucet & lines.
Divided stream.	<ul style="list-style-type: none"> Debris in the end piece. 	<ul style="list-style-type: none"> Unscrew spout end piece and clean out any debris.
Water discoloration/rusty appearance.	<ul style="list-style-type: none"> Corrosion of unit. 	<ul style="list-style-type: none"> Unplug and drain unit as described in the Seasonal Storage/Drainage section of the Owner's Manual. If the water discoloration remains after draining and refilling unit, discontinue use and contact an authorized InSinkErator service agent.

If you are still experiencing trouble, visit www.insinkerator.com/foodservice or call 1-800-845-8345.



The Emerson logo is a trademark and service mark of Emerson Electric Co.

InSinkErator may make improvements and/or changes in the specifications at any time, in its sole discretion, without notice or obligation and further reserves the right to change or discontinue models.

1.800.845.8345
www.insinkerator.com/foodservice